



ADP-1XX4A

15", 17", 19" and 21.5" Steel Enclosure Industrial LCD Display

User Manual

Release Date

Revision

July, 2021

V1.0

©2021 Aplex Technology, Inc.

All Rights Reserved.

Published in Taiwan

Aplex Technology, Inc.

15F-1, No.186, Jian Yi Road, Zhonghe District, New Taipei City 235, Taiwan

Tel: 886-2-82262881 Fax: 886-2-82262883 URL: <http://www.aplextec.com/zh/home.php>

Revision History

Reversion	Date	Description
1.0	2021/07/15	Official Version

Warning!

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

Packing List

Accessories (as ticked) included in this package are:
<input type="checkbox"/> Adaptor
<input type="checkbox"/> Driver & manual CD disc
<input type="checkbox"/> Other. _____ (please specify)

Safety Precautions

Follow the messages below to prevent your systems from damage:

- ◆ Avoid your system from static electricity on all occasions.
- ◆ Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
- ◆ Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

Table of Contents

Revision History.....	1
Warning!.....	2
Packing List/Safety Precautions.....	3

Chapter 1 Getting Started

1.1 Features.....	6
1.2 Specifications.....	6
1.3 Dimensions.....	8
1.4 Brief Description of ADP-1XX4A Series.....	10

Chapter 2 OSD

2.1 AD Board OSD Functions.....	15
2.2 OSD Controls.....	16
2.3 Main Menu.....	17

Chapter 3 Installation

3.1 Windows 7 Universal Driver Installation for PenMount 6000 Serie20	
3.2 Software Functions.....	28

Appendix A: AD Board 46

Board Information.....	46
Board Dimensions.....	47

Appendix B: Panel mounting and VESA Mounting 48

Figures

Figure 1.1: Dimensions of ADP-1154A.....	8
Figure 1.2: Dimensions of ADP-1174A.....	8
Figure 1.3: Dimensions of ADP-1194A.....	9
Figure 1.4: Dimensions of ADP-1224A.....	9
Figure 1.5: Front View of ADP-1154A.....	11

Figure 1.6: Rear View of ADP-1154A.....	11
Figure 1.7: Front View of ADP-1174A.....	12
Figure 1.8: Rear View of ADP-1174A.....	12
Figure 1.9: Front View of ADP-1194A.....	13
Figure 1.10: Rear View of ADP-1194A.....	13
Figure 1.11: Front View of ADP-1224A.....	14
Figure 1.12: Rear View of ADP-1224A.....	14
Figure A: Dimensions of AD Board TB-6802(Top).....	46
Figure B: Dimensions of AD Board TB-6802(Bottom).....	47
Figure C: Panel mounting and VESA Mounting of ADP-1XX4A.....	48

Chapter 1 Getting Started

1.1 Features

- 15", 17", 19" and 21.5" steel enclosure industrial display
- IP65 compliant front bezel (IP66 for option)
- OSD at front side
- VESA mount 75 x 75 (100 x 100 for 21.5")
- Anti-reflection glass in front for protection (optional touch panel)
- Default DC 9~36V input, optional AC 100~240V input
- VGA, DVI, DP and HDMI input


1.2 Specifications

	ADP-1154A	ADP-1174A	ADP-1194A	ADP-1224A
IO Port				
VGA	1			
DVI-D	1			
DP	1			
HDMI	1			
USB	1 x USB for touch control			
Audio	1 x Line-in phone jack			
Power	1 x 3-pin 11~32 V DC terminal block connector			
Others	1 x RS-232 DB-9 option for touch control 1 x AC inlet for option			
OSD				
OSD Control Membrane	OSD on the front side (default), OSD on the rear side (for option)			
LCD				
Display Type	15" color TFT LCD	17" color TFT LCD	19" color TFT LCD	21.5" color TFT LCD
Resolution	1024 x 768	1280 x 1024	1280 x 1024	1920 x 1080
Max. Colors	16.2M	16.2M	16.7M	16.7M
Luminance (cd/m2)	300	350	350	250
Viewing Angle	176(H) / 176(V)	170(H) / 160(V)	165(H) / 165(V)	178(H) / 178(V)
Contrast Ratio	2000: 1	1000: 1	1000: 1	1000:1

Backlight Lifetime	50,000 hrs	30,000 hrs	50,000 hrs	50,000 hrs
Power				
Power Input	Default DC 9~36V input, optional AC 100~240V input			
Power Consumption	MAX: 12.8W	MAX: 11.8W	MAX: 17.4W	MAX: 17.1W
Mechanical				
Construction	Black Steel Front Panel (Stainless Steel/Aluminum for option)			
Mounting	Panel mount / VESA Mount 75 x 75 / VESA mount 100 x 100 (21.5") Rack mount(option)			
Dimensions(mm)	410 x 310 x 59.7	439 x 348 x 63	467 x 379 x 68	557 x 362 x 68
Net Weight	5.4 kg	5.9 kg	7.2 kg	8 kg
Environment Specifications				
Operating Temperature	0 ~ 50 °C (15" option -20 ~ 60 °C)			
Storage Temperature	-30 ~ 70 °C			
Storage Humidity	10 ~ 90% @40°C Non-condensing			
Vibration	1G / 5 ~ 500Hz (Random) / Operation			
Shock	15G peak acceleration(11 msec. duration) / Operation			
Certificate	CE/FCC Class A			

1.3 Dimensions

ADP-1154A DC

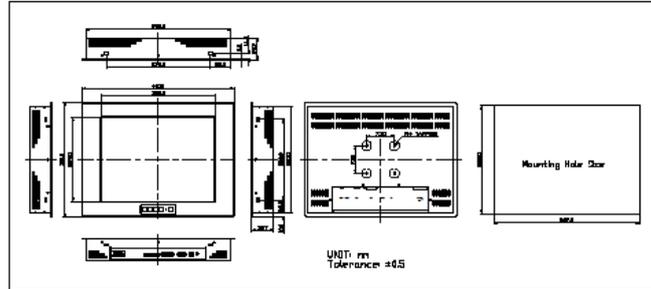

ADP-1154A AC


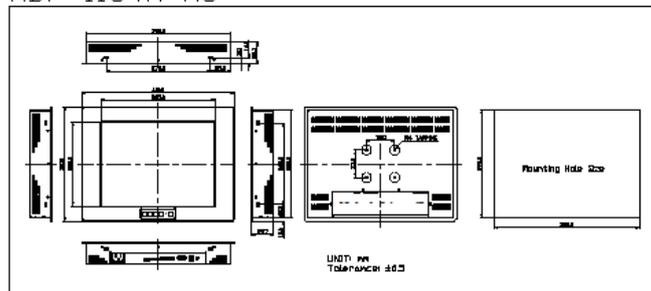


Figure 1.1: Dimensions of ADP-1154A

ADP-1174A DC

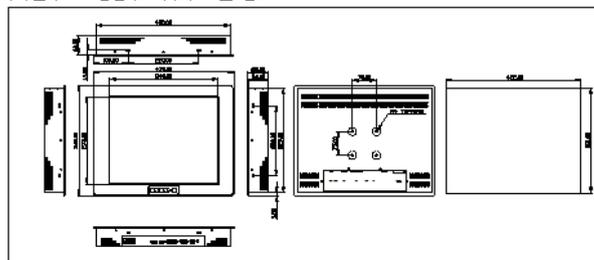

ADP-1174A AC


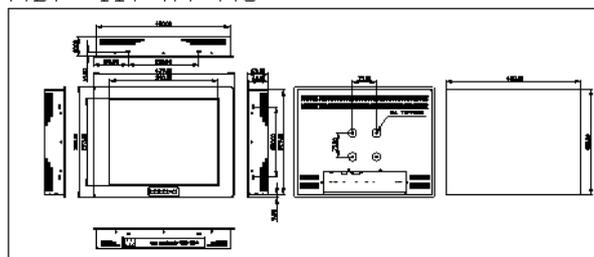


Figure 1.2: Dimensions of ADP-1174A

ADP-1194A DC

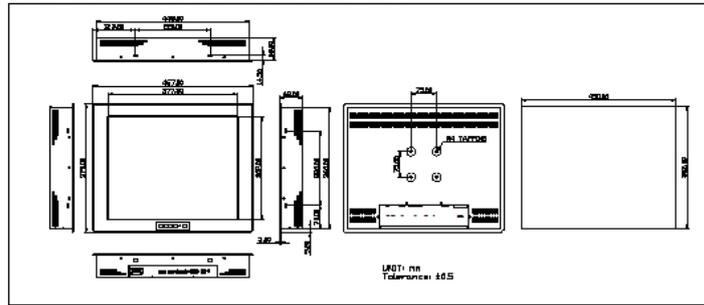

ADP-1194A AC


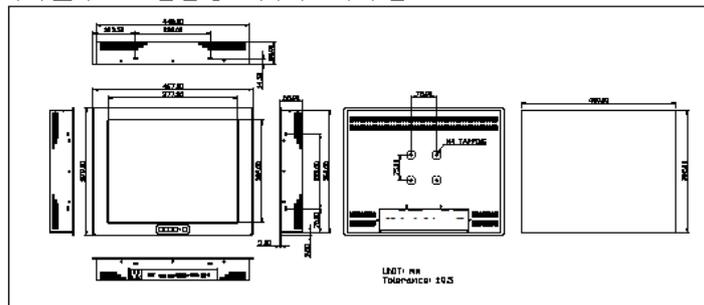


Figure 1.3: Dimensions of ADP-1194A

ADP-1224A DC

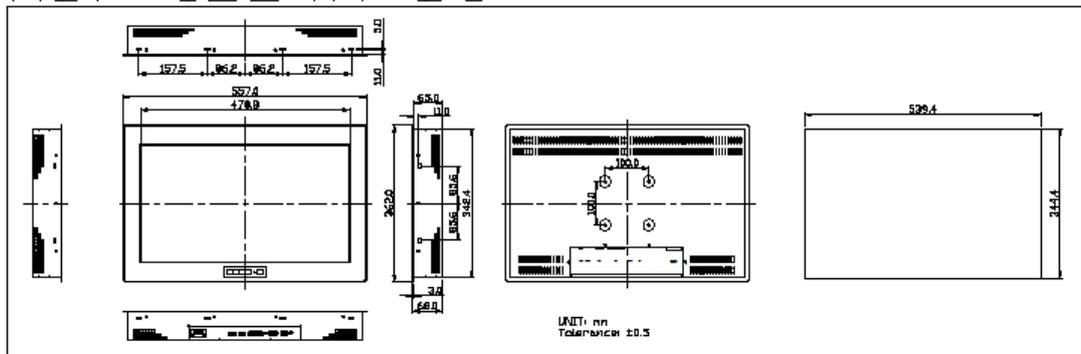

ADP-1224A AC

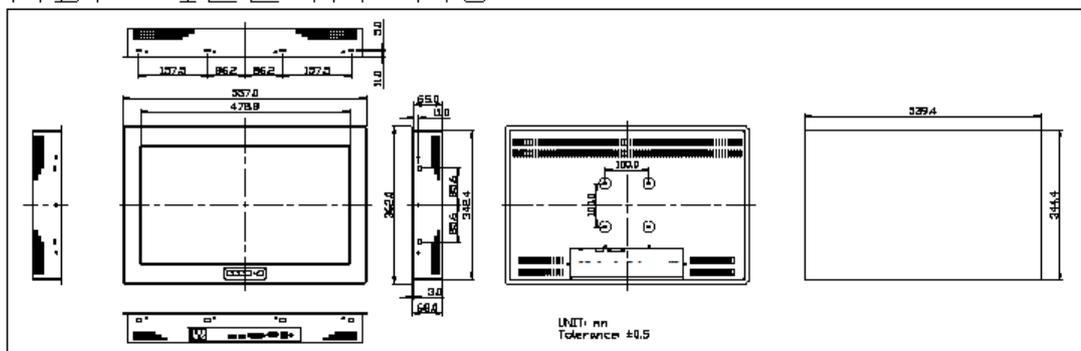


Figure 1.4: Dimensions of ADP-1224A

1.4 Brief Description of ADP-1XX4A Series

ADP-1XX4A are designed steel chassis display, which comes with 15", 17", 19" and 21.5" color TFT LCD with 1024 x 768, 1280 x 1024 and 1920 x 1080 resolution. ADP-1XX4A support multiple mounting such as panel mount, VESA mount, and rack mount. These display come with 1 x VGA, 1 x DVI-D, 1 x DP, and 1 x HDMI input. Also support DC9~36V power input, but can option AC 100~240V power input by custom requirement. The OSD control membrane is at the front side of the model. The model has more outstanding features, thus giving the best in monitoring and control application.



Figure 1.5: Front View of ADP-1154A



Figure 1.6: Rear View of ADP-1154A



Figure 1.7: Front View of ADP-1174A



Figure 1.8: Rear View of ADP-1174A



Figure 1.9: Front View of ADP-1194A



Figure 1.10: Rear View of ADP-1194A

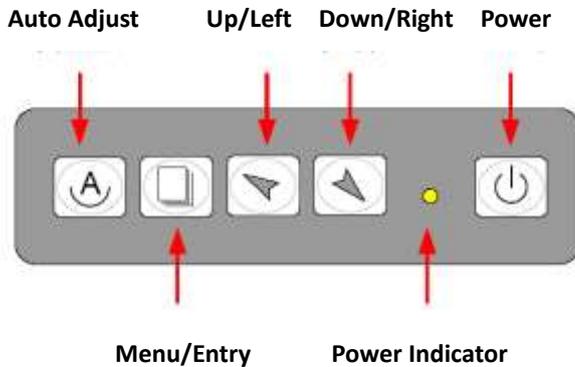


Figure 1.11: Front View of ADP-1224A



Figure 1.12: Rear View of ADP-1224A

2.1 AD Board OSD Functions



 Power switch: To turn ON or OFF the power

 Shift the icon to the right side or shift it up

 Shift the icon to the left side or shift it down

 Menu: To enter OSD menu for related icon and item.

 Auto Button: One-touch auto adjustment

1.) Getting into Burn-in Mode

Before setting into a burn-in mode, first disconnect the AC power cord. Then press (don't let them go) the   buttons until the AC power cord is connected and the "RGB" appears on the top left corner of your screen. Now it can be put into the burn-in mode for changing colors.

2.) Getting Out of Burn-in Mode

Before getting out of the burn-in mode, please first disconnect the AC power cord. Then press the  button (If not workable, press the  button and don't let them go) until the AC power cord is connected. Please don't let your fingers go until the AC power cord is connected again and the wording of "RGB" appears on the top left corner of your screen, and wait for 3 second. Under the non-signal entry situation, if **Cable Not Connected** is seen, exit is thus successfully made.

When the Burn-in Mode is Unable to Eradicate...


- 1.) If the “RGB” is still on the top left corner of the screen, press  to enter “Miscellaneous” and choose “Reset”, and then **Yes**, and press . When the screen goes black, disconnect power and repeat the above steps.
- 2.) If the “RGB” is not found, disconnect the AC power cord first. Then press the   buttons (don't let them go) until the AC power cord is connected, and wait for 2 to 3 seconds. When “RGB” appears, repeat the above steps.

2.2 OSD Controls

To make any adjustment, select the following:



1. Press  (Menu) to show the OSD menu or disable the OSD menu.
2. Select the icon that you wish to adjust with the ( /  or +/-) key in the menu.
3. Press  (Menu) and then choose the item or adjust the numerals with the ( /  or +/-) key.

2.3 Main Menu

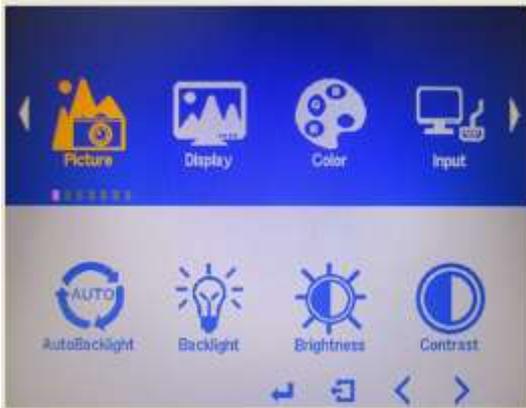

In the **PICTURE**, there are the following items:

- AutoBacklight
- Backlight
- Brightness:
- Contrast
- Sharpness
- Exit

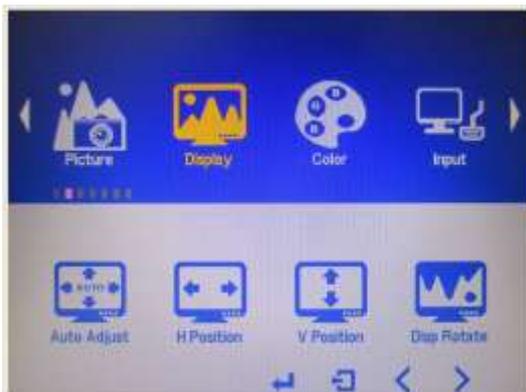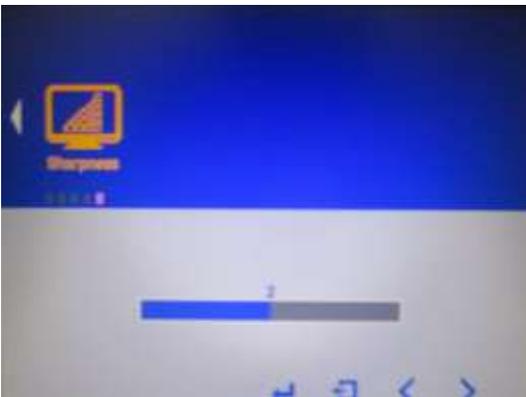

In the **DISPLAY**, there are the following items:

- AutoAdjust
- H Position
- V Position
- Disp Rotate
- Exit




In the **COLOR**, there are the following items:

- Panel Uniformity
- Gamma
- Temperature
- Color Effect
- Exit


In the **INPUT**, there are the following items:

- A0:VGA
- D1:DP
- D3:HDMI
- Exit

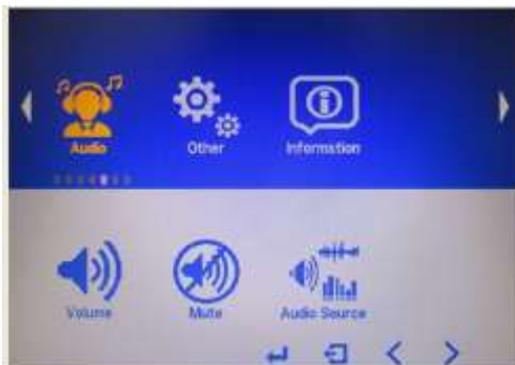


In the **AUDIO**, there are the following items:

- Volume
- Mute
- Audio Source
- Exit

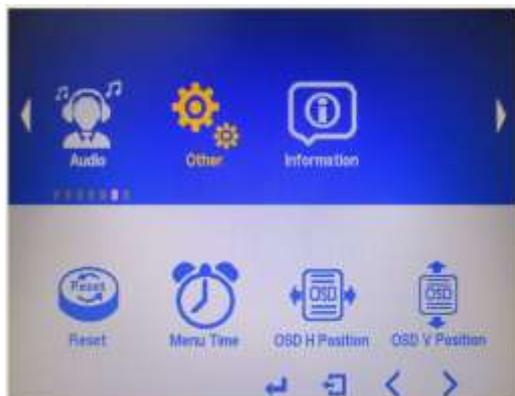

In the **OTHER**, there are the following items:

- Reset
- Menu Time
- OSD H Position
- OSD V Position
- Language
- Transparency
- Rotate
- Exit

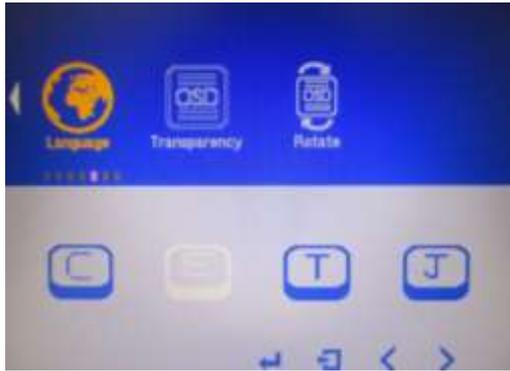

Information part.

Chapter 3 Installation

This chapter describes how to install drivers and other software that will allow your touch screen work with different operating systems.

3.1 Windows 7 Universal Driver Installation for PenMount 6000 Series

Before installing the Windows 7 driver software, you must have the Windows 7 system installed and running on your computer. You must also have one of the following PenMount 6000 series controller or control boards installed: PM6500, PM6300.


3.1.1 Installing Software(Resistive Touch)

If you have an older version of the PenMount Windows 7 driver installed in your system, please remove it first. Follow the steps below to install the PenMount DMC6000 Windows 7 driver.


Step 1. Click **Next** to continue.




Step 2. Read the license agreement. Click **I Agree** to agree the license agreement.

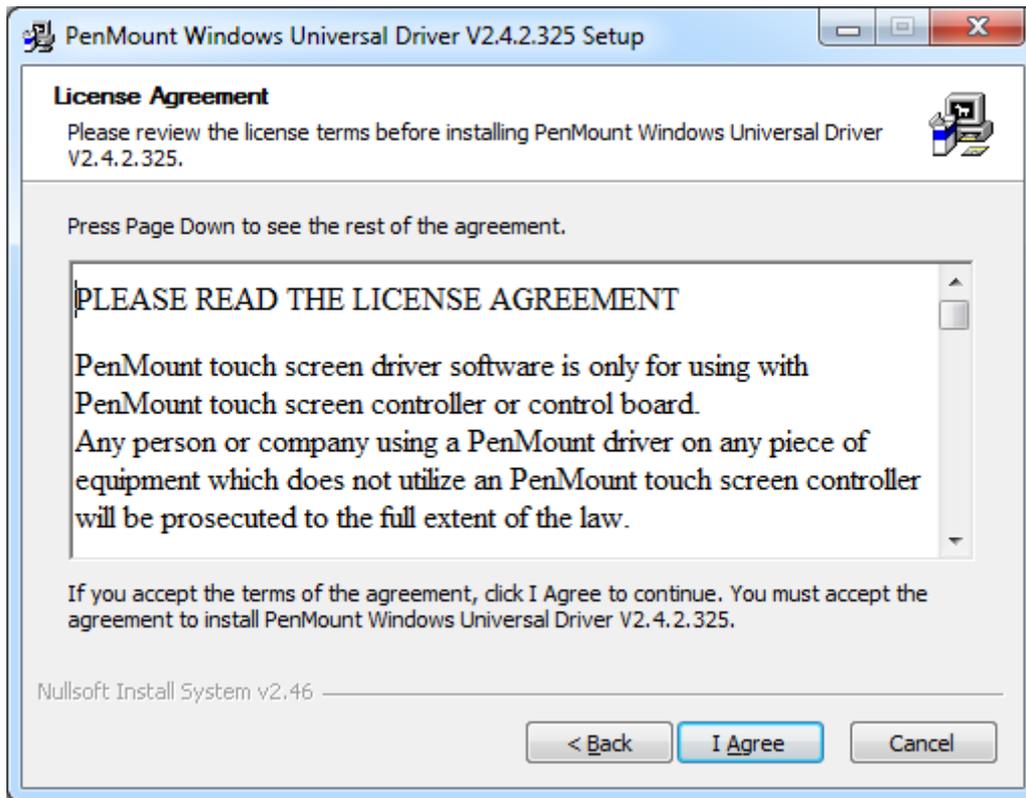


Step 3. Choose the folder in which to install PenMount Windows Universal Driver. Click **Install** to start the installation.

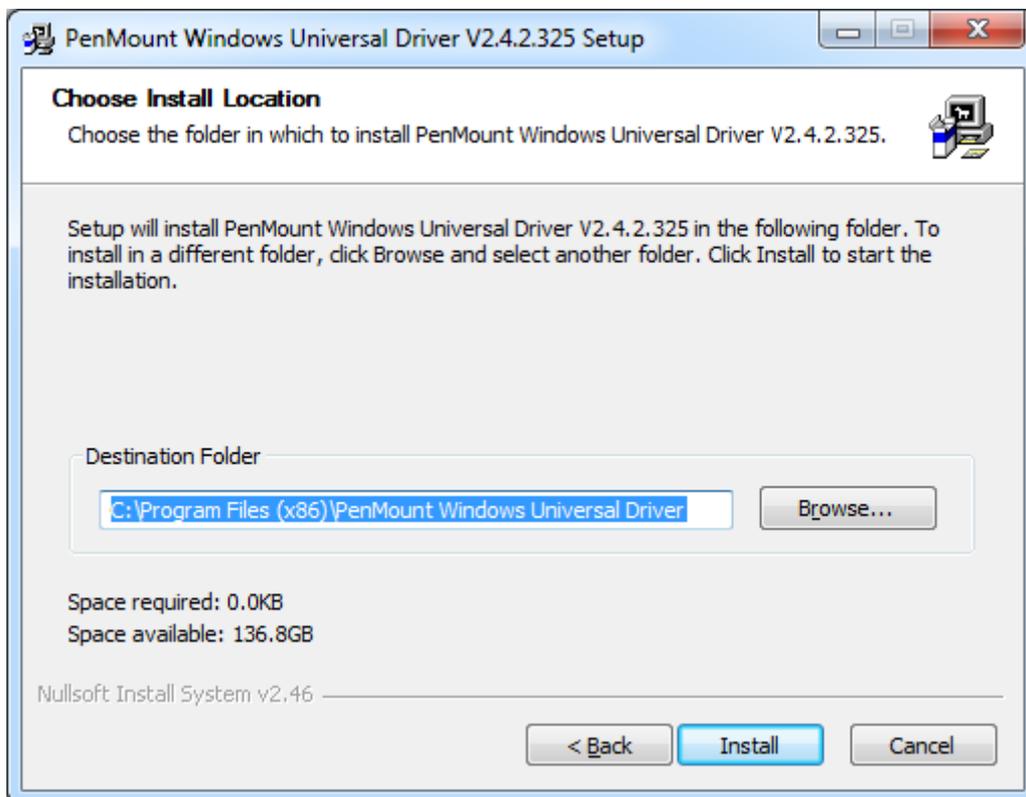

Step 4. Click **Yes** to continue.

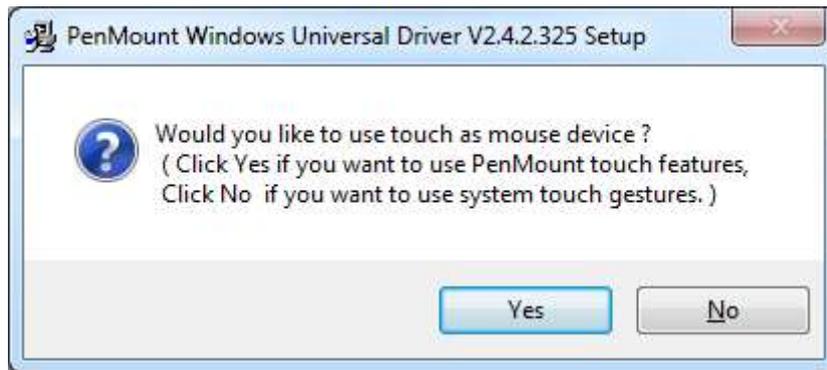


Step 5. Click **Finish** to complete installation.

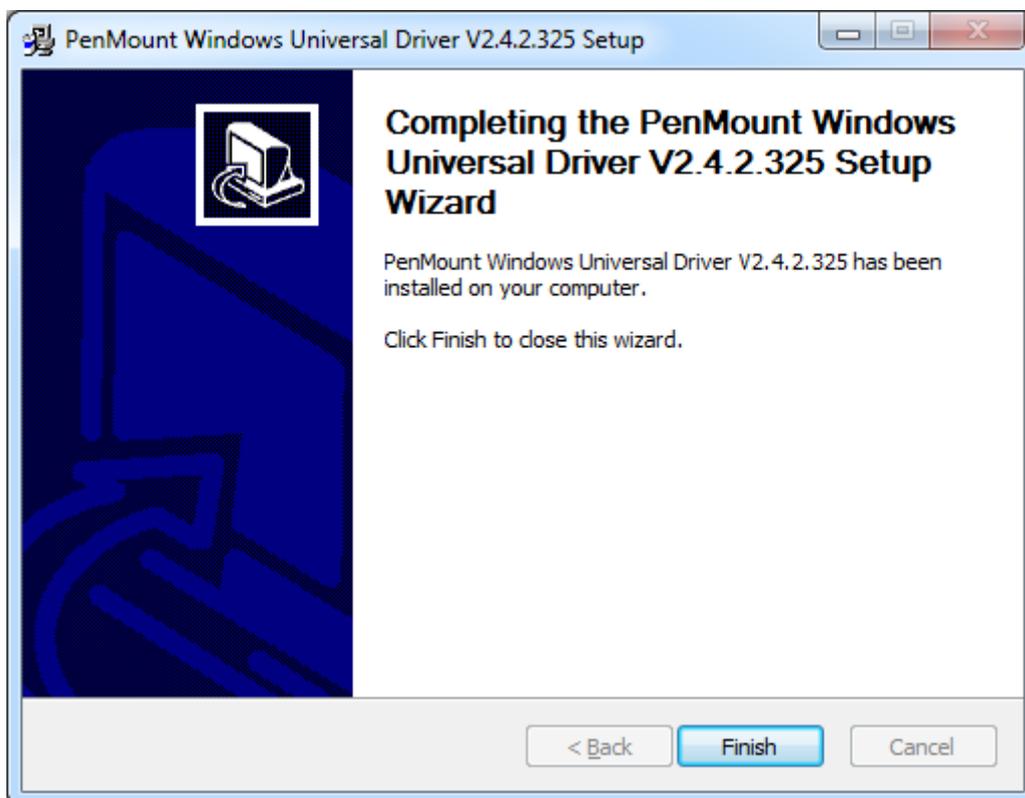


3.1.2 Installing Software (Projected Capacitive)


Step 1. Click **Next** to continue.

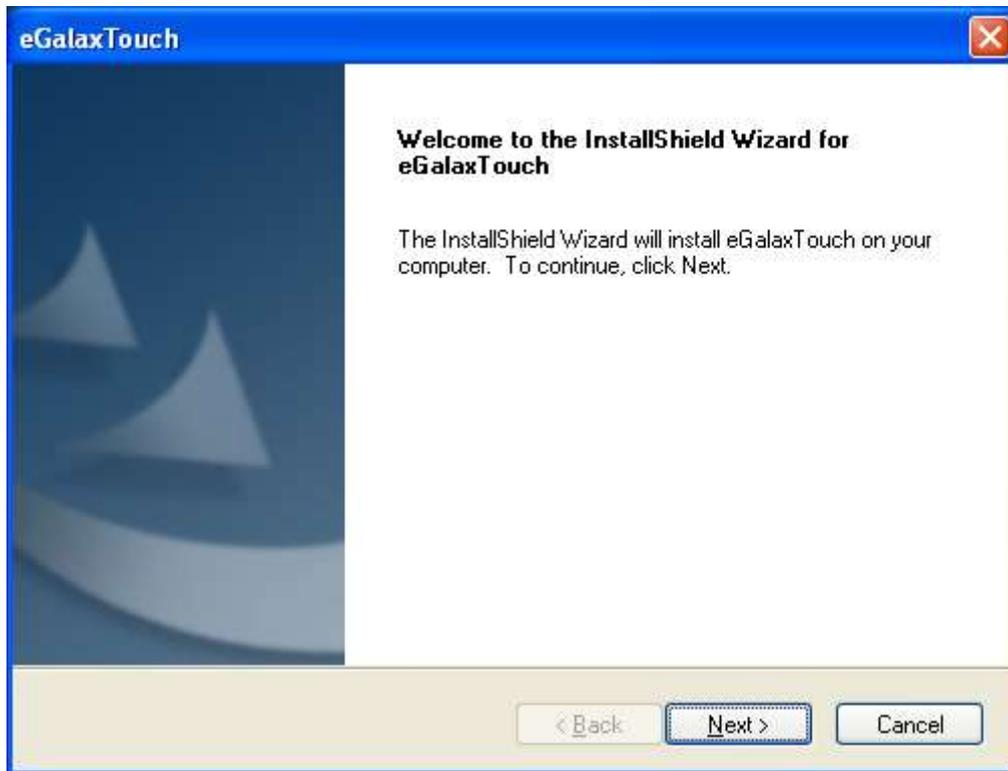


Step 2. Select **I accept the terms of the license agreement**. Click **Next**.

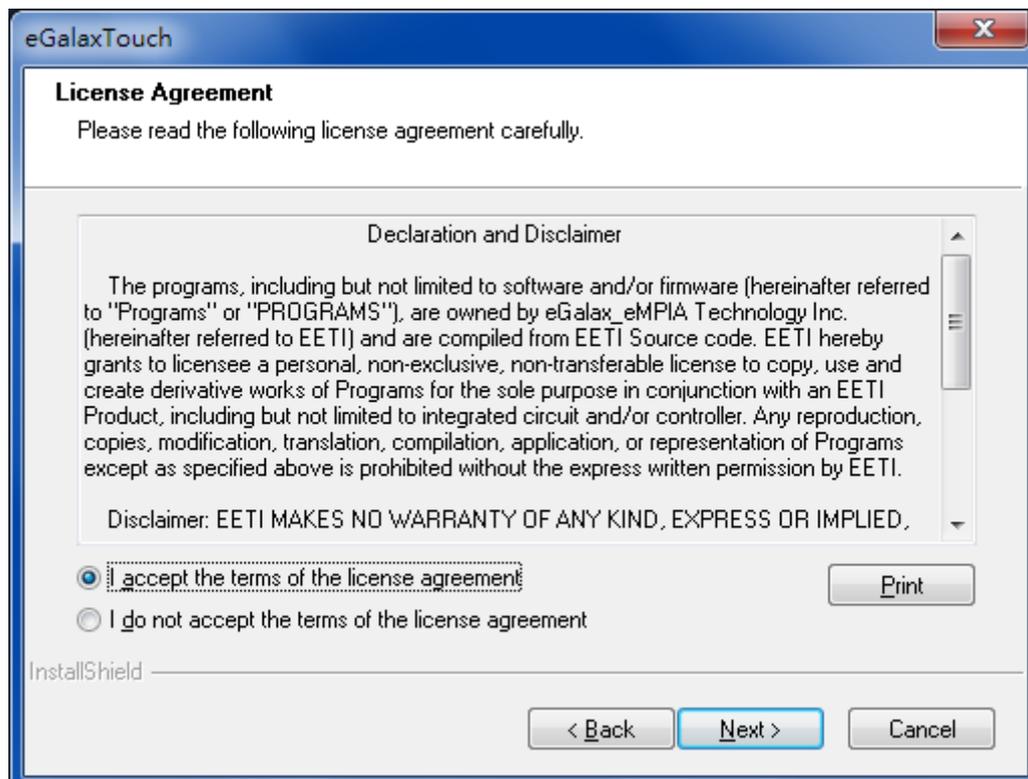


Step.3. Click **Next** to continue.

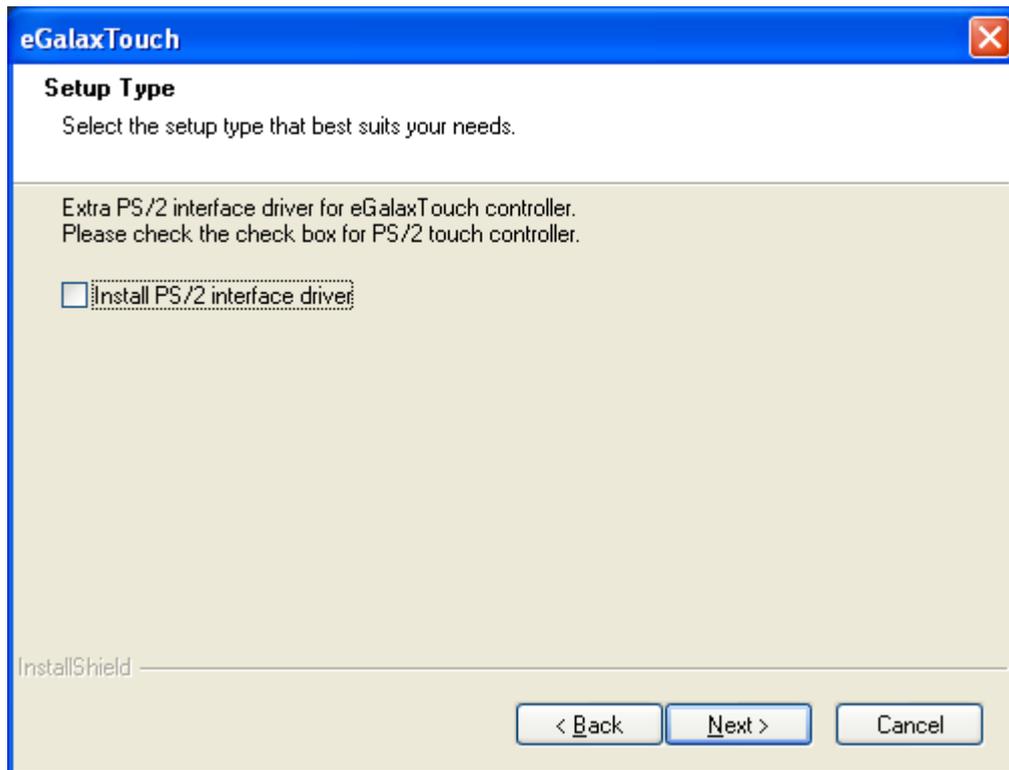

Step 4. Click **Install RS232 interface driver**.

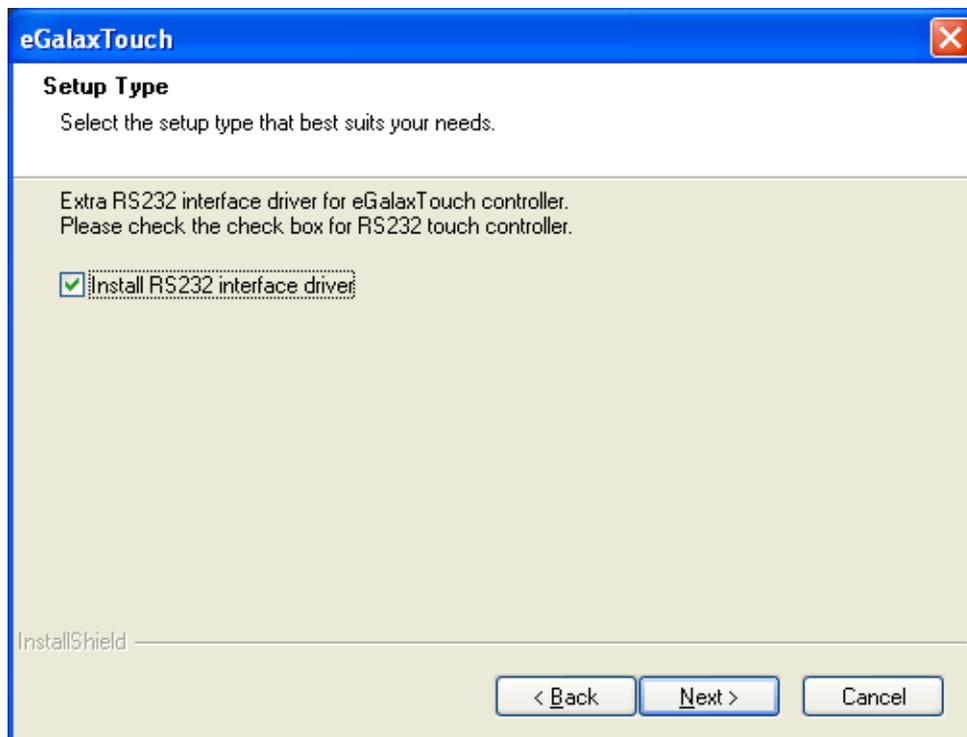


Step 5. Select None. Click Next.

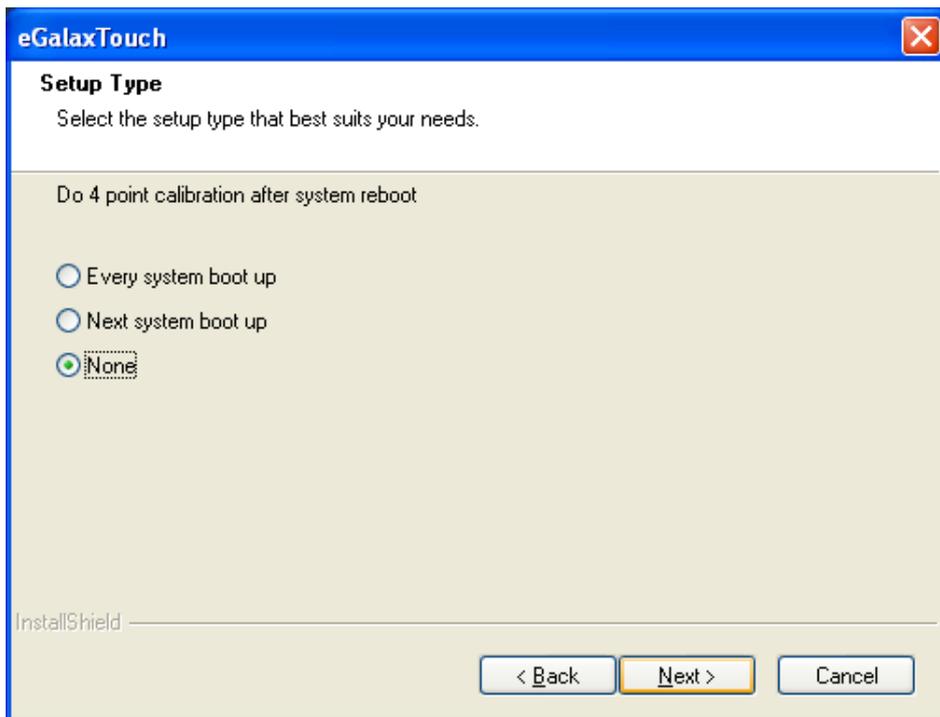


Step 6. Click OK.




Step 7. Click Support Multi-Monitor System. Click Next.

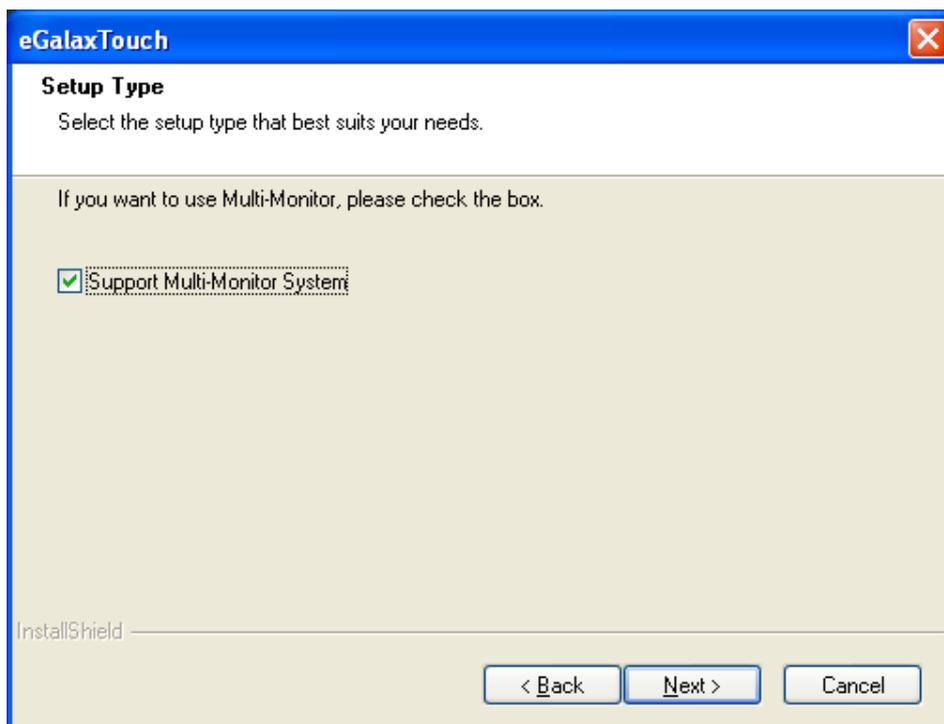


Step 8. Go to **C:\Program Files\eGalaxTouch**. Click **Next**.

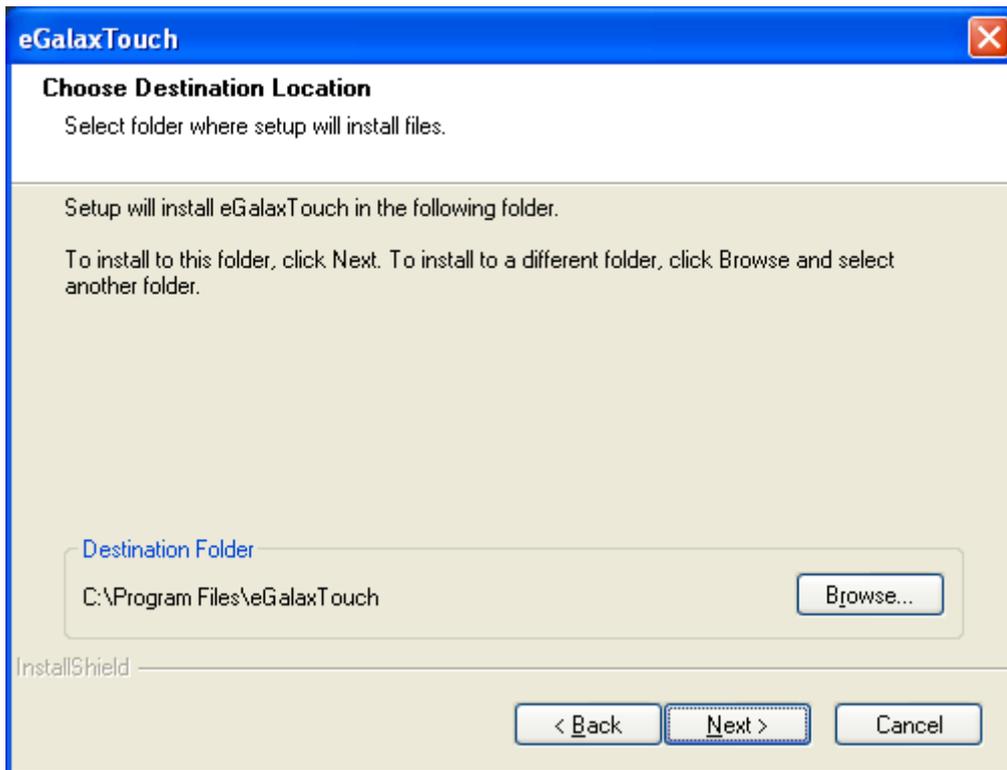


Step 9. Click **Next**.

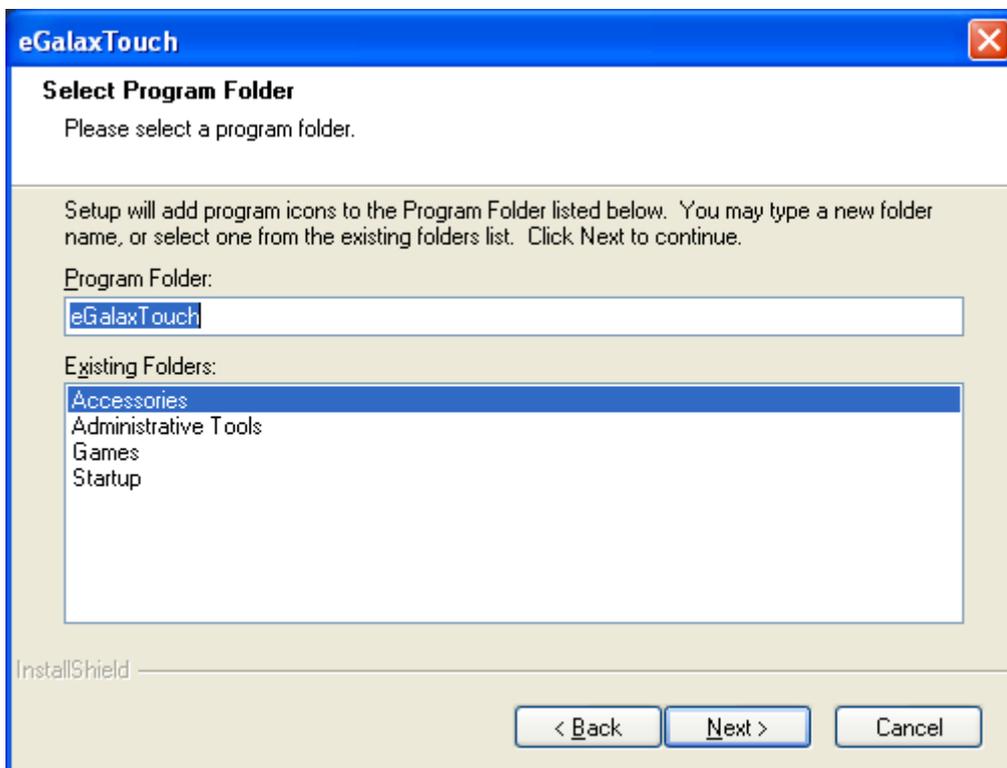


Step 10. Click **Create a eGalaxTouch Utility shortcut on desktop.** Click **Next.**

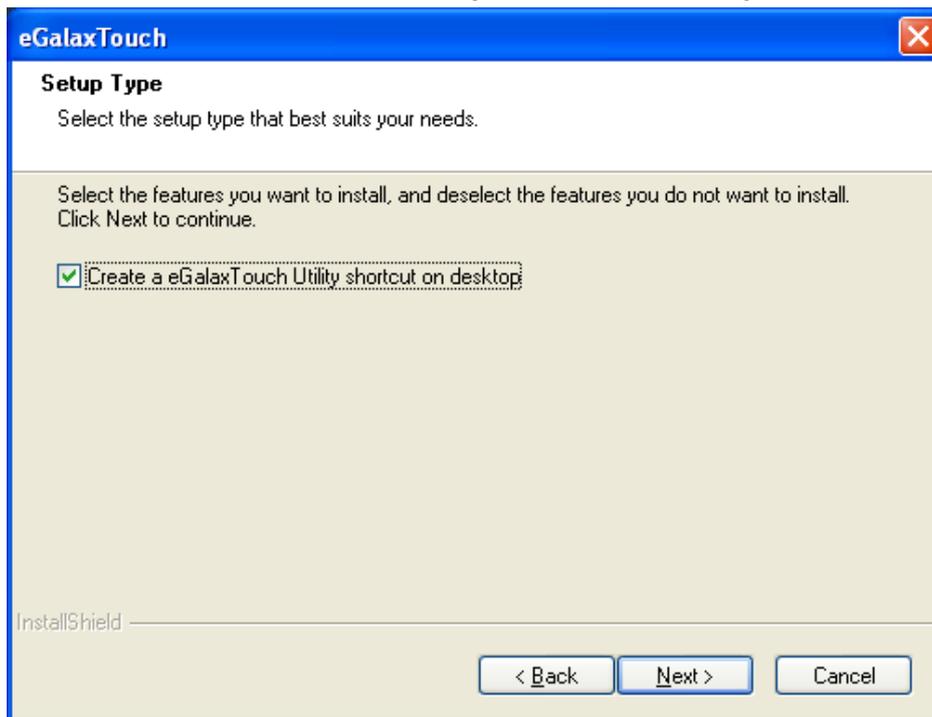

Step 11. Wait for installation.

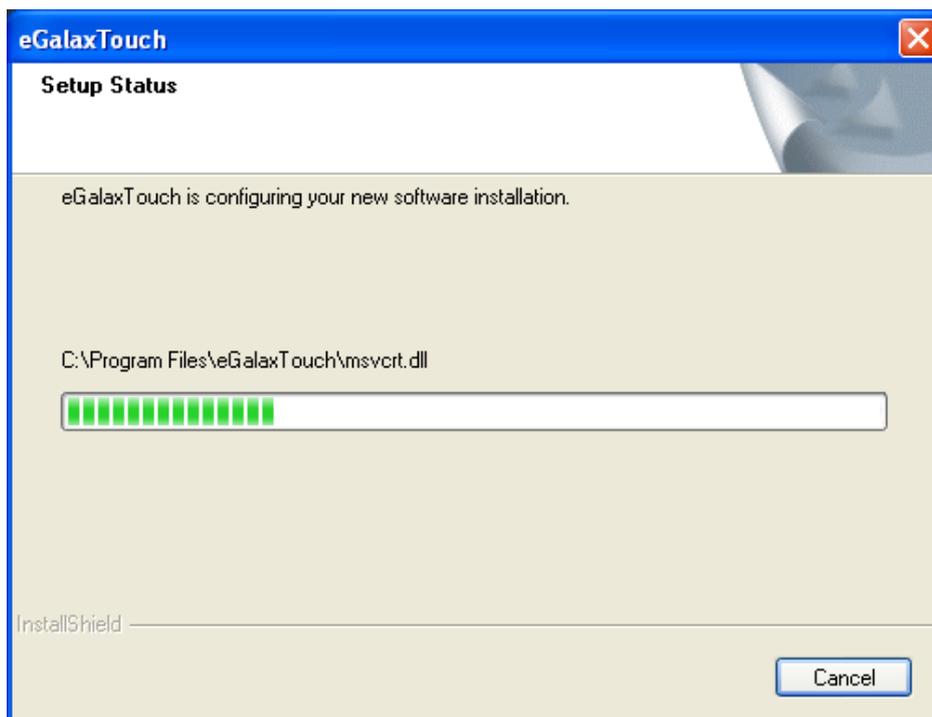

Step 12. Click **Yes** to do 4 point calibration.

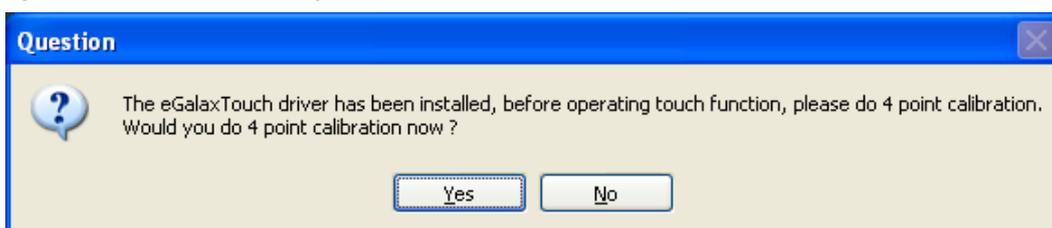

3.2 Software Functions

3.2.1 Software Functions(Resistive Touch)

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.


1. After installation, click the PenMount Monitor icon “PM” in the menu bar.
2. When the PenMount Control Panel appears, select a device to “Calibrate.”

PenMount Control Panel(Resistive Touch)

The functions of the PenMount Control Panel are **Device**, **Multiple Monitors**, **Tools** and **About**, which are explained in the following sections.

Device

In this window, you can find out that how many devices be detected on your system.

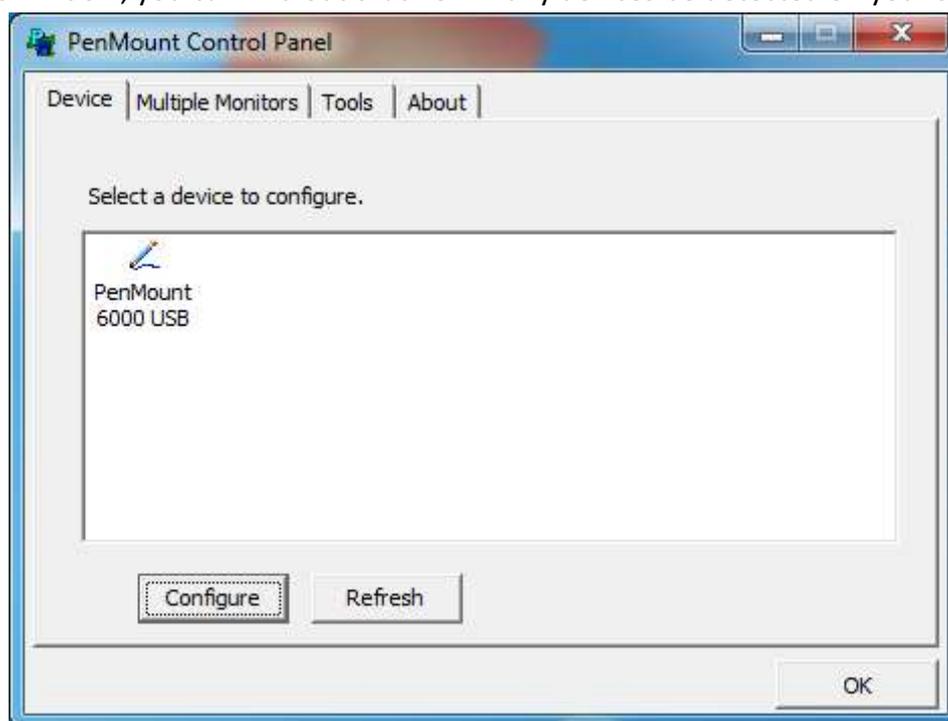


Calibrate



This function offers two ways to calibrate your touch screen. ‘Standard Calibration’ adjusts most touch screens. ‘Advanced Calibration’ adjusts aging touch screens.

Standard Calibration	Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press 'ESC'.
Advanced Calibration	Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC'.

Step 1. Please select a device then click “Configure”. You can also double click the device too.

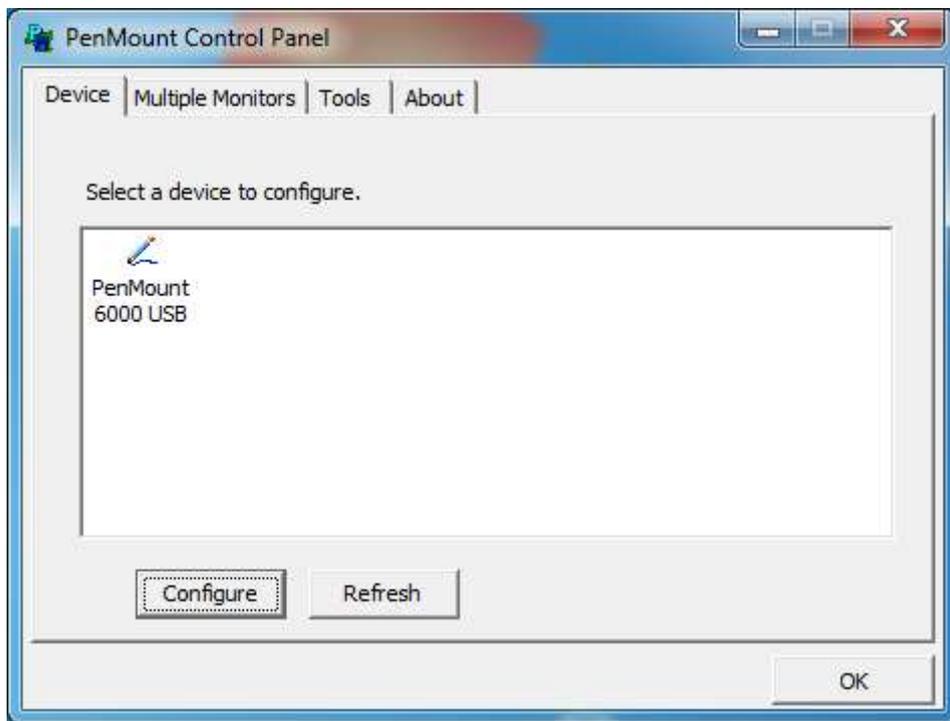


Step 2. Click “Standard Calibration” to start calibration procedure

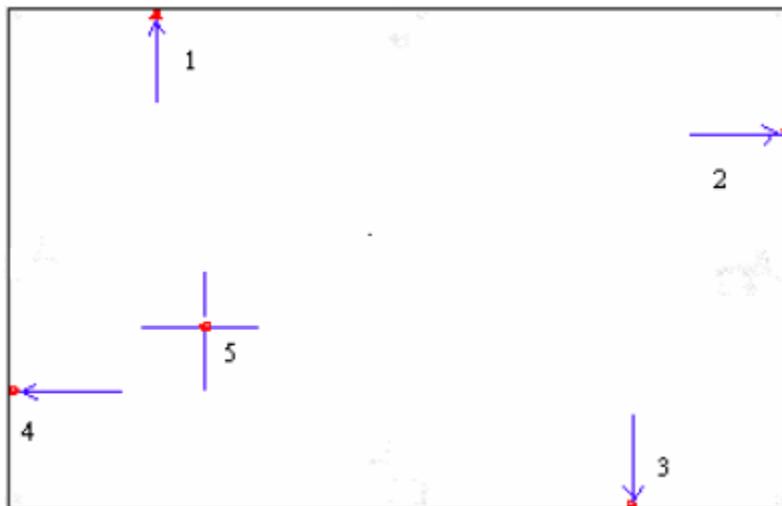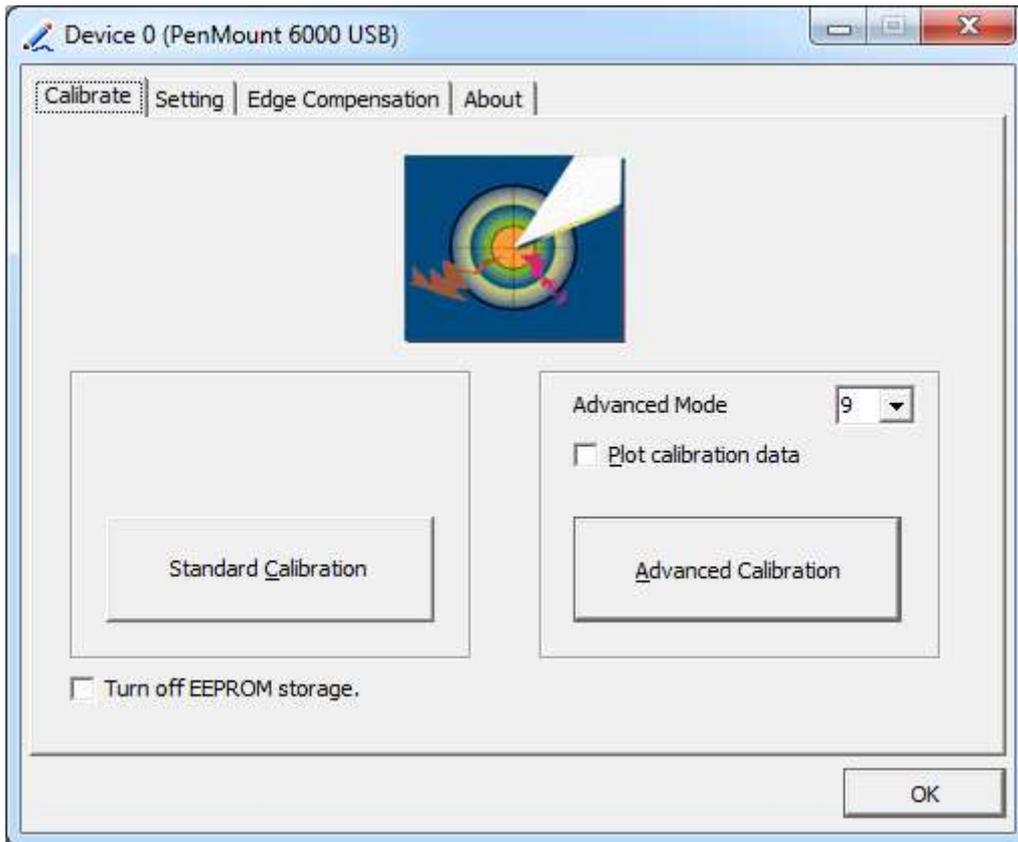

NOTE: The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:

Step 3. Select **Device** to calibrate, then you can start to do **Advanced Calibration**.

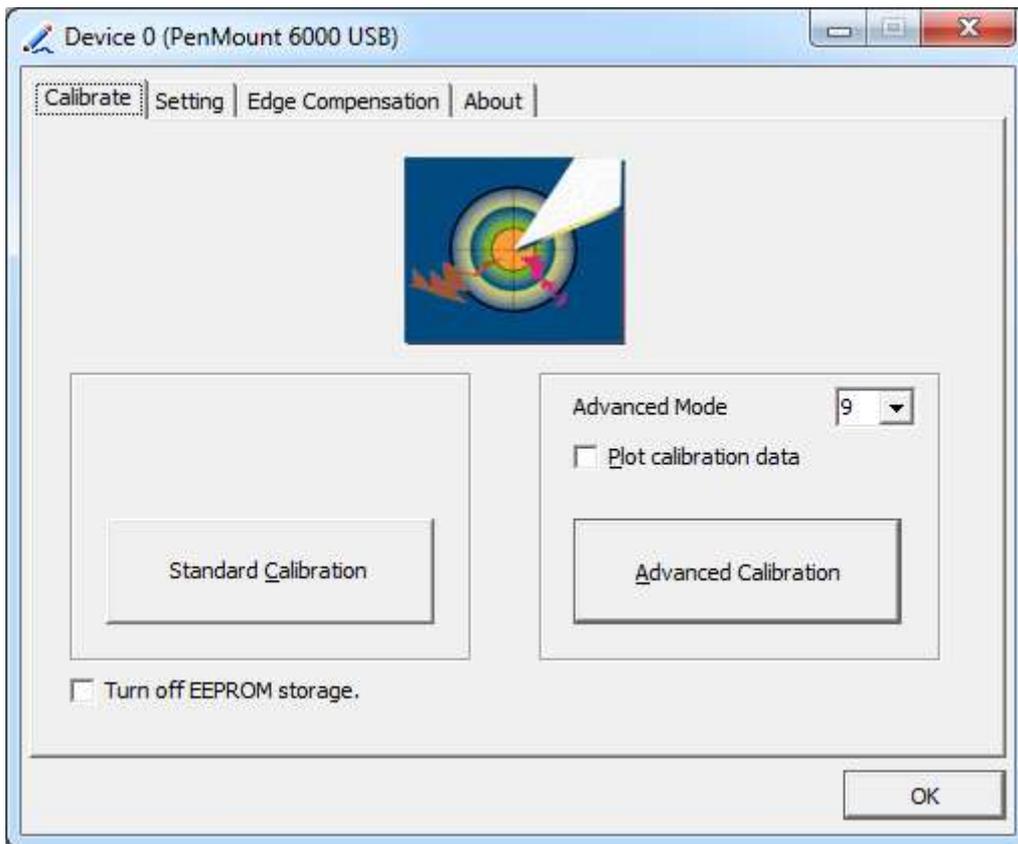


NOTE: Recommend to use a stylus during Advanced Calibration for greater accuracy.



Plot Calibration Data	Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration.
Turn off EEPROM storage	The function disable for calibration data to write in Controller. The default setting is Enable.


Setting

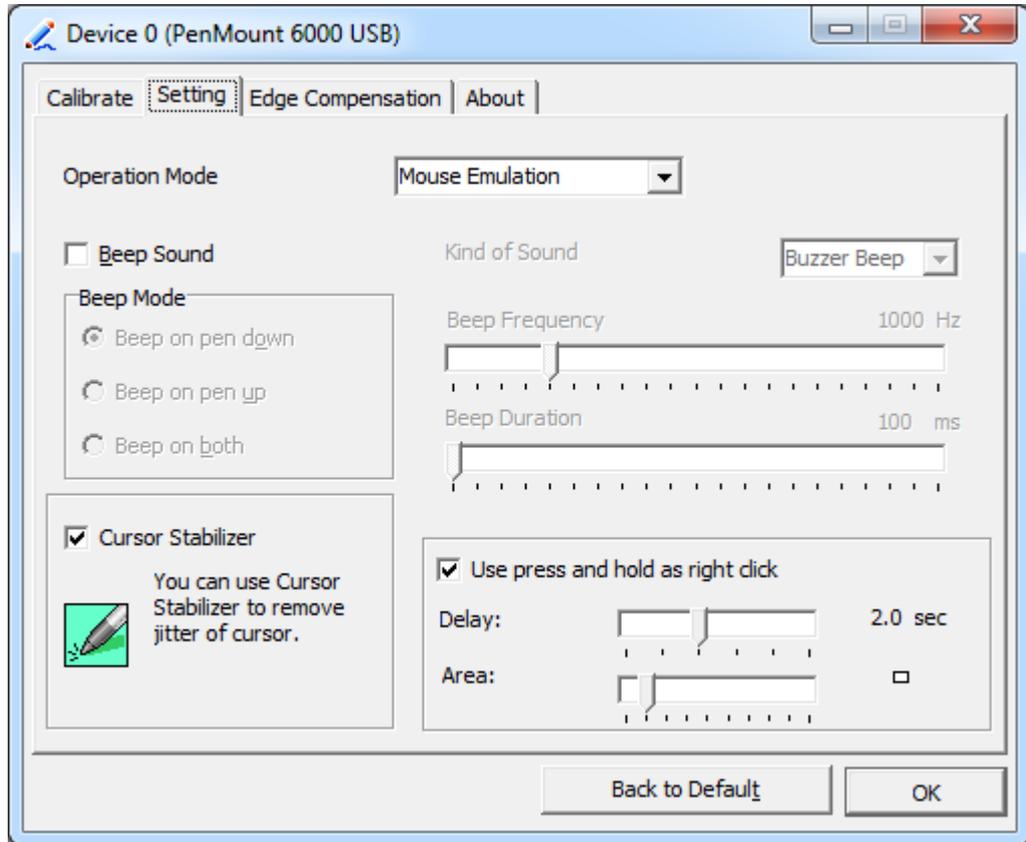

Touch Mode	<p>This mode enables and disables the mouse’s ability to drag on-screen icons – useful for configuring POS terminals.</p> <p>Mouse Emulation – Select this mode and the mouse functions as normal and allows dragging of icons.</p> <p>Click on Touch – Select this mode and mouse only provides a click function, and dragging is disables.</p>
Beep Sound	<p>Enable Beep Sound – turns beep function on and off</p> <p>Beep on Pen Down – beep occurs when pen comes down</p> <p>Beep on Pen Up – beep occurs when pen is lifted up</p> <p>Beep on both – beep occurs when comes down and lifted up</p> <p>Beep Frequency – modifies sound frequency</p> <p>Beep Duration – modifies sound duration</p>
Cursor Stabilizer	<p>Enable the function support to prevent cursor shake.</p>
Use press and hold as right click	<p>You can set the time out and area for you need.</p>


Edge Compensation

You can use Edge Compensation to calibrate more subtly.

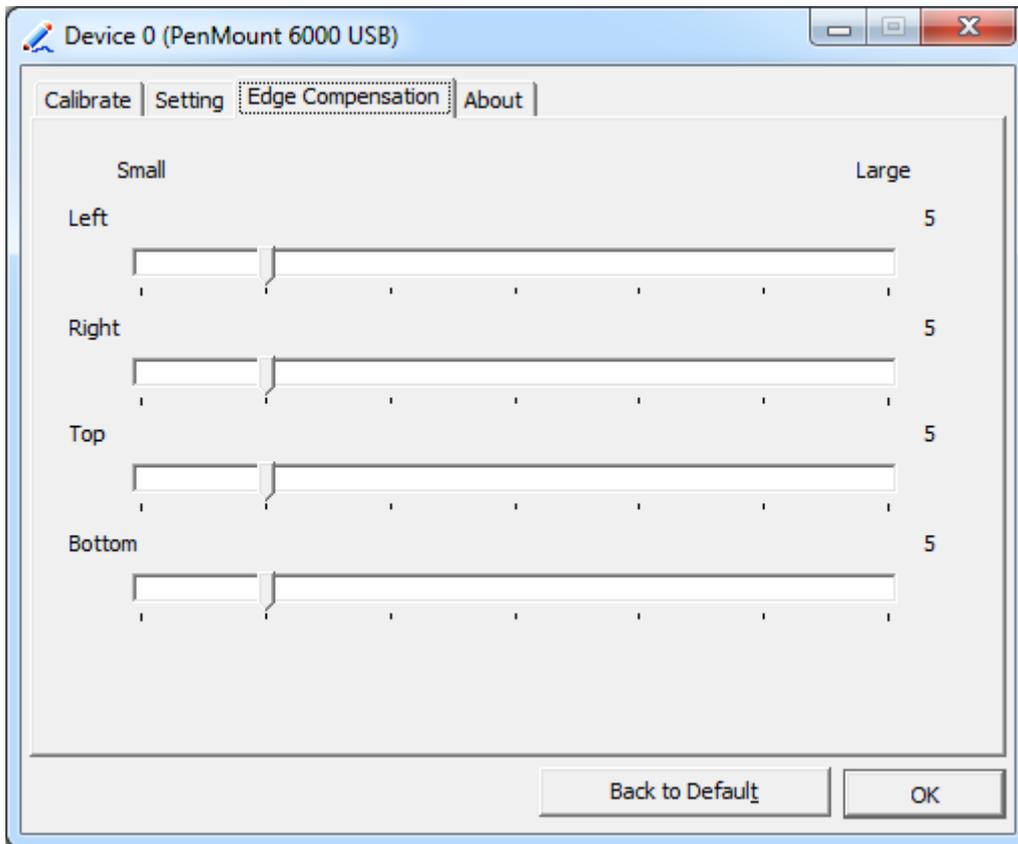

About

This panel displays information about the PenMount controller and driver version.

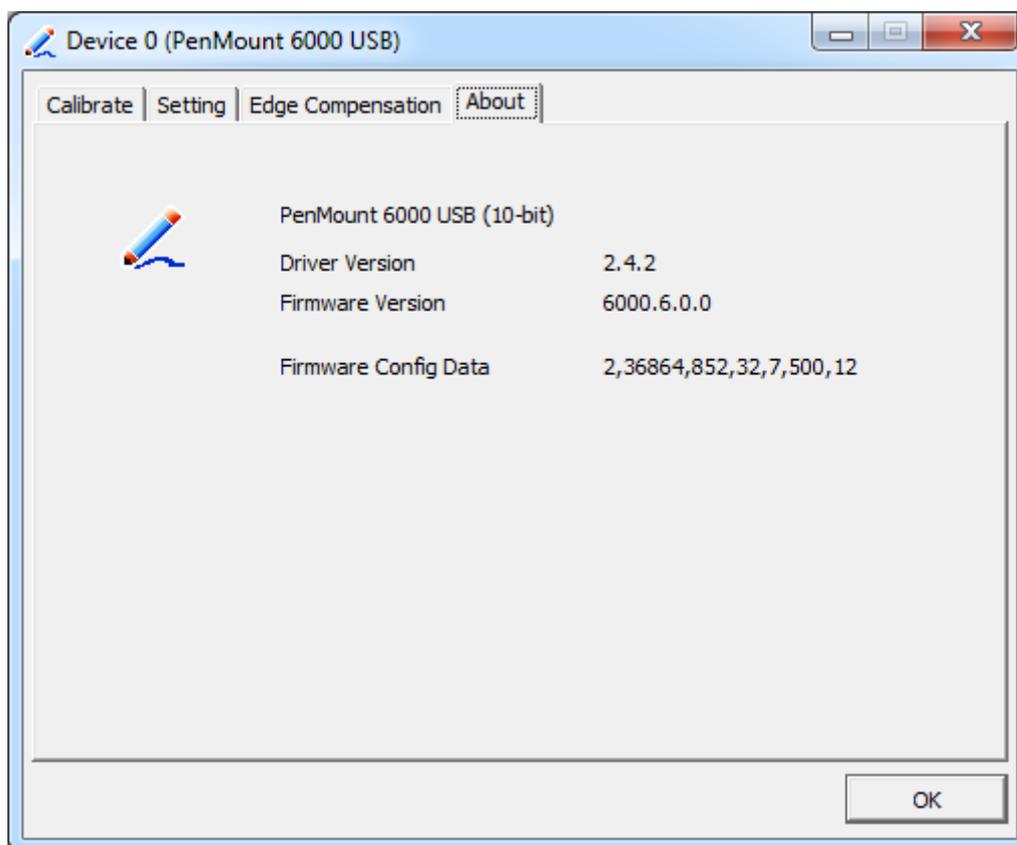

Multiple Monitors

Multiple Monitors support from two to six touch screen displays for one system. The PenMount drivers for Windows 7 support Multiple Monitors. This function supports from two to six touch screen displays for one system. Each monitor requires its own PenMount touch screen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the USB interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors support the following modes:


- Windows Extends Monitor Function
- Matrox DualHead Multi-Screen Function
- nVidia nView Function

NOTE: The Multiple Monitor function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the rotating function is disabled.


Enable the multiple display function as follows:

1. Check the **Enable Multiple Monitor Support** box; then click **Map Touch Screens**

to assign touch controllers to displays.

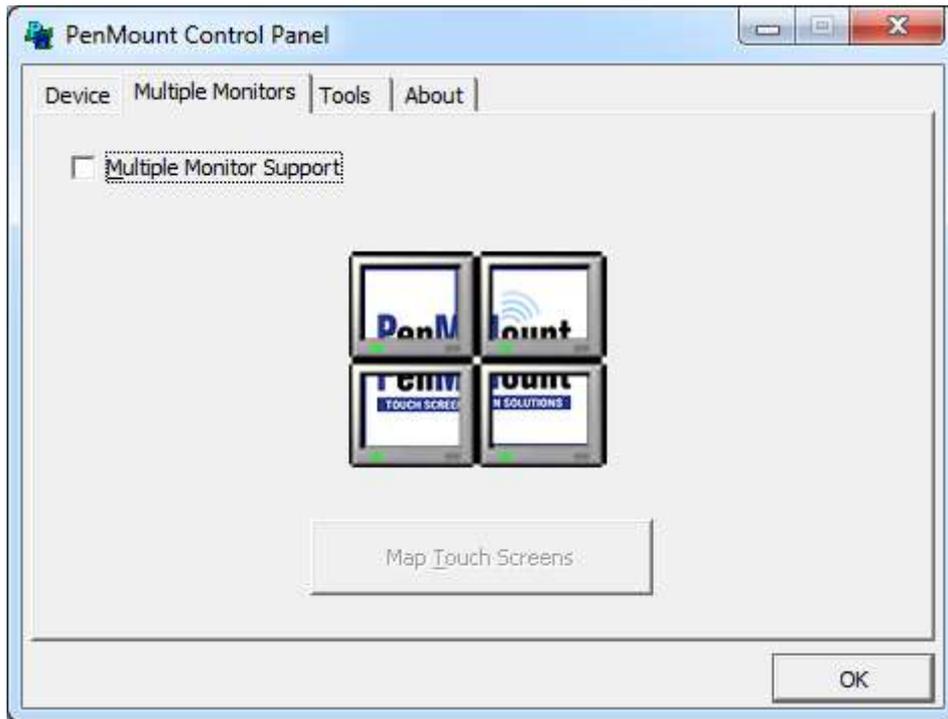

2. When the mapping screen message appears, click **OK**.
3. Touch each screen as it displays “Please touch this monitor”. Following this sequence and touching each screen is called **mapping the touch screens**.

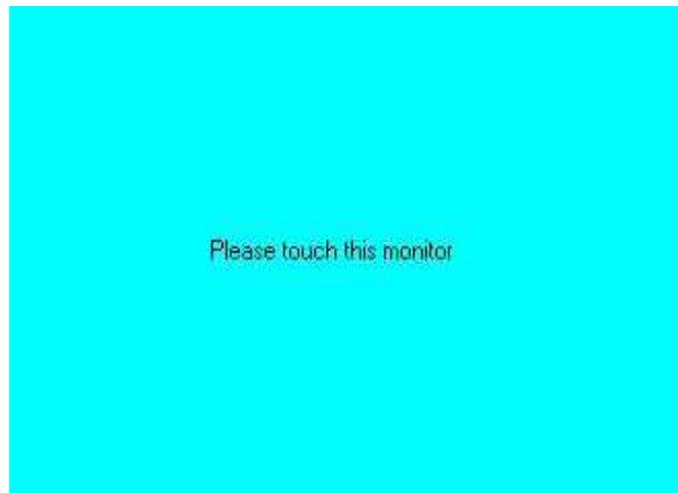

4. Touching all screens completes the mapping and the desktop reappears on the monitors.
5. Select a display and execute the “Calibration” function. A message to start calibration appears. Click **OK**.




6. "Touch this screen to start its calibration" appears on one of the screens. Touch the screen.
7. "Touch the red square" messages appear. Touch the red squares in sequence.
8. Continue calibration for each monitor by clicking **Standard Calibration** and touching the red squares.

NOTES:

1. If you use a single VGA output for multiple monitors, please do not use the **Multiple Monitor** function. Just follow the regular procedure for calibration on each of your desktop monitors.
2. The Rotating function is disabled if you use the Multiple Monitor function.
3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens**, so the system understands where the displays are.

About

This panel displays information about the PenMount controller and this driver version.

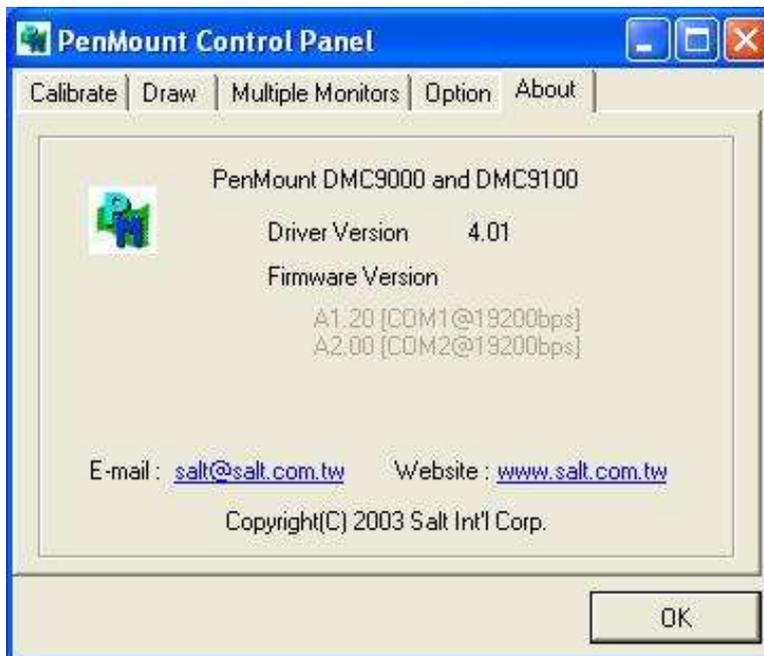

PenMount Monitor Menu Icon

The PenMount monitor icon (PM) appears in the menu bar of Windows 7 system when you turn on PenMount Monitor in PenMount Utilities.




PenMount Monitor has the following function



Control Panel	Open Control Panel Windows
Beep	Setting Beep function for each device
Right Button	When you select this function, a mouse icon appears in the right-bottom of the screen. Click this icon to switch between Right and Left Button functions. 
Exit	Exits the PenMount Monitor function.

Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

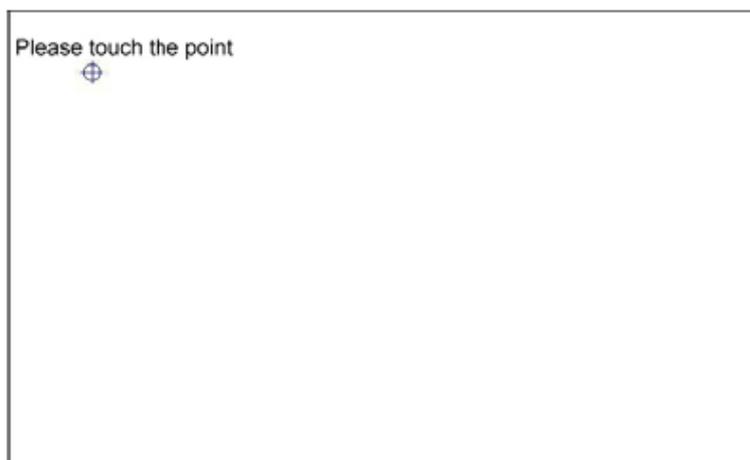


NOTE: The Rotate function is disabled if you use Monitor Mapping

3.2.2 Software Functions(Projected Capacitive)

General

In this window, you can see there is USB Controller. Click **OK** to continue.

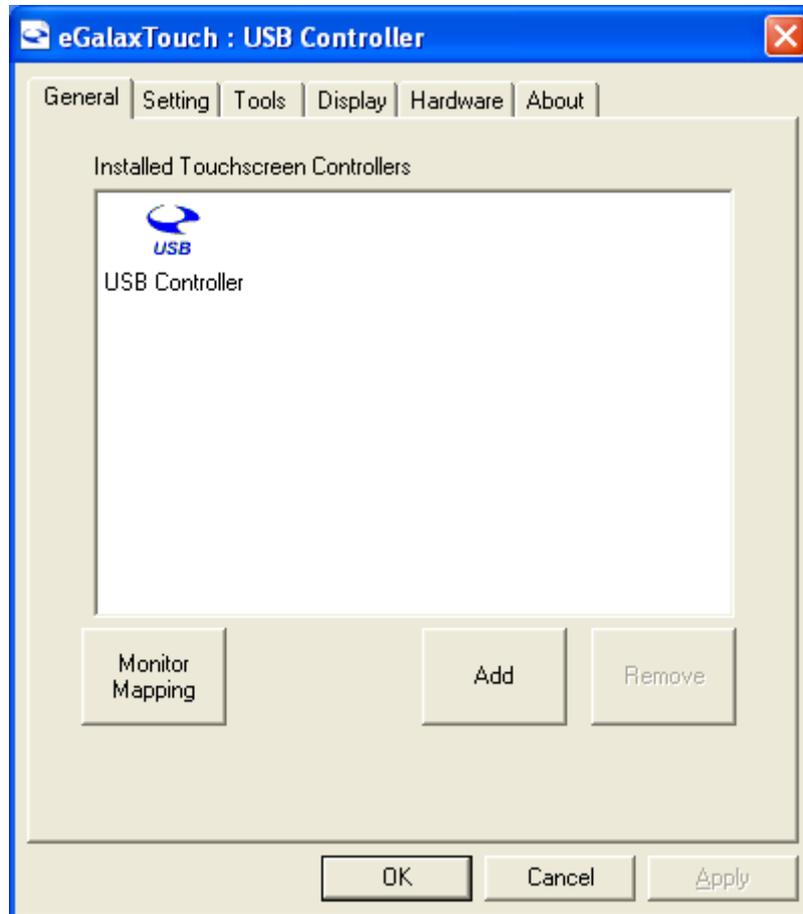


Monitor Mapping

to adjust touch panel

Add

to search for device

Setting

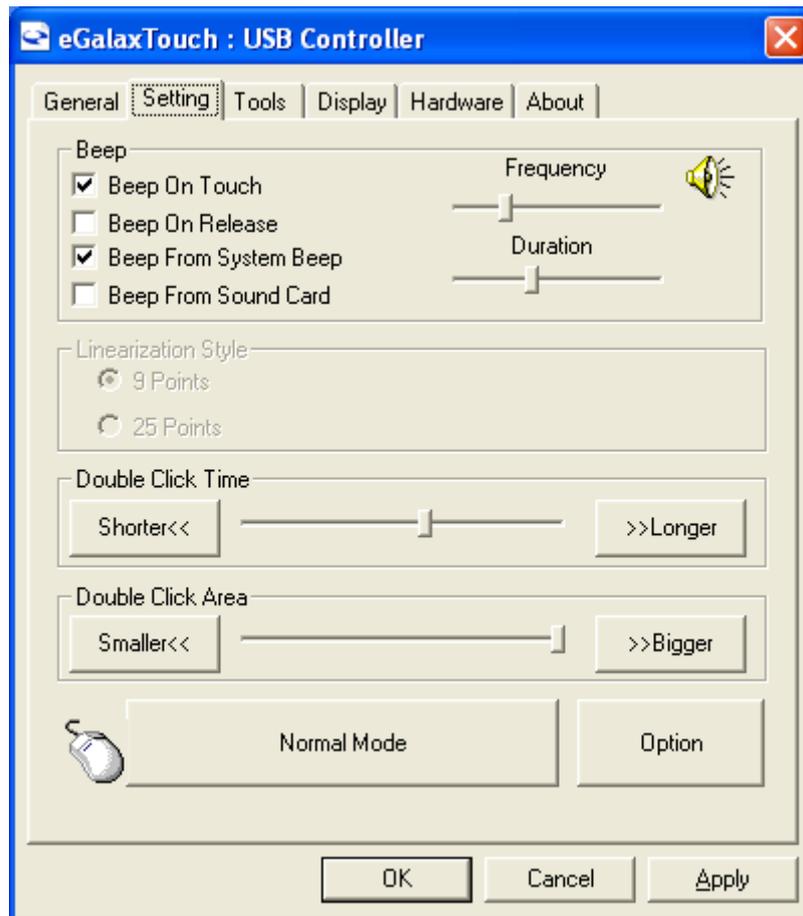

Beep

- Beep On Touch
- Beep On Release
- Beep From System Beep
- Beep From Sound Card

Linearization Style

- 9 points
- 25 points

Double Click Time


- Shorter
- Longer

Double Click Area

- Smaller
- Bigger

Normal mode

- Simulate the mouse mode

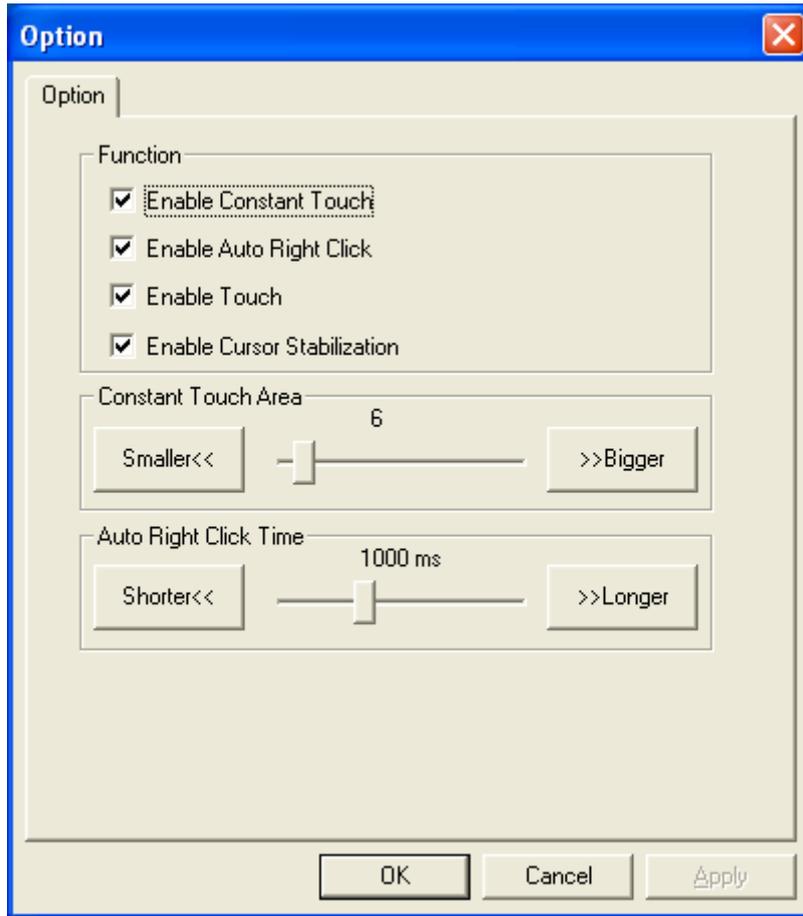

Option

Function

Enable Constant Touch

Enable Auto Right Click

Enable Touch


Enable Cursor Stabilization

Constant Touch Area

Auto Right Click Time

Tools

Click **OK** to continue the settings.

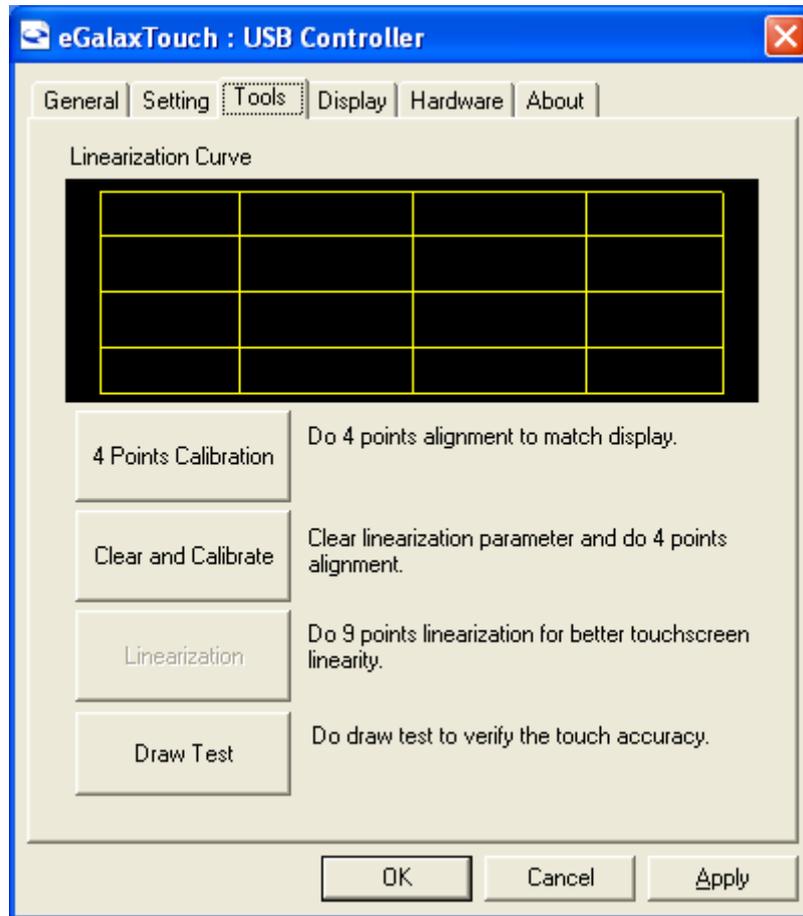

4 Points Calibration

Do 4 points alignment to match display.

Clear and Calibrate

Clear linearization parameter and do 4 points alignment.

Linearization


Do 9 points linearization for better touchscreen linearity.

Draw Test

Do draw test to verify the touch accuracy.

Display

In this window, it shows the mode of display.

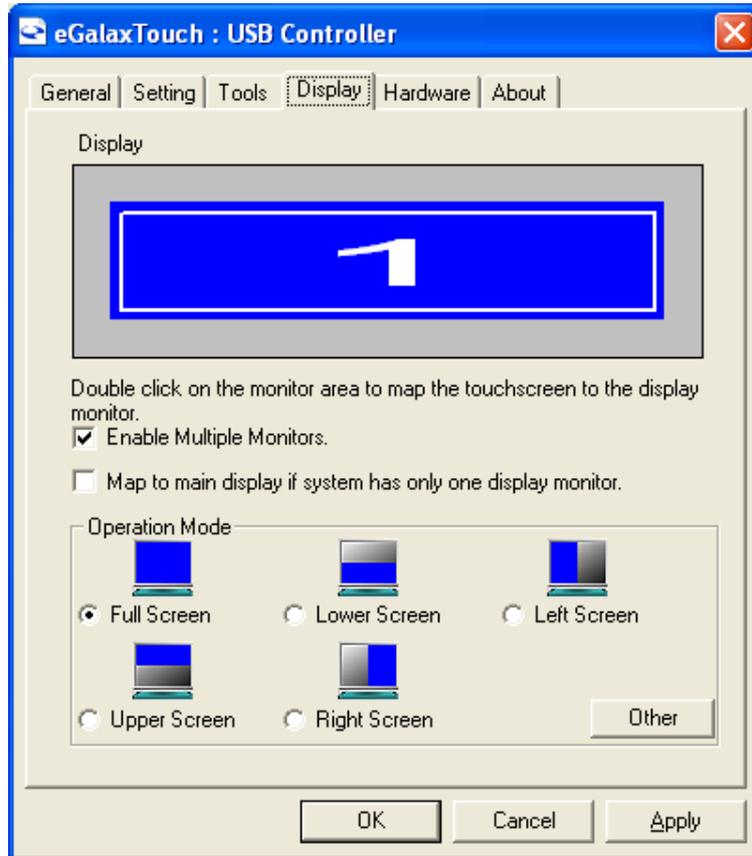

Enable Multiple Monitors.

Map to main display if system has only one display monitor


Full Screen

Lower Screen

Left Screen


Upper Screen

Right Screen

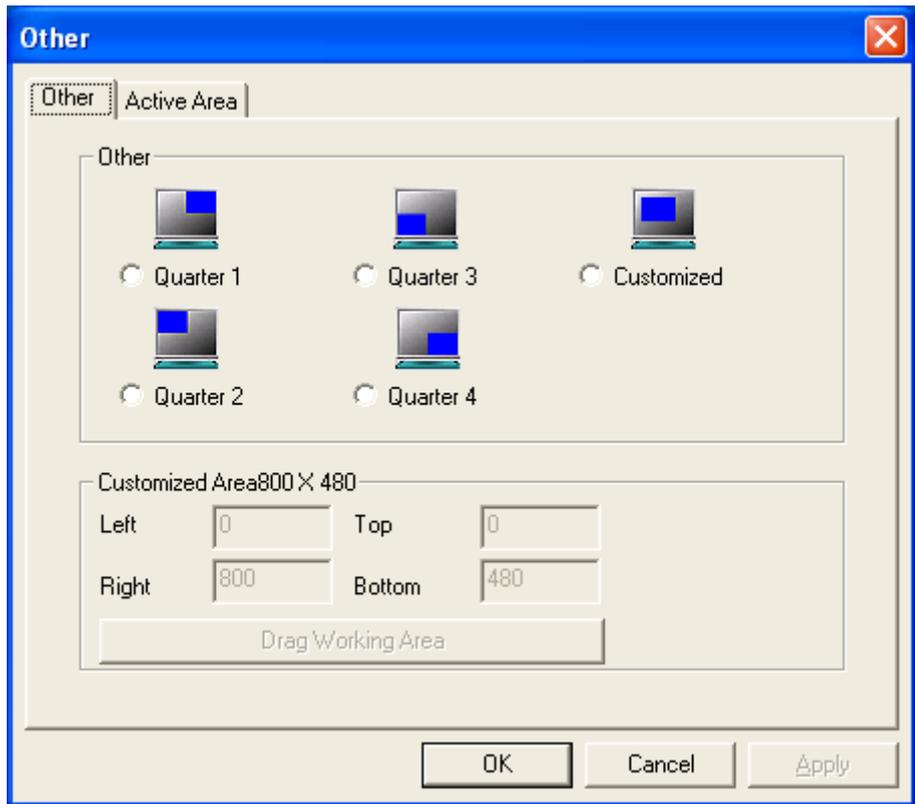

Other


Other mode of display. Quarter1~4 and Customized area.

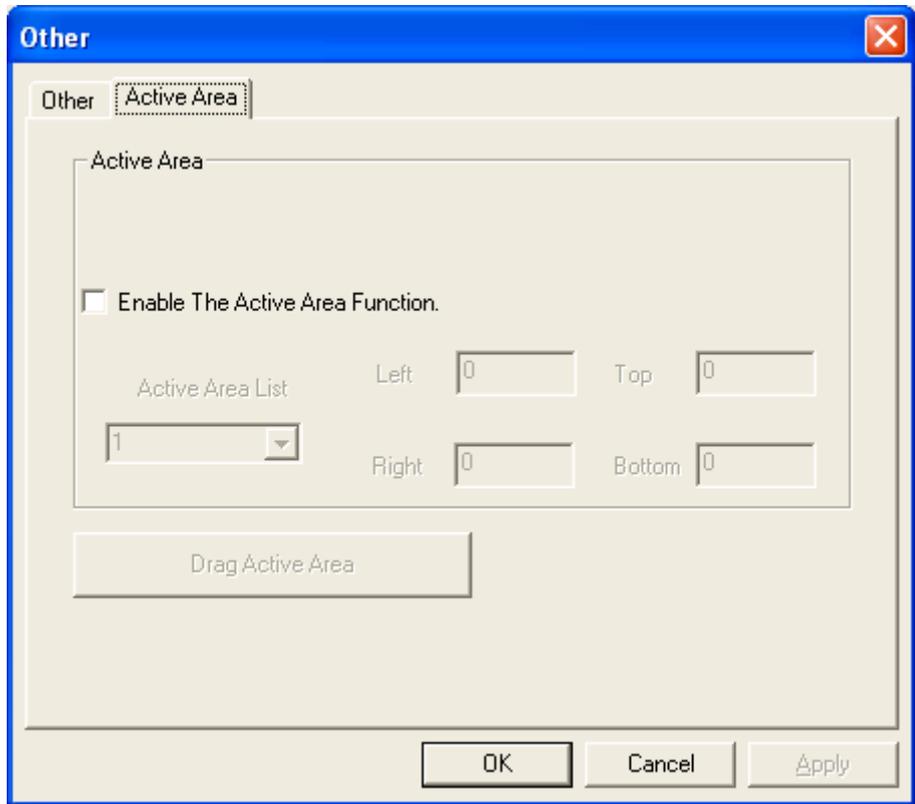


Active Area

Drag active area to enable Active Area Function.

Hardware

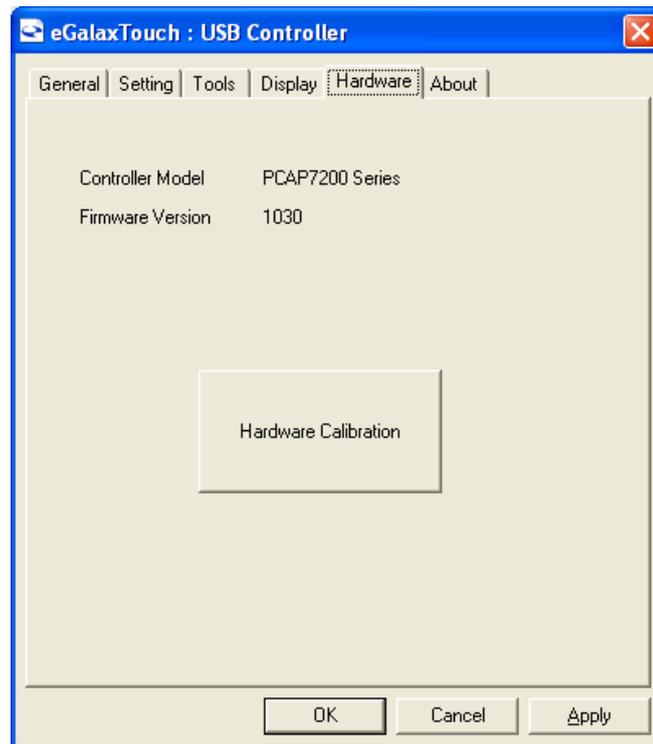


Saturn Hardware Configuration

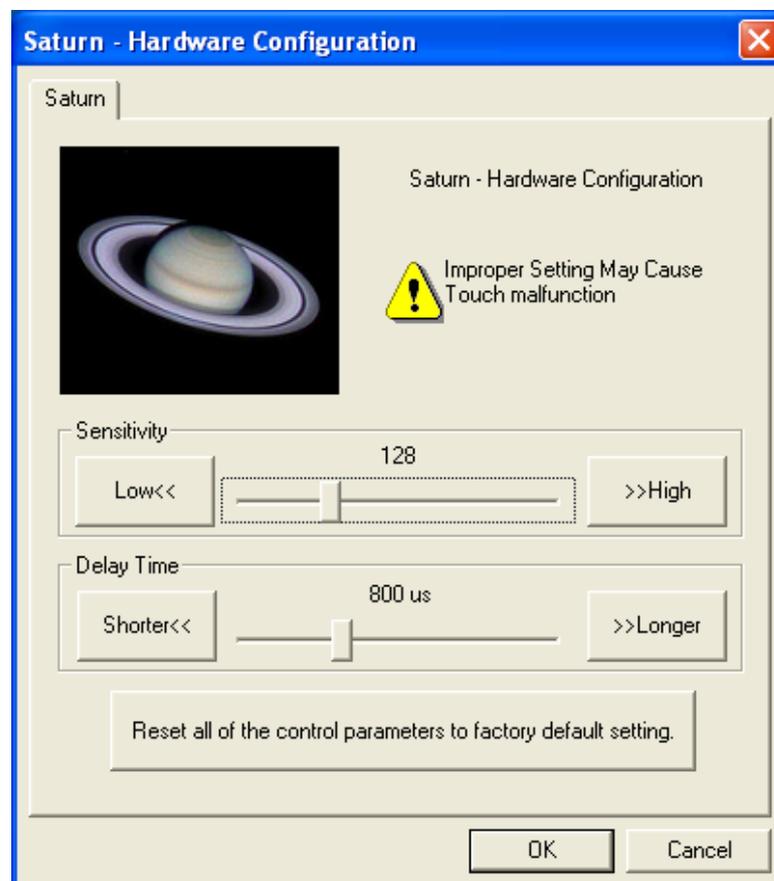

About

To display information about eGalaxTouch and its version.

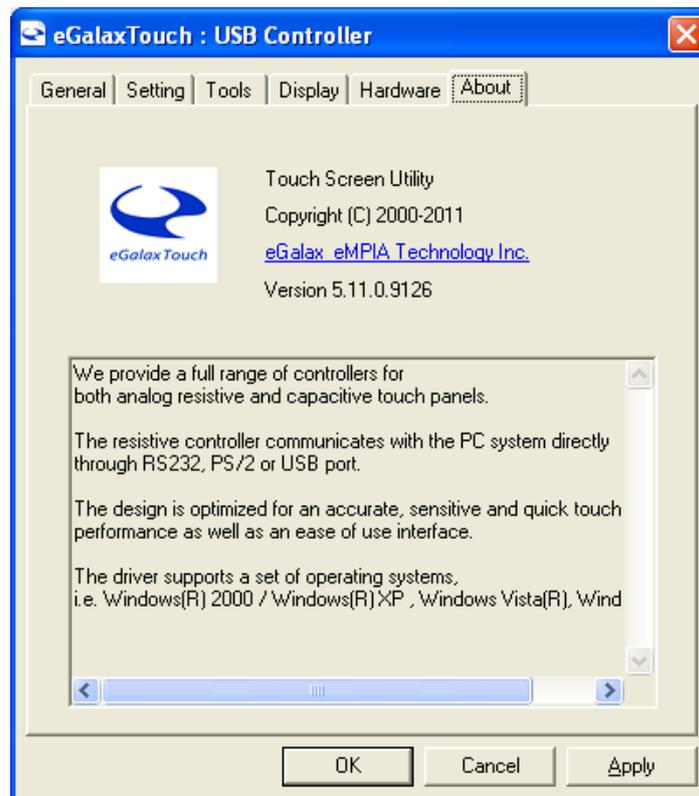


Appendix A: Board Dimensions

Specifications

Specifications	
Board Size	170 x 113 mm
Chipset	Realtek RTD2556T-CG
Input	1 x VGA Port 1 x HDMI (Share with DVD-D) 1 x DVI-D (Share with HDMI) 1 x DP Port 1 x USB 2.0 (Type B)
Output	1 x 24bit LVDS Full HD interface 1 x eDP 1 x Line out (Audio jack)
Resolution	Up to 1920 x 1080 @60Hz for LVDS Up to 1920 x 1080 @60Hz for eDP
Power input	AC 90~264V
Temperature	Operating: -20°C to 70°C Storage: -40°C to 85°C
Humidity	10~90%, non-condensing, operating
EMI/EMS	Meet CE/FCC class A

Board Dimensions

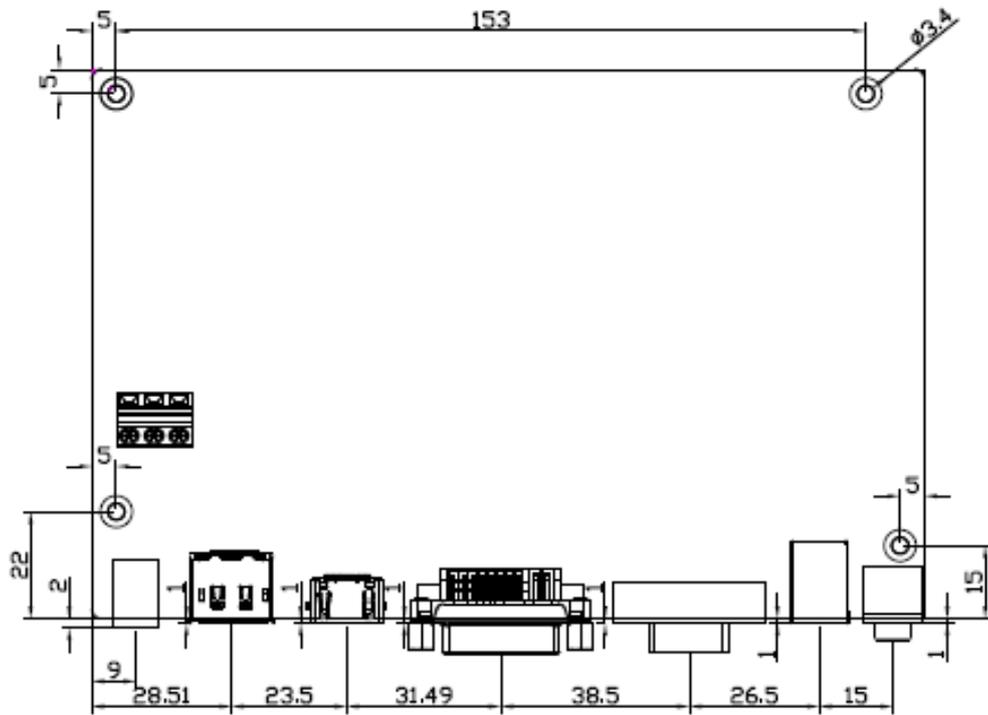

(units: mm)

Figure A: Dimensions of TB-6802 (Top)

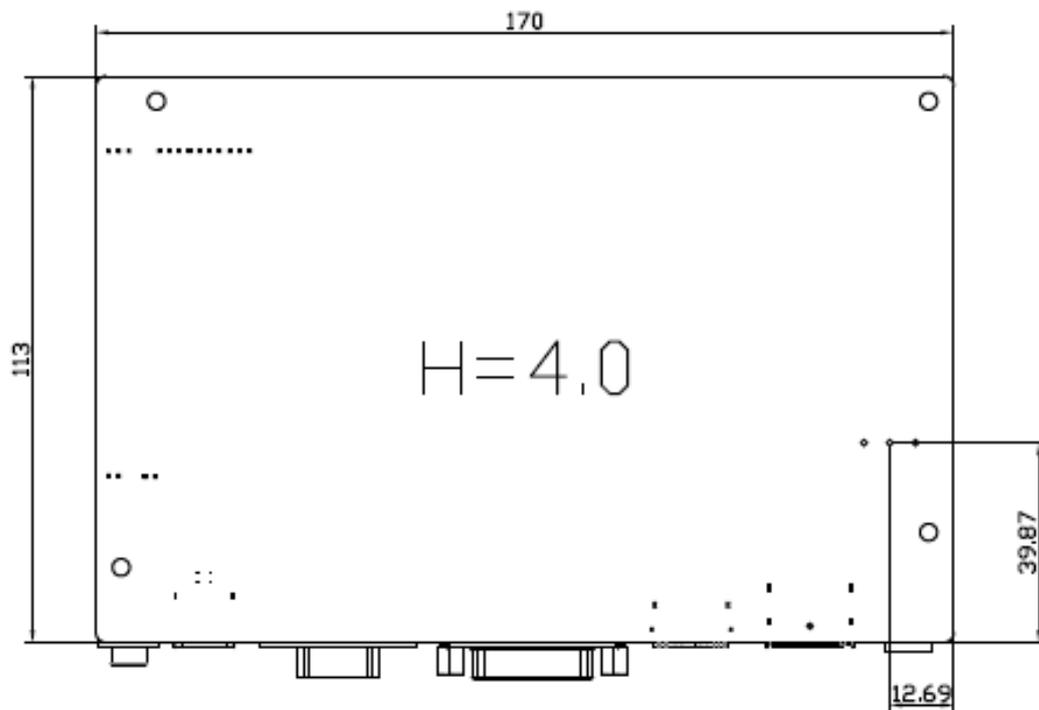


Figure B: Dimensions of TB-6802 (Bottom)

Appendix B: Panel Mounting and VESA Mounting

The ADP-1XX4A is designed to be panel-mounted and VESA mounted as shown in Picture. Just carefully place the unit through the hole and tighten the given screws from the rear to secure the mounting.

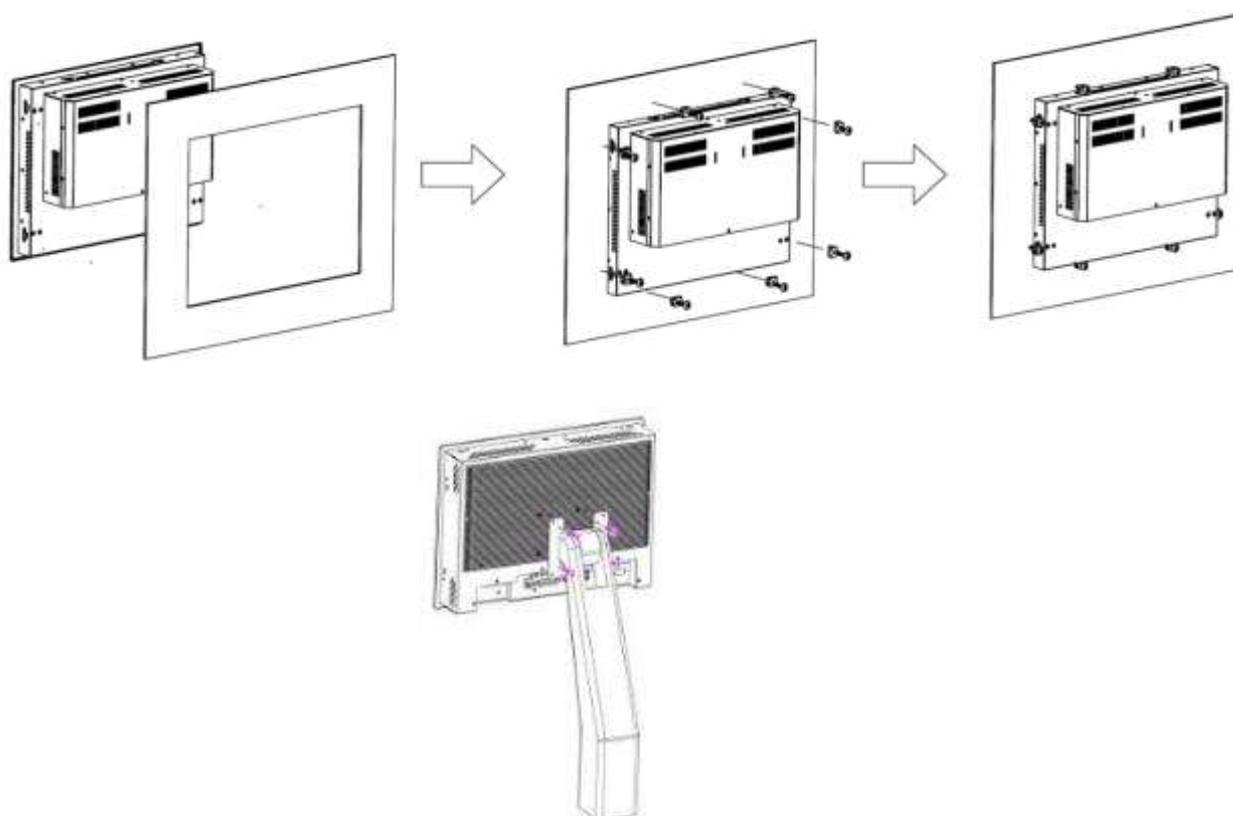


Figure C: Panel Mounting and VESA Mounting of ADP-1XX4A



Attention

***Notice :**

Tighten the mounting clip screws by hand until the gasket seal contacts the mounting surface uniformly.

Tighten the mounting clips screws to a torque of 8 ~ 10 kgf-cm by using the specified sequence, making sure not to overtighten.