

# SKU1 (Intel<sup>®</sup> R680E) SKU2 (Intel<sup>®</sup> Q670E) SKU3 (Intel<sup>®</sup> H610E)

## MS-CF10

**Industrial Computer Board** 

User Guide

## Contents

Regulatory Notices4
Safety Information7
Specifications
SKU Features Comparison14
Motherboard Overview
Rear Panel Connectors
CPU Socket
Memory23
Storage24
Expansion Slots

#### Revision

V1.2, 2025/03

Connectors
Power Connectors
Cooling Connectors
Audio Connectors
Graphics Connectors
USB Connectors
Other Connectors
Jumpers41
BIOS Setup42
Entering Setup
The Menu Bar44
Main45
Advanced47
Boot
Security
Chipset63
Power64
Save & Exit65
GPIO WDT Programming66
Abstract
General Purpose IO
Watchdog Timer – WDT69

## **Regulatory Notices**

## **CE Conformity**

Hereby, Micro-Star International CO., LTD declares that this device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.

## FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses

FC

**F** 

and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

#### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

### **WEEE Statement**

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



### **Chemical Substances Information**

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

https://csr.msi.com/global/index

## **Battery Information**

Please take special precautions if this product comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

#### **European Union:**



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

#### BSMI:



廢電池請回收 For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

#### California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: <u>http://www.dtsc.ca.gov/hazardouswaste/perchlorate/</u>

### **Environmental Policy**

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at <u>gpcontdev@msi.com</u> for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.
- Please visit <<u>https://us.msi.com/page/recycling</u>> for information regarding the recycling of your product in the US.

## **Copyright and Trademarks Notice**



Copyright © Micro-Star Int' l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int' l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

# 

The terms HDMI<sup>™</sup>, HDMI<sup>™</sup> High-Definition Multimedia Interface, HDMI<sup>™</sup> Trade dress and the HDMI<sup>™</sup> Logos are trademarks or registered trademarks of HDMI<sup>™</sup> Licensing Administrator, Inc.

## **Technical Support**

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit <u>https://www.msi.com/support/</u> for further guidance.



## **Safety Information**

# Please read and follow these safety instructions carefully before installing, operating or performing maintenance on the equipment.

#### **General Safety Instructions**

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment in a dry, humidity-free environment.
- Ensure that all components are securely connected to prevent issues during operation.
- Do not cover the air openings to prevent overheating.
- Avoid spilling liquids into the equipment to prevent damage or electrical shock.
- Do not leave the equipment in an unconditioned environment. Storage temperatures above 60°C (140°F) may cause damage.

#### **Electrostatic Discharge (ESD) Precautions**

The components included in this package are sensitive to electrostatic discharge. Follow these guidelines to prevent ESD-related damage:

- Hold the motherboard by the edges to avoid touching sensitive components.
- Wear an ESD wrist strap. If not available, discharge static electricity by touching a metal object before handling.
- When not installed, store the motherboard in an electrostatic shielding container or place it on an anti-static pad.

#### **Power Safety**

- Always turn off the power supply and unplug the power cord from the outlet before installing or removing any component.
- Ensure the electrical outlet provides the same voltage as indicated on the PSU before connecting.
- Arrange the power cord to avoid tripping hazards or damage. Do not place objects over the power cord.

#### **Installation Instructions**

- Lay the equipment on a stable, flat surface before setting it up.
- Before turning on the system, ensure there are no loose screws or metal components on the motherboard or within the system case.
- Do not boot the computer before completing all installations. Premature booting can cause permanent damage to components and pose safety risks.

#### When to Contact Service Personnel

Immediately consult service personnel if any of the following situations arise:

- The power cord or plug is damaged.
- Liquid has entered the equipment.
- The equipment has been exposed to moisture.
- The equipment does not function as described in the User Guide.
- The equipment has been dropped or physically damaged.
- The equipment shows visible signs of breakage.

## **Specifications**

### SKU1/2

Model	MS-CF10-SKU1	MS-CF10-SKU2	
Dimensions	170(L)mm x 170(W)mm, Mini-ITX size		
	<ul> <li>14th Gen Intel<sup>®</sup> Raptor Lake-S Refresh i9/i7/i5/i3 IOTG Series Processor, Max 65W</li> </ul>		
Processor	Processor • 13th Gen Intel® Raptor Lake-S i9/i7/i5/i3/Pentium®/Celeron® IOTG Series Processor, Max 65		
	<ul> <li>12th Gen Intel<sup>®</sup> Alder Lake-S i9/i7/i5/i3/Pentium<sup>®</sup>/Celeron<sup>®</sup> IOT</li> </ul>	G Series Processor, Max 65W	
Chipset	Intel <sup>®</sup> R680E	Intel <sup>®</sup> Q670E	
iAMT Support	<ul> <li>Supports Intel<sup>®</sup> AMT 16.x (Only for Intel<sup>®</sup> Core<sup>™</sup> i9/i7/i5 Proc</li> </ul>	essor Series at LAN1)	
M	<ul> <li>2 x DDR5 SO-DIMM slots (262-pin, vertical)</li> <li>Up to 5600 MT/s</li> <li>Up to 64GB</li> </ul>		
Memory	<ul> <li>Dual-Channel DDR5,</li> <li>ECC*/ Non-ECC</li> </ul>	- Dual-Channel DDR5, Non-ECC	
	*Please refer to your CPU specifications for EC	CC compatibility.	
Network	<ul> <li>3 x Intel<sup>®</sup> I226-LM</li> <li>2.5GbE RJ45 LAN</li> </ul>	• <b>1 x Intel® I226-LM</b> 2.5GbE RJ45 LAN	
Network		• 2 x Intel <sup>®</sup> I226-V 2.5GbE RJ45 LAN	
Storage	<ul> <li>2 x SATA 3.0 6Gb/s ports</li> <li>Supports RAID 0/1/5 (RAID 5 supports</li> </ul>	orts by M.2 M key slot)	
	• 1 x PCIe 5.0 x16 slot, mutiple PCIe	e 5.0 spported	
	<ul> <li>1 x M.2 M Key slot (2242/2280)</li> <li>Supports PCIe 3.0 x4, SATA 3.0 x1 signal</li> </ul>		
Expansion Slots	<ul> <li>1 x M.2 E Key slot (2230)</li> <li>Supports PCIe 3.0 x1, USB 2.0 signal (480 Mbps)</li> <li>Supports CNVi modules</li> </ul>		
	<ul> <li>1 x M.2 B Key slot (3042)</li> <li>Supports PCIe 3.0 x1, USB 10Gbps &amp; USB 2.0 (480 Mbps) signal</li> <li>Support Nano SIM holder</li> </ul>		
	• 1 x Nano SIM Holder - Supported by M.2 B key (SIM) slot		
Audio	Realtek® ALC897 High Definition Audio Codec		

Continued on next column

Model	MS-CF10-SKU1 MS-CF10-SKU2
	• 2 x DP 1.4a up to 4096×2304 @60Hz
	• 2 x HDMI <sup>™</sup> 2.0b up to 4096x2160 @60Hz
	<ul> <li>1 x eDP up to 4096×2304 @60 Hz (signal shares with LVDS)</li> <li>Supports auto switch between eDP &amp; LVDS</li> <li>Connector shared with LVDS</li> </ul>
Graphics	<ul> <li>1 x LVDS up to 1920x1200 @60Hz (signal shares with eDP)</li> <li>Supports auto switch between eDP &amp; LVDS</li> <li>Supports 18/24-bit dual channel</li> <li>Connector shared with eDP</li> </ul>
	<ul> <li>4 independent display modes supported</li> <li>DP1 + DP2 + HDMI<sup>™</sup>1 + HDMI<sup>™</sup>2</li> <li>DP1 + DP2 + HDMI<sup>™</sup>1 + eDP/LVDS</li> <li>DP1 + DP2 + HDMI<sup>™</sup>2 + eDP/LVDS</li> <li>DP1 + HDMI<sup>™</sup>1 + HDMI<sup>™</sup>2 + eDP/LVDS</li> <li>DP2 + HDMI<sup>™</sup>1 + HDMI<sup>™</sup>2 + eDP/LVDS</li> </ul>
	• 2 x DisplayPort
	• 2 x HDMI™
Rear Panel	• 3 x 2.5 GbE RJ-45 LAN ports
Connectors	• 6 x USB 10Gbps Type-A ports
	• 1 x Line-out jack
	• 1 x Mic-in jack
	• 1 x USB 5Gbps header (for 2 USB ports)
Internal USB Connectors	• 1 x USB 2.0 header (480 Mbps, for 2 USB ports)
	• 1 x USB 2.0 Type-A connector (480 Mbps)
Power	• 1 x 8-pin DC-In power connector (8~48V)
Connectors	• 1 x 4-pin SATA power connector
Fan	• 1 x 4-pin PWM CPU fan connector
Connectors	• 1 x 4-pin PWM system fan connector
	• 1 x Front panel connector
	• 1 x Front audio connector (Line-out & Mic-in)
	• 1 x Audio amplifier header
	• 1 x LVDS inverter box header
System	• 1 x LVDS + eDP wafer connector
Connectors	• 2 x COM (Serial) port connectors
	• 1 x GPIO header (16-bit, 8 x GPI, 8 x GPO)
	• 1 x SMBus connector (5V)
	• 1 x Chassis intrusion header
	• 1 x CMOS battery header

Continued on next column

Model	MS-CF10-SKU1	MS-CF10-SKU2
	• 4 x COM voltage select jumpers	
	• 1 x AT/ ATX mode select jumper	
Jumpers	• 1 x eDP/ LVDS power select jumper	
	<ul> <li>1 x Clear CMOS jumper</li> </ul>	
	• 1 x ME jumper (for iAMT BIOS flash)	
	• Windows 10 IoT Enterprise 2021 LT	SC (64-bit, 21H2)
OS Driver Support	• Windows 11 IoT Enterprise 24H2 LT	SC (64-bit)
Support	<ul> <li>Linux (supports by request)</li> </ul>	
Certification	CE, FCC Class B, BSMI, RCM, VCCI, UKCA, IC, IEC 62368: CE (LVD)	
• Operating Temperature: 0 ~ 6		
Environment	- Thermal Test w/ Airflow: 0.7m/s	
Linvironment	<ul> <li>Storage Temperature: -20 ~ 80°C</li> </ul>	
	• Relative Humidity: 10 ~ 90%, non-c	ondensing

### SKU3

Model	MS-CF10-SKU3
Dimensions	170(L)mm x 170(W)mm, Mini-ITX size
	<ul> <li>14th Gen Intel<sup>®</sup> Raptor Lake-S Refresh i9/i7/i5/i3 IOTG Series Processor, Max 65W</li> </ul>
Processor	<ul> <li>13th Gen Intel<sup>®</sup> Raptor Lake-S i9/i7/i5/i3/Pentium<sup>®</sup>/Celeron<sup>®</sup> IOTG Series Processor, Max 65W</li> </ul>
	<ul> <li>12th Gen Intel<sup>®</sup> Alder Lake-S i9/i7/i5/i3/Pentium<sup>®</sup>/Celeron<sup>®</sup> IOTG Series Processor, Max 65W</li> </ul>
Chipset	Intel® H610E
Memory	<ul> <li>2 x DDR5 SO-DIMM slots (262-pin, vertical)</li> <li>Up to 5600 MT/s</li> <li>Up to 64GB</li> <li>Dual-Channel DDR5, Non-ECC</li> </ul>
Network	• 3 x Intel® 1226-V, 2.5GbE RJ45 LAN
Storage	2 x SATA 3.0 6Gb/s ports
	• 1 x PCIe 5.0 x16 slot, mutiple PCIe 5.0 spported
Expansion Slots	<ul> <li>1 x M.2 M Key slot (2242/ 2280)         <ul> <li>Supports PCIe 3.0 x4, SATA 3.0 x1 signal</li> </ul> </li> <li>1 x M.2 E Key slot (2230)         <ul> <li>Supports PCIe 3.0 x1, USB 2.0 (480 Mbps) signal</li> <li>Supports CNVi modules</li> </ul> </li> </ul>
Audio	Realtek <sup>®</sup> ALC897 High Definition Audio Codec
	• 2 x DP 1.4a up to 4096×2304 @60Hz
	• 2 x HDMI <sup>™</sup> 2.0b up to 4096x2160 @60Hz
	<ul> <li>1 x eDP up to 4096×2304 @60 Hz (signal shares with LVDS)</li> <li>Supports auto switch between eDP &amp; LVDS</li> <li>Connector shared with LVDS</li> </ul>
Graphics	<ul> <li>1 x LVDS up to 1920x1200 @60Hz (signal shares with eDP)</li> <li>Supports auto switch between eDP &amp; LVDS</li> <li>Supports 18/24-bit dual channel</li> <li>Connector shared with eDP</li> </ul>
	<ul> <li>4 independent display modes supported</li> <li>DP1 + DP2 + HDMI<sup>™</sup>1 + HDMI<sup>™</sup>2</li> <li>DP1 + DP2 + HDMI<sup>™</sup>1 + eDP/LVDS</li> <li>DP1 + DP2 + HDMI<sup>™</sup>2 + eDP/LVDS</li> <li>DP1 + HDMI<sup>™</sup>1 + HDMI<sup>™</sup>2 + eDP/LVDS</li> <li>DP2 + HDMI<sup>™</sup>1 + HDMI<sup>™</sup>2 + eDP/LVDS</li> </ul>

Continued on next column


Model	MS-CF10-SKU3
	• 2 x DisplayPort
	• 2 x HDMI™
	• 3 x 2.5 GbE RJ-45 LAN ports
Rear Panel	• 2 x USB 10Gbps Type-A ports
Connectors	• 2 x USB 5Gbps Type-A ports
	• 2 x USB 2.0 Type-A ports (480 Mbps)
	• 1 x Line-out jack
	• 1 x Mic-in jack
Internal USB	• 1 x USB 2.0 header (480 Mbps, for 2 USB ports)
Connectors	• 1 x USB 2.0 Type-A connector (480 Mbps)
Power	• 1 x 8-pin DC-In power connector (8~48V)
Connectors	• 1 x 4-pin SATA power connector
Fan	• 1 x 4-pin PWM CPU fan connector
Connectors	• 1 x 4-pin PWM system fan connector
	• 1 x Front panel connector
	• 1 x Front audio connector (Line-out & Mic-in)
	• 1 x Audio amplifier header
	• 1 x LVDS inverter box header
System	• 1 x LVDS + eDP wafer connector
Connectors	• 2 x COM (Serial) port connectors
	• 1 x GPIO header (16-bit, 8 x GPI, 8 x GPO)
	• 1 x SMBus connector (5V)
	• 1 x Chassis intrusion header
	• 1 x CMOS battery header
	<ul> <li>4 x COM voltage select jumpers</li> </ul>
	• 1 x AT/ ATX mode select jumper
Jumpers	• 1 x eDP/ LVDS power select jumper
	• 1 x Clear CMOS jumper
	• 1 x ME jumper (for iAMT BIOS flash)
OS Driver	• Windows 10 IoT Enterprise 2021 LTSC (64-bit, 21H2)
Support	<ul> <li>Windows 11 IoT Enterprise 24H2 LTSC (64-bit)</li> </ul>
	Linux (supports by request)
Certification	CE, FCC Class B, BSMI, RCM, VCCI, UKCA, IC, IEC 62368: CE (LVD)
	<ul> <li>Operating Temperature: 0 ~ 60°C</li> </ul>
Environment	- Thermal Test w/ Airflow: 0.7m/s
	• Storage Temperature: -20 ~ 80°C
	<ul> <li>Relative Humidity: 10 ~ 90%, non-condensing</li> </ul>

## **SKU Features Comparison**


SKU#		SKU1	SKU2	SKU3
Chipse	et	Intel® R680E	Intel <sup>®</sup> Q670E	Intel <sup>®</sup> H610E
LAN1		Intel® I	226-LM	Intel® I226-V
LAN2		Intel <sup>®</sup> I226-LM	Intel®	I226-V
LAN3		Intel <sup>®</sup> I226-LM	Intel®	1226-V
				2 x USB 10Gbps
	Rear	6 x USB 10Gbps		2 x USB 5Gbps
USB				2 x USB 2.0
	Internal	2 x USB 5Gbps		3 x USB 2.0
Internal		3 x USB 2.0 (1 x Type-A)		(1 x Type-A)
COM	RS-232/422/485	4	1	1
COM RS-232		3		3
M.2 B Key & SIM card slot		Yes		

## **Motherboard Overview**

SKU1/2

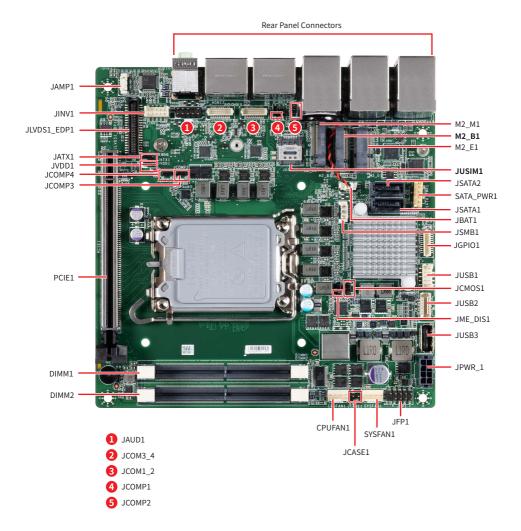


### SKU3

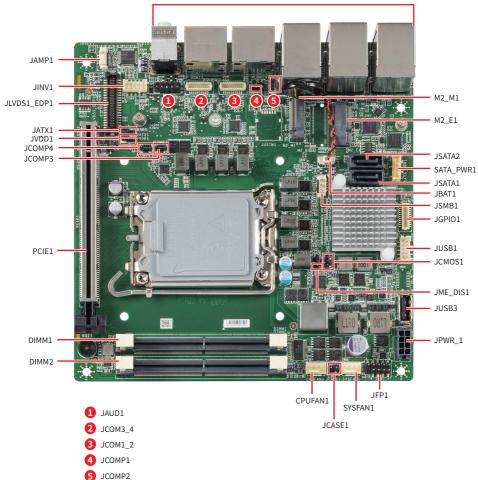


Rear Panel Connectors

## **Rear Panel Connectors**

SKU1/2

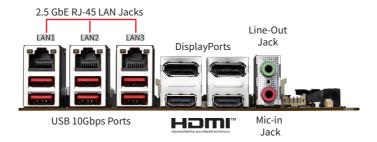

SKU3

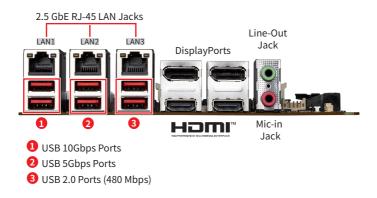

### 2.5 GbE RJ-45 LAN Jack

The standard single RJ45 LAN jack is provided for connection to the Local Area Network (LAN). You can connect a network cable to it.

Link/ Activity LED		Speed LED	
Status	Description	Status	Description
Off	No link	Off	10/100 Mbps
O Yellow	Linked	Green	1000 Mbps
Blinking	Data activity	Orange	2.5 Gbps

### **USB 10Gbps Port**

USB 10Gbps, delivers high-speed data transfer for various devices, such as storage devices, hard drives, video cameras, etc.

### **USB 5Gbps Port**

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboards, mouse, or other USB-compatible devices.

### USB 2.0 Port

This connector is provided for USB peripheral devices. (Speed up to 480 Mbps)

## 🕼 Important

Use high-speed devices for USB 5Gbps ports and above, and connect low-speed devices like mice or keyboards to USB 2.0 ports.

### DisplayPort

DisplayPort is a digital display interface standard. This connector is used to connect a monitor with DisplayPort inputs.

## 

HDMI<sup>™</sup> is a digital interface for uncompressed audio/video streams, accommodating all TV formats and multi-channel audio on a single cable. It supports **4096x2304@60Hz** as specified in **HDMI<sup>™</sup> 2.0b**.

### Line-Out Jack

This connector is provided for headphones or speakers.

### Mic-In Jack


This connector is provided for microphones.


## **Component Contents**

Component	Page
CPU Socket	21
Memory	23
DIMM1~2: DDR5 SO-DIMM Slots	23
Storage	24
JSATA1~2: SATA 3.0 6Gb/s Ports	24
Expansion Slots	25
PCIe Slot	25
PCIE1: PCIe Expansion Slot	25
SIM Card Slot	25
JUSIM1: Nano SIM Holder (SKU1,2 Only)	25
M.2 Slots	26
M2_M1: M.2 Slot (M Key, 2242/ 2280)	26
M2_E1: M.2 Slot (E Key, 2230)	27
M2_B1: M.2 Slot (B Key, 3042) (SKU1,2 Only)	27
Connectors	28
Power Connectors	28
JPWR1: 8-Pin DC-In Main Power Connector	28
SATA_PWR1: 4-Pin SATA Power Connector	28
Cooling Connectors	29
CPUFAN1, SYSFAN1: CPU/ System Fan Connectors	29
Audio Connectors	30
JAUD1: Front Audio Header (Line-out/ MIC-in)	30
JAMP1: Audio Amplifier Header	30
Graphics Connectors	31
JINV1: LVDS Inverter Header	31
JLVDS1_EDP1: LVDS+eDP Wafer Connector	32
USB Connectors	34
JUSB1: USB 2.0 Header	34
JUSB2: USB 5Gbps Connector (SKU1,2 Only)	34

Component	Page
USB1~2: USB 2.0 Type-A Port	35
Other Connectors	36
JFP1: Front Panel Header	36
JGPIO1: GPIO Header	36
JCOM1_2, JCOM3_4: Serial Port Connectors	37
JSMB1: SMBus Header	39
JCASE1: Chassis Intrusion Header	39
JBAT1: CMOS Battery Header	40
Replacing CMOS battery	
Jumpers	41

## **CPU Socket**

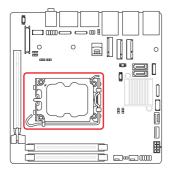

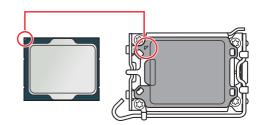

### Introduction to the LGA1700 CPU

The surface of the LGA1700 CPU has four notches and a golden triangle to assist in correctly lining up the CPU for motherboard placement. The golden triangle is the Pin 1 indicator.

## Important


- Always unplug the power cord from the power outlet before installing or removing the CPU.
- When **installing a CPU**, always remember to install a CPU heatsink. A CPU heatsink is necessary to prevent overheating and maintain system stability.
- Confirm that the CPU heatsink has formed a tight seal with the CPU before booting your system.
- **Overheating** can seriously damage the CPU and motherboard. Always make sure the cooling fans work properly to protect the CPU from overheating. Be sure to apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.
- Whenever the CPU is not installed, always protect the CPU socket pins by covering the socket with the plastic cap.
- If you purchased a separate CPU and heatsink/ cooler, Please refer to the documentation in the heatsink/ cooler package for more details about installation.

### **CPU & Heatsink Installation**

Use appropriate ground straps, gloves and ESD mats to protect yourself from electrostatic discharge (ESD) while installing the processor.

## Important


Images are for illustration purposes only; actual parts may vary.

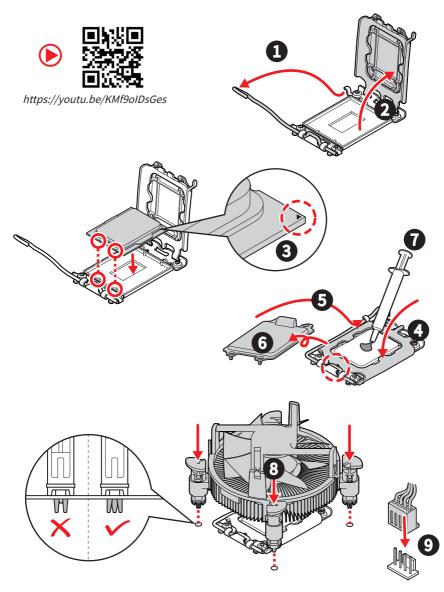

## Memory


#### DIMM1~2: DDR5 SO-DIMM Slots

The SO-DIMM slots is intended for memory modules.

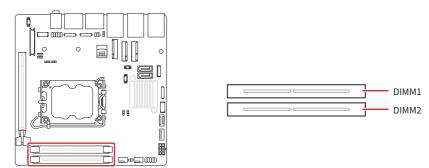

#### **Installing DDR5 Memory**

- 1. Open the side clips to unlock the DIMM slot.
- 2. Insert the DIMM vertically into the slot, ensuring that the off-center notch at the bottom aligns with the slot.
- 3. Push the DIMM firmly into the slot until it clicks and the side clips automatically close.
- 4. Verify that the side clips have securely locked the DIMM in place.

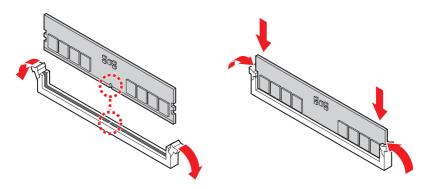


## 🕼 Important


- Always insert memory modules in the DIMM2 slot first.
- You can barely see the golden finger if the DIMM is properly inserted in the DIMM slot.
- To ensure system stability for Dual channel mode, memory modules must be of the same type, number and density.

## Storage

### JSATA1~2: SATA 3.0 6Gb/s Ports

These connector are SATA 6Gb/s interface port, it can connect to SATA devices.

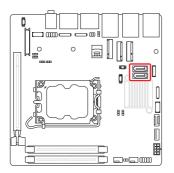


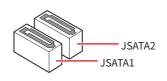

## Important

- These SATA connectors support hot plug.
- Please do not fold the SATA cable at a 90-degree angle. Data loss may result during transmission otherwise.
- SATA cables have identical plugs on either sides of the cable. However, it is recommended that the flat connector be connected to the motherboard for space saving purposes.

## **Expansion Slots**

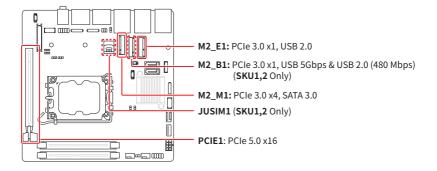

### **PCIe Slot**

### **PCIE1: PCIe Expansion Slot**

The PCI Express (Peripheral Component Interconnect Express) slot supports PCIe interface expansion cards.

### SIM Card Slot

#### JUSIM1: Nano SIM Holder (sku1,2 Only)

This holder is provided for 3G, 4G, LTE, 5G Nano SIM cards.




### M.2 Slots

#### M2\_M1: M.2 Slot (M Key, 2242/ 2280)

Please install the M.2 solid-state drive (SSD) into the M.2 slot as shown below.

- 1. Loosen the M.2 riser screw from the motherboard.
- 2. Move and fasten the M.2 riser screw to the appropriate location according your M.2 SSD size.
- 3. Insert your M.2 SSD into the M.2 slot at a 30-degree angle.
- 4. Secure the M.2 SSD in place with the supplied M.2 screw.

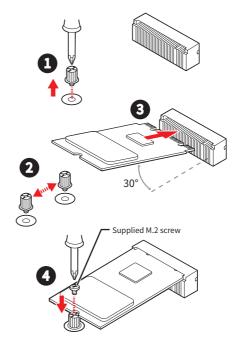


#### M2\_E1: M.2 Slot (E Key, 2230)


Please install the Wi-Fi/ Bluetooth card into the M.2 slot as shown below.

#### M2\_B1: M.2 Slot (B Key, 3042) (SKU1,2 Only)


Please install the WWAN Card/ solid-state drive (SSD) into the  $\rm M.2$  slot as shown below.

#### Installing Expansion Cards (E+B Key)

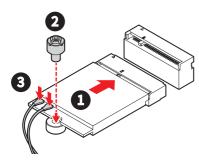

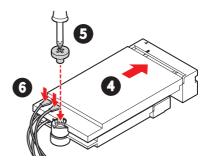

Installing Expansion Card (B Key only)

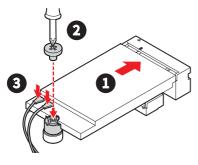


## Important

When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

## Connectors

### **Power Connectors**

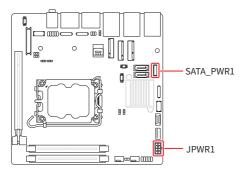

#### JPWR1: 8-Pin DC-In Main Power Connector

This connector allows you to connect an power supply.

7

1

JPWR1

1	+DC_IN	2	GND
3	+DC_IN	4	GND
5	+DC_IN	6	GND
7	+DC_IN	8	GND

### SATA\_PWR1: 4-Pin SATA Power Connector

This connector is used to provide power to SATA devices.


2

		1	VCC5
	• 1		GND
SATA_PW1	3	GND	
		4	+12V

## Important

Make sure that all the power cables are securely connected to a proper power supply to ensure stable operation of the system.

### **Cooling Connectors**

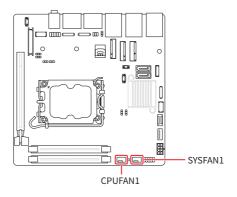

#### CPUFAN1, SYSFAN1: CPU/ System Fan Connectors


The fan power connector supports CPU/ system cooling fans with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND.

	1	GND
CPUFAN1 1 4	2	FAN POWER
SYSFAN1	3	FAN SENSE
	4	FAN_PWM

## 🕼 Important


Please refer to the recommended CPU fans at processor's official website or consult the vendors for proper CPU cooling fan.

### **Audio Connectors**

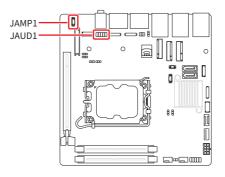


### JAUD1: Front Audio Header (Line-out/ MIC-in)

This header allows you to connect front panel audio.

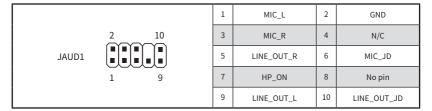


### JAMP1: Audio Amplifier Header

The header is used to connect audio amplifiers to enhance audio performance.

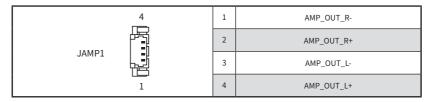

## **Graphics Connectors**

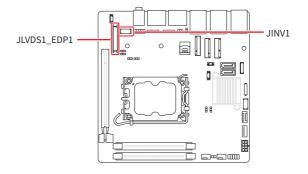


### JINV1: LVDS Inverter Header

The header is provided for LCD backlight options.

	1	GND	2	GND
JINV1	3	VCC5	4	VCC5
$\begin{array}{c}9\\10\\\end{array}$	5	+12V	6	+12V
	7	INV_ON#1	8	NC
	9	L_BKLT_CTRL#1	10	NC


### JLVDS1\_EDP1: LVDS+eDP Wafer Connector

This connector is designed for use with LVDS/eDP interface flat panels. When connecting your flat panel to this connector, be sure to check the panel data sheet to ensure that you set the <u>eDP/ LVDS Power select jumper (JVDD1)</u> to the appropriate power voltage.

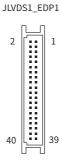

LVDS Panel (P1)	CF10 M	LVDS Panel (P1)			
	EDP_LINE3_DP	1	2	EDP_LINE2_DP	
	EDP_LINE3_DN	3	4	EDP_LINE2_DN	
	DDC0_CLK_7513_R	5	6	DDC0_DATA_7513_R	
VCC	LCD_VDD	7	8	LCD_VDD	VCC
VCC	LCD_VDD	9	10	VCC3	
	BKLT_EN	11	12	LVDS_DETECT#	GND
RXO1+	LVDSA_DATA1+	13	14	EHPDET/ LVDSA_DATA0+	RXO0+
RXO1-	LVDSA_DATA1-	15	16	LVDSA_DATA0-	RXO0-
GND	GND	17	18	GND	GND
RXO3+	LVDSA_DATA3+	19	20	LVDSA_DATA2+	RXO2+
RXO3-	LVDSA_DATA3-	21	22	LVDSA_DATA2-	RXO2-
GND	GND	23	24	GND	GND
RXE1+	LVDSB_DATA1+	25	26	LVDSB_DATA0+	RXE0+
RXE1-	LVDSB_DATA1-	27	28	LVDSB_DATA0-	RXE0-
GND	GND	29	30	GND	GND
RXE3+	LVDSB_DATA3+	31	32	LVDSB_DATA2+	RXE2+
RXE3-	LVDSB_DATA3-	33	34	LVDSB_DATA2-	RXE2-
	NA	35	36	GND	GND
RXEC+	LVDSB_CLK+	37	38	LVDSA_CLK+	RXOC+
RXEC-	LVDSB_CLK-	39	40	LVDSA_CLK-	RXOC-



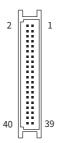


eDP Panel (P1)	CF10 I	eDP Panel (P1)			
Lane3_P	EDP_LINE3_DP	1	2	EDP_LINE2_DP	Lane2_P
Lane3_N	EDP_LINE3_DN	3	4	EDP_LINE2_DN	Lane2_N
	DDC0_CLK_7513_R	5	6	DDC0_DATA_7513_R	
LCD_VCC	LCD_VDD	7	8	LCD_VDD	LCD_VCC
LCD_VCC	LCD_VDD	9	10	VCC3	
	BKLT_EN	11	12	LVDS_DETECT#	LCD_GND
Lane1_P	LVDSA_DATA1+	13	14	EHPDET/ LVDSA_DATA0+	HPD
Lane1_N	LVDSA_DATA1-	15	16	LVDSA_DATA0-	
H_GND	GND	17	18	GND	H_GND
	LVDSA_DATA3+	19	20	LVDSA_DATA2+	Lane0_P
	LVDSA_DATA3-	21	22	LVDSA_DATA2-	Lane0_N
H_GND	GND	23	24	GND	H_GND
	LVDSB_DATA1+	25	26	LVDSB_DATA0+	
	LVDSB_DATA1-	27	28	LVDSB_DATA0-	
H_GND	GND	29	30	GND	GND
	LVDSB_DATA3+	31	32	LVDSB_DATA2+	
	LVDSB_DATA3-	33	34	LVDSB_DATA2-	
	NA	35	36	GND	GND
	LVDSB_CLK+	37	38	LVDSA_CLK+	AUX_CH_P
	LVDSB_CLK-	39	40	LVDSA_CLK-	AUX_CH_N

## Important

**Pin 12** is a detect pin. When using a customized LVDS cable, pin 12 should be a signal ground with a low impedance. Otherwise, LVDS will not function.

### **USB** Connectors

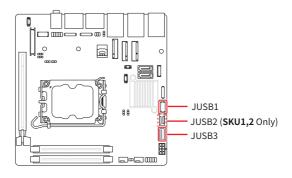


#### JUSB1: USB 2.0 Header

This header is ideal for connecting USB devices such as keyboard, mouse, or other USB-compatible devices. It supports data transfer rate up to **480 Mbps**.

	1	5V	2	5V
10 9 JUSB1 2 1	3	USB_D-	4	USB_D-
	5	USB_D+	6	USB_D+
	7	GND	8	GND
	9	No Pin	10	N/C

#### JUSB2: USB 5Gbps Connector (SKU1,2 Only)

This connector is backward-compatible with USB 2.0 devices and supports data transfer rate up to **5 Gbps**.

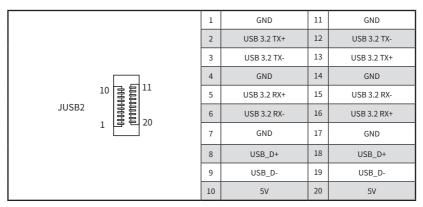

### USB1~2: USB 2.0 Type-A Port

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices. It supports data transfer rate up to **480 Mbps**.

	4	1	POWER
		2	USB_D-
JUSB3	3	USB_D+	
		4	GND

### **Other Connectors**


### JFP1: Front Panel Header


This front-panel header is provided for electrical connection to the front panel switches & LEDs and is compliant with Intel Front Panel I/O Connectivity Design Guide.

		1	HDD LED+	2	POWER LED
9 1 JFP1 2	3	HDD LED-	4	POWER LED	
	5	RESET SWITCH-	6	POWER SWITCH+	
	7	RESET SWITCH+	8	POWER SWITCH-	
	9	N/C	10	No pin	

### JGPIO1: GPIO Header

This connector is provided for the General-Purpose Input/Output (GPIO) peripheral module.

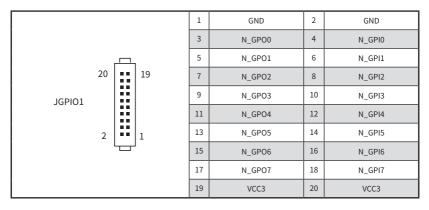


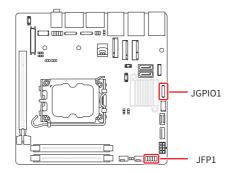

## JCOM1\_2, JCOM3\_4: Serial Port Connectors

This connector is a 16550A high speed communications port that sends/ receives 16 bytes FIFOs. You can attach a serial device to it.

	1	NDCD1#	2	NDCD2#
	3	NSIN1	4	NSIN2
	5	NSOUT1	6	NSOUT2
JCOM1_2	7	NDTR1	8	NDTR2
JCOM3_4	9	GND	10	GND
	11	NDSR1#	12	NDSR2#
1 4 <b>••••••••</b> 19	13	NRTS1	14	NRTS2
	15	NCTS1#	16	NCTS2#
	17	VCC_COM1	18	VCC_COM2
	19	NC	20	NC

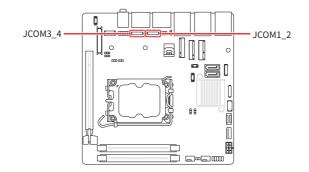

# 🕼 Important

After connect Serial port connectors to printer, garbage can't be printed when power on/off.

## Feature

- Supports True RS-232, TTL RS-232 and auto flow control.
- RS-422/485 support TR 1000+ Meter.
- The RS-232/422/485 can be selected through BIOS control.

## SKU1 (Intel® R680E)

## • COM1

Support RS-232/422/485, with Ring/0V/5V/12V (Default set to Ring).

#### • COM2/3/4

Support RS-232/ 422/ 485, with 0V/5V/12V (Default set to 5V).

## SKU2 (Intel<sup>®</sup> Q670E), SKU3 (Intel<sup>®</sup> H610E)

#### • COM1

Support RS-232/ 422/ 485, with Ring/0V/5V/12V (Default set to Ring).

#### • COM2/3/4

Support RS-232, with 0V/5V/12V (Default set to 5V).


R\$232			
PIN	SIGNAL	DESCRIPTION	
1	NDCD	Data Carrier Detect	
2	NSIN	Signal In	
3	NSOUT	Signal Out	
4	NDTR	Data Terminal Ready	
5	GND	Signal Ground	
6	NDSR	Data Set Ready	
7	NRTS	Request To Send	
8	NCTS	Clear To Send	
9	VCC_COM	VCC_COM	

RS422			
PIN	SIGNAL	DESCRIPTION	
1	422 TXD-	Transmit Data, Negative	
2	422 TXD+	Receive Data, Positive	
3	422 RXD+	Transmit Data, Positive	
4	422 RXD-	Receive Data, Negative	
5	GND	Signal Ground	
6	NC	No Connection	
7	NC	No Connection	
8	NC	No Connection	
9	NC	No Connection	

RS485			
PIN	SIGNAL	DESCRIPTION	
1	TXD-	Transmit Data, Negative	
2	NC	No Connection	
3	TXD+	Transmit Data, Positive	
4	NC	No Connection	
5	GND	Signal Ground	
6	NC	No Connection	
7	NC	No Connection	
8	NC	No Connection	
9	NC	No Connection	

## JSMB1: SMBus Header

This header enables users to connect to the System Management Bus (SMBus) interface.

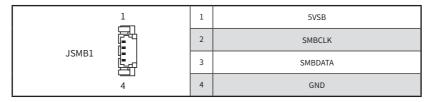


## JCASE1: Chassis Intrusion Header

This connector connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.






Normal (default)

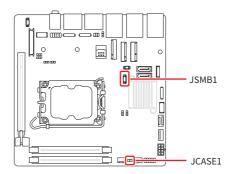


## JBAT1: CMOS Battery Header

If the CMOS battery is out of charge, the time in the BIOS will be reset and the data of system configuration will be lost. In this case, you need to replace the CMOS battery.

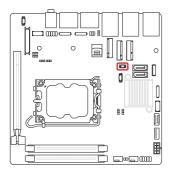

## **Replacing CMOS battery**

- 1. Unplug the battery wire from the BAT1 connector and remove the battery.
- 2. Connect the new CR2032 battery with wire to the BAT1 connector.

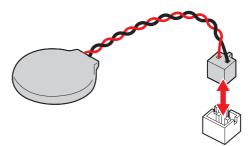




## KEEP OUT OF REACH OF CHILDREN


- Swallowing can lead to chemical burns, perforation of soft tissue, can death.
- Severe burns can occur within 2 hours of ingestion.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

# Jumpers



Avoid adjusting jumpers when the system is on; it will damage the motherboard.

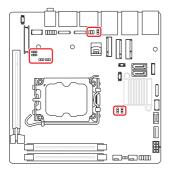

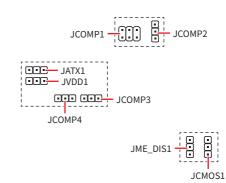

Jumper	Default Setting	Description	
		COM Voltage Select Jumper	
JCOMP1	5 • • 1	1-2: 5V	
JCOMPI	$\begin{array}{c}5\\6\end{array}$	3-4: 12V	
		5-6: NRI (Default)	
		COM Voltage Select Jumper	
JCOMP2~4	1	1-2: 5V (Default)	
		2-3: 12V	
		AT/ ATX Mode Select Jumper	
JATX1	1	1-2: ATX (Default)	
		2-3: AT	
		eDP/ LVDS Power Select Jumper	
JVDD1	1	1-2: 3V (Default)	
		2-3: 5V	
	1	Clear CMOS Jumper	
JCMOS1		1-2: Normal (Default)	
		2-3: Clear CMOS	
	1	ME Jumper	
JME_DIS1	JME_DIS1	1-2: ME enabled (Default)	
		2-3: ME disabled	

# **BIOS Setup**

This chapter provides information on the BIOS Setup program and allows users to configure the system for optimal use.

## Users may need to run the Setup program when:

- An error message appears on the screen at system startup and requests users to run SETUP.
- Users want to change the default settings for customized features.

# 🕼 Important

- Please note that BIOS update assumes technician-level experience.
- As the system BIOS is under continuous update for better system performance, the illustrations in this chapter should be held for reference only.

## **Entering Setup**

Power on the computer and the system will start POST (Power On Self Test) process. When the message below appears on the screen, press <DEL> or <F2> key to enter Setup, <F11> key to Boot Menu, <F12> key to PXE Boot.

Press <DEL> or <F2> to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system by turning it **OFF** and **On** or pressing the **RESET** button. You may also restart the system by simultaneously pressing **<Ctrl>**, **<Alt>**, **and <Delete>** keys.

# 🕼 Important

The items under each BIOS category described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest BIOS and should be held for reference only.

## **Control Keys**

$\leftarrow \rightarrow$	Select Screen	
↑↓	Select Item	
Enter	Select	
+ -	Change Value	
Esc	Exit	
F1	General Help	
F7	Previous Values	
F9	Optimized Defaults	
F10	Save & Reset*	
F12	Screenshot capture	
<k></k>	Scroll help area upwards	
<m></m>	Scroll help area downwards	

\* When you press **<F10>**, a confirmation window appears and it provides the modification information. Select between **Yes** or **No** to confirm your choice.

## **Getting Help**

Upon entering setup, you will see the Main Menu.

## Main Menu

The main menu lists the setup functions you can make changes to. You can use the **arrow keys** (  $\uparrow \downarrow$  ) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

## Sub-Menu

If you find a right pointer symbol appears to the left of certain fields that means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use **arrow keys** ( $\uparrow \downarrow$ ) to highlight the field and press **<Enter>** to call up the sub-menu. Then you can use the **control keys** to enter values and move from field to field within a sub-menu. If you want to return to the main menu, just press the **<Esc>**.

## General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing **<F1>**. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press **<Esc>** to exit the Help screen.

# The Menu Bar

	Aptio Setup - AMI	
Main Advanced Boot Security Chip	DSET POWER Save & Exit	
System Date System Time	[Fri 09/13/2024] [18:24:38]	Set the Date. Use Tab to switch between Date elements. Default Ranges:
SATA_1 SATA_2 SATA_3 M.2_1	Not Present Not Present Not Present Not Present	Year: 2000–2099 Months: 1–12 Days: Dependent on month Range of Years may vary.
M.2_2	Not Present	
SATA Mode Enable VMD controller ▶ VMD setup menu	AHCI [Disabled]	
USB Devices: 1 Drive, 2 Keyboards, 1 Mouse		↔: Select Screen 1∔: Select Item Enter: Select
BIOS Version	ECF10IMS.800	+/−: Change Opt. ESC: Exit
12th Gen Intel(R) Core(TM) i3-12100E Processor ID Duild Tune	03200 MHz 0×90675 64	F1: General Help F7: Previous Values F9: Optimized Defaults
Build Type Total Memory	8192 MB(DDR5)	F3: Optimized Defaults F10: Save & Reset Setup F12: Screenshot capture (k>: Scroll help area upwards (m): Scroll help area downwards
Version 2	.22.1292 Copyright (C) 2024	AMI

### Main

Use this menu for basic system configurations, such as time, date, etc.

### Advanced

Use this menu to set up the items of special enhanced features.

#### Boot

Use this menu to specify the priority of boot devices.

#### Security

Use this menu to set supervisor and user passwords.

Chipset

This menu controls the advanced features of the on-board chipsets.


#### Power

Use this menu to specify your settings for power management.

## Save & Exit

This menu allows you to load the BIOS default values or factory default settings into the BIOS and exit the BIOS setup utility with or without changes.

# Main

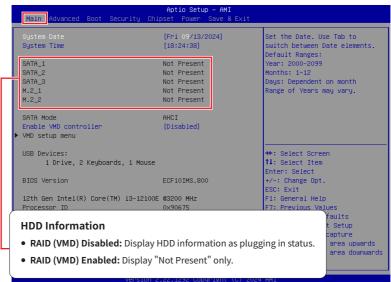

## System Date

This setting allows you to set the system date. Format: <Day> <Month> <Date> <Year>.

## System Time

This setting allows you to set the system time.

Format: <Hour> <Minute> <Second>.

## SATA Mode Selection

This setting specifies SATA controller mode.

- [AHCI] AHCI (Advanced Host Controller Interface), is a technical standard for an interface that allows the software to communicate with Serial ATA (SATA) devices. It offers advanced SATA features such as Native Command Queuing (NCQ) and hot-plugging.
- [RAID] RAID (Redundant Array of Independent Disks) is a virtual disk storage technology that combines multiple physical disks into one unit for data redundancy, performance improvement, or both.

## Enable VMD controller

Enables or disables VMD (RAID) controller.


## Important

- "SATA\_3" is M.2 M Key with SATA signal, and the "M.2\_2" is M.2 B Key.
- *SKU3* (*Intel*<sup>®</sup> *H610E*) does not support "M.2\_1", "M.2\_2", and RAID mode.

## VMD Setup Menu (VMD Configuration)

## 🕼 Important

- In AHCI mode, this menu will be grayed out and cannot be selected.
- SKU3 (Intel® H610E) only supports AHCI mode and does not support RAID mode.

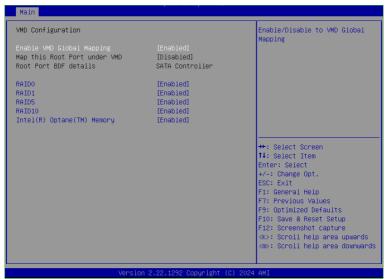

#### Enabled VMD Global Mapping

Enables or disables Intel VMD mapping. Intel VMD enables direct control and management of NVMe SSDs from the PCIe bus without additional hardware adapters.

#### Map This Root Port under VMD

Enables or disables the mapping of the specified PCIe root port under Intel VMD control.

#### ► RAID0/ 1/ 5/ 10/ Intel <sup>®</sup> Optane<sup>™</sup> Memory

Enables or disables RAID 0/ 1/ 5/ 10/ Intel <sup>®</sup> Optane<sup>™</sup> Memory.

# Advanced

Main Advanced Boot Security	Aptio Setup – AMI Chipset Power Save & Exit	
Full Screen Logo Display Bootup NumLock State PCPU Configuration Super IO Configuration H/X Monitor Smart Fan Configuration PCI/PCIE Device Configuration Network Stack Configuration PCID Group Configuration PCIE ASPM Settings	[Disabled] [Dn]	Enables or disables Full Screen Logo Display option
		++: Select Screen 11: Select Item Enter: Select +/-: change Opt. ESC: Exit F1: General Help F7: Previous Values F9: Optimized Defaults F10: Save & Reset Setup F12: Screenshot capture (A): Scroll help area upwards (m): Scroll help area downwards
Versi	on 2.22.1292 Copyright (C) 202	

## ► Full Screen Logo Display

This BIOS feature determines if the BIOS should hide the normal POST messages with the motherboard or system manufacturer' s full-screen logo.

- [Enabled] BIOS will display the full-screen logo during the boot-up sequence, hiding normal POST messages.
- [Disabled] BIOS will display the normal POST messages, instead of the fullscreen logo.

Please note that enabling this BIOS feature often adds 2-3 seconds to the booting sequence. This delay ensures that the logo is displayed for a sufficient amount of time. Therefore, **it is recommended to disable this BIOS feature for faster boot-up.** 

## Bootup NumLock State

This setting is to set the state of the Num Lock key on the keyboard when the system is powered on.

- [On] Turn on the Num Lock key when the system is powered on.
- [Off] Allow users to use the arrow keys on the numeric keypad.

## CPU Configuration

Advanced		
CPU Configuration		VT-d capability
12th Gen Intel(R) Core(TM) i3–12100E Processor ID Processor Speed	0x90675 3200 MHz	
P-core Information L1 Data Cache L1 Instruction Cache L2 Cache L3 Cache	48 KB × 4 32 KB × 4 1280 KB × 4 12 MB	
VT-d Intel Virtualization Technology Hyper-Threading Active Performance-cores Intel(R) SpeedStep(tm) Intel(R) Speed Shift Technology C states	[Enabled] [Enabled] [All] [Enabled] [Enabled] [Enabled] [Enabled]	<pre>+*: Select Screen 11: Select Item Enter: Select +/-: Change Opt. ESC: Exit F1: General Help F7: Previous Values F9: Optimized Defaults F10: Save &amp; Reset Setup F12: Screenshot Capture <k>: Scroll help area upwards <m>: Scroll help area downwards</m></k></pre>

#### ► VT-d

Enables or disables Intel VT-D (Intel Virtualization for Directed I/O) technology.

## Intel Virtualization Technology

Enables or disables Intel Virtualization technology.

[Enabled] Enables Intel Virtualization technology and allows a platform to run multiple operating systems in independent partitions. The system can function as multiple systems virtually.

[Disabled] Disables this function.

#### Hyper-Threading (HT Function)

Enables or disables Intel Hyper-Threading technology.

The processor uses Hyper-Threading technology to improve utilization of the CPU resources and potentially increasing overall performance by allowing it to handle multiple threads simultaneously. If you disable the function, it will restricts the CPU to operate as a single-threaded processor, with only one logical core per physical core. Please disable this item if your operating system does not support HT Function or unreliability and instability may occur.

## Active Performance-cores

Select the number of active Performance-cores (P-cores).

## Intel(R) SpeedStep(TM)

Enhanced Intel SpeedStep<sup>®</sup> Technology enables the OS to control and activate performance states (P-States) of the processor.

[Enabled] When enabled, Intel SpeedStep® technology is activated. This technology allows the processor to manage its power consumption via performance state (P-State) transitions.

[Disabled] Disables this function

### Intel(R) Speed Shift Technology

Intel<sup>®</sup> Speed Shift Technology is an energy-efficient method that allows frequency control by hardware rather than the OS.

[Enabled] When enabled, Intel® Speed Shift Technology is activated. The technology enables the management of processor power consumption via hardware performance state (P-State) transitions.

[Disabled] Disable this function.

## C States

This setting controls the C-States (CPU Power states).

[Enabled] Detects the idle state of system and reduce CPU power consumption accordingly.

[Disabled] Disable this function.

## Super IO Configuration

Huvanceu		
Super IO Configuration		Enable or Disable Serial Port (COM)
Super IO Configuration Senial Port 1 Device Settings Change Settings Mode Select Serial Port 2 Device Settings Change Settings Mode Select FIFO Mode Watch Dog Timer	<pre>[Enabled] I0=3F0h; IRQ=4; [Auto] [Rs232] [Enabled] I0=2F0h; IRQ=3; [Auto] [Rs232] [Enabled] I0=3E0h; IRQ=7; [Auto] [Rs232] [Enabled] I0=2E0h; IRQ=7; [Auto] [Rs232] [120-byte] [Disabled]</pre>	
		<pre><m>: Scroll help area downwards <m>: Scroll help area downwards</m></m></pre>

#### ▶ Serial Port 1/2/3/4

This setting enables or disables the specified serial port.

#### » Device Settings

This setting shows the address & IRQ of the specified serial port.

#### » Change Settings

This setting is used to change the address & IRQ settings of the specified serial port.

#### » Mode Select

Select an operation mode for Serial Port 1/2/3/4.

#### ► FIFO Mode

This setting controls the FIFO (First In First Out) data transfer mode.

#### ► Watch Dog Timer


You can enable the system watchdog timer, a hardware timer that generates a reset when the software that it monitors does not respond as expected each time the watchdog polls it.

## H/W Monitor (PC Health Status)

These items display the current status of all monitored hardware devices/ components such as voltages, temperatures and all fans' speeds.

Advanced		
PC Health Status		
CPU temperature System temperature	: +36 °C : +36 °C	
CPUFAN SYSFAN	: N/A : N/A	
VCC_CORE VCC3 VCC5 +12V VCC3V VSB3V VSB5V VSB5V VBAT	: +0.840 V : +3.312 V : +5.003 V : +12.056 V : +3.312 V : +3.296 V : +4.896 V : +3.088 V	<pre>++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. ESC: Exit F1: General Help F7: Previous Values F9: Optimized Defaults F10: Save &amp; Reset Setup F12: Screenshot capture <k0: <="" <mp:="" area="" downwards="" help="" pre="" scroll="" upwards=""></k0:></pre>

## Smart Fan Configuration

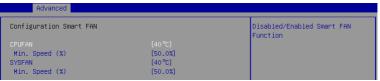

#### ► CPUFAN/ SYSFAN

This setting enables or disables the Smart Fan function. Smart Fan is an excellent feature which will adjust the CPU/system fan speed automatically depending on the current CPU/system temperature, avoiding the overheating to damage your system. The following item will display when CPUFAN/ SYSFAN is enabled.

#### » Min. Speed (%)

The beginning speed of the System fan.

## PCI/PCIE Device Configuration

Huvanceu	
Audio Controller	Control Detection of the Audio Controller. Disabled = Audio Controller will be unconditionally disabled. Enabled = Audio Controller will be unconditionally Enabled.

### Audio Controller

This setting enables or disables the detection of the onboard audio controller.

## Network Stack Configuration

This menu provides Network Stack settings for users to enable network boot (PXE) from BIOS.

Advanced		
Network Stack IPv4 PXE Support	[Enabled] [Disabled]	Enable/Disable UEFI Network Stack
IPv4 HTTP Support	[Disabled]	
IPv6 PXE Support	[Disabled]	
IPv6 HTTP Support	[Disabled]	
PXE boot wait time	0	
Media detect count	1	

#### Network Stack

This menu provides Network Stack settings for users to enable network boot (PXE) from BIOS. The following items will display when **Network Stak** is enabled.

#### » IPV4 PXE Support

Enables or disables IPv4 PXE boot support.

#### » IPV4 HTTP Support

Enables or disables Ipv4 HTTP Support.

#### » IPV6 PXE Support

Enables or disables Ipv6 PXE Support.

#### » IPV6 HTTP Support

Enables or disables Ipv6 HTTP Support.

#### » PXE boot wait time

Use this option to specify the wait time to press the ESC key to abort the PXE boot. Press "+" or "-" on your keyboard to change the value. The default setting is 0.

### » Media detect count

Use this option to specify the number of times media will be checked. Press "+" or "-" on your keyboard to change the value. The default setting is 1.

## ► GPIO Group Configuration

Advanced		
GPIO Group Configuration		Set GPOO to output High/Low
GPOO		
GP01	[Low]	
GP02	[Low]	
GP03	[Low]	
GP04	[Low]	
GP05	[Low]	
GP06	(Low)	
GP07	(Low)	

#### ▶ GPO0 ~ GPO7

These settings control the operation mode of the specified GPIO.

## ► PCIE ASPM settings

This menu provide settings for PCIe ASPM (Active State Power Management) level for different installed devices.

Advanced		
M2_B1 M2_E1 M2_M1 PCIE1	(Disabled) (Disabled) (Disabled) (Disabled)	PCI Express Active State Power Management settings.

## ▶ M2\_B1, M2\_E1, M2\_M1, PCIE1

Sets PCI Express ASPM (Active State Power Management) state for power saving.

## Lanes form PCH:

[Disabled]	Disable this function.
[L1]	Higher latency, lower power "standby" state.
[Auto]	Set the best state supported by the system.

## Lanes form SA:

[Disabled]	Disable this function.
[L0s]	Initiate an automatic shutdown of the system to protect from potential damage due to overheating.
[L1]	Higher latency, lower power "standby" state.
[L0sL1]	Activate both L0s and L1 support.

## 🕼 Important

SKU3 (Intel® H610E) does not support "M2\_B1".

# Boot

Main Advanced Boot Security	Aptio Setup – AMI Chipset Power Save & Exit	
Boot Option Priorities Boot Option #1	[UEFI: SCSI DISK 1.00, Partition 1 (SCSI DISK 1.00)]	Sets the system boot order
Boot Option #2	(UEFI: Built-in EFI Shell)	
		++: Select Screen 11: Select Item Enter: Select +/-: change Opt. ESC: Exit F1: General Help F7: Previous Values F9: Optimized Defaults F10: Save & Reset Setup F12: Screenshot capture
		<k>: Scroll help area upwards <m>: Scroll help area downwards</m></k>
Versi	ion 2.22.1292 Copyright (C) 202	4 AMI

## ► Boot Option #1-2

This setting allows users to set the sequence of boot devices where BIOS attempts to load the disk operating system.

# Security

Aptio Setup – AMI Main Advanced Boot <mark>Security</mark> Chipset Power Save & Ex	it
Administrator Password User Password Chassis Intrusion [Disabled] > PCH-FW Configuration > Trusted Computing > Serial Port Console Redirection	Set Administrator Password
▶ Secure Boot	
	+: Select Screen 14: Select Item Enter: Select +/-: Change Opt. ESC: Exit F1: General Help F7: Previous Values
	F9: Optimized Defaults F10: Save & Reset Setup F12: Screenshot capture <k>: Scroll help area upwards <m>: Scroll help area downwards</m></k>
v Version 2.22.1292 Copyright (C)	2024 AMI

## Administrator Password

Administrator Password controls access to the BIOS Setup utility.

#### User Password

User Password controls access to the system at boot and to the BIOS Setup utility.

## Chassis Intrusion

Enables or disables recording messages while the chassis is opened. This function is ready for the chassis equips a chassis intrusion jumper(switch).

- [Enabled] Once the chassis is **opened**, the system will record and issue a warning message. A beep sound will be emitted before this function is reset.
- [Disabled] Once the chassis is **closed**, the system will record and issue a warning message.
- [Reset] Clear the warning message. After clearing the message, please return to Enabled or Disabled.

## PCH-FW Configuration

This menu allows you to configure settings related to the PCH firmware.

	Securit	y j	
	ME Firmware Version ME Firmware Mode ME Firmware SKU	16.1.30.2330 Normal Mode Corporate SKU	When Disabled ME will be put into ME Temporarily Disabled Mode.
* * * *	WE State Manageability Features State ME Unconfig on RTC Clear Comms Hub Support JHI Support Core Bios Done Message Firmware Update Configuration PTT Configuration ME Debug Configuration Anti-Rollback SVN Configuratio Extend CSWE Measurement to TPM		++: Select Screen 1∔: Select Item Enter: Select
			+/-: Change Opt. ESC: Exit
		These settings show the firn information of the <b>Intel ME</b> (Management Engine).	us Values zed Defaults & Reset Setup



SKU3 (Intel® H610E) only support "ME State" in this menu.

#### ME State

This menu controls the Intel<sup>®</sup> Management Engine State (ME state) parameters, which provides various management and security capabilities. The following items will display when **ME State** is enabled.

#### » Manageability Feature State

Enables or disables Manageability Feature State. Enabling this item for remote management capabilities.

#### » ME Unconfig on RTC Clear

Enables or disables ME Unconfig on RTC Clear. Enabling this item resets the ME configuration to its default state, removing any customizations or settings applied.

#### » Comms Hub Support

Enables or disables the communications hub support.

#### » JHI Support

Enables or disables JHI Support. JHI stands for Intel® Dynamic Application Loader Host Interface Service (Intel® DAL HIS) and is the engineering name for this feature. Enabling JHI Support in the BIOS settings allows the system to utilize this interface for communication between trusted applications and host-based applications.

#### » Core BIOS Done Message

Enables or disables Core BIOS Done Message sent to ME.

#### Extend CSME Measurement to TPM-PCR

This setting enables or disables Intel<sup>®</sup> Converged Security and Management Engine (CSME) measurement extend to TPM-PCR.

#### Firmware Update Configuration



#### » ME FW Image Re-Flash

Enables or disables the ME Firmware Image Re-flashing.

#### » Local FW Update

Enables or disables the capability to perform a firmware update of the ME locally.

#### PTT Configuration

Intel<sup>®</sup> Platform Trust Technology (PTT) is a platform functionality for credential storage and key management used by Microsoft Windows.

Security		
PTT Capability ∕ State	1 / 0	Selects TPM device: PTT or
		dTFM.PTT - Enables PTT in SkuMgr dTPM 1.2 - Disables PTT in SkuMgr Warning ! PTT/dTPM will be disabled and all data saved on it will be lost.

#### » TPM Device Selection

Select TPM (Trusted Platform Module) devices from PTT or dTPM (Discrete TPM).

[PTT] Enables PTT in SkuMgr.

[dTPM] Disables PTT in SkuMgr. Warning! PTT/ dTPM will be disabled and all data saved on it will be lost.

#### ME Debug Configuration

This menu allows you to configure debug-related options for the Intel® Management Engine (ME).

Security		
HECI Timeouts	[Enabled]	Enable/Disable HECI Send/Receive Timeouts.
Force ME DID Init Status	[Disabled]	
CPU Replaced Polling Disable	[Disabled]	
HECI Message check Disable	[Disabled]	
MBP HOB Skip	[Disabled]	
HECI2 Interface Communication	[Disabled]	
KT Device	[Enabled]	
End Of Post Message	[Send in DXE]	
DOI3 Setting for HECI Disable	[Disabled]	
MCTP Broadcast Cycle	[Disabled]	

#### » HECI Timeouts

This setting enables/ disables the HECI (Host Embedded Controller Interface) send/ receive timeouts.

#### » Force ME DID Init Status

Forces the ME Device ID (DID) initialization status value.

#### » CPU Replaced Polling Disable

Setting this option disables the CPU replacement polling loop.

#### » HECI Message Check Disable

This setting disables message check for BIOS boot path when sending messages.

#### » MBP HOB Skip

Setting this option will skip ME's Memory-Based Protection (MBP) H0B region.

#### » HECI2 Interface Communication

This setting Adds/ Removes HECI2 device from PCI space.

#### » KT Device

Enables or disables Key Transfer (KT) Device.

» End of Post Message

Enables or disables End of Post Message sent to ME.

#### » DOI3 Setting for HECI Disable

Setting this option disables setting DOI3 bit for all HECI devices.

#### » MCTP Broadcast Cycle

Enables or disables Management Component Transport Protocol (MCTP) Broadcast Cycle.

#### Anti-Rollback SVN Configuration

Security		
Minimal Allowed Anti-Rollback SVN	0	When enabled,
Executing Anti–Rollback SVN	4	hardware-enforced
		Anti-Rollback mechanism is automatically activated: once
Set HW-Enforced Anti-Rollback for Current SVN	[Disabled]	ME FW was successfully run on a platform, FW with lower ARB-SVN will be blocked from execution

#### » Automatic HW-Enforced Anti-Rollback SVN

Setting this item enables will automatically activate the hardware-enforced anti-rollback protection based on the Secure Version Number (SVN). Once enabled, the hardware will enforce that only firmware updates with an SVN equal to or higher than the current SVN can be installed.

#### » Set HW-Enforced Anti-Rollback for Current SVN

Enable HW ERB mechanism for current ARB SVN value. FW with lower ARB-SVN will be blocked from execution. The value will be restored to disable after the command is sent. This item will display when **Automatic HW-Enforced Anti-Rollback SVN** is enabled.

## Trusted Computing

Security		
TPH 2.0 Device Found Firmware Version: Vendor: Security Device Support Active PCR banks Available PCR banks SHB256 PCR Bank Pending operation Platform Hierarchy Storage Hierarchy Endorsement Hierarchy Physical Presence Spec Version TPH 2.0 InterfaceType PH Randomization Device Select	15.23 IFX [Enable] SHA256 SHA256,SHA384 [Enabled] [Enabled] [Enabled] [Enabled] [1.3] [TIS] [Enabled] [TIFM 2.0]	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INTIA interface will not be available. ++: Select Screen T1: Select Item Enter: Select +/-: Change Opt. ESC: Exit F1: General Help F7: Previous Values F9: Optimized Defaults F10: Save & Reset Setup F10: Save & Reset Setup F12: Screenshot capture <kp: area="" downwards<="" help="" scroll="" td=""></kp:>

#### Security Device Support

This item enables or disables BIOS support for security device. When set to [Disable], the OS will not show security device.

#### SHA256 PCR Bank

These settings enables or disables the SHA256 PCR Bank.

### Pending Operation

When **Security Device Support** is set to [Enable], **Pending Operation** will appear. It is advised that users should routinely back up their TPM secured data.

[TPM Clear] Clear all data secured by TPM.

[None] Discard the se lection.

#### Platform Hierarchy, Storage Hierarchy, Endorsement Hierarchy

These settings enables or disables the Platform Hierarchy, Storage Hierarchy and Endorsement Hierarchy.

#### Physical Presence Spec Version

This settings show the Physical Presence Spec Version.

### ► TPM 2.0 Interface Type

This setting shows the TPM 2.0 Interface Type.

## ► Device Select

Select your TPM device through this setting.

## ► Serial Port Console Redirection

Security		
COM1 Console Redirection ▶ Console Redirection Settings	[Enabled]	Console Redirection Enable or Disable.
		↔: Select Screen ↑↓: Select Item
		Enter: Select +/-: Change Opt.
		ESC: Exit
		F1: General Help F7: Previous Values
		F9: Optimized Defaults
		F10: Save & Reset Setup
		F12: Screenshot capture
		<k>: Scroll help area upwards <m>: Scroll help area downwards</m></k>

## ► Console Redirection

Console Redirection operates in host systems that do not have a monitor and keyboard attached. This setting enables or disables the operation of console redirection. When set to [Enabled], BIOS redirects and sends all contents that should be displayed on the screen to the serial COM port for display on the terminal screen. Besides, all data received from the serial port is interpreted as keystrokes from a local keyboard.

### Console Redirection Settings (COM1)

This option appears when Console Redirection is enabled.

Security		
COM1 Console Redirection Settings		Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100Plus: Extends
Terminal Type Bits per second Data Bits Parity Stop Bits Flow Control VT-UTR8 Combo Key Support Recorder Mode Resolution 100x31 Puttu KeuPad	[ANS1] [115200] [None] [1] [None] [Enabled] [Disabled] [Disabled] [VT100]	VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.

#### » Terminal Type

To operate the system's console redirection, you need a terminal supporting ANSI terminal protocol and a RS-232 null modem cable connected between the host system and terminal(s). You can select emulation for the terminal from this setting.

[ANSI]	Extended ASCII character set.
[VT100]	ASCII character set.
[VT100Plus]	Extends VT100 to support color, function keys, etc.
[VT-UTF8]	Uses UTF8 encoding to map Unicode characters onto one or more bytes.

#### » Bits per second, Data Bits, Parity, Stop Bits

These setting specifies the transfer rate (bits per second, data bits, parity, stop bits) of Console Redirection.

#### » Flow Control

Flow control is the process of managing the rate of data transmission between two nodes. It's the process of adjusting the flow of data from one device to another to ensure that the receiving device can handle all of the incoming data. This is particularly important where the sending device is capable of sending data much faster than the receiving device can receive it.

#### » VT-UTF8 Combo Key Support

This setting enables or disables the VT-UTF8 combination key support for ANSI/VT100 terminals.

#### » Recorder Mode, Resolution 100x31

These settings enables or disables the recorder mode and the resolution 100x31.

#### » Putty KeyPad

PuTTY is a terminal emulator for Windows. This setting controls the numeric keypad for use in PuTTY.

## ► Secure Boot

	Security	
System Mode	Setup	Secure Boot feature is Active
Secure Boot	[Disabled] Not Active	if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires
Secure Boot Mode ▶ Restore Factory Keys ▶ Reset To Setup Mode	[Custom]	platform reset
▶ Key Management		
		†∔: Select Item Enter: Select
		+/-: Change Opt. ESC: Exit
		F1: General Help
		F7: Previous Values F9: Optimized Defaults
		F10: Save & Reset Setup F12: Screenshot capture
		<pre><k>: Scroll help area upwards <m>: Scroll help area downwards</m></k></pre>

#### Secure Boot

Secure Boot function can be enabled only when the **Platform Key (PK)** is enrolled and running accordingly.

### ► Secure Boot Mode

Selects the secure boot mode. This item appears when **Secure Boot** is enabled.

[Standard] The system will automatically load the secure keys from BIOS.

[Custom] Allows user to configure the secure boot settings and manually load the secure keys.

### Restore Factory Keys

Allows you to restore all factory default keys. The settings will be applied after reboot or at the next reboot. This item appears when **"Secure Boot Mode"** sets to **[Custom]**.

#### Reset to setup Mode

Allows you to delete all the Secure Boot keys (PK,KEK,db,dbt,dbx). The settings will be applied after reboot or at the next reboot. This item appears when "**Secure Boot Mode**" sets to [**Custom**].

#### Key Management

Press **Enter** key to enter the sub-menu. Manage the secure boot keys. This item appears when **"Secure Boot Mode"** sets to **[Custom]**.

# Chipset

Main Advanced Boot	Aptio Setup – AMI Security Chipset Power Save & Exit	
Primary Display Internal Graphics DVMT Total Gfx Mem DVMT Pre-Allocated Panel Select	[TGFX] [Enabled] [256M] [64M] [eDP]	Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select HG for Hybrid Gfx.
		<pre>++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. ESC: Exit F1: General Help F7: Previous Values F9: Optimized Defaults F10: Save &amp; Reset Setup F12: Screenshot capture <k>: Scroll help area upwards <mo: area="" downwards<="" help="" pre="" scroll=""></mo:></k></pre>

## Primary Display

Use the field to select the primary display of the system.

## Internal Graphics

This setting enables or disables the internal graphics function. Available settings are:

- [Auto] The internal graphics will be automatically enabled or disabled.
- [Enabled] Enables the internal graphics.

[Disabled] Disables the internal graphics.

## DVMT Total Gfx Mem

This setting specifies the total graphics memory size for Dynamic Video Memory Technology (DVMT).

## DVMT Pre-Allocated

This setting defines the DVMT pre-allocated memory. Pre-allocated memory is the small amount of system memory made available at boot time by the system BIOS for video. Pre-allocated memory is also known as locked memory. This is because it is "locked" for video use only and as such, is invisible and unable to be used by the operating system.

# Power

Main Advanced Boot Security	Aptio Setup – AMI Chipset Power Save & Exit	
Restone AC power Loss Deep Sleep Mode Advanced Resume Events Control USB LAN PCIE PME/Ring RTC	[Last State] [S4 + S5] [Enabled] [Enabled] [Disabled] [Disabled]	Select AC power state when power is re-applied after a power failure.
		++: Select Screen 14: Select Item Enter: Select +/-: Change Opt. ESC: Exit F1: General Help F7: Previous Values F9: Optimized Defaults F10: Save & Reset Setup F12: Screenshot capture <pre><pre><pre>K&gt;: Scroll help area upwards</pre></pre></pre>
Versi	on 2.22.1292 Copyright (C) 20	24 AMI

## Restore AC Power Loss

This setting specifies whether your system will reboot after a power failure or interrupt occurs. Available settings are:

[Power Off] Leaves the computer in the power off state.

[Power On] Leaves the computer in the power on state.

[Last State] Restores the system to the previous status before power failure or interrupt occurred.

## ► Deep Sleep Mode

The setting enables or disables the Deep S5 power saving mode. S5 is almost the same as G3 Mechanical Off, except that the PSU still supplies power, at a minimum, to the power button to allow return to S0. A full reboot is required. No previous content is retained. Other components may remain powered so the computer can "wake" on input from the keyboard, clock, modem, LAN, or USB device.

## USB, LAN, PCIE PME/ Ring

The setting allows the activity of the specified device to wake up the system from power saving modes.

#### ► RTC

When [Enabled], your can set the date and time at which the RTC (real-time clock) alarm awakens the system from power saving modes.

# Save & Exit

Aptio Setup — AMI Main Advanced Boot Security Chipset Power <mark>Save &amp; Exit</mark>	
Save Changes and Reset Discard Changes and Exit Discard Changes Load Optimized Defaults Save as User Defaults Restore User Defaults Launch EFI Shell from filesystem device	Restore∕Load Default values for all the setup options.
	+: Select Screen 11: Select Item Enter: Select 4/-: Change Opt. ESC: Exit F1: General Help F7: Previous Values F9: Optimized Defaults F10: Save & Reset Setup F12: Screenshot capture <k>: Scroll help area upwards <m>: Scroll help area downwards</m></k>
Version 2.22.1292 Copyright (C) 202	4 AMI

## Save Changes and Reset

Save changes to CMOS and reset the system.

Discard Changes and Exit

Abandon all changes and exit the Setup Utility.

Discard Changes

Abandon all changes.

► Load Optimized Defaults

Use this menu to load the default values set by the motherboard manufacturer specifically for optimal performance of the motherboard.

Save as User Defaults

Save changes as the user's default profile.

Restore User Defaults

Restore the user's default profile.

► Launch EFI Shell from filesystem device

This setting helps to launch the EFI Shell application from one of the available file system devices.

# **GPIO WDT Programming**

This chapter provides WDT (Watch Dog Timer) and GPIO (General Purpose Input/ Output) programming guide.

## Abstract

In this section, code examples based on C programming language provided for customer interest. **Inportb, Outportb, Inportl** and **Outportl** are basic functions used for access IO ports and defined as following.

Inportb: Read a single 8-bit I/O port.
Outportb: Write a single byte to an 8-bit port.
Inportl: Reads a single 32-bit I/O port.
Outportl: Write a single long to a 32-bit port.

**GetPhysLong, SetPhyLong** functions used for operate a specific physical address and defined as following.

**GetPhysLong:** retrieve the value obtained from the physical memory location. **SetPhyLong:** write the value to the physical memory location.

## **General Purpose IO**

## 1. General Purposed IO – GPIO/DIO

Name	IO Port	10	Name	IO Port	IO address
		address		1	
N_GPI0	0xE06D0790	Bit 1	N_GPO0	0xE06D0700	Bit O
N_GPI1	0xE06D07A0	Bit 1	N_GPO1	0xE06D0710	Bit 0
N_GPI2	0xE06D07B0	Bit 1	N_GPO2	0xE06D0720	Bit 0
N_GPI3	0xE06D07F0	Bit 1	N_GPO3	0xE06D0740	Bit 0
N_GPI4	0xE06D0800	Bit 1	N_GPO4	0xE06D0750	Bit 0
N_GPI5	0xE06D0810	Bit 1	N_GPO5	0xE06D0760	Bit 0
N_GPI6	0xE06D0850	Bit 1	N_GPO6	0xE06D0770	Bit 0
N_GPI7	0xE06D0860	Bit 1	N_GPO7	0xE06D0780	Bit 0

The GPIO port configuration addresses listed in the following table:

#### 1.1 Set output value of GPO

- 1. Read the value from GPO port.
- 2. Set the value of GPO address.
- 3. Write the value back to GPO port.

#### Example: Set N\_GPO0 output "high"

val=0:

addr=0xE06D0700;

```
GetPhysLong((PBYTE) addr, &val); // Read value from N_GPO0 port.
val = val & (DWORD)(1<<0);;
                              // Set N_GPOO address (bit 0) to 1 (output "high").
SetPhysLong((PBYTE)addr, val); // Write back to N_GPO0 port.
```

#### Example: Set N\_GPO1 output "low"

val=0; addr=0xE06D0710; GetPhysLong((PBYTE) addr, &val); // Read value from N\_GPO1 port. val = val & (DWORD)(~(1<<0));;

SetPhysLong((PBYTE)addr, val);

// Set **N\_GPO1** address (bit 0) to 0 (output "low"). // Write back to N\_GPO1 port.

### 1.2 Read input value from GPI

- 1. Read the value from GPI port.
- 2. Get the value of GPI address.

Example: Get N\_GPI2 input value.

```
val=0;
GetPhysLong((PBYTE) 0xE06D07B0, &val); // Read value from N_GPI2 port.
val = val & (DWORD)(1<<1)) != 0 // Read N_GPI2 address (bit 1).
if (val) printf ("Input of N_GPI2 is High");
else printf ("input of N_GPI2 is Low");
```

## Watchdog Timer - WDT

## 2. Watchdog Timer – WDT

The base address (WDT\_BASE) of WDT configuration registers is 0xA10.

#### 2.1 Set WDT Time Unit

val = Inportb (WDT_BASE + 0x05);	// Read current WDT setting
<u>val = val   0x08</u> ;	// minute mode. val = val & 0xF7 if second mode
Outportb (WDT_BASE + 0x05, val);	// Write back WDT setting

#### 2.2 Set WDT Time

Outportb (WDT\_BASE + 0x06, <u>Time</u>); // Write WDT time, value 1 to 255.

#### 2.3 Enable WDT

val = Inportb (WDT_BASE + 0x0A);	<pre>// Read current WDT_PME setting</pre>
val = val   0x01;	// Enable WDT OUT: WDOUT_EN (bit 0) set to 1.
Outportb (WDT_BASE + 0x0A, val);	// Write back WDT setting.
val = Inportb (WDT_BASE + 0x05);	// Read current WDT setting
val = val   0x20;	// Enable WDT by set WD_EN (bit 5) to 1.
Outportb (WDT_BASE + 0x05, val);	// Write back WDT setting.

#### 2.4 Disable WDT

val = Inportb (WDT_BASE + 0x05);	// Read current WDT setting
val = val & 0xDF;	// Disable WDT by set WD_EN (bit 5) to 0.
Outportb (WDT_BASE + 0x05, val);	// Write back WDT setting.

#### 2.5 **Check WDT Reset Flag**

If the system has been reset by WDT function, this flag will set to 1.

val = Inpo	ortb (WDT_BASE + 0x05);	// Read current WDT setting.
val = val a	& 0x40;	// Check WDTMOUT_STS (bit 6).
if (val)	<pre>printf ("timeout event occurred");</pre>	
else printf ("timeout event not occurred");		

### 2.6 Clear WDT Reset Flag

val = Inportb (WDT_BASE + 0x05);	// Read current WDT setting
val = val   0x40;	// Set 1 to WDTMOUT_STS (bit 6);
Outportb (WDT_BASE + 0x05, val);	// Write back WDT setting