

# M116AD

## 11.6" Windows Rugged Tablet

Intel Core i5-1235U 1.3GHz (up to 4.4GHz)



---

## Quick Start Guide



<https://dc.winmate.com>

Version 1.2

Document Part No. 9152116K1007

## Content

|                                                 |           |
|-------------------------------------------------|-----------|
| <b>Read Me First</b>                            | <b>2</b>  |
| Advisory Conventions                            | 2         |
| Safety Information                              | 3         |
| Handling and Maintenance                        | 5         |
| <b>Introduction</b>                             | <b>7</b>  |
| Overview                                        | 7         |
| Package Content                                 | 7         |
| Description of Parts                            | 8         |
| LED Indicators                                  | 9         |
| Hotkey for Specific Functions                   | 10        |
| <b>Getting Started</b>                          | <b>10</b> |
| Installing Battery                              | 10        |
| Installing WWAN Module                          | 11        |
| Installing SIM card (For WWAN Equipped Devices) | 12        |
| Installing a MicroSD Card                       | 13        |
| Charging Your Tablet                            | 13        |
| Replacing Battery                               | 14        |
| Using LAN Port (RJ45)                           | 14        |
| Starting the Tablet                             | 14        |
| Using HotTab Utility                            | 15        |
| Using Camera                                    | 16        |
| Changing Touch Mode                             | 16        |
| Scanning Barcodes                               | 17        |
| Reading HF RFID Tags                            | 17        |
| <b>Appendix</b>                                 | <b>18</b> |
| Docking Connector Pin Definition                | 18        |
| GigaLAN Port Definition                         | 18        |
| COM Port Definition                             | 18        |

# Read Me First

## Advisory Conventions

Four types of advisories are used throughout the user manual to provide helpful information or to alert you to the potential for hardware damage or personal injury.



**Note:** A note is used to emphasize helpful information



**Important:** An important note indicates information that is important for you to know.



**Caution** A Caution alert indicates potential damage to hardware and explains how to avoid the potential problem.

**Attention** Une alerte d'attention indique un dommage possible à l'équipement et explique comment éviter le problème potentiel.



**Warning!** An Electrical Shock Warning indicates the potential harm from electrical hazards and how to avoid the potential problem.

**Avertissement!** Un Avertissement de Choc Électrique indique le potentiel de chocs sur des emplacements électriques et comment éviter ces problèmes.

## FCC Statement



This device complies with part 15 FCC rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a Class "B" digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used following the instruction manual, may cause harmful interference to radio communications. The operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

## CE Notice (European Union)



Electromagnetic Compatibility Directive (2014/30/EU)

- EN55032: 2010/ A1: 2015
  - IEC61000-4-2: 2009
  - IEC61000-4-3: 2006+A1: 2007+A2: 2010
  - IEC61000-4-4: 2012
  - IEC61000-4-5: 2014
  - IEC61000-4-6: 2014
  - IEC61000-4-8: 2010
  - IEC61000-4-11: 2004
- EN55035: 2015/AC:2016
- EN61000-3-2:2014
- EN61000-3-3:2013

Low Voltage Directive (2014/35/EU)

- EN 62368-1:2006/A11:2009/A1:2010/A12:2011/ A2:2013

This equipment is in conformity with the requirement of the following EU legislation and harmonized standards. The product also complies with the Council directions.

## Safety Information



### **Precaution on Battery Pack** **Précaution avec le bloc-pile**

Do Not Disassemble, Modify, or Insert Sharp Objects Into the Battery Pack. Electrolyte leakage, generation of heat, ignition or rupture may result.

*[FR] Ne pas démonter, modifier, ou insérer des objets pointus à l'intérieur du bloc-pile. Une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.*

Do Not Short the Positive (+) and Negative (-) Terminals of the Battery. Generation of heat, ignition or rupture may result. When carrying or storing the device, do not place the battery pack together with articles that may contact electricity.

*[FR] Ne pas court-circuiter les bornes Positive (+) et Négative (-) de la pile, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés. Lors du transport et du rangement de l'appareil, ne pas placer le bloc-pile en même temps que des articles pouvant créer un contact électrique.*

Do Not Apply Shocks to the Battery by Dropping It or Applying Strong Pressure to It. Electrolyte leakage, generation of heat, ignition or rupture of battery may occurs.

*[FR] Ne pas faire subir de choc à la pile en la laissant tomber ou en appliquant une forte pression dessus. Une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.*

Do Not Charge the Battery Other Than Methods Those Specified In This Manual. If the battery is not charged using one of the specified methods, electrolyte leakage, generation of heat, ignition or rupture may result.

*[FR] Ne pas charger la pile par d'autres méthodes que celles spécifiées dans ce manuel. Si la pile n'est pas chargée en utilisant l'une des méthodes spécifiées, une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.*

When the Battery Pack Has Deteriorated, Replace It with a New Battery. Continued use of a damaged battery pack may result in heat generation, ignition or battery rupture.

*[FR] Lorsque la pile est détériorée, la remplacer par une nouvelle pile. L'utilisation continue d'une pile endommagée peut occasionner une génération de chaleur, l'amorçage ou la rupture de la pile.*

Do Not Expose the Battery Pack to Excessive Heat, or Extreme Heat (Near Fire, in Direct Sunlight for example) Generation of heat, ignition or rupture may result

*[FR] Ne pas exposer le bloc-pile à une Chaleur Excessive, ou une Chaleur Extrême (Près d'un feu, sous la lumière du soleil par exemple) Une production de chaleur, l'amorçage ou la rupture peuvent être occasionnés*

Do Not Use the Battery Pack With Any Other Products. The battery pack is rechargeable and is only designed for this specific product. If it is used with a product other than the specified product, electrolyte leakage, generation of heat, ignition or rupture may result.

*[FR] Ne pas utiliser avec un autre produit La batterie est rechargeable et a été conçue pour un produit spécifique. Si elle est utilisée sur un produit différent*

*de celui pour lequel elle a été conçue, des pertes d'électrolytes et une production de chaleur sont possibles, elle risque également de prendre feu ou de casser.*

Do Not Use This Product With Battery Other Than the One Specified.

*[FR] Ne pas utiliser ce produit avec une batterie autre que celle spécifiée*

Discontinue using device immediately if you notice the battery is swelling, or looks puffy or misshapen. Do not attempt to charge or use the device. Do not handle a damaged or leaking battery. Do not let leaking battery fluid come into contact with your eyes, skin or clothing.

*[FR] Si vous remarquez une pile gonflée, élargie ou anormale, cesser l'utilisation de l'appareil immédiatement. N'essayez pas de recharger l'appareil ou de l'utiliser. Ne pas manipuler une pile qui fuit ou qui est endommagée. Ne laissez pas de liquide qui fuit entrer en contact avec vos yeux, votre peau ou vos vêtements.*



## **General Product Safety** **Sécurité générale des produits**

- Do not block any ventilation openings. Do not place the product against a wall or in an enclosed space as doing so might impede the flow of cooling air.
- *[FR] Ne pas bloquer les ouvertures de ventilation. Ne pas placer le produit contre un mur ou dans un espace clos de façon à entraver la circulation de l'air de refroidissement.*
- Do not place the product near any heat sources such as radiators, warm air intakes, stoves or other heat-generating devices (including amplifiers or other heat producing equipment).
- *[FR] Ne pas placer le produit près d'une source de chaleur comme des radiateurs, les arrivées d'air chaud, poêles ou autres produits générant de la chaleur (y compris les amplificateurs ou autre équipement produisant de la chaleur.)*
- Protect the power cord from being crushed or pinched, particularly in the area of the plugs, any receptacles used, and the point of exit from the apparatus. Do not break off the ground pin of the power cord.
- *[FR] Empêcher le cordon d'alimentation d'être écrasé ou pincé, en particulier dans les zones de prises, des containers utilisés, et du point de sortie de l'appareil. Ne pas casser la broche de terre du cordon d'alimentation.*
- Do not disregard the safety that a polarized or grounded connection can provide. A polarized connection consists of two plugs, one of which is larger than the other. A grounded connection has two blades and a third one that is grounded. If the main plug provided cannot be inserted into your outlet, consult an electrician to replace your obsolete outlet.
- *[FR] Ne pas ignorer la sécurité qu'une prise polarisée ou une prise de terre peut prévoir. Une prise polarisée se compose de deux fiches, dont l'une est plus large que l'autre. Une prise de terre possède deux lames et une troisième qui est la terre. Si la fiche principale fournie ne peut être insérée dans votre prise, consultez un électricien pour remplacer votre prise obsolète.*
- Use only accessories specified by the manufacturer.  
*[FR] Utiliser uniquement les accessoires spécifiés par le fabricant.*
- This product should not be used near water such as bathtubs, sinks, swimming pools, wet basement, etc.
- *[FR] Ce produit ne doit pas être utilisé près de l'eau comme les baignoires, les éviers, les piscines, les sous-sols humides, etc.*

## Handling and Maintenance



### General Guideline *Guide Général*

Keep the product at least 13 cm (5 inches) away from electrical appliances that can generate a strong magnetic field such as TV, refrigerator, motor, or a large audio speaker.

*[FR] Garder le produit au moins à 13 cm (5 pouces) de distance des appareils électriques qui peuvent générer un fort champ magnétique comme une télévision, un réfrigérateur, un moteur, ou un important haut-parleur.*

Do not place heavy objects on top of the tablet computer as this may damage the display.

*[FR] Ne pas placer d'objets lourds sur le dessus de l'ordinateur tablette cela peut endommager l'écran.*

The screen surface can be easily scratched. Use with care. Do not use paper towels to clean the display but use the included cleaning cloth. Avoid touching it with a pen or pencil.

*[FR] La surface de l'écran peut être facilement rayée. Utiliser avec précaution. Ne pas utiliser de serviette en papier pour nettoyer l'écran mais utiliser le chiffon de nettoyage inclus. Éviter de toucher avec un stylo ou un crayon.*

To maximize the life of the backlight in the display, allow the backlight to turn off as a result of power management automatically. Avoid using a screen saver or other software that prevents power management from working.

*[FR] Pour maximiser la durée de vie du rétroéclairage de l'écran, autoriser le rétroéclairage résultant de la gestion de l'alimentation. Éviter d'utiliser un économiseur d'écran ou un autre logiciel empêchant la gestion de l'alimentation de fonctionner.*

- Use only with its transport carriage, stand, tripod, console or table specified by the manufacturer or sold with the product. When using a carriage, move the carriage assembly with the product carefully to avoid damage from falling over.
- *[FR] Utiliser uniquement avec son chariot de transport, support, trépied, console ou table spécifiés par le fabricant ou vendu avec le produit. Lors de l'utilisation d'un charriot, déplacez l'ensemble chariot avec le produit avec soin pour éviter tout dommage de chute.*
- Unplug this apparatus during lightning storms or when it is not being used for long periods.
- *[FR] Débrancher cet appareil durant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes.*
- Refer all servicing to qualified service personnel. A technical intervention is required when the apparatus has been damaged in any way, for example if the power cord or plug is damaged, liquid has been spilled or objects have fallen inside the unit, if the product has been exposed to rain or moisture, if it does not operate normally or if it has been dropped.
- *[FR] Confier toute réparation à du personnel qualifié. Une intervention technique est nécessaire lorsque l'appareil a été endommagé de quelque façon, par exemple si le cordon d'alimentation ou la fiche est endommagé, du liquide a été renversé ou des objets sont tombés à l'intérieur de l'unité, si le produit a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il a été jeté.*



### General Guideline *Directive générale*

It is recommended to reboot the device when some functions are defect or inactive. If it still can't solve the problems please contact your dealer or agent.

*Il est recommandé de redémarrer l'appareil lorsque certaines fonctions sont défectueuses ou inactives. Si le problème persiste, veuillez contacter votre revendeur ou votre agent.*



### Touchscreen Guideline *Guide de l'écran tactile*

Use your finger or the stylus on display. Using sharp or metallic objects may cause scratches and damage the screen, thereby causing errors.

*[FR] Utiliser votre doigt ou le stylet sur l'écran. L'utilisation d'un objet pointu ou métallique peut provoquer des rayures.*



## **Cleaning Guideline**

### ***Guide de nettoyage***

Use a soft cloth moistened with water or a non-alkaline detergent to wipe the exterior of the product.

*[FR] Utiliser un chiffon doux humidifié avec de l'eau ou un détergeant non alcalin pour essuyer l'extérieur du produit.*

Gently wipe the display with a soft, lint-free cloth. Do not use alcohol or detergent on the product.

*[FR] Essuyer délicatement l'écran avec un chiffon doux non pelucheux. Ne pas utiliser d'alcool ou un détergent sur le produit.*

Use a soft cloth to remove dirt on display. The touchscreen surface has a special protective coating that prevents dirt from sticking to it. Not using a soft cloth may cause damage to the special protective layer on the touchscreen surface. To clean off hard to remove dirt, blow some steam on the particular area, and gently wipe away using a soft cloth.

*[FR] Utiliser un chiffon doux pour enlever la poussière sur l'écran. La surface de l'écran tactile a un revêtement protecteur spécial empêchant la saleté de se coller à lui. Ne pas utiliser un chiffon doux peut endommager le revêtement spécial sur la surface de l'écran tactile. Pour nettoyer les saletés plus difficiles à enlever, souffler de la buée sur la zone particulière et essuyer doucement avec un chiffon doux.*

Do not use excessive force on display. Avoid placing objects on top of the display as this may cause the glass to break.

*[FR] Ne pas utiliser une force excessive sur l'écran. Éviter de placer des objets au dessus de l'écran cela pourrait provoquer une cassure du verre.*

When there is a noticeable discrepancy in the operation of the touchscreen function (your touch does not correlate to the proper location on the screen), recalibrate the touchscreen display.

*[FR] Lorsqu'il y a un écart sensible dans le fonctionnement de l'écran tactile (votre contact ne correspond pas à la bonne position sur l'écran), recalibrer l'écran tactile.*

## Introduction

### Overview

Thank you for choosing the Winmate® 11.6-inch x86 Rugged Tablet M116AD. The M116AD platform is a next-generation Windows rugged tablet series designed to boost efficiency in a mobile, versatile form factor. The large 11.6-inch sunlight-readable, full HD display allows for a premium viewing experience no matter where work takes place. The M116AD provides powerful performance with the Intel Core i5 processor for all-day use with a hot-swappable battery design. Multiple wireless connectivity options and data capture modules allow users to complete their tasks reliably. M116AD encased in IP65 water and rugged dustproof housing with MIL-STD 810H specs ensure that the M116AD is the ultimate rugged Tablet designed with mobile productivity in mind.

### Highlights

- 11.6" 1920 x 1080, 850 nits IPS LED Panel with direct optical bonding
- Hot-swappable battery design
- Intel® Core™ i5-1235U Alder Lake processor
- IP65 waterproof and dustproof, MILSTD810H shock, vibration, and drop resistance
- Sunlight readable with antiglare solution

### Package Content

 
Check and identify the supplied accessories:



**Tablet Computer**



**Standard Battery**



**Stylus**



**Power Adapter**



**Power Cord and Plugs**



**Quick Start Guide**


Your package may include other optional accessories based on your order:

- |                                        |                    |                          |
|----------------------------------------|--------------------|--------------------------|
| • Desk Dock                            | • Vehicle Charger  | • Gigabit Ethernet Cable |
| • Vehicle Dock<br>(Without VGA output) | • Hand Strap       | • RS232 Cable            |
| • Vehicle Cradle<br>(Charging only)    | • Shoulder Strap   | • USB Hub Adapter        |
|                                        | • Carry Bag        | • Battery Charger        |
|                                        | • Micro HDMI Cable |                          |


## Description of Parts

Dimensions: 300.67 x 201.97 x 22.5 mm


Front:

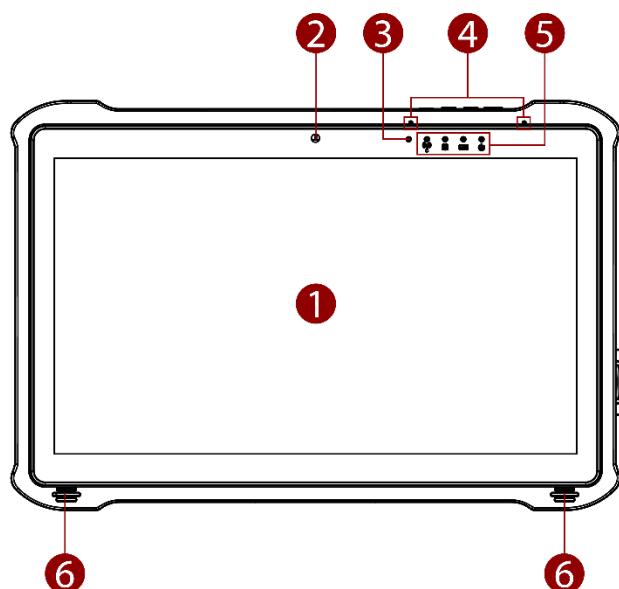

Left:

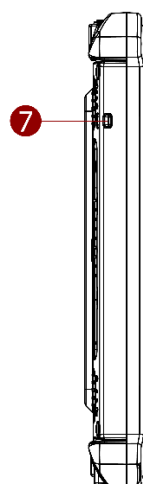


Right:



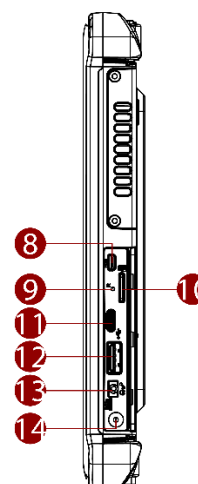


| No | Item                                | Description                                                                                    |
|----|-------------------------------------|------------------------------------------------------------------------------------------------|
| 1  | 11.6" PCAP Touchscreen              | 11.6-inch display with LED backlight acts as one of the inputs for the Tablet Computer.        |
| 2  | Front Camera                        | 2 MP front camera.                                                                             |
| 3  | Light Sensor                        | Indicates the environment brightness.                                                          |
| 4  | Digital Mic with Noise Cancellation | Use during video recordings and communications. Use during video recordings and communications |
| 5  | LED Indicators                      | Show the current status of the Tablet Computer: Wireless communication, HDD, battery, power.   |
| 6  | Speakers                            | Emit sounds.                                                                                   |

Front LED Indicator Details:

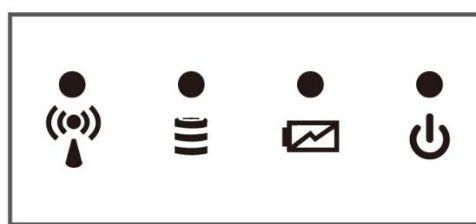

| No | Item            | Description                                                                                                                                                                                              |
|----|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7  | String Hole     | Use to attach a wrist strap or other accessories.                                                                                                                                                        |
| 8  | Micro HDMI      | HDMI output to an external display.                                                                                                                                                                      |
| 9  | Reset Button    | Press to reset the Tablet Computer.                                                                                                                                                                      |
| 10 | Micro SD slot   | Memory card reader port for Micro SD card.                                                                                                                                                               |
| 11 | USB Type-C      | USB port connects to USB devices, such as USB flash drive, mouse, keyboard, printer, etc.<br><b>Note:</b> The USB Type-C connector follows USB 3.0 standard, which does not support Alternate Mode (ALT) |
| 12 | USB Type-A      | USB port connects to USB devices, such as USB flash drives, mouse, keyboard, printers, etc.                                                                                                              |
| 13 | Mic In/Line Out | Headset or headphone can be connected (only supported with a 3.5mm 4-pin headset)                                                                                                                        |
| 14 | Power Jack      | DC power input jack that accepts 19V DC power input.                                                                                                                                                     |

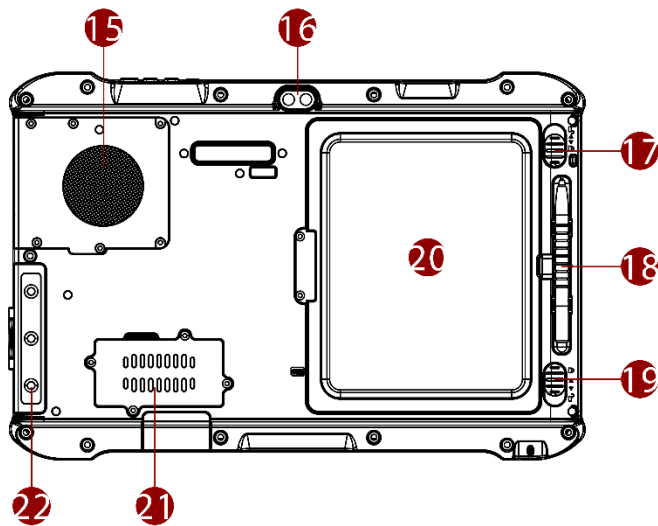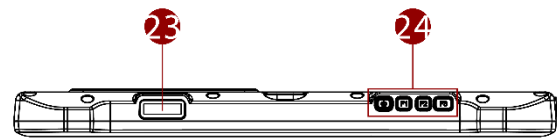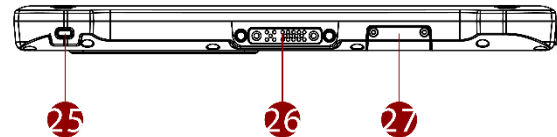**Rear:****Top:****Bottom:**

| No | Item                 | Description                                                                         |
|----|----------------------|-------------------------------------------------------------------------------------|
| 15 | Fan                  | Cooling system                                                                      |
| 16 | Rear Camera          | 8MP rear camera with autofocus. Captures photos and videos.                         |
| 17 | Battery Release      | Slider Spring-loaded slider that latches the battery in.                            |
| 18 | Touch Pen Slot       | Pen holder slot to store touch pen.                                                 |
| 19 | Battery Lock Latch   | Latch to lock the battery in place once the battery is inserted. Not spring-loaded. |
| 20 | Battery*             | Hot-swappable 11.55V typ. 4558 mAh Li-Polymer Battery (3S2P)                        |
| 21 | Service Window       | Provide access to WWAN Module.                                                      |
| 22 | Waterproof I/O Cover | Protects I/O ports from water and dust.                                             |

| No | Item                                | Description                                                                                                                                                                   |
|----|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 23 | Barcode Reader (Optional)           | Barcode Scanner for reading of 1D/2D barcode.                                                                                                                                 |
| 24 | Physical Buttons: Power, F1, F2, F3 | Press the power button to turn on the Tablet. Long press the power button to hard turn off the Tablet. The programmable function buttons can be configured by HotTab Utility. |
| 25 | Kensington Lock                     | Use to attach tablet computer around a table leg or another secure location.                                                                                                  |
| 26 | Docking Connector                   | Port to docking solutions such as vehicle docking to provide power and external antenna.                                                                                      |
| 27 | Expansion connector (Optional)      | Giga LAN expansion connector.                                                                                                                                                 |

\* **Note:** Micro SIM card slot is in the battery compartment. Please remove the battery first to access the Micro SIM card slot.

**LED Indicators**

| Icon | Indicator               | Description                                                                                                                                                                                                                                                                                       |
|------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | Power Indicator         | <b>Blue</b> – Tablet is ON<br><b>No light</b> – Tablet is OFF                                                                                                                                                                                                                                     |
|      | Battery Status          | <b>Orange</b> – AC adapter is plugged in and charging<br><b>Green</b> – AC adapter is plugged in, the battery is fully charged<br><b>Solid Red</b> – Low battery (<10%)<br><b>Blinking Red</b> – Battery is being hot-swapped.<br><b>No light</b> – Battery is in use with more than 10% capacity |
|      | Disk Activity Indicator | <b>Green</b> – Disk is active<br><b>No light</b> – Disk is idling                                                                                                                                                                                                                                 |
|      | RF Communication        | <b>Green</b> – One of the WLAN/BT/WWAN/GPS is ON<br><b>No light</b> – WLAN/BT/WWAN/GPS are all OFF                                                                                                                                                                                                |

## Hotkey for Specific Functions

Physical buttons, in addition to their dedicated functions, can also be programmed to the commonly used keyboard keystrokes. Under a different scenario, a single physical button or a combination of physical buttons provide different keyboard keystrokes, which are specified below:

### In POST (before Windows boots up):

| Buttons | Keystroke                      |
|---------|--------------------------------|
| F1      | F6 to enter Recovery Menu      |
| F2      | Esc to enter BIOS setup screen |

### In Windows:

| Buttons | Keystroke            |
|---------|----------------------|
| Menu    | HotTab Quick Access  |
| F1      | Default: Web Browser |
| F2      | Default: Camera      |
| Power   | Power ON/ OFF        |
| F1+F3   | Ctrl + Alt + Del     |
| F3      | Default: Calculator  |

## Getting Started

### Installing Battery





**Caution** Disconnect any cords connected to the tablet computer before installing or removing the battery.

**Attention** Débranchez tous les cordons connectés à la tablette avant l'installation ou la procédure de retrait de la batterie.



To install the standard battery pack:

1. Turn the Tablet over, back facing up.
2. Insert the battery with the connector-pins side first, and then lower the battery into the battery compartment. Make sure the battery is completely lowered into the compartment. Once fully inserted, the Battery Release Slider automatically locks. The battery will be flat against the housing once fully inserted.
3. Push the Battery Lock to the “**Locked**” position.

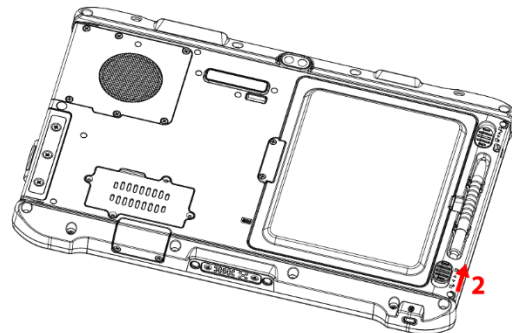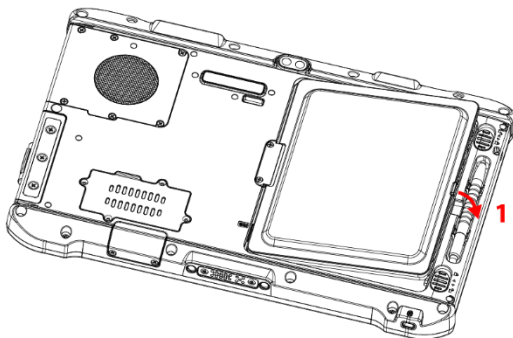

To remove the battery pack:

1. Shut down the Tablet (or put it into sleep mode). Turn the tablet computer over, back facing up.
2. Push the Battery Lock Latch to the “**Unlocked**” position.
3. Pull up and hold the Battery Release Slider that is spring-loaded.
4. Lift the battery out using the opening on the side of the battery compartment.

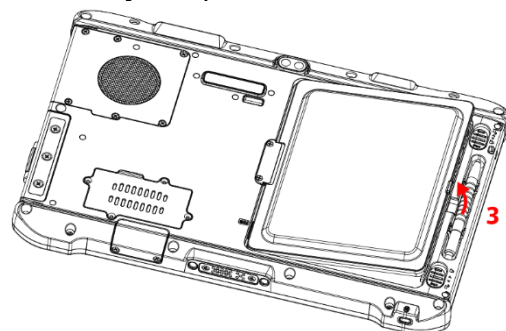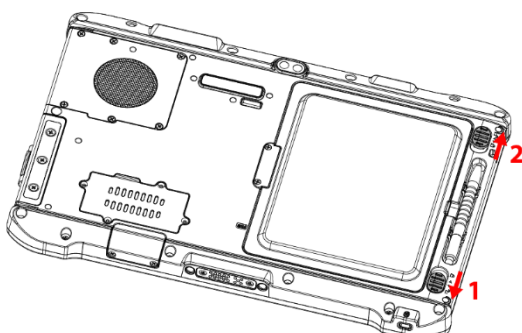

## Installing WWAN Module

Notice that the WWAN feature is optional and may not be supported by your device. Check your order specifications for more details. Before installing a Micro-SIM card, please install the WWAN module.

To install the WWAN module:

### Tools Needed:


#### Service Windows

Screw: M2x5, 4 pc  
Screwdriver: Philips Type, Size #0 , for M2 screws, torque:  $2.0 \pm 0.5$  kgf.cm


#### WWAN Module

Screw: M2x3.5, 1 pc  
Screwdriver: Philips Type, Size #0 , for M2 screws, torque:  $2.0 \pm 0.5$  kgf.cm


- ❶ Remove four screws and remove the service window.

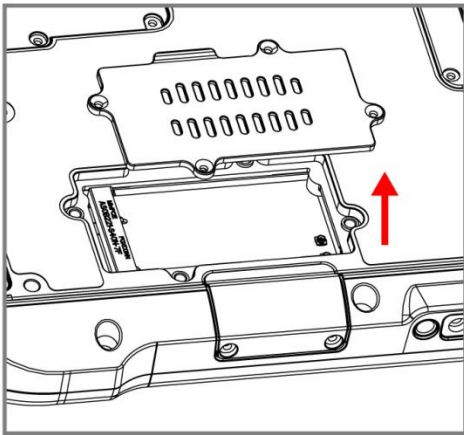


- ❷ Insert the module card into its slot and connect two cables (black for the main antenna, gray for AUX) to the WWAN module card. **Do not damage the connected cables.**

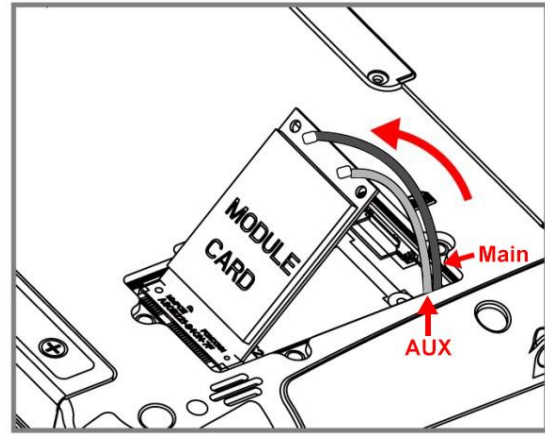

- ❸ Push the WWAN module card down to insert it into its position and fasten one screw. Accurately route the cables. **Do not bend, pinch, or squeeze the wires!**

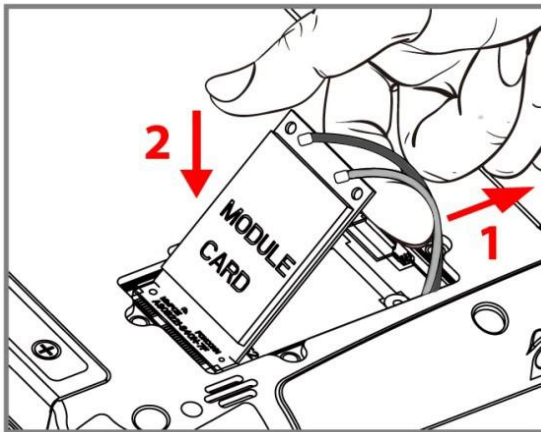

- ❹ Re-insert the service window and fasten it with the four screws.

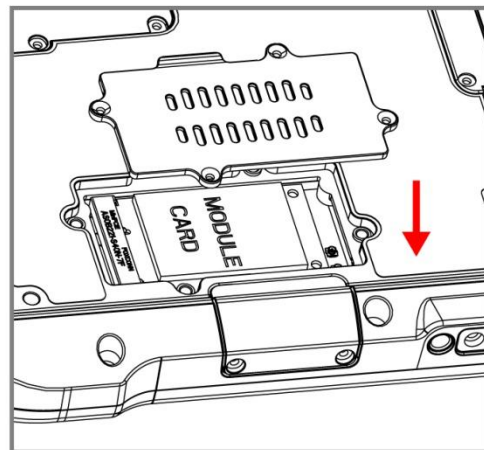

**Caution** When re-inserting the WWAN module, please pay attention to cable routing. Make sure the cable module connects properly and does not get squeezed.

**Attention** Notez l'acheminement du câble lorsque vous réinstallez le module WWAN. Assurez - vous que les modules de câble sont correctement connectés et qu'ils ne sont pas pincés.

## Installing SIM card (For WWAN Equipped Devices)


Notice that the WWAN feature is optional and may not be supported by your device. Check your order specifications for more details.




**Caution** Disconnect any cords connected to the tablet computer before installing or removing the battery procedure.

**Attention** Débranchez tous les cordons connectés à la tablette avant l'installation ou la procédure de retrait de la batterie.


- 1** Remove the battery, as described in the previous section.

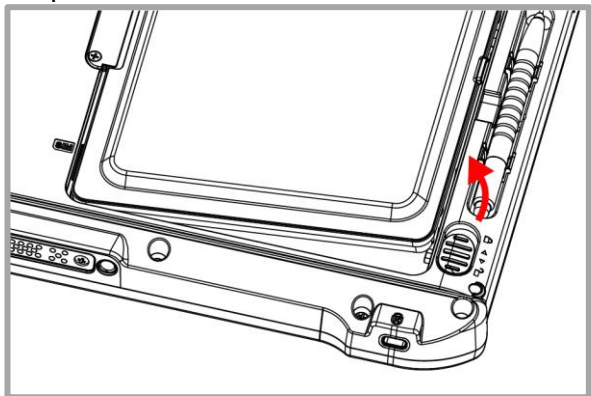


- 2** Open the SIM-card slot rubber protection cover.

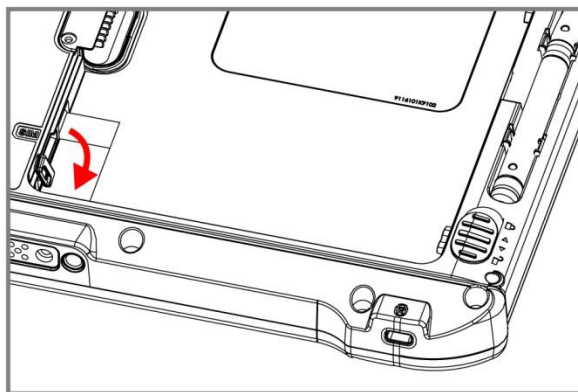


- 3** Insert the SIM Card all the way. **Chip/ contact facing down.**

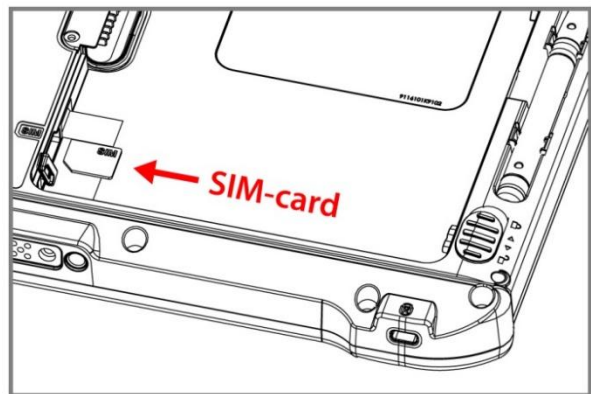


- 4** Close the SIM-card slot rubber protection cover.

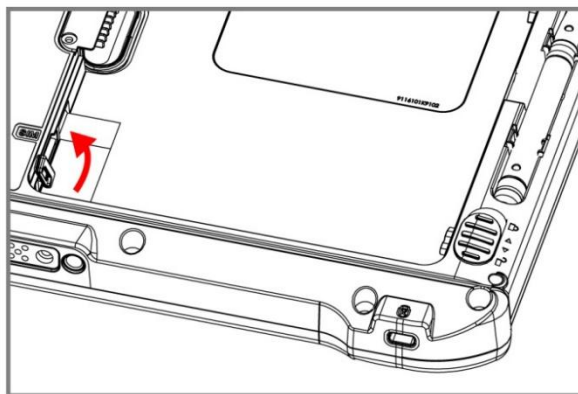

- 5** Re-insert the battery. Make sure the battery is fully inserted and is flat against the housing.

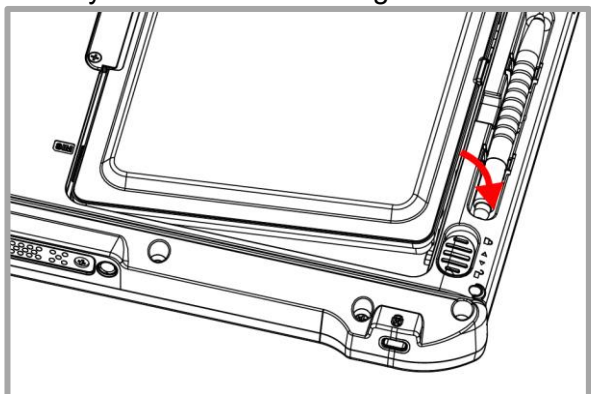

- 6** Push the Battery Lock to the "Locked" position.

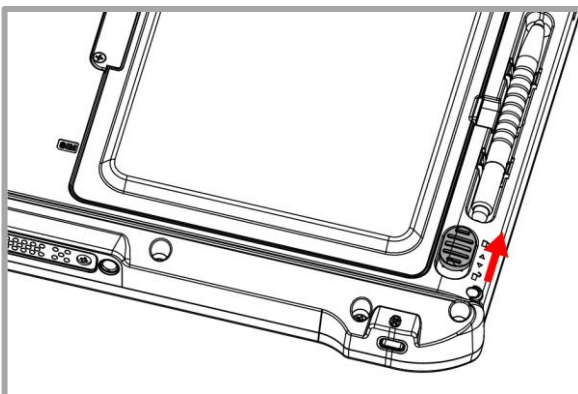


## Installing a MicroSD Card

Your Tablet supports additional storage with an optional microSD card.

*To install the MicroSD Card:*

1. Open I/O protective cover by pulling out the latch.
2. Insert microSD card into the slot with contacts facing down.
3. Press the card to ensure that it is seated properly.
4. Close I/O protective cover.

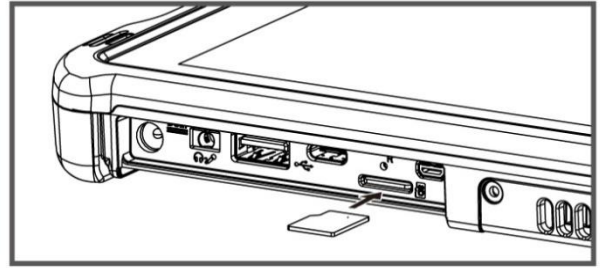

*To remove MicroSD Card:*

1. Open I/O protective cover by pulling out the latch.
2. Push and release the microSD card to unlock it.
3. Pull out the micro SD card.

## Charging Your Tablet

The Tablet operates either on external AC power or internal battery power. It is recommended to use AC power when you start up the Tablet for the first time.




**Caution** Use only the AC adapter included with your Tablet Computer. Using other AC adapters may damage the Tablet Computer and the Battery.


**Attention** Utilisez uniquement l'adaptateur secteur fourni avec votre ordinateur tablette. L'utilisation d'autres adaptateurs secteur peut endommager la tablette tactile et la batterie.

*To connect a tablet to AC power:*

1. Open I/O protective cover by pulling out the latch.
2. Plug the DC cord of the AC adapter into the power jack of the tablet computer.
3. Plug the AC power cord into the AC adapter.
4. Plug the AC power cord into the electrical outlet.

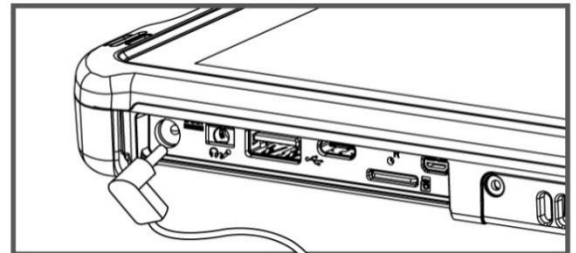

*The battery LED indicator shows different battery states:*

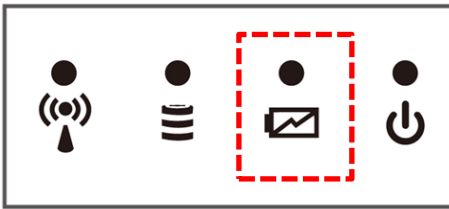

**Orange** – AC adapter is plugged in and the battery is charging.

**Green** – AC adapter is plugged in and the battery is fully charged.

**Solid Red** – Low battery level (<10%).

**Blinking Red** – Battery is being hot-swapped.

**No light** – Battery is in use and charged (>10%).

## Replacing Battery

The M116AD Tablet supports hot-swap, meaning the Tablet doesn't need to be powered off to replace the main battery. To support hot-swap, there is a backup battery inside the Tablet that is charged together with the main battery. This battery cannot be removed and requires adequate power for main battery hot-swapping. When the backup battery is fully charged, the Tablet can sustain up to 5 minutes of runtime for battery hot-swapping.



**Caution** Charge the built-in backup battery every two months to maintain the battery health and prevent possible issues from battery over-discharge.

**Attention** Chargez la batterie de secours intégrée tous les deux mois pour conserver la santé de la batterie et éviter les problèmes de décharge excessive de la batterie.

*Perform the following to hot-swap the batteries:*

1. Power on the Tablet, open HotTab to check the power level of the Backup battery.
2. If the Backup battery level is “Low”, please charge the Tablet with AC Power until the Backup battery level is “Medium” or “High”, and do not remove the main battery.
3. If the Backup battery level is at “Medium” or “High”, you can remove the main battery.
4. Insert a new fully charged battery into the battery compartment.
5. Pen HotTab to check Main battery level. If the battery level is displayed incorrect, check if the new removable battery is inserted properly.
6. If the battery level is displayed correct, continue using the Tablet.

## Using LAN Port (RJ45)

Notice that the LAN Port (RJ45) is optional and may not be supported by your device. Check your order specifications for more details. Connect the tablet PC to external devices using a LAN cable.

## Starting the Tablet



**Important:** When powering on the device for the first time, please make sure there's no interruption during the Windows setting up process, for example, accidentally powering off. If it happened, please access the recovery menu by pressing **Fn1** button on the front bezel to initiate the recovery process.

Press and hold the power button for **1.5 seconds** until the blue LED power indicator light up.



**Note:** Do not press the power button repeatedly.

Do not perform the following operations until the Disk Activity Indicator off

- Connecting or disconnecting the AC adapter
- Pressing the power button
- Touching the tablet buttons, screen, or external keyboard/mouse

To power off the Tablet Computer:

1. Make sure you have saved and closed running files and programs.
2. Tap on the **Settings** charm.
3. Tap on **Power**.
4. Tap on **Shut Down**.
5. Wait for Tablet Computer to power off.




**Note:** The computer will forcibly be powered off if the power button is pressed and held for **8 seconds or longer**.

## Using HotTab Utility

HotTab provides quick access to the Tablet's functions and features, such as setting up shortcuts, using the camera, powering on/off built-in devices, programming function key, and changing power management.

As Windows starts up, HotTab starts and runs in the background. To open the HotTab control utility launch the HotTab Utility .

The main user interface is located on the right side of the screen. There are 4 main menu options: Shortcuts, Camera, Device ON/OFF, and Settings. Operations and functions on each menu options is explained in detail in the coming section.

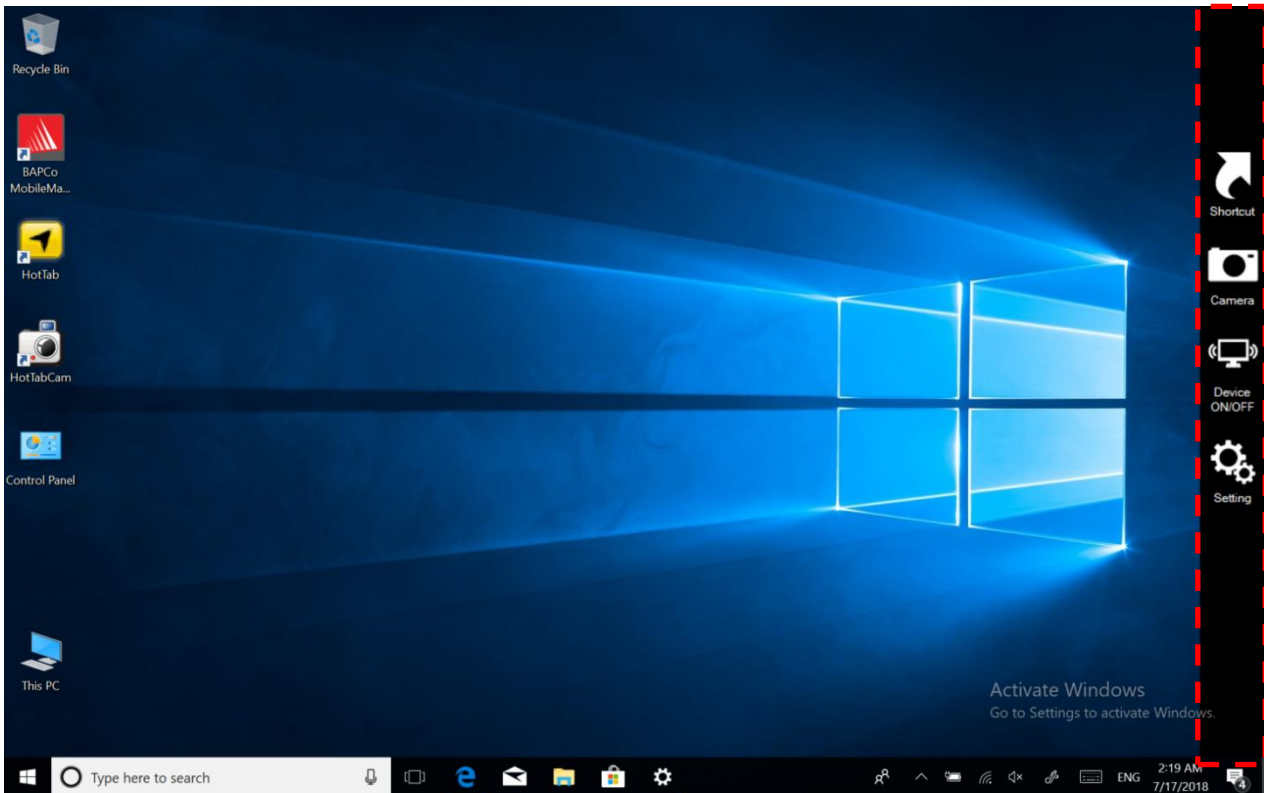


| Icon                                                                                                 | Description                                                                                                                                                                                             |
|------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Shortcuts     | Allows users to configure short cut to quickly access programs with a few tabs.                                                                                                                         |
| <br>Camera        | Allows users take a picture or record a video. User can also adjust setting related to camera in this menu option.                                                                                      |
| <br>Device ON/OFF | Enables/disables tablet computer's hardware functions. The configurable functions are WLAN, WWAN, GPS, Bluetooth, Camera, LED indicators, Barcode Reader, RFID Reader, and GPS Antenna routing options. |
| <br>Settings      | Provides users information such as PC Information, Battery status, and also device settings such as power management setting, and function key mappings.                                                |

## Using Camera

To take photos or videos:

1. Open the HotTab application. The on-screen HotTab Camera Indicator lights orange.
2. Point the camera at an object.
3. Touch the on-screen shutter button  to take a photo or video record  button to record a video.

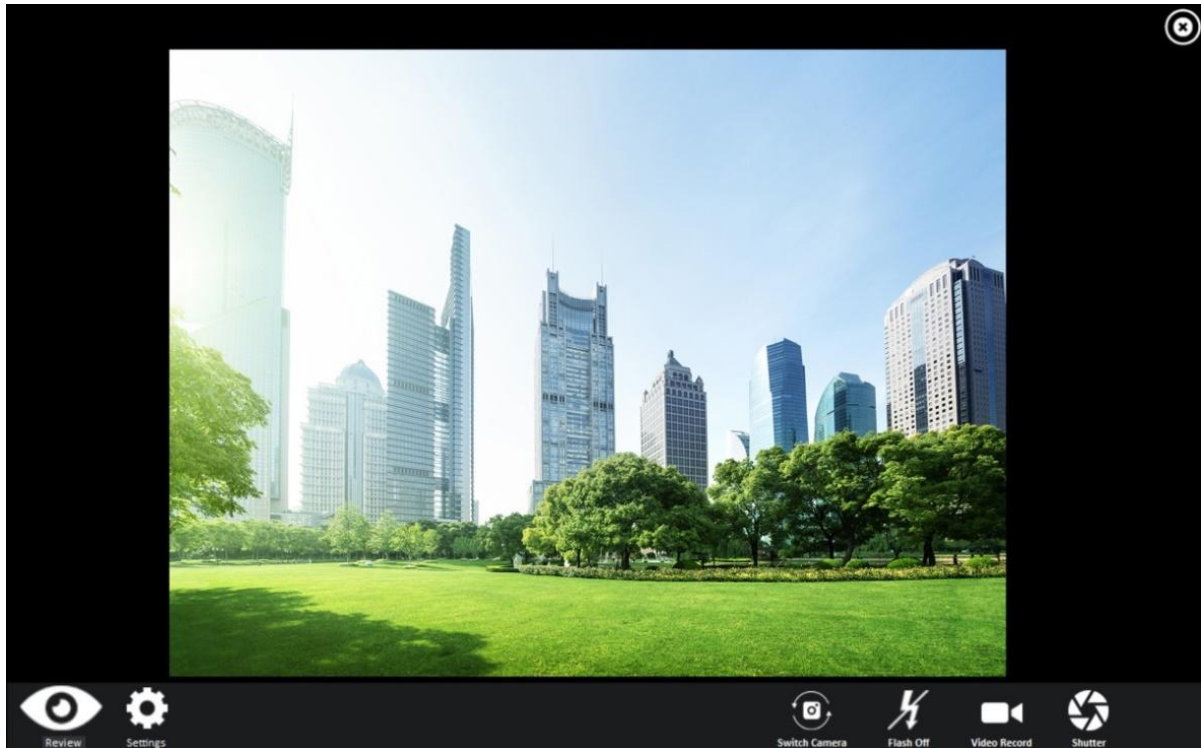

## Changing Touch Mode

The tablet computer supports three built-in operating modes for different usage scenarios:

To change touch mode:

| Mode                                                                                                              | Description                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><b>Hand/Rain (Default)</b> | <p>In <i>Hand/Rain</i> mode the touchscreen rejects false inputs from liquid drops. When the liquid is removed, the touchscreen accepts touch inputs from bare fingertips.</p> <p><i>Supports input by:</i></p> <ul style="list-style-type: none"> <li>• <i>Rubber tip passive stylus</i></li> <li>• <i>Bare fingertips</i></li> </ul>                |
| <br><b>Stylus</b>              | <p>In <i>Stylus</i> mode, the touchscreen supports inputs from the fine-tip passive capacitive stylus (shipped with Tablet).</p> <p><i>Support input by:</i></p> <ul style="list-style-type: none"> <li>• <i>Fine-tip passive stylus with palm rejection</i></li> <li>• <i>Rubber tip passive stylus</i></li> <li>• <i>Bare fingertips</i></li> </ul> |
| <br><b>Glove</b>               | <p>In <i>Glove</i> mode, the touchscreen supports inputs while the user is operating the touchscreen with gloves on.</p> <p><i>Supports input by:</i></p> <ul style="list-style-type: none"> <li>• <i>Glove</i></li> <li>• <i>Rubber tip passive stylus</i></li> <li>• <i>Bare fingertips</i></li> </ul>                                              |

To change touch mode:

Launch the HotTab Utility . Choose “**Device ON/OFF**”, and then click “**Touch Set**” icon.  →  → 


## Scanning Barcodes

Depending upon configuration, barcode scanning can be performed using the built-in 1D/2D barcode scanner (**Note:** Barcode scanner is an optional feature).

*To set up a barcode scanner:*

1. Tear off protective film from the barcode.
2. Launch the HotTab Utility .
3. Choose device ON/OFF  and click on Barcode .
4. Tap barcode power ON.
5. Press the F3 button located on the rear.

Scan a barcode to check your reader is working properly. Result will be displayed in HotTab.

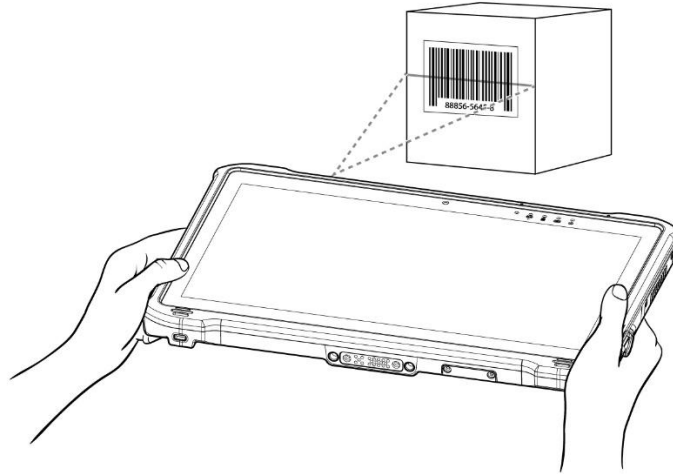


## Reading HF RFID Tags

Depending upon configuration, the M116AD supports reading RFID tags. The RFID antenna is located on the back of the device under the RFID logo.

*To enable HF RFID Reader:*


1. Launch the HotTab Utility .
  2. Choose Device ON/ OFF  and click on  RFID.
  3. Tap on the ON button. The button turns green, and the RFID icon in the HotTab menu is orange.
- Bring the RFID card toward the antenna. Result will be displayed in HotTab

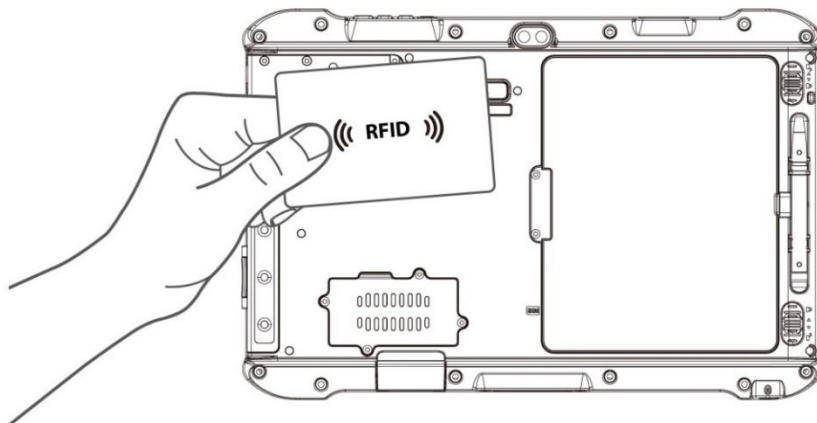

## Appendix

### Docking Connector Pin Definition


The M116AD Tablet Computer supports one 19-pin docking connector at the bottom side.

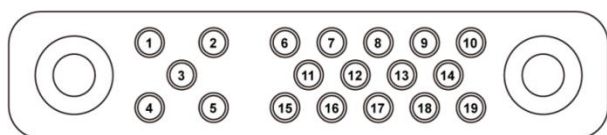

| Pin No. | Signal Name | Pin No. | Signal Name |
|---------|-------------|---------|-------------|
| 1       | RF_GND      | 11      | NC          |
| 2       | DOCK_DET#   | 12      | NC          |
| 3       | GPS ANT     | 13      | GND         |
| 4       | RF_GND      | 14      | Power       |
| 5       | RF_GND      | 15      | USB+        |
| 6       | NC          | 16      | USB-        |
| 7       | NC          | 17      | GND         |
| 8       | DETECT+     | 18      | GND         |
| 9       | Power       | 19      | DETECT-     |
| 10      | Power       |         |             |

### GigaLAN Port Definition

Notice that GigaLAN port is an optional feature of the M116AD Tablet Computer and may not be present in your device. Please check your order specifications for more details.

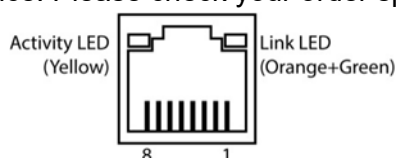

| Pin № | Signal Name | Pin № | Signal Name |
|-------|-------------|-------|-------------|
| 1     | TX1+        | 2     | TX1-        |
| 3     | TX2+        | 4     | TX3+        |
| 5     | TX3-        | 6     | TX2-        |
| 7     | TX4+        | 8     | TX4-        |

### COM Port Definition

The M116AD Tablet Computer uses HotTab utility for built-in peripherals control. All the COM port numbers have been defined in the OS image coming with the package.

| COM Port | Device                       |
|----------|------------------------------|
| COM 1    | Reserved                     |
| COM 2    | Reserved                     |
| COM 3    | HF RFID (Optional)           |
| COM 4    | Bluetooth Auto Pairing       |
| COM 9    | GPS                          |
| COM 11   | RS-232 at Docking (Optional) |



## Contact Us

---



### Winmate Inc.

No.18, Zhongxing South Rd.,  
San-Chung District, New Taipei City 241017, Taiwan  
Tel: +886-2-8511-0288  
E-mail: [sales@winmate.com.tw](mailto:sales@winmate.com.tw)  
Website: [www.winmate.com](http://www.winmate.com)



### Winmate USA Inc.

2640 Matthews Street,  
Smyrna, GA 30080, USA  
Tel: +1-678-653-8800  
E-mail: [NASales@winmate.com.tw](mailto:NASales@winmate.com.tw)  
Website: [www.winmate-rugged.com](http://www.winmate-rugged.com)



### TTX Canada

150 Werlich Drive, Units 5&6  
Cambridge, Ontario, N1T 1N6 Canada  
Tel: +1-519-621-1881  
E-mail: [Sales@ttx.ca](mailto:Sales@ttx.ca)  
Website: [www.ttx.ca](http://www.ttx.ca)



### TL Electronic GmbH

Bgm.-Gradl-Str. 1  
85232 Bergkirchen-Feldgeding, Germany  
Tel: +49 (0)8131 33204-0  
E-mail: [info@tl-electronic.de](mailto:info@tl-electronic.de)  
Website: [www.tl-electronic.de](http://www.tl-electronic.de)



### 京融电自动化科技 (苏州) 有限公司

215100 江苏省苏州市工业园区唯新路 69 号  
一能科技园 3 号楼 206 室  
Tel: +86-512-6826-6696/6829-6696  
E-mail: [sales@winmate.com.cn](mailto:sales@winmate.com.cn)  
Website: [www.winmate.com.cn](http://www.winmate.com.cn)



### Winmate JP Office/ HPC System Inc.

LOOP-X 8F,3-9-15 Kaigan,  
Minato-ku, Tokyo 108-0022, Japan  
Tel: +81-3-5446-5535  
Fax: +81-3-5446-5550  
Website: [www.hpc.co.jp](http://www.hpc.co.jp)

---