


## How to Start your M700DM9

### 1) Charge the Battery

Use the bundled AC adapter and USB cable to charge the Tablet for 4 hours.

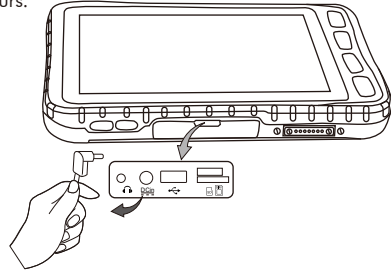


**Note:** For the very first time using, we recommend you charge with the AC adapter. Charging from PC's USB port will take 6 hours or longer.

**Note:** We strongly recommend you always charge your M700DM9 Tablet with its original charger. Winmate's warranty does not cover damage to the mobile device caused by other batteries and/or chargers.




### 2) Turn On the Tablet

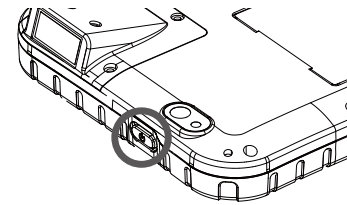
To turn on your M700DM9 series Tablet, press and hold the power button for 3 seconds, located on the top side of the unit. When the device vibrates, release the power button. The LED Indicator will be solid blue during the launching process. The desktop screen will then be displayed once operating system has been launched.



**Note:** For power saving purpose, please enable Connect to PC in Accessibility settings. When connected to PC external 4G, USB and LAN on Docking will be disabled.

## How to Scan a Barcode (Optional)


- 1) Tear off protective film from the barcode.
- 2) Press **power button**  located on the top and swipe up from bottom on the screen to unlock the screen.
- 3) Open **Search**  application or other which can edit text.
- 4) Press **triggerbutton**  located on the bottom.

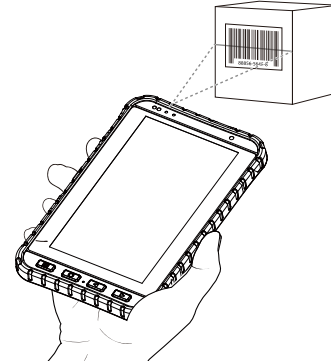

- 5) Scan the following barcode to check if your reader is working properly.  
Result will be displayed in Search application.



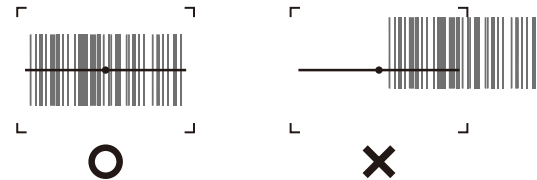

Optimum scanning



## How to Change Scanning Settings

### To change scanning settings

- 1) Open **WDC**  application.
- 2) Open **Barcode Settings** , tap Trigger Settings.
- 3) Choose scan type and read time options.



### MODE TRIGGER OPTIONS

**Auto Scan** – Barcode reader starts auto-scanning once the user leaves the WDC application.


**Multiple Scan** – After pressing the trigger button barcode reader starts continuously scanning and reading **multiple codes** within the time duration specified in **Read time option**.



**Continuing Scan (Default)** – After pressing the trigger button barcode reader can scan and read only a **single code** within the time duration specified in **Read time option**.

### To change the symbologies of barcode

- 1) Open **WDC**  application.
- 2) Tap **Barcode Setting** .
- 3) Tap **Barcode Preference**.
- 4) Change the symbologies of barcodes.

### To add command with the output of barcode

- 1) Open **WDC**  application.
- 2) In **Barcode Setting** step **Prefix/Suffix**.
- 3) Enter special characters at the beginning (**prefix**) or end (**suffix**) of the scanned barcodes.
- 4) Tap **Set** to add to the data.

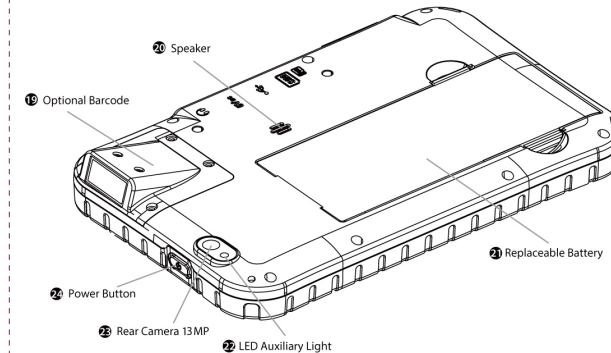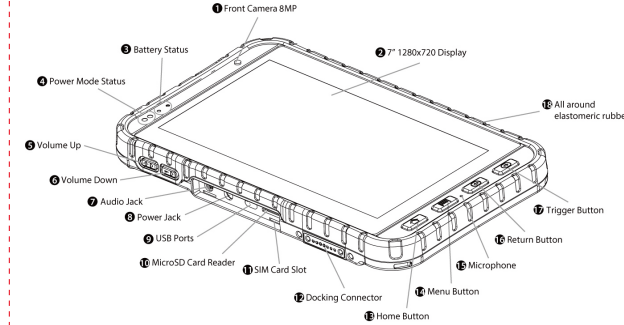

## There's more here.

- Keep your M700DM9 updated, and find the latest PC software, user manual, online help and more at Winmate Download Center.
- Find more accessories for your M700DM9 at Winmate website [www.winmate.com](http://www.winmate.com).

WinMATE



## M700DM9 Series Rugged Tablet Quick Start Guide v1.0

For the complete user manual and other helpful resources, go to  
**[www.winmate.com](http://www.winmate.com)**

Document Part No. 91521110116E

Before starting to use M700DM9

1) Install Micro SD / SIM card (Optional)

The built-in storage space of your M700DM9 Rugged Tablet is mainly used for system operation. Some functions such as camera or other APP require bigger storage space, please insert a Micro SD card before using. If your M700DM9 Rugged Tablet supports 3G, Remember to insert a SIM card to activate your data connection.

2) Install and Charge the Battery

The battery in your new M700DM9 Rugged Tablet is not charged yet. Please charge with the bundled USB cable before your first use. **Caution!** Please don't remove the battery pack or try to take the device apart while charging. These actions may result in some damages and may invalidate your warranty. **Caution!** Discontinue using device immediately if you notice the battery is swelling, or looks puffy or misshapen. Do not attempt to charge or use the device. Do not handle a damaged or leaking battery. Do not let leaking battery fluid come into contact with your eyes, skin or clothing.


3) Some tips for using and caring your Rugged Tablet.

- The M70DM9 Rugged Tablet is designed to resist damages from certain rugged conditions. However, to help care for your M700DM9, please avoid prolonged or extreme exposure to those conditions.
- ✓ To ensure the rugged design works and protects your Tablet, please be sure the connector covers are closed and the back cover is screwed properly.
  - ✓ Don't leave your Tablet near a heat source; this can damage the device.
  - ✓ Avoid dropping your Tablet on a hard surface; this can potentially cause damage to the device.
  - ✓ To clean your Tablet, use a dry soft cloth. Don't use alcohol or other cleaning solutions.
  - ✓ Please don't have your Tablet contact with water when the cover is opened. The water-proof design works only when the outer case is sealed properly.


**Note:** Certain apps and features may not be available in all countries.

To know your M700DM9 more

Front View (with Barcode Reader)

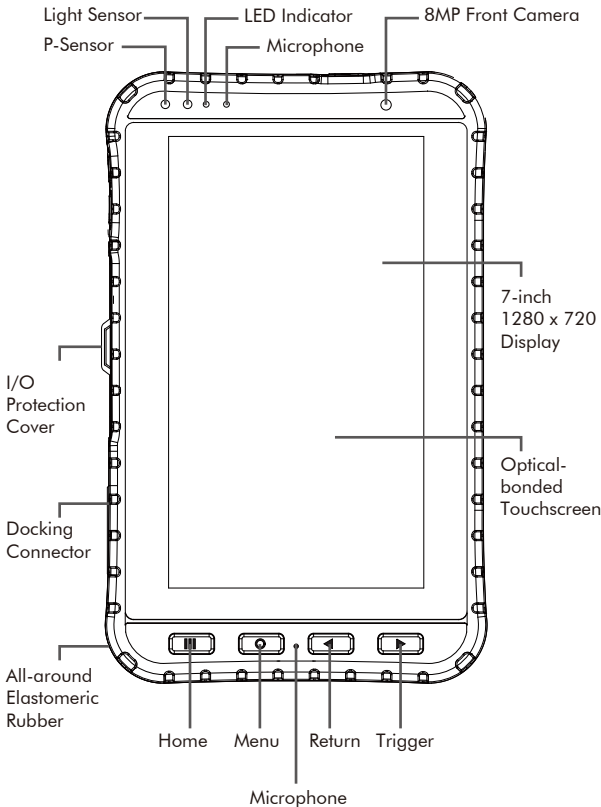

Rear View (with Barcode Reader)

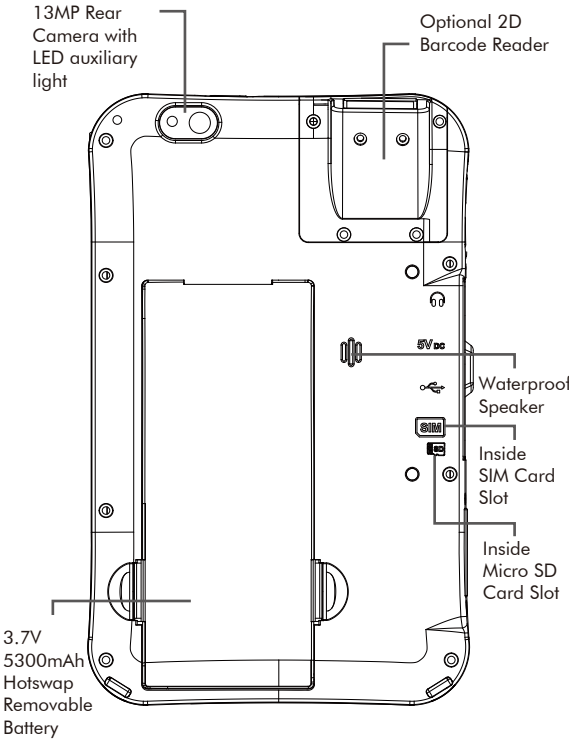

How to Install Battery


Caution:The lithium battery used in this tablet may swell after being charged/ discharged many times, but there is no problem regarding safety. Continued use in such a state may result in the battery getting jammed, so please stop using the battery, and purchase a new one.

1) Turn Off the Tablet


- Disconnect AC adapter and power cord from the device.
- Turn the device over, back facing up.

2) Insert the Battery

Push the battery latchInsert the battery on the connector-pins side first, and then lower the battery into the battery compartment. Continue to hold the Battery Release Slider before battery is fully inserted.

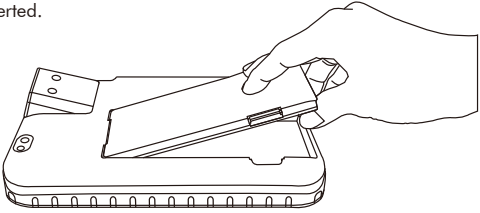

**Caution:** Do not insert your fingers into contact hole when inserting the battery.

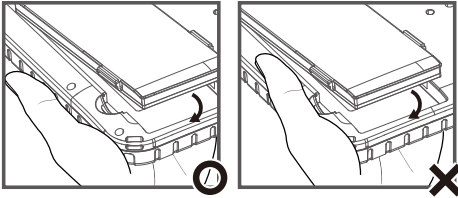

How to Insert SIM / Micro SD Card

1) Turn Off the Tablet

Make sure the Tablet is powered off and the USB cable is not connected.

**Note:** To turn off your M700DM9 series dbletin Android settings, press and hold Power button till the following window show up. Tap Power off.



**Note:** You can also force the system to shutdown anytime under any operating system by holding the Power button about 8 seconds.

2) Open the I/O Cover


Pull out the latch to open the I/O cover located on the left side.

3) Insert SIM Card

Insert SIM card with the gold parts facing up and cut-off corner facing in) in the direction of the arrow as shown in the figure.

4) Insert MicroSD Card

Pick and raise the SD card holder up in upright position and then put the SD Card into the socket.

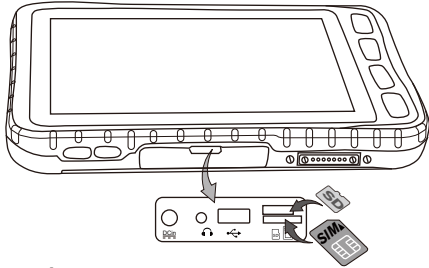

5) Close the I/O Cover

Pull back the latch to close the I/O cover.