


SUNIX MCS6456P Hardware Guide

4-port RS-232 Powered COM MiniCard

Board appearance:

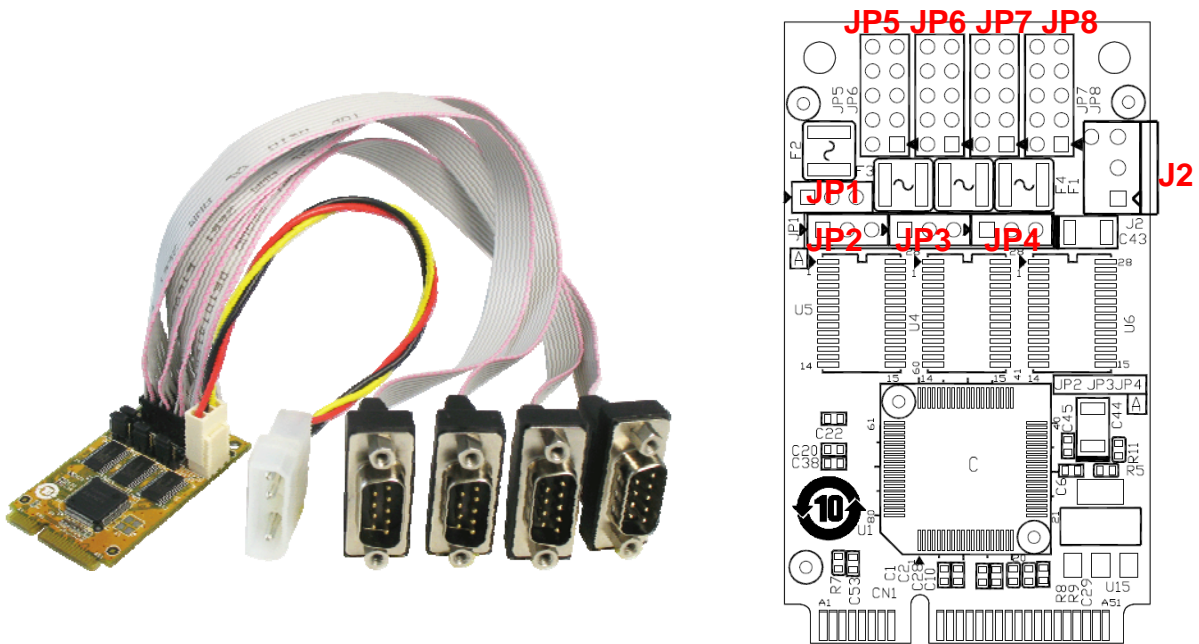



Port Configuration:

This table lists COM port sequence and paired power select pin.

	COM Port	Power Select Pin
COM3	JP5	JP1
COM4	JP6	JP2
COM5	JP7	JP3
COM6	JP8	JP4

COM Port Pin Assignment:

RS-232 pin assignment shows as below, including board header and DB9 male connector.
Powered COM output over 9th pin DB9M connector.


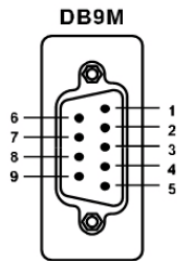
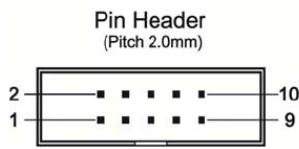


PIN	Pin Header	PIN	Pin Header
DCD	1	CTS	6
DSR	2	DTR	7
RxD	3		
RTS	4	GND	9
TxD	5		

PIN	DB9M
DCD	1
RxD	2
TxD	3
DTR	4
GND	5
DSR	6
RTS	7
CTS	8
+5V / +12V / NA	9


Power Configuration:

Each COM port supports 500mA power current to serial devices.

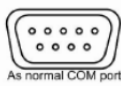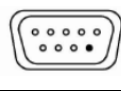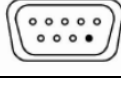	Define	Jumper Settings
Default	 As normal COM port	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
+5VDC	 sv	<input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>
+12VDC	 12V	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>

Power Input:

J2 is power input pin header for powered COM feature. You can skip this power cable if there is not necessary power output to serial devices.

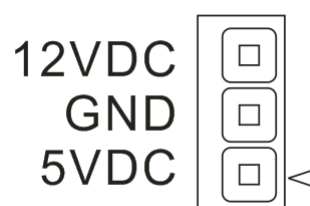

Mechanical Drawings:

(Unit = mm)

