

User Manual



AOM-3821

**Rockchip RK3588 Cortex-A76 +
A55 RTXe AI-on-Module**

ADVANTECH

Enabling an Intelligent Planet

Copyright

The documentation and the software included with this product are copyrighted 2025 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. The information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties that may result from its use.

Acknowledgments

Arm is trademarks of Arm Corporation

Rockchip is trademarks of Rockchip Corporation

All other product names or trademarks are properties of their respective owners

Export/Import Regulations

Advantech Products with Rockchip platform SOC subject to import and export control must comply with the following regulations.

Please strictly abide by all applicable export/import control laws and regulations, including but not limited to those with regard to Strategic High-Tech Commodities.

Please do not use the goods with Rockchip SOC supplied by Advantech for the purpose of manufacturing or developing missiles, nuclear, biological weapons or other military purposes.

Unless otherwise permitted by applicable laws or regulations, please not ship or re-export the goods with Rockchip SOC supplied by Advantech to another country or area without obtaining the required license or approval from governmental authorities.

Product Warranty (2 years)

Advantech warrants the original purchaser that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products that have been repaired or altered by persons other than repair personnel authorized by Advantech, or products that have been subject to misuse, abuse, accident, or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced free of charge during the warranty period. For out-of-warranty repairs, customers will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details.

If you believe your product to be defective, follow the steps outlined below.

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages displayed when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain a return merchandise authorization (RMA) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a completed Repair and Replacement Order Card, and a proof of purchase date (such as a photocopy of your sales receipt) into a shippable container. Products returned without a proof of purchase date are not eligible for warranty service.
5. Write the RMA number clearly on the outside of the package and ship the package prepaid to your dealer.

Declaration of Conformity

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Technical Support and Assistance

1. Visit the Advantech website at www.advantech.com/support to obtain the latest product information.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before calling:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Packing List

Before installation, please ensure the following items have been shipped:

- 1 x AOM-3821
- 4 x Screws
- 1 x China ROHS

Ordering Information

Part No.	Description
AOM-3821C8-3588AA1	AOM-Rugged,RK3588,0~70,4GB/32GB
AOM-3821W8-3588BA1	AOM-Rugged,RK3588J,-40~85,8GB/64GB
AOM-DB3500-SWNA1	RTXe Develop. Board for RISC AOM-Rugged Module

*Please contact us for a suitable cellular module for your region.

Optional Accessories

Part No.	Description
1970006105N001	Heat spreader
1970006106T001	Heat sink
96PSA-A60W24T2-3	Adapter 100-240V 60W 24V
1702002605	Power cord 3P EU 10A 250V 183cm
1702031801	Power cord 3P UK 10A 250V 183cm
1702002600	Power cord 3P UL 10A 125V 180cm
1700000237	Power cord 3P PSE 183 cm
1700009652	Power cord CCC 3P 10A 250V 183cm
AIW-162BS-GI1	WIFI6/BT Broadcom AP6275P, PCIe+UART M.2 Key-E
EWM-W179M201E	WIFI6/BT RTL852BE, PCIe+USB M.2
1751000651-01	Dipole Ant. WiFi 6E SMA/M-R BLK
1751000649-01	Cable Ant. SMA/F MHF4L/113
968DD00342	5G Module, RM520NGLAA M.2 Key-B
968DD00443	4G Module, EM05CNFD-128-SGAS M.2
1751000625-01	Cable Ant. SMA/F MHF4L/113 BLK
1750009372-01	Ant.SMA/M 90/180 5G BLK 167mm
9696EG6A000	RTL8211FS-CG LAN Board
9696EG57001	ALC5640 Code Board

*Please contact us for suggesting suitable cellular module for your region.

Safety Instructions

1. Read these safety instructions carefully.
2. Retain this user manual for future reference.
3. Disconnect the equipment from all power outlets before cleaning. Use only a damp cloth for cleaning. Do not use liquid or spray detergents.
4. For pluggable equipment, the power outlet socket must be located near the equipment and easily accessible.
5. Protect the equipment from humidity.
6. Place the equipment on a reliable surface during installation. Dropping or letting the equipment fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. Do not cover the openings.
8. Ensure that the voltage of the power source is correct before connecting the equipment to a power outlet.
9. Position the power cord away from high-traffic areas. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage from transient overvoltage.
12. Never pour liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If any of the following occurs, have the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated the equipment.
 - The equipment has been exposed to moisture.
 - The equipment is malfunctioning, or does not operate according to the user manual.
 - The equipment has been dropped and damaged.
 - The equipment shows obvious signs of breakage.

DISCLAIMER: These instructions are provided according to IEC 704-1 standards. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
- Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

Contents

Chapter 1	General Introduction	1
1.1	Introduction	2
1.2	Product Features.....	2
1.3	Mechanical Specifications.....	3
1.4	Electrical Specifications	4
	Table 1.1:	4
1.5	Environmental Specifications	4
Chapter 2	H/W Installation.....	5
2.1	Block Diagram.....	6
	Figure 2.1 Block Diagram.....	6
2.2	Pin Definition.....	7
	Table 2.1: AOM-3821 Pin-out.....	7
2.3	Quick Start Guide.....	18
2.3.1	Debug Port Connection.....	18
2.3.2	Debug Port Settings.....	18
2.3.3	AOM-3821 on AOM-DB3500 Jumper, Switch Settings.....	19
	Table 2.2: AOM-3821 on AOM-DB3500 Jumper/Switch List.....	19
	Figure 2.2 AOM-3821&AOM-DB3500 Top View	20
	Figure 2.3 AOM-3821&AOM-DB3500 Bottom View	21
	Table 2.3: CN3 GPIO Headers	21
	Table 2.4: J28 GPIO0 Headers	21
	Table 2.5: J26 GPIO0 Selection	22
	Table 2.6: J25 GPIO1 Selection	22
	Table 2.7: J27 GPIO1 Selection	22
	Table 2.8: J31 GPIO4 Selection	22
	Table 2.9: J37 GPIO4 Selection	23
	Table 2.10:J32 ADC1 Selection	23
	Table 2.11:J29 ADC2 Selection	23
	Table 2.12:J15 EDP Power Selection	23
	Table 2.13:J16 Inverter Power Selection.....	24
	Table 2.14:J12 EDP Inverter Power Selection	24
	Table 2.15:SPI1 Jumper Setting.....	24
	Table 2.16:SPI1 J5 Jumper Setting	24
	Table 2.17:J8 M2_E1 Power Setting	25
	Table 2.18:J10 M.2_B Power Setting	25
	Table 2.19:J9 M.2_B Power Setting	25
	Table 2.20:SW2 &SW3.....	26
	Table 2.21:J7, J35, J36 USB0 & USB0_OTG Setting	26
	Table 2.22:SW1 Setting.....	27
Chapter 3	Software Functionality	29
3.1	Preface.....	30
	Table 3.1:	30
3.2	Command Introduction.....	30
3.2.1	Command Format	31
3.3	Debian Desktop Operating System.....	31
3.3.1	User and Password.....	31
3.3.2	Find Application	31
3.4	HDMI/DP screen	32
	3.4.1 Configure Resolution for HDMI/DP screen	32

3.5	Multi-Display	33
3.5.1	Dual-Display	33
3.5.2	Triple-Display	33
3.6	Audio	34
3.6.1	Mute and Volume control	34
3.6.2	Audio Test	35
3.7	4G/5G	35
3.7.1	Configure 4G/5G	35
3.7.2	4G/5G Test	38
3.8	WIFI/BT	38
3.8.1	Configure WIFI	38
3.8.2	WIFI Test	39
3.8.3	BT	40
3.9	Ethernet	41
3.9.1	Configure to Static IP	41
3.9.2	Configure to DHCP	42
3.9.3	Ethernet Test	42
3.10	UART	43
	Table 3.2:	43
3.10.1	Configure Parameters	43
3.10.2	Send and receive data	43
3.11	GPIO	44
	Table 3.3:	44
3.12	RTC	44
3.13	Watchdog	45
3.13.1	Check watchdog device	45
3.13.2	Usage	45
3.14	PCIE	45
3.14.1	PCIE Mode Switch	45
3.14.2	PCIE Test	46
3.15	SATA	47
3.15.1	SATA Mode Switch	47
3.15.2	SATA Test	48
3.16	I2C PIN Header	50
	Table 3.4: I2C-PIN-Header	50
3.17	SPI PIN Header	50
3.18	Camera	50
	Table 3.5: MIPI-CSI camera ports	50
3.18.1	View Resolution	51
3.18.2	Set Resolution	51
3.18.3	Preview Camera	51
3.18.4	Camera Photography	51
3.18.5	Camera Screen Recording	52
3.19	HDMIRX	52
3.19.1	Check HDMIRX Information	52
3.19.2	Connect the Windows PC	53
3.19.3	Capturing Images	55
3.19.4	Other Tools	55
3.20	More Technical Support and Assistance	56

Chapter 4 System Recovery 57

4.1	Create “update.img”	58
4.2	Using SDDiskTool to Create upgrade SD	59
4.3	Upgrade or Recovery AOM-3821	60

Chapter 5 Advantech Services 61

5.1	RISC Design-In Services	62
-----	-------------------------------	----

5.2	Contact Information.....	65
5.3	Technical Support and Assistance.....	66
5.3.1	Warranty Policy.....	66
5.3.2	Repair Process	67

Chapter 1

General Introduction

This chapter gives background information on the AOM-3821.

Sections include:

- Introduction
- Specifications

1.1 Introduction

The Advantech AOM-3821 RTXe AI-on-Module is powered by a Rockchip RK3588 SoC which includes Quad Arm Cortex-A76 and Quad Cortex-A55 processors, 6Tops NPU and a high-performance Arm Mali-G610 3D graphics engine. It also provides a rich display interface supported with HDMI, DP, eDP to meet different display requirements. AOM-3821 offers various high-speed interfaces, including 2 x USB 3.0, 1 x PCIe3.0 x4, 2 x PCIe 2.1/SATA 3.0, 2 x GMAC, and 2 x 4 lanes MIPI CSI. These interfaces can meet a variety of high-rate transmission applications, Wi-Fi 6, and wireless 5G connectivity targeted at big data and other industrial applications.

The AOM-3821 is paired with the Advantech AOM-DB3500 RTXe development board for faster end-product peripheral integration and time-to-market. The reference schematics and layout checklist documentation for carrier board development will be provided along with the open-sourced Linux BSP, test utilities, hardware design utilities, and reference drivers.


1.2 Product Features

Form Factor	RTXe via BTB Connector	
Processor System	CPU	Rockchip RK3588 Arm Quad Cortex-A76 2.4GHz and Quad Cortex-A55 1.8GHz
	NPU	Up to 6.0 Tops Support: TensorFlow, Caffe, Tflite, Pytorch, Onnx NN, Android NN, etc.
Memory	Capacity	Onboard LPDDR4 up to 4/8GB
	Flash	32/64 GB eMMC NAND Flash for OS
Graphics	Graphics Engine	Arm Mali-G610 MP4 GPU, High performance OpenGL ES 1.1, 2.0 and 3.2, OpenCL 2.2, Vulkan 1.2 etc.
	H/W Video Codec	Decoder: H.265/VP9 8K@60fps, H.264 8K@30fps, H.263, VC-1, VP8, MVC, AV1, MPEG-4/2/1 Encoder: H.265/H.264 8K@30fps, Multi-channel encoder in parallel for less resolution
Display	Display out	1 x HDMI 2.0 1 x DP 1.4 (USB3.0 OTG/DP1.4 Alt of TYPEC) 1 x eDP
GMAC	Speed	2 x RGMII 10/100/1000 Mbps
RTC	RTC	Yes
Watch Dog Timer	Watch Dog Timer	HW watch dog by MCU. 0~65535s

PCIe/SATA	4 x PCIe 3.0, 2 x PCIe 2.1/SATA 3.0 (default PCIe, by SW Configuration)
USB	2 x USB 3.0 signal, 3 x USB 2.0, 1 x USB 3.0 OTG
Audio	2 x I2S
SDIO	1
SPI	2
I/O	1 x 2-wire UART for debug 1 x 2-wire UART 1 x 4-wire UART
UART	
ADC	2
CAN	-
GPIO/PWM	1
I2C	2
Camera Input	2 x MIPI CSI (4Lane)
Power	Power Supply Voltage
	5V+-5% DC-in
Environment	Operational Temperature
	0 ~ 70°C / -40 ~ 85°C
Mechanical	Dimensions (W x D)
	77 x 65 mm
Certifications	CE/FCC Class B
Operation System	Linux Debian12 & Android14

1.3 Mechanical Specifications

- Dimension: RTXe form factor size: (D x W) 77 x 65 mm
- Height on Top: 2 mm
- Height on Bottom: 1.5 mm

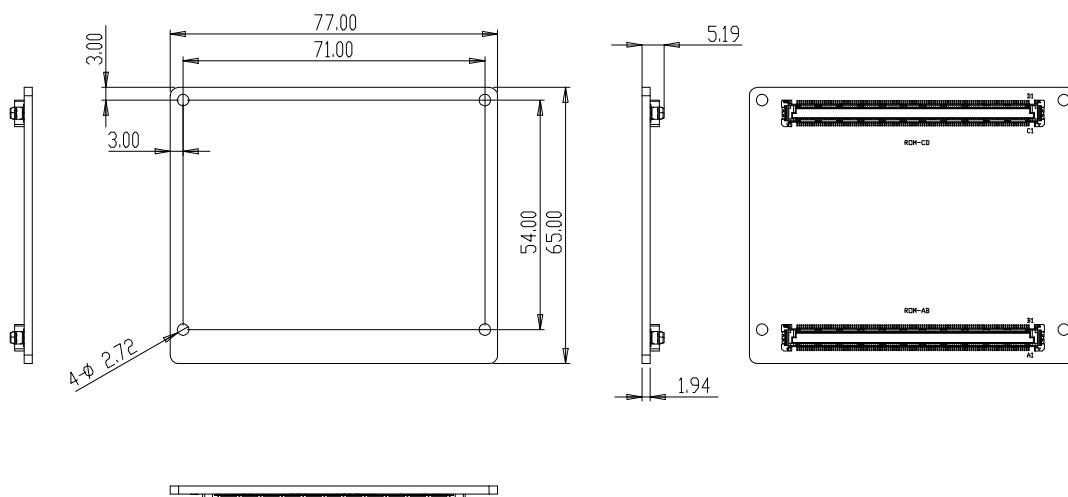

1.4 Electrical Specifications

- **Power Supply Voltage:** DC-in 5V+-5%
- **Power Supply Current:**

Table 1.1:

Model	Maximum mode	Kernel idle	Sleep mode
AOM-3821	7.61W	1.40W	0.07W

Test Conditions:

1. Test loading:
 - Maximum load mode: Running programs*
 - Idle mode: DUT power management off and no running any program
2. OS: Debian12

*Programs software: Burnin.sh (full loading for CPU+NPU+GPU+VPU)

1.5 Environmental Specifications

- **Operating Temperature:** 0 ~ 70 °C / -40 ~ 85 °C
- **Operating Humidity:** 40°C @ 95% relative humidity, non-condensing
- **Storage Temperature:** -40 ~ 85 °C
- **Storage Humidity:** 95% @ 60 °C

Chapter 2


H/W Installation

This chapter gives connector information on AOM-3821.

Sections include:

- Block Diagram
- Pin Definition
- Quick Start Guide

2.1 Block Diagram

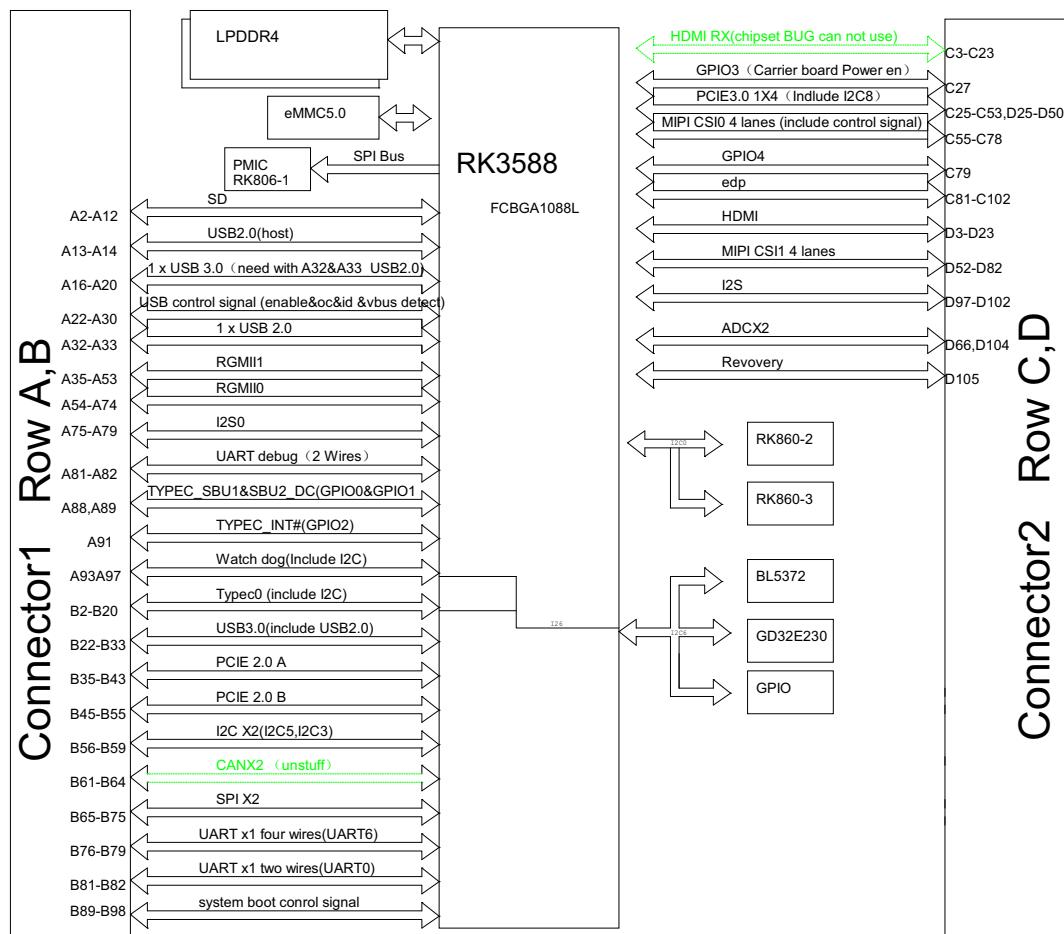

2.2 Pin Definition

Please refer to the 440 Pin RTXe pin definitions as detailed below:

Table 2.1: AOM-3821 Pin-out

A-Pin	A Side	I/F	AOM-3821 pin out
A1	GND	GND	GND
A2	SD0_CLK	SDIO	SD0_CLK
A3	SD0_CMD	SDIO	SD0_CMD
A4	SD0_D0	SDIO	SD0_D0
A5	SD0_D1	SDIO	SD0_D1
A6	SD0_D2	SDIO	SD0_D2
A7	SD0_D3	SDIO	SD0_D3
A8	SD0_CD#	SDIO	SD0_CD#
A9	SD0_VDD_EN	SDIO	SD0_VDD_EN
A10	SD0_IOPWR	SDIO	VCCIO_SD_S0
A11	GND	GND	GND
A12	SD0_WP	SDIO	N.C.
A13	USB0_D-	USB	USB0_D-
A14	USB0_D+	USB	USB0_D+
A15	GND	GND	GND
A16	USB3_A_SS_TX-	USB	USB3_A_SS_TX-
A17	USB3_A_SS_TX+	USB	USB3_A_SS_TX+
A18	GND	GND	GND
A19	USB3_A_SS_RX-	USB	USB3_A_SS_RX-
A20	USB3_A_SS_RX+	USB	USB3_A_SS_RX+
A21	GND	GND	GND
A22	TYPEC_OTG_VBUSDET	USB	TYPEC_OTG_VBUSDET
A23	USB1_HOST_PWR_EN	USB	USB1_HOST_PWR_EN
A24	USB1_HOST_OC#	USB	USB1_HOST_OC#
A25	USB0_HOST_PWR_EN	USB	USB0_HOST_PWR_EN
A26	USB0_HOST_OC#	USB	USB0_HOST_OC#
A27	USB0_OTG_PWR_EN	USB	USB0_OTG_PWR_EN
A28	USB0_OTG_OC#	USB	USB0_OTG_OC#
A29	USB0_OTG_ID	USB	USB0_OTG_ID
A30	USB0_OTG_VBUS_DET	USB	USB0_OTG_VBUS_DET
A31	GND	GND	GND
A32	USB0_OTG_D-	USB	USB0_OTG_D-
A33	USB0_OTG_D+	USB	USB0_OTG_D+
A34	GND	GND	GND
A35	GMAC0_TXD0	GMAC	GMAC1_TXD0
A36	GMAC0_TXD1	GMAC	GMAC1_TXD1
A37	GMAC0_TXD2	GMAC	GMAC1_TXD2
A38	GMAC0_TXD3	GMAC	GMAC1_TXD3
A39	GMAC0_TX_CTL	GMAC	GMAC1_TX_CTL
A40	GMAC0_TXC	GMAC	GMAC1_TXCLK
A41	GND	GND	GND
A42	GMAC0_RXD0	GMAC	GMAC1_RXD0
A43	GMAC0_RXD1	GMAC	GMAC1_RXD1

Table 2.1: AOM-3821 Pin-out

A44	GMAC0_RXD2	GMAC	GMAC1_RXD2
A45	GMAC0_RXD3	GMAC	GMAC1_RXD3
A46	GMAC0_RX_CTL	GMAC	GMAC1_RX_CTL
A47	GMAC0_RXC	GMAC	GMAC1_RXCLK
A48	GMAC0_RST#	GMAC	GMAC1_RST#
A49	GMAC0_MDIO	GMAC	GMAC1_MDIO
A50	GMAC0_MDC	GMAC	GMAC1_MDC
A51	GND	GND	GND
A52	INTB0#	GMAC	RTL1_INTB
A53	GMAC0_MCLK_IN	GMAC	GMAC1_MCLKINOUT
A54	GMAC1_MDIO	GMAC	GMAC0_MDIO
A55	GMAC1_MDC	GMAC	GMAC0_MDC
A56	GMAC1_MCLK_IN	GMAC	GMAC0_MCLKINOUT
A57	GND	GND	GND
A58	GMAC1_RXD0	GMAC	GMAC0_RXD0
A59	GMAC1_RXD1	GMAC	GMAC0_RXD1
A60	GND	GND	GND
A61	GMAC1_RXD2	GMAC	GMAC0_RXD2
A62	GMAC1_RXD3	GMAC	GMAC0_RXD3
A63	GMAC1_TX_CTL	GMAC	GMAC0_TX_CTL
A64	GMAC1_TXC	GMAC	GMAC0_TXCLK
A65	GMAC1_RXD0	GMAC	GMAC0_RXD0
A66	GND	GND	GND
A67	GMAC1_RXD1	GMAC	GMAC0_RXD1
A68	GMAC1_RXD2	GMAC	GMAC0_RXD2
A69	GMAC1_RXD3	GMAC	GMAC0_RXD3
A70	GND	GND	GND
A71	GMAC1_RX_CTL	GMAC	GMAC0_RX_CTL
A72	GMAC1_RXC	GMAC	GMAC0_RXCLK
A73	GMAC1_RST#	GMAC	GMAC0_RST#
A74	INTB1#	GMAC	RTL0_INTB
A75	I2S0_DIN/SPDIF_IN	I2S	I2S0_SDI0
A76	I2S1_DOUT/SPDIF_OUT	I2S	I2S0_SDO0
A77	I2S1_MCLK/SPDIF_EXT_CLK	I2S	I2S0_MCLK
A78	I2S1_LRCLK	I2S	I2S0_LRCK
A79	I2S1_BCLK	I2S	I2S0_SCLK
A80	GND	GND	GND
A81	UART0_TX (Debug)	UART	UART2_TX_M0_DEBUG
A82	UART0_RX (Debug)	UART	UART2_RX_M0_DEBUG
A83	UART0_RTS#	UART	N.C.
A84	UART0_CTS#	UART	N.C.
A85	BOOT_SEL0#	SYSTEM BOOT	N.C.
A86	BOOT_SEL1#	SYSTEM BOOT	N.C.
A87	BOOT_SEL2#	SYSTEM BOOT	N.C.

Table 2.1: AOM-3821 Pin-out

A88	GPIO0/ADC/PWM	GPIO	GPIO0_A0_d_GPIO0 (TYPEC_SBU1_DC)
A89	GPIO1/ADC/PWM	GPIO	GPIO3_C0_d_GPIO1 (TYPEC_SBU2_DC)
A90	GND	GND	GND
A91	GPIO2/ADC/PWM	GPIO	GPIO0_B2_u_G- PIO2(TYPEC_INT#)
A92	VCC_RTC	POWER	VDD_RTC
A93	WDT_OUT	WDT	WDT_OUT#
A94	WDT_EN	WDT	WDOG_EN_1V8
A95	WDT_TRG#	WDT	WDOG_TRIG#_1V8
A96	WDT_DATA	WDT	I2C6_SDA_M0
A97	WDT_CLK	WDT	I2C6_SCL_M0
A98	MASKROM	MASKROM	MASKROM#
A99	VCC	POWER	+VDD_IN_MXM
A100	GND	GND	GND
A101	VCC	POWER	+VDD_IN_MXM
A102	VCC	POWER	+VDD_IN_MXM
A103	VCC	POWER	+VDD_IN_MXM
A104	VCC	POWER	+VDD_IN_MXM
A105	VCC	POWER	+VDD_IN_MXM
A106	VCC	POWER	+VDD_IN_MXM
A107	VCC	POWER	+VDD_IN_MXM
A108	VCC	POWER	+VDD_IN_MXM
A109	VCC	POWER	+VDD_IN_MXM
A110	GND	GND	GND
P-Pin	B Side	I/F	AOM-3821 pin out
B1	GND	GND	GND
B2	TYPEC_SS_TX0-/DP0_D1-	USB	TYPEC0_SSTX1N
B3	TYPEC_SS_TX0+/DP0_D1+	USB	TYPEC0_SSTX1P
B4	GND	GND	GND
B5	TYPEC_SS_RX0-/DP0_D0-	USB	TYPEC0_SSRX1N
B6	TYPEC_SS_RX0+/DP0_D0+	USB	TYPEC0_SSRX1P
B7	GND	GND	GND
B8	TYPEC_SS_TX1-/DP0_D3-	USB	TYPEC0_SSTX2N
B9	TYPEC_SS_TX1+/DP0_D3+	USB	TYPEC0_SSTX2P
B10	NULL		N.C.
B11	GND	GND	GND
B12	TYPEC_SS_RX1-/DP0_D2-	USB	TYPEC0_SSRX2N
B13	TYPEC_SS_RX1+/DP0_D2+	USB	TYPEC0_SSRX2P
B14	GND	GND	GND
B15	TYPEC_OTG_D-	USB	TYPEC0_OTG_DM
B16	TYPEC_OTG_D+	USB	TYPEC0_OTG_DP
B17	GND	GND	GND
B18	TYPEC_SBU1/DP0_AUX+	USB	TYPEC0_SBU1
B19	TYPEC_SBU2/DP0_AUX-	USB	TYPEC0_SBU2
B20	TYPEC_OTG_ID	USB	USB0_OTG_ID_1V8

Table 2.1: AOM-3821 Pin-out

B21	GND	GND	GND
B22	USB3_B_SS_TX-	USB	USB3_B_SS_TX-
B23	USB3_B_SS_TX+	USB	USB3_B_SS_TX+
B24	GND	GND	GND
B25	USB3_B_SS_RX-	USB	USB3_B_SS_RX-
B26	USB3_B_SS_RX+	USB	USB3_B_SS_RX+
B27	GND	GND	GND
B28	I2C_TYPEC_DATA/DP0_AUX_SEL	I2C	I2C6_SDA_M0
B29	I2C_TYPEC_DATA/DP0_HPD	I2C	I2C6_SCL_M0
B30	PCIE20_A_REQ#/SATA0_ACT#	PCIe	N.C.
B31	GND	GND	GND
B32	USB1_D-	USB	USB1_D-
B33	USB1_D+	USB	USB1_D+
B34	GND	GND	GND
B35	PCIE20_A_TX-/SATA0_TX-/USB3_C_TX-	PCIe	PCIE20_A_TX-
B36	PCIE20_A_TX+/SATA0_TX+/USB3_C_TX+	PCIe	PCIE20_A_TX+
B37	GND	GND	GND
B38	PCIE20_A_RX-/SATA0_RX-/USB3_C_RX-	PCIe	PCIE20_A_RX-
B39	PCIE20_A_RX+/SATA0_RX+/USB3_C_RX+	PCIe	PCIE20_A_RX+
B40	PCIE20_A_RST#	PCIe	PCIE20_A_RST#
B41	GND	GND	GND
B42	PCIE20_A_CLK-	PCIe	PCIE20_A_CLK-
B43	PCIE20_A_CLK+	PCIe	PCIE20_A_CLK+
B44	GND	GND	GND
B45	PCIE20_B_TX-/SATA1_TX-/USB3_D_TX-	PCIe	PCIE20_B_TX-
B46	PCIE20_B_TX+/SATA1_TX+/USB3_D_TX+	PCIe	PCIE20_B_TX+
B47	GND	GND	GND
B48	PCIE20_B_RX-/SATA0_RX-/USB3_D_RX-	PCIe	PCIE20_B_RX-
B49	PCIE20_B_RX+/SATA0_RX+/USB3_D_RX+	PCIe	PCIE20_B_RX+
B50	PCIE20_B_RST#	PCIe	PCIE20_B_RST#
B51	GND	GND	GND
B52	PCIE20_B_CLK-	PCIe	PCIE20_B_CLK-
B53	PCIE20_B_CLK+	PCIe	PCIE20_B_CLK+
B54	GND	GND	GND
B55	PCIE20_B_REQ#/SATA1_ACT#	PCIe	N/A
B56	I2C0_CLK/I3C0_CLK	I2C	I2C5_SCL_M2
B57	I2C0_DAT/I3C0_DATA	I2C	I2C5_SDA_M2
B58	I2C1_CLK/I3C1_CLK	I2C	I2C3_SCL_M0
B59	I2C1_DAT/I3C1_DATA	I2C	I2C3_SDA_M0
B60	GND	GND	GND

Table 2.1: AOM-3821 Pin-out

B61	CAN0_TX	CAN	N.C.
B62	CAN0_RX	CAN	N.C.
B63	CAN1_TX	CAN	N.C.
B64	CAN1_RX	CAN	N.C.
B65	SPI0_CLK	SPI	SPI0_CLK
B66	SPI0_MISO	SPI	SPI0_MISO
B67	SPI0_MOSI	SPI	SPI0_MOSI
B68	SPI0_CS0#	SPI	SPI0_CS0
B69	SPI0_CS1#	SPI	SPI0_CS1
B70	GND	GND	GND
B71	SPI1_CLK	SPI	SPI1_CLK
B72	SPI1_MISO	SPI	SPI1_MISO
B73	SPI1_MOSI	SPI	SPI1_MOSI
B74	SPI1_CS0#	SPI	SPI1_CS0
B75	SPI1_CS1#	SPI	SPI1_CS1
B76	UART1_TX	UART	UART6_TX_M1
B77	UART1_RX	UART	UART6_RX_M1
B78	UART1_RTS#	UART	UART6_RTSN_M1
B79	UART1_CTS#	UART	UART6_CTSN_M1
B80	GND	GND	GND
B81	UART2_TX	UART	UART0_TX_M2
B82	UART2_RX	UART	UART0_RX_M2
B83	UART2_RTS#	UART	N.C.
B84	UART2_CTS#	UART	N.C.
B85	UART3_TX	UART	N.C.
B86	UART3_RX	UART	N.C.
B87	UART3_RTS#	UART	N.C.
B88	UART3_CTS#	UART	N.C.
B89	VCC_SEL	PM	VCC_SEL
B90	GND	GND	GND
B91	CB_PWR_EN	PM	CB_PWR_EN
B92	CB_PGOOD	PM	N.C.
B93	RESET_IN#	PM	RESET_IN#
B94	RESET_OUT#	PM	GPIO2_C4_d_RESET_OUT#
B95	PWR_BTN#	PM	POWER_BTN#
B96	HOST_PGOOD	PM	HOST_PGOOD
B97	SLEEP#	PM	N.C.
B98	WAKE#	PM	N.C.
B99	VCC	POWER	+VDD_IN_MXM
B100	GND	GND	GND
B101	VCC	POWER	+VDD_IN_MXM
B102	VCC	POWER	+VDD_IN_MXM
B103	VCC	POWER	+VDD_IN_MXM
B104	VCC	POWER	+VDD_IN_MXM
B105	VCC	POWER	+VDD_IN_MXM
B106	VCC	POWER	+VDD_IN_MXM
B107	VCC	POWER	+VDD_IN_MXM

Table 2.1: AOM-3821 Pin-out

B108	VCC	POWER	+VDD_IN_MXM
B109	VCC	POWER	+VDD_IN_MXM
B110	GND	GND	GND
P-Pin	C Side	I/F	AOM-3821 pin out
C1	GND	GND	GND
C2	GND	GND	GND
C3	CSI2_D0-/HDMI_RX_D0-	HDMI	HDMI_RX_D0N
C4	CSI2_D0+/HDMI_RX_D0+	HDMI	HDMI_RX_D0P
C5	GND	GND	GND
C6	CSI2_D1-/HDMI_RX_D1-	HDMI	HDMI_RX_D1N
C7	CSI2_D1+/HDMI_RX_D1+	HDMI	HDMI_RX_D1P
C8	GND	GND	GND
C9	CSI2_D2-/HDMI_RX_D2-	HDMI	HDMI_RX_D2N
C10	CSI2_D2+/HDMI_RX_D2+	HDMI	HDMI_RX_D2P
C11	GND	GND	GND
C12	CSI2_D3-/HDMI_RX_CK-	HDMI	HDMI_RX_CLKN
C13	CSI2_D3+/HDMI_RX_CK+	HDMI	HDMI_RX_CLKP
C14	GND	GND	GND
C15	CSI2_CK-/HDMI_RX_CEC	HDMI	GPIO3_D1_d/HDMI_RX_CEC
C16	CSI2_CK+/HDMI_RX_HPD	HDMI	HDMI_RX_HPD
C17	GND	GND	GND
C18	CSI2_RST#	CSI	N.C.
C19	CSI2_PWR#/HDMI_RX_DET#	HDMI	HDMI_RX_DET#
C20	CSI2_MCK	CSI	N.C.
C21	GND	GND	GND
C22	I2C_CSI2_DATA/CSI2_TX-/HDMI_SDA	HDMI	HDMI_RX_SDA_M1
C23	I2C_CSI2_CLK/CSI2_TX+/HDMI_SCL	HDMI	HDMI_RX_SCL_M1
C24	GND	GND	GND
C25	PCIE_SMCLK	PCIe	I2C8_SCL_M2
C26	PCIE_SMDAT	PCIe	I2C8_SDA_M2
C27	GPIO3/ADC/PWM	GPIO	GPIO0_C4_d_GPIO3
C28	GND	GND	GND
C29	PCIE30_C_TX-	PCIe	PCIE_C_TX-
C30	PCIE30_C_TX+	PCIe	PCIE_C_TX+
C31	GND	GND	GND
C32	PCIE30_C_RX-	PCIe	PCIE_C_RX-
C33	PCIE30_C_RX+	PCIe	PCIE_C_RX+
C34	GND	GND	GND
C35	PCIE30_C_CLK-	PCIe	PCIE30_PORTCD_REFCLK_N_IN_B2B
C36	PCIE30_C_CLK+	PCIe	PCIE30_PORTCD_REFCLK_P_IN_B2B
C37	GND	GND	GND
C38	PCIE30_C_RST#	PCIe	PCIE_C_RST#_1V8
C39	PCIE30_C_REQ#	PCIe	N.C.

Table 2.1: AOM-3821 Pin-out

C40	PCIE30_C_WAKE#	PCIe	PCIE_C_WAKE#_1V8
C41	GND	GND	GND
C42	PCIE30_D_TX-	PCIe	PCIE_D_TX-
C43	PCIE30_D_TX+	PCIe	PCIE_D_TX+
C44	GND	GND	GND
C45	PCIE30_D_RX-	PCIe	PCIE_D_RX-
C46	PCIE30_D_RX+	PCIe	PCIE_D_RX+
C47	GND	GND	GND
C48	PCIE30_D_RST#	PCIe	PCIE_D_RST#_1V8
C49	PCIE30_D_REQ#	PCIe	N.C.
C50	PCIE30_D_WAKE#	PCIe	N.C.
C51	GND	GND	GND
C52	PCIE30_C_CLK-	PCIe	N.C.
C53	PCIE30_C_CLK+	PCIe	N.C.
C54	GND	GND	GND
C55	CSI0_D0-/CSI00_D0-	CSI	MIPI_CSI0_RX_D0N
C56	CSI0_D0+/CSI00_D0+	CSI	MIPI_CSI0_RX_D0P
C57	GND	GND	GND
C58	CSI0_D1-/CSI00_D1-	CSI	MIPI_CSI0_RX_D1N
C59	CSI0_D1+/CSI00_D1+	CSI	MIPI_CSI0_RX_D1P
C60	GND	GND	GND
C61	CSI0_D2-/CSI01_D0-	CSI	MIPI_CSI0_RX_D2N
C62	CSI0_D2+/CSI01_D0+	CSI	MIPI_CSI0_RX_D2P
C63	GND	GND	GND
C64	CSI0_D3-/CSI01_D1-	CSI	MIPI_CSI0_RX_D3N
C65	CSI0_D3+/CSI01_D1+	CSI	MIPI_CSI0_RX_D3P
C66	GND	GND	GND
C67	CSI01_MCK	CSI	MIPI_CAMERA1_CLK_M0
C68	GND	GND	GND
C69	CSI02_MCK	CSI	N.C.
C70	GND	GND	GND
C71	CSI0_CK-	CSI	MIPI_DPHY_CSI1_RX_CLKN
C72	CSI0_CK+	CSI	MIPI_DPHY_CSI1_RX_CLKP
C73	GND	GND	GND
C74	CSI01_CK-	CSI	MIPI_CSI0_RX_CLK0N
C75	CSI01_CK+	CSI	MIPI_CSI0_RX_CLK0P
C76	GND	GND	GND
C77	CSI0_PWR#	CSI	CSI0_PWR#
C78	CSI0_RST#	CSI	CSI0_RST#
C79	GPIO4/ADC/PWM	GPIO	GPIO4_GPIO1_C6_d
C80	GND	GND	GND
C81	HDMI1_TX_CEC/EDP1_AUX-/DSI1_CLK-/LVDS1_CLK-	EDP	eDP1_AUX-
C82	HDMI1_TX_HPD/EDP1_AUX+/DSI1_CLK+/LVDS1_CLK+	EDP	eDP1_AUX+
C83	EDP1_HPD/DP1_HPD/DSI1_TE	EDP	eDP1_HPD
C84	GND	GND	GND

Table 2.1: AOM-3821 Pin-out

C85	HDMI1_TX_D0-/EDP1_TX0-/DSI1_D0-/LVDS1_D0-	EDP	eDP1_TX0-
C86	HDMI1_TX_D0+/EDP1_TX0+/DSI1_D0+/LVDS1_D0+	EDP	eDP1_TX0+
C87	GND	GND	GND
C88	HDMI1_TX_D1-/EDP1_TX1-/DSI1_D1-/LVDS1_D1-	EDP	eDP1_TX1-
C89	HDMI1_TX_D1+/EDP1_TX1+/DSI1_D1+/LVDS1_D1+	EDP	eDP1_TX1+
C90	GND	GND	GND
C91	HDMI1_TX_D2-/EDP1_TX2-/DSI1_D2-/LVDS1_D2-	EDP	eDP1_TX2-
C92	HDMI1_TX_D2+/EDP1_TX2+/DSI1_D2+/LVDS1_D2+	EDP	eDP1_TX2+
C93	GND	GND	GND
C94	HDMI1_TX_D3-/EDP1_TX3-/DSI1_D3-/LVDS1_D3-	EDP	eDP1_TX3-
C95	HDMI1_TX_D3+/EDP1_TX3+/DSI1_D3+/LVDS1_D3+	EDP	eDP1_TX3+
C96	GND	GND	GND
C97	HDMI1_TX_SCL/EDP1_CLK/DSI1_CLK/LVDS1_CLK	EDP	I2C3_SCL_M0
C98	HDMI1_TX_DAT/EDP1_DAT/DSI1_DAT/LVDS1_DAT	EDP	I2C3_SDA_M0
C99	EDP1_BKLT_EN/DSI_LCD_B-KLT_EN/LVDS1_BKLT_EN	EDP	eDP1_BKLT_EN
C100	GND	GND	GND
C101	EDP1_VDD_EN/DP1_AUX_SEL/DSI1_LCD_VDD_EN	EDP	eDP1_VDD_EN
C102	EDP1_BKLT_PWM/DSI1_LCD_BKLT_PWM/LVDS_PWM	EDP	eDP1_BKLT_PWM
C103	GND	GND	GND
C104	SD1_D0	SD	N.C.
C105	SD1_D1	SD	N.C.
C106	SD1_D2	SD	N.C.
C107	SD1_D3	SD	N.C.
C108	SD1_WP	SD	N.C.
C109	SD1_CLK	SD	N.C.
C110	GND	GND	GND
P-Pin	D Side	I/F	AOM-3821 pin out
D1	GND	GND	GND
D2	GND	GND	GND
D3	HDMI0_TX_D0-/EDP0_TX0-/DSI0_D0-/LVDS0_D0-	HDMI	HDMI_D0-
D4	HDMI0_TX_D0+/EDP0_TX0+/DSI0_D0+/LVDS0_D0+	HDMI	HDMI_D0+
D5	GND	GND?	GND
D6	HDMI0_TX_D1-/EDP0_TX1-/DSI0_D1-/LVDS0_D1-	HDMI	HDMI_D1-

Table 2.1: AOM-3821 Pin-out

D7	HDMI0_TX_D1+/EDP0_TX1+/ DSI0_D1+/LVDS0_D1+	HDMI	HDMI_D1+
D8	GND	GND	GND
D9	HDMI0_TX_D2-/EDP0_TX2-/ DSI0_D2-/LVDS0_D2-	HDMI	HDMI_D2-
D10	HDMI0_TX_D2+/EDP0_TX2+/ DSI0_D2+/LVDS0_D2+	HDMI	HDMI_D2+
D11	GND	GND	GND
D12	HDMI0_TX_CK-/EDP0_TX3-/ DSI0_D3-/LVDS0_D3-	HDMI	HDMI_CK-
D13	HDMI0_TX_CK+/EDP0_TX3+/ DSI0_D3+/LVDS0_D3+	HDMI	HDMI_CK+
D14	GND	GND	GND
D15	HDMI_TX_DDC_SCL/ EDP0_I2C_CLK/DSI0_I2C_CLK	HDMI	HDMI_TX0_SCL_M0
D16	HDMI_TX_DDC_SDA/ EDP0_I2C_DAT/DSI0_I2C_DAT	HDMI	HDMI_TX0_SDA_M0
D17	HDMI0_TX_CEC/DP0_AUX_- SEL/DSI0/LVDS_VDD_EN	HDMI	HDMI0_TX_CEC
D18	EDP0_BKLT_EN/DSI0_LCD_B- KLT_EN/LVDS_BKLT_EN		N.C.
D19	EDP0_BKLT_PWM/DSI0_BKLT/ LVDS_BKLT_PWM		N.C.
D20	HDMI0_TX_HPD/EDP0_HPD/ DP0_HPD/DSI0_TE	HDMI	HDMITX0_HPDIN_M0
D21	GND	GND	GND
D22	HDMI0_EARC-/EDP0_AUX-/ DSI_CLK-/LVDS0_CK-	HDMI	N.C.
D23	HDMI0_EARC+/EDP0_AUX+/ DSI_CLK+/LVDS0_CK+	HDMI	N.C.
D24	GND	GND	GND
D25	PCIE30_B_TX-	PCIE	PCIE_B_TX-
D26	PCIE30_B_TX+	PCIE	PCIE_B_TX+
D27	GND	GND	GND
D28	PCIE30_B_RST#	PCIE	PCIE_B_RST#_1V8
D29	PCIE30_B_REQ#	PCIE	PCIE_B_CKREQ#_1V8
D30	PCIE30_B_WAKE#	PCIE	PCIE_B_WAKE#_1V8
D31	GND	GND	GND
D32	PCIE30_B_RX-	PCIE	PCIE_B_RX-
D33	PCIE30_B_RX+	PCIE	PCIE_B_RX+
D34	GND	GND	GND
D35	PCIE30_B_CLK-	PCIE	N.C.
D36	PCIE30_B_CLK+	PCIE	N.C.
D37	GND	GND	GND
D38	PCIE30_A_TX-	PCIE	PCIE_A_TX-
D39	PCIE30_A_TX+	PCIE	PCIE_A_TX+
D40	NULL	N/A	N.C.
D41	GND	GND	GND
D42	PCIE30_A_RX-	PCIE	PCIE_A_RX-
D43	PCIE30_A_RX+	PCIE	PCIE_A_RX+

Table 2.1: AOM-3821 Pin-out

D44	GND	GND	GND
D45	PCIE30_A_CLK-	PCIE	PCIE30_PORTAB_REFCLK-N_IN_B2B
D46	PCIE30_A_CLK+	PCIE	PCIE30_PORTAB_REFCLK-P_IN_B2B
D47	GND	GND	GND
D48	PCIE30_A_RST#	PCIE	PCIE_A_RST#_1V8
D49	PCIE30_A_REQ#	PCIE	PCIE_A_CKREQ#_1V8
D50	PCIE30_A_WAKE#	PCIE	PCIE_A_WAKE#_1V8
D51	GND	GND	GND
D52	CSI1_D0-	CSI	MIPI_CSI1_RX_D0N
D53	CSI1_D0+	CSI	MIPI_CSI1_RX_D0P
D54	GND	GND	GND
D55	CSI1_D1-	CSI	MIPI_CSI1_RX_D1N
D56	CSI1_D1+	CSI	MIPI_CSI1_RX_D1P
D57	GND	GND	GND
D58	CSI1_D2-	CSI	MIPI_CSI1_RX_D2N
D59	CSI1_D2+	CSI	MIPI_CSI1_RX_D2P
D60	GND	GND	GND
D61	CSI1_D3-	CSI	MIPI_CSI1_RX_D3N
D62	CSI1_D3+	CSI	MIPI_CSI1_RX_D3P
D63	GND	GND	GND
D64	CSI1_PWR#	CSI	CAM1_PWR#
D65	CSI1_RST#	CSI	CAM1_RST#
D66	GPIO5/ADC/PWM	GPIO	ADC1
D67	GND	GND	GND
D68	CSI1_CK-	CSI	MIPI_CSI1_RX_CLK0N
D69	CSI1_CK+	CSI	MIPI_CSI1_RX_CLK0P
D70	GND	GND	GND
D71	CSI11_CK-	CSI	MIPI_CSI1_CLK1_D1N
D72	CSI11_CK+	CSI	MIPI_CSI1_CLK1_D1P
D73	GND	GND	GND
D74	I2C_CSI0_CLK/CSI0_TX+	CSI	I2C4_SCL_M1
D75	I2C_CSI0_DATA/CSI0_TX-	CSI	I2C4_SDA_M1
D76	GND	GND	GND
D77	CSI11_MCK	CSI	MIPI_CAMERA2_CLK_M0
D78	GND	GND	GND
D79	CSI12_MCK	CSI	N.C.
D80	GND	GND	GND
D81	I2C_CSI1_CLK/CSI1_TX+	CSI	I2C8_SCL_M2
D82	I2C_CSI1_DATA/CSI1_TX-	CSI	I2C8_SDA_M2
D83	NULL	N/A	N.C.
D84	GND	GND	GND
D85	RESERVED	N/A	N.C.
D86	RESERVED	N/A	N.C.
D87	GND	GND	GND
D88	RESERVED	N/A	N.C.

Table 2.1: AOM-3821 Pin-out

D89	RESERVED	N/A	N.C.
D90	GND	GND	GND
D91	RESERVED	N/A	N.C.
D92	RESERVED	N/A	N.C.
D93	GND	GND	GND
D94	RESERVED	N/A	N.C.
D95	RESERVED	N/A	N.C.
D96	GND	GND	GND
D97	I2S1_MCLK	I2S	I2S1_MCLK_M0
D98	I2S1_LRCLK	I2S	I2S1_LRCK_M0
D99	I2S1_BCLK	I2S	I2S1_SCLK_M0
D100	GND	GND	GND
D101	I2S2_DIN	I2S	I2S1_SDI0_M0
D102	I2S1_DOUT	I2S	I2S1_SDO0_M0
D103	GND	GND	GND
D104	GPIO6/ADC/PWM	GPIO	ADC2
D105	GPIO7/ADC/PWM/RECOVERY	GPIO	FORCE_RECov#
D106	SD1_VDD_EN	SD	N.C.
D107	SD1_IOPWR	SD	N.C.
D108	SD1_CMD	SD	N.C.
D109	SD1_CD#	SD	N.C.
D110	GND	GND	GND

2.3 Quick Start Guide

2.3.1 Debug Port Connection

1. Connect the debug port cable on AOM-DB3500.
2. Connect it to your PC with a USB to COM Cable.

2.3.2 Debug Port Settings

AOM-3821 can communicate with a host server using serial cables. Common serial communication programs such as HyperTerminal, Tera Term, or PuTTY can be used in this case. The example below describes the serial terminal setup using HyperTerminal on a Windows host:

1. Connect AOM-3821 with your PC using a serial cable.
2. Open HyperTerminal on your Windows PC, and select the settings demonstrated in the photo below.
3. Insert a power adapter into the DC jack and power up the board. The Debug console log will be displayed on the terminal screen.





2.3.3 AOM-3821 on AOM-DB3500 Jumper, Switch Settings

When using AOM-3821 with the carrier board AOM-DB3500, please follow the below jumper and switch settings.

Table 2.2: AOM-3821 on AOM-DB3500 Jumper/Switch List

Connector/Jumper/ Switch	Function
CN3	Header for GPIO Test
J28/J26/J25/J27/J31/ J37/J32	GPIO&ADC Selection
J15	EDP Power Selection Header
J16	EDP Inverter Power Selection Header
J12	EDP1 Detect Selection Header
J5/J6	SPI0&SPI1 Selection
J8	M2_E1 Power Selection Header
J10	M.2_B Power Selection Header
J9	UART switch M2_E1&M2_E2
J7/J35/J36	USB2.0 connect to Type A(USB1/2) or MICRO_USB
SW2/SW3	USB0_OTG&USB0_Host power en & oc Selection
SW1	Mode setting

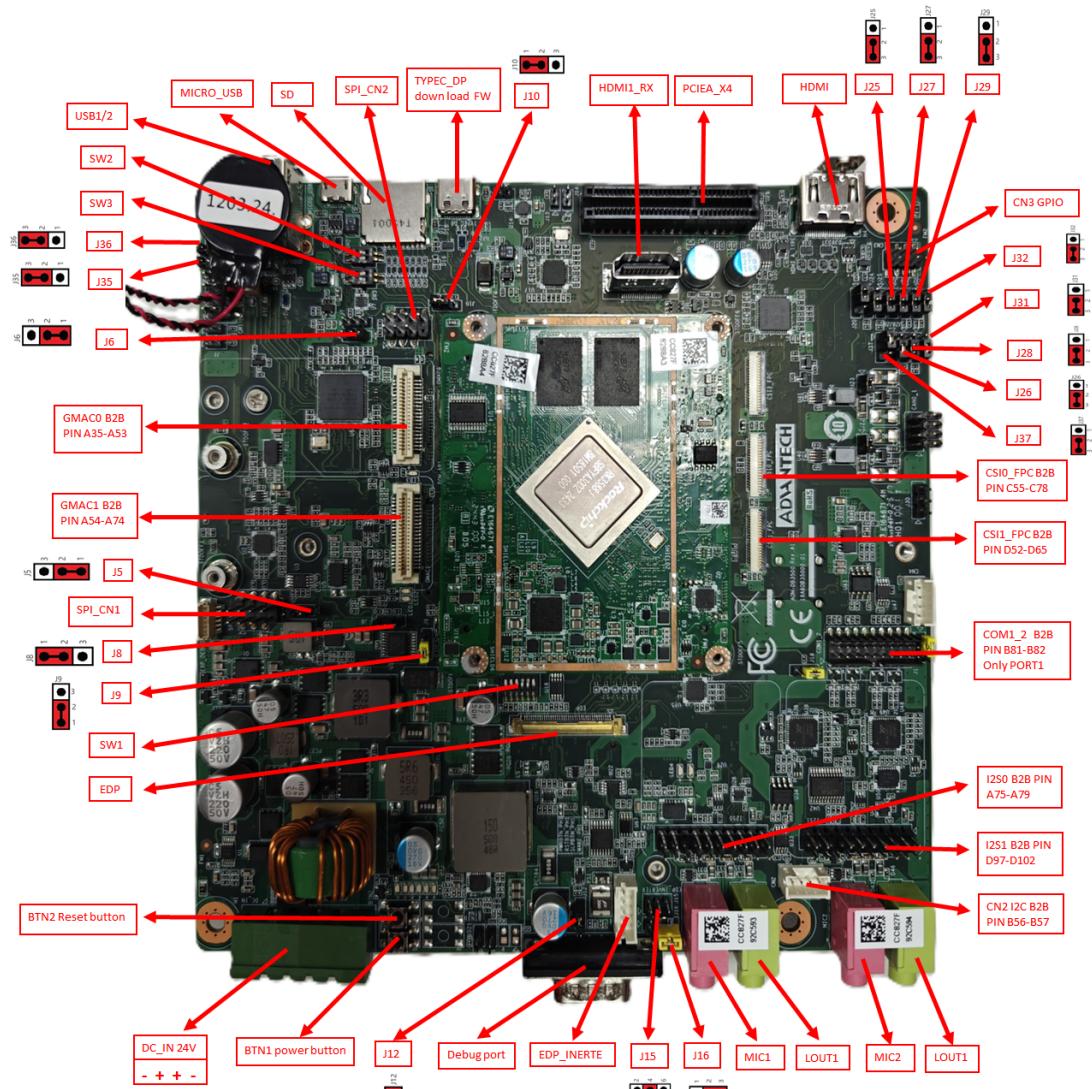


Figure 2.2 AOM-3821&AOM-DB3500 Top View

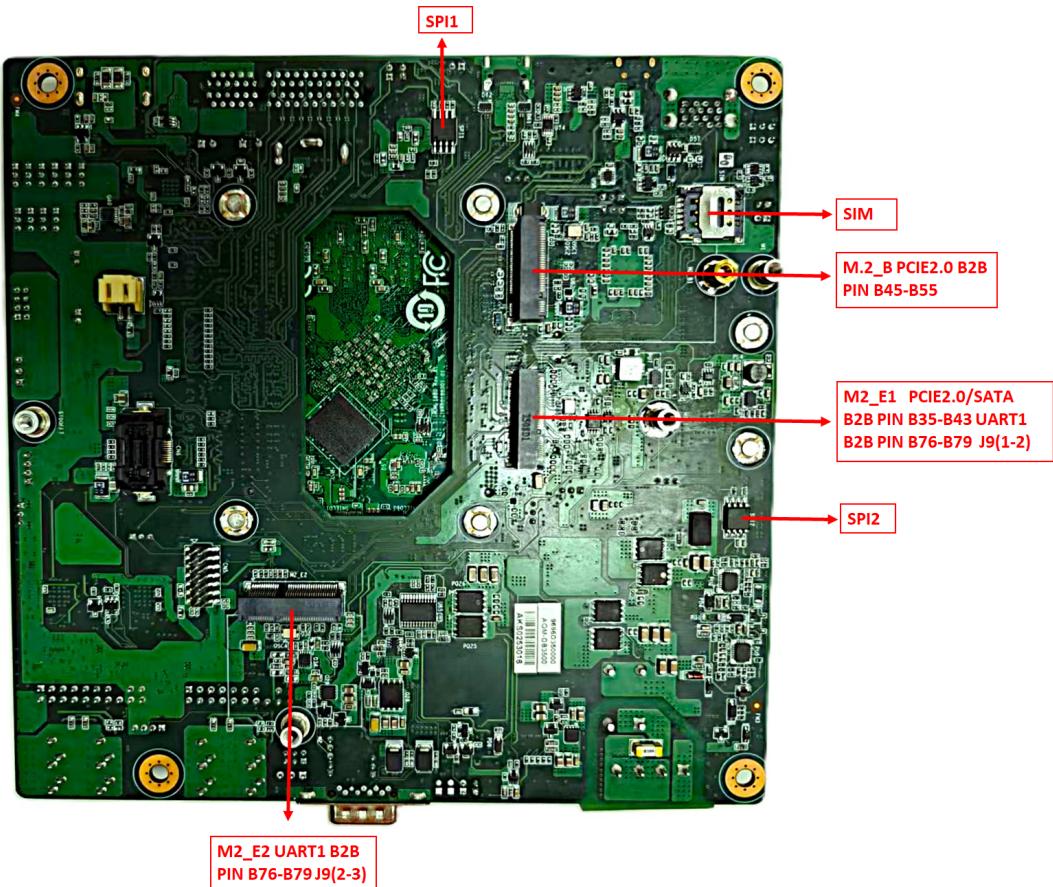


Figure 2.3 AOM-3821&AOM-DB3500 Bottom View

2.3.3.1 GPIO Header and Selection

Table 2.3: CN3 GPIO Headers

Pin	Signal	Pin	Signal
1	+V1.8	2	GND
3	GPIO0_Z_G	4	GPIO4_G
5	GPIO1_Z_G	6	GPIO5_G
7	GPIO7_G	8	GPIO6_G

 
Table 2.4: J28 GPIO0 Headers

Pin	Function
J28 (1-2)	ADC (AOM-3821 not support)
J28 (2-3)	GPIO0 to J26 (Default)

 


Table 2.5: J26 GPIO0 Selection

 
Pin	Function
J26 (1-2)	GPIO0 to CN3
J26 (2-3)	GPIO0 to TYPEC_Z_SBU1 (Default)

**Table 2.6: J25 GPIO1 Selection**

Pin	Function
J25 (1-2)	ADC (AOM-3821 not support)
J25 (2-3)	GPIO1 to J27 (Default)

**Table 2.7: J27 GPIO1 Selection**

Pin	Function
J27 (1-2)	GPIO1 to CN3
J27 (2-3)	GPIO1 to TYPEC_Z_SBU2 (Default)

**Table 2.8: J31 GPIO4 Selection**

Pin	Function
J31 (2-3)	GPIO4 to J37 (Default)

 


Table 2.9: J37 GPIO4 Selection

Pin	Function
J37(1-2)	GPIO4 to CN3 (Default)

**Table 2.10: J32 ADC1 Selection**

Pin	Function
J32 (2-3)	ADC1 (Default)

**Table 2.11: J29 ADC2 Selection**


Pin	Function
J29 (2-3)	ADC2 (Default)



2.3.3.2 J15 EDP Power Selection

Table 2.12: J15 EDP Power Selection

Pin	Function
J15 (1-3)	+VDD_EDP 5V
J15 (3-5)	+VDD_EDP 3.3V (Default)
J15 (3-4)	+VDD_EDP 12V (edp B156XTN07.1)

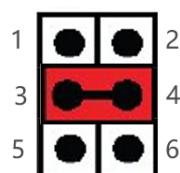

2.3.3.3 J16 Inverter Power Selection

Table 2.13: J16 Inverter Power Selection


Pin	Function
J16 (1-2)	EDP Inverter PWR 5V
J16 (2-3)	EDP Inverter PWR 12V (Default)



2.3.3.4 J12 EDP Inverter Power Selection

Table 2.14: J12 EDP Inverter Power Selection

Pin	Function
J12 (1-2)	LVDS&DSI (AOM-3821 not support)
J12 (2-3)	EDP HDP

 

2.3.3.5 SPI1 Jumper Setting

Table 2.15: SPI1 Jumper Setting

Pin	Function
J6 (1-2)	SPI0 to SPI1 flash (Default)
J6 (2-3)	SPI0 to SPI_CN2



2.3.3.6 SPI1 J5 Jumper Setting

Table 2.16: SPI1 J5 Jumper Setting

Pin	Function
J5 (1-2)	SPI1 to SPI1 flash (Default)
J5 (2-3)	SPI1 to SPI_CN1



2.3.3.7 J8 M2_E1 Power Setting

Table 2.17: J8 M2_E1 Power Setting

Pin	Function
J8 (1-2)	M2_E1 power 3.3V (Default)
J8 (2-3)	M2_E1 power 3.8V



2.3.3.8 J10 M.2_B Power Setting

Table 2.18: J10 M.2_B Power Setting

Pin	Function
J10 (1-2)	M.2_B power 3.3V (Default)
J10 (2-3)	M.2_B power 3.8V



2.3.3.9 J9 M.2_B Power Setting

Table 2.19: J9 M.2_B Power Setting


Pin	Function
J9 (1-2)	(B2B pin B76-B79) to M2_E1 (Default)
J9 (2-3)	UART1 (B2B pin B76-B79) to M2_E2



2.3.3.10 SW2 &SW3 USB0_OTG& USB0_HOST power &OS Setting

Table 2.20: SW2 &SW3


Dip Switch	1-4	2-3	Function
SW2	ON	OFF	USB0_OTG_PWR_EN control USB1/2 +USBV1 power,SW3 Need SW3(1-4 OFF,2-3 ON)
SW2	OFF	ON	USB0_HOST_PWR_EN control USB1/2 +USBV1 power Need SW3(1-4 ON,2-3 OFF)
SW3	ON	OFF	USB0_HOST_OC#, Need SW2(1-4 OFF, 2-3 ON)
SW3	OFF	ON	USB0_OTG_OC#

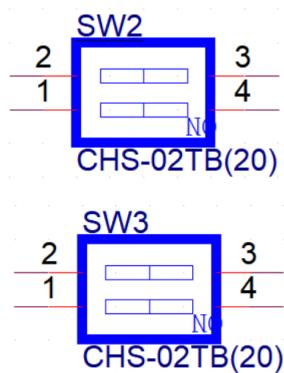

2.3.3.11 J7, J35, J36 USB0 & USB0_OTG Setting

Table 2.21: J7, J35, J36 USB0 & USB0_OTG Setting


Pin	Function
J7(Nojumper)J35(2-3)	USB0_OTG (B2B A32-A33) to USB1/2
J7(No jumper)J36(2-3)	USB0 Host to MICRO_USB

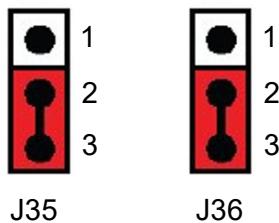

2.3.3.12 SW1 Setting

Table 2.22: SW1 Setting

Switch	Function
1-12/2-11/3-10/6-7	No function for AOM-3821 + AOM-DB3500
4-9(Default Off)	When the eMMC has an OS, AOM-3821 can start up and enter the OS normally. When there is no OS in the eMMC of the AOM-3821, it enters MASKROM mode. You can burn the OS into the eMMC through the TYPEC_DP of the AOM-DB3500. Switch to ON; regardless of whether there is an OS in the eMMC of the AOM-3821, the board will enter MASKROM mode. You have to switch it to off, and then burn the OS into the eMMC through the TYPEC_DP of AOM-DB3500.
5-8 ON	Recovery mode

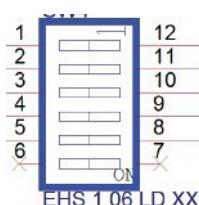

Chapter 3

Software Functionality

This chapter details the software programs on the AOM-3821.

3.1 Preface

All test tools must be verified using the AOM-3821 evaluation kit (Develop. Board AOM-DB3500). Please prepare the required test fixtures before verifying each specified I/O. If you have any problems during testing, please contact Advantech for help.

Table 3.1:

Support List	Description	Part No.
Audio	ALC5640-VB-CGT Audio Codec	9696EG57001
LAN	RTL8211FS-CG LAN Board	9696EG6A000
4G	EM05CNFD-128-SGAS M.2 3042 (M.2 Key-B) USB2.0	968DD00443
5G	RM520NGLAA-M20-SGASA (M.2 KeyB) USB3.1/PCIE3.0	968DD00342
WIFI6	RTL8852BE, (M.2 KeyE) Wifi6: PCIe + BT5.2: USB	EWM-W179M201E
WIFI6	Broadcom AP6275P, (M.2 E Key)- 40°C~85°C PCIE+UART	AIW-162BS-GI1
Camera	MIPI Camera IMX415	ROM-EC50+ CRK8F4403-V1
SPI/I2C	SPI/I2C Board	9696EG70000
eDP Panel	B156XTN07.1,1366 x 768, AUO	XUTC-B156XTN07.1

3.2 Command Introduction

All the commands in this document should be input after the operating system boots up and under "root" user if no special notice.

The terminal may look like the following tip.

```
root@linaro-alip:#
```

If the user is not "root", use the following command to change to "root"

```
linaro@linaro-alip:$  
linaro@linaro-alip:$ sudo su root  
root@linaro-alip:#
```

3.2.1 Command Format

1. Commands in single line start with “#” :

```
# command
```

Copy and run commands without “#”

2. Commands in multi-lines :

First line starts with “#” and ends with “\”

Next line starts with “ ” and ends with “\”

Last line starts with “ ” and ends with “ ”

```
# command1 \
command2 \
command3 \
command4
```

Copy and run multi-line commands without “#” simultaneously.

3. Annotations in single line start with “# #----” and end with “----# #” :

```
# #---- annotations ----# #
```

3.3 Debian Desktop Operating System

AOM-3821 is embedded Debian Desktop operating system. It can be easily used.

3.3.1 User and Password


AOM-3821 has two users: root/linaro and their passwords are “123456” by default.

After the Debian Desktop system boots up, it will automatically log in to the “linaro” user.


If there is a debugging serial port connected, the serial terminal automatically logs in to the “root” user.

3.3.2 Find Application

1. You can find an application in “Applications”.

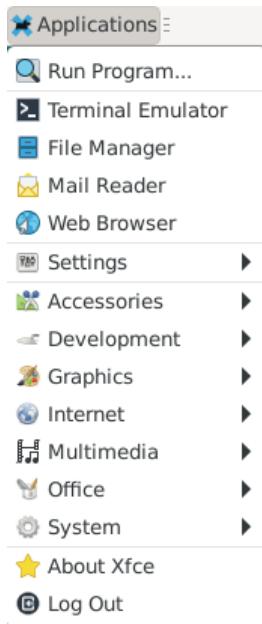

2. Alternatively, you can search for it in the “Application Finder” list.

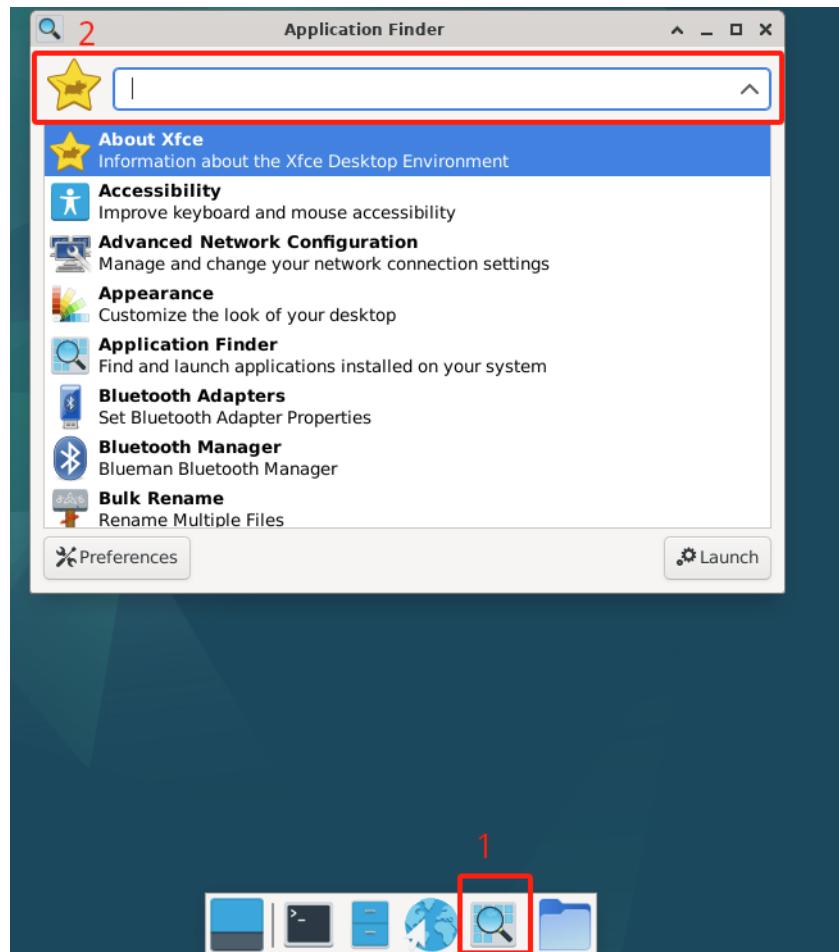


3.4 HDMI/DP screen

HDMI and DP support multi resolutions. They can be configured by GUI. HDMI and DP support 4K60Hz display.

3.4.1 Configure Resolution for HDMI/DP screen

1. Click “Applications” -> “Settings”->“Display”.
2. Choose “HDMI-1”or “DP-1”, then choose “Resolution”.
3. Click “Apply”.

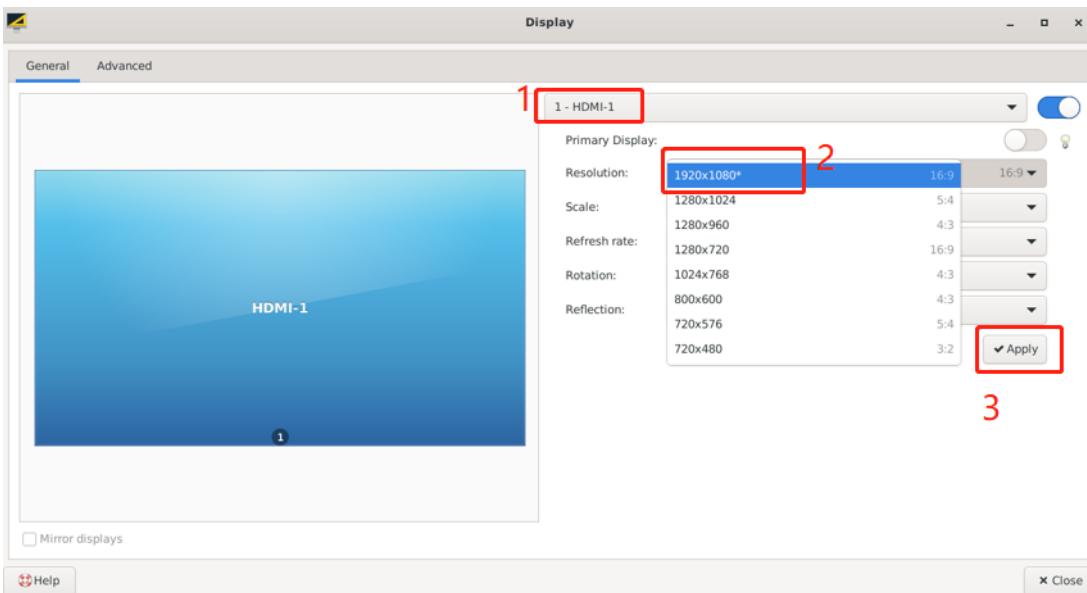

3.5 Multi-Display

AOM-3821 supports three kinds of displays — HDMI, eDP, DP.

Note! 1. DP physical interface is Type-C



2. DP is always open and cannot be closed

3.5.1 Dual-Display

“HDMI + DP” is the default configuration.

■ HDMI + DP

```
# fw_setenv display0 hdmi0-default
# fw_setenv display1
# fw_setenv display2
# fw_setenv display3
# reboot
```

■ eDP + DP

```
# fw_setenv display0
# fw_setenv display1 edp1-1366x768
# fw_setenv display2
# fw_setenv display3
# reboot
```

3.5.2 Triple-Display

■ HDMI + eDP + DP

```
# fw_setenv display0 hdmi0-default
# fw_setenv display1 edp1-1366x768
# fw_setenv display2
# fw_setenv display3
# reboot
```


3.6 Audio

AOM-3821 supports three kinds of sound cards:

- “1 rt5640-codec”(9696EG57001)
- “2 hdmi”,
- “3 dp0”.


Set the default audio output when playing media files.

1. Click “Applications” ->“Multimedia”->“PulseAudio Volume Control”.
2. Select “Build-in Audio stereo” for rt5640-codec output, or select “HDMI” for HDMI output, or select “Build-in Audio Display Port 1 Stereo” for DP output.

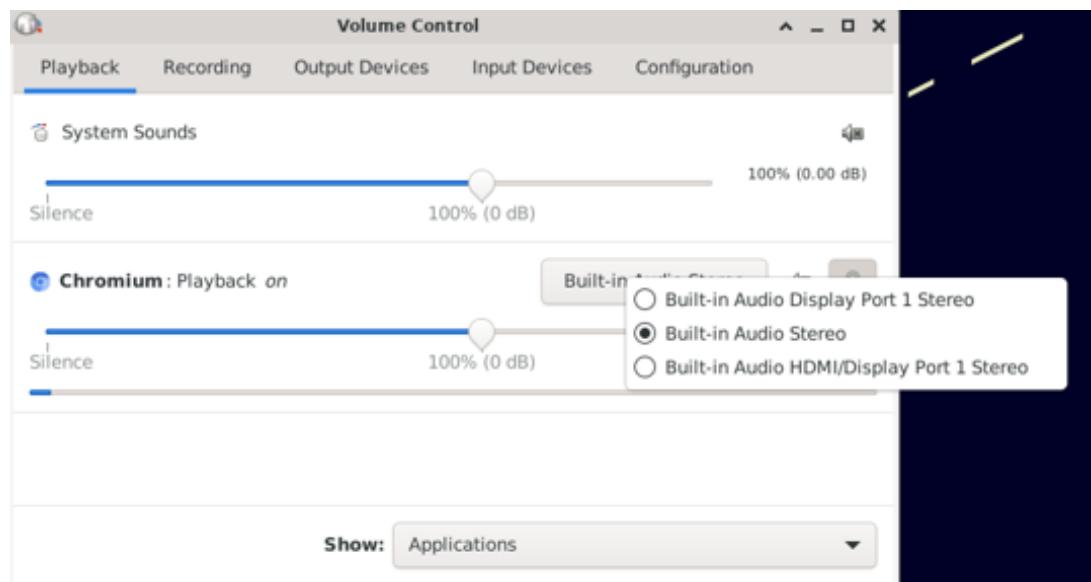

3.6.1 Mute and Volume control

Mute and volume can be configured by GUI.

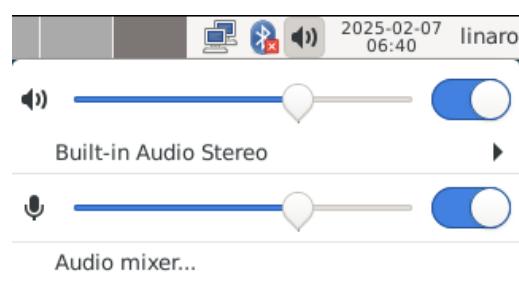

3.6.2 Audio Test

1. Get sound card ID

```
# cat /proc/asound/cards
0 [rockchiphdmiin ]: rockchip_hdmiin - rockchip,hdmiin
                      rockchip,hdmiin
1 [rockchiprt5640c]: simple-card - rockchip,rt5640-codec
                      rockchip,rt5640-codec
2 [rockchiphdmi0 ]: rockchip-hdmi0 - rockchip-hdmi0
                      rockchip-hdmi0
3 [rockchipdp0 ]: rockchip-dp0 - rockchip-dp0
                      rockchip-dp0
```

2. Record

Take Card ID 1 for example:

```
# arecord -Dplughw:1,0 -f S16_LE -r 16000 -d 10 -t wav test.wav
```

3. Playback

Take Card ID 1 for example:

```
# aplay -Dplughw:1,0 -t wav test.wav
```

See details of the usage of “aplay”:

```
# aplay --help
...
-D, --device=NAME      select PCM by name
-t, --file-type TYPE   file type (voc, wav, raw or au)
...
```

3.7 4G/5G

AOM-3821 supports EM05CNFD-128-SGAS and RM520NGLAA.

3.7.1 Configure 4G/5G


STEP 1: Power off the device, then insert 4G/5G module and SIM card.

Note! Make sure the device is power off before insert 4G/5G module and SIM card, otherwise the device, 4G/5G module and/or SIM card may be damaged.


STEP 2: Power on the device, Click network connection icon ,




Then choose "New Mobile Broadband connection".

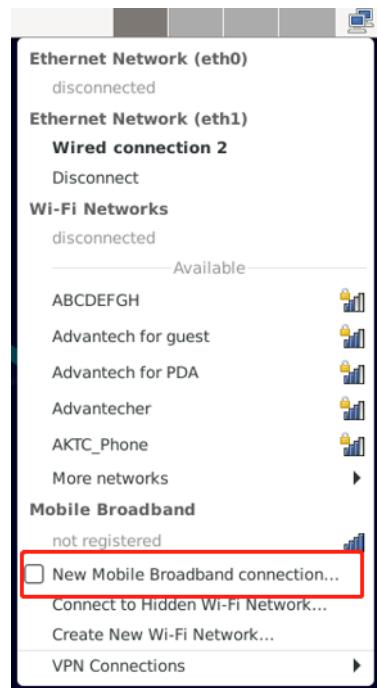


Then you will see the following window, click "Next" button to the next step.

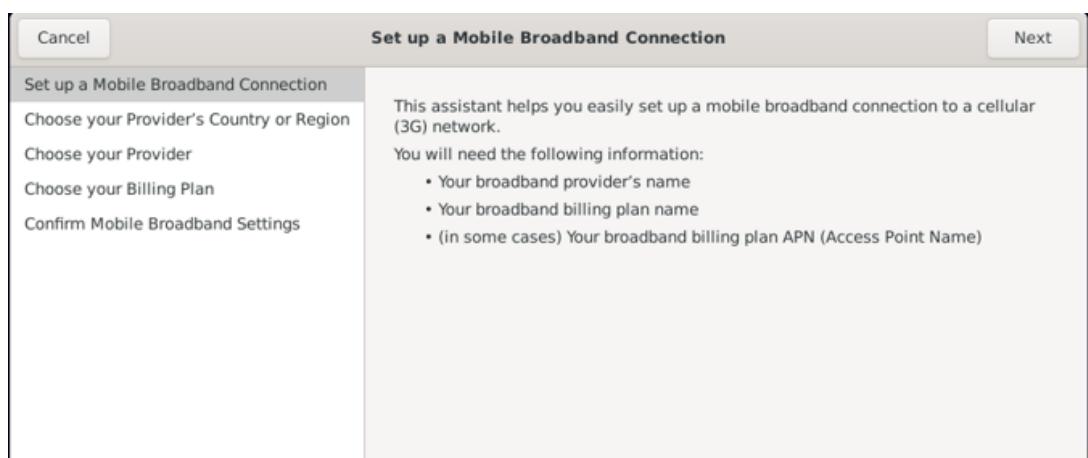


STEP 3: Choose Provider's country or region of the SIM card you insert in STEP0.

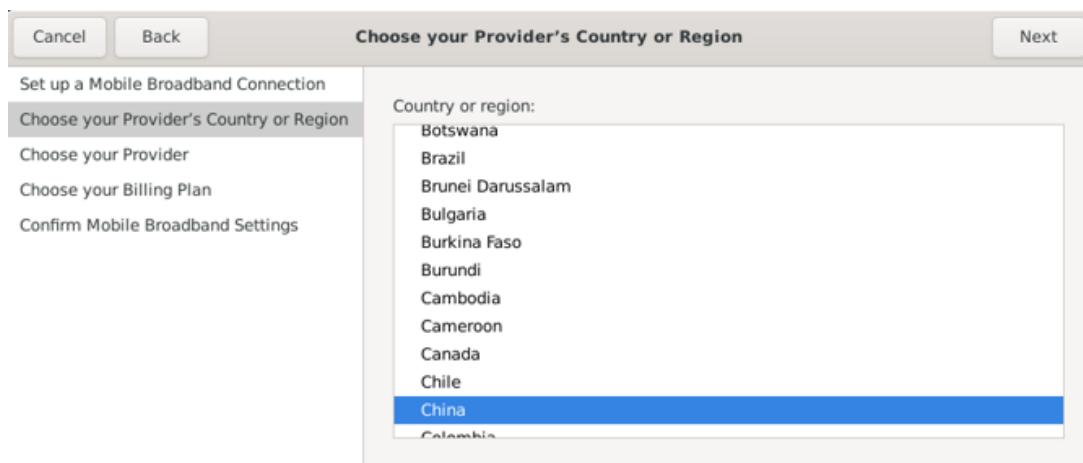

STEP 4: Choose or Set the Provider's name.

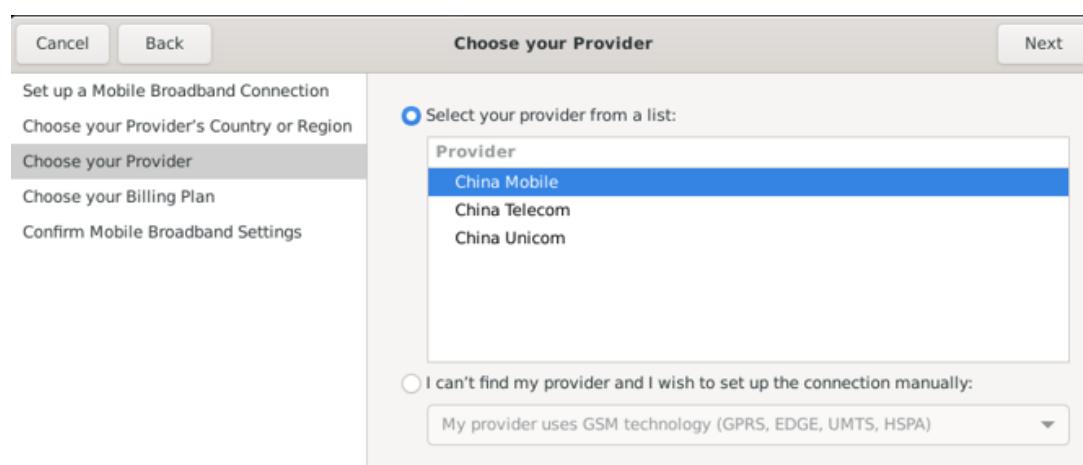

STEP 5: Choose or Set APN.

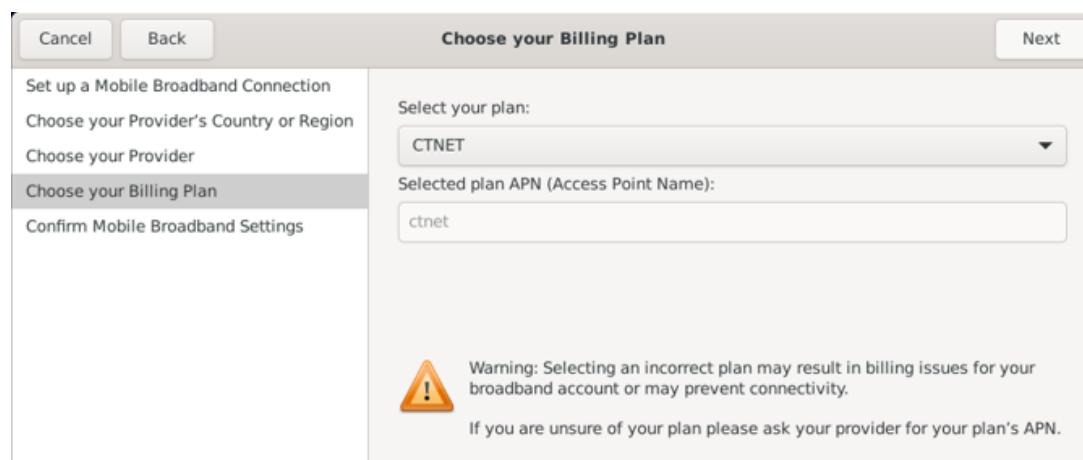

STEP 6: Confirm your config and finish.



3.7.2 4G/5G Test

After connection, 4G/5G will create a net point "wwan0".


```
# ping -I wwan0 www.advantech.com
```

3.8 WIFI/BT

AOM-3821 supports EWM-W179M201E and AIW-162BS-GI1.

3.8.1 Configure WIFI


1. Click the network icon in the top right corner of the screen and click the line of "Available networks" to select a Wi-Fi connection(for example, Advantech for guest).

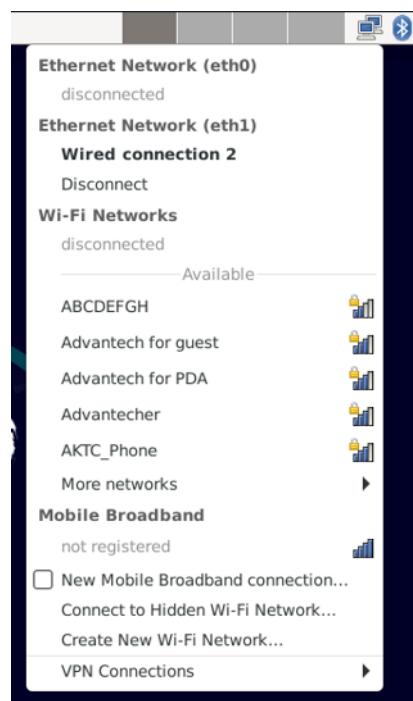

2. Enter the Wi-Fi password to connect to the device.



3. If the password is correct, the device will connect quickly.

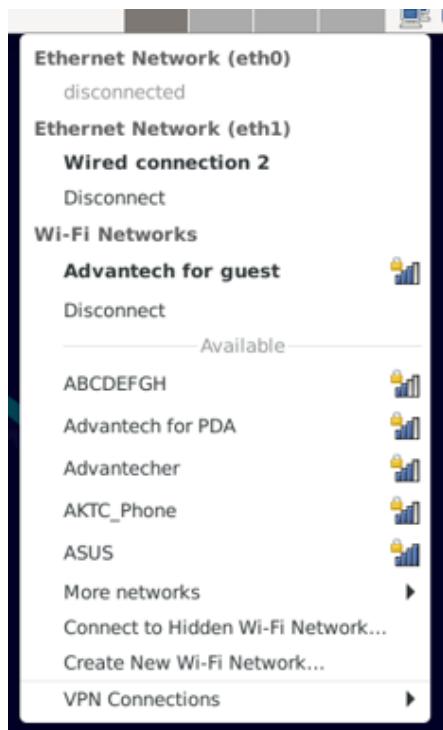


3.8.2 WIFI Test

After connection, Wi-Fi will create a net point “wlan0”.


```
# ping -I wwan0 www.advantech.com
```

3.8.3 BT


1. Click “Applications” -> “Settings”-> “Bluetooth manager”. Click the “Search” button to search for Bluetooth devices.

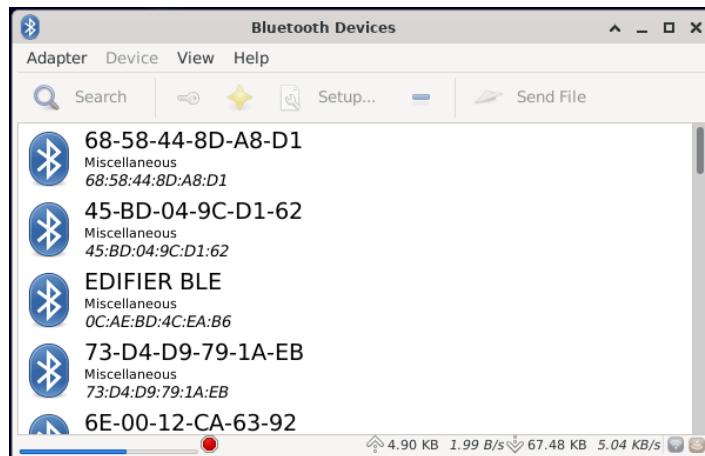

2. Right-click to select a device, such as “jt-TianYi510Pro-14IMB”, and send a file.

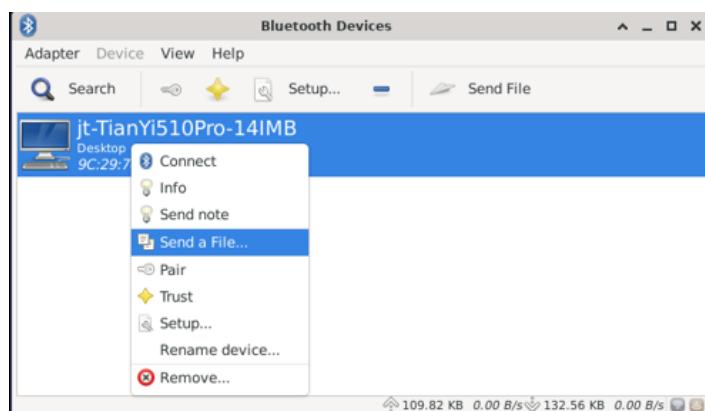

3. AOM-3821 will start sending files when the receiver device, such as “jt-TianYi510Pro-14IMB”, confirms bluetooth reception.

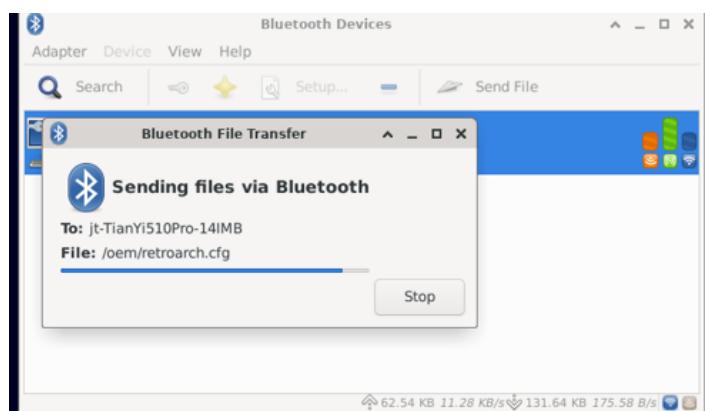


3.9 Ethernet


AOM-3821 supports two Ethernet ports (via 9696EG6A000): eth0/eth1. All ports are using the “DHCP” mode by default. The following configurations and tests are taking eth0 as an example.

3.9.1 Configure to Static IP

1. Click “Applications” -> “Settings” -> “Advanced Network Configuration”.

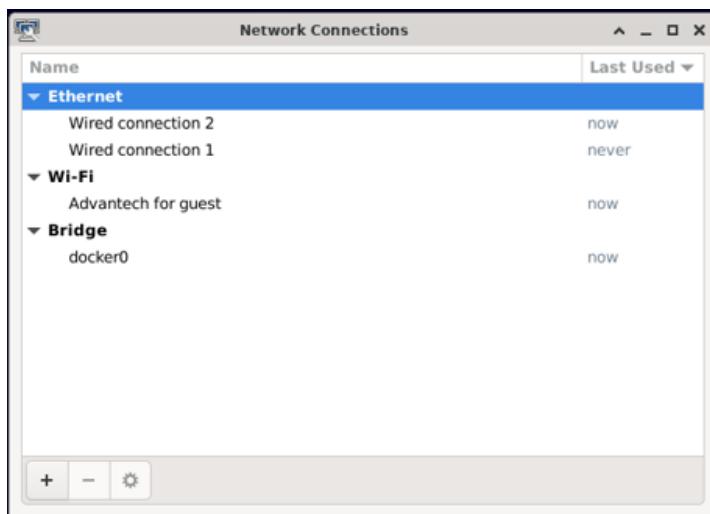


2. Double-click “Wired Connection 1” to configure it.

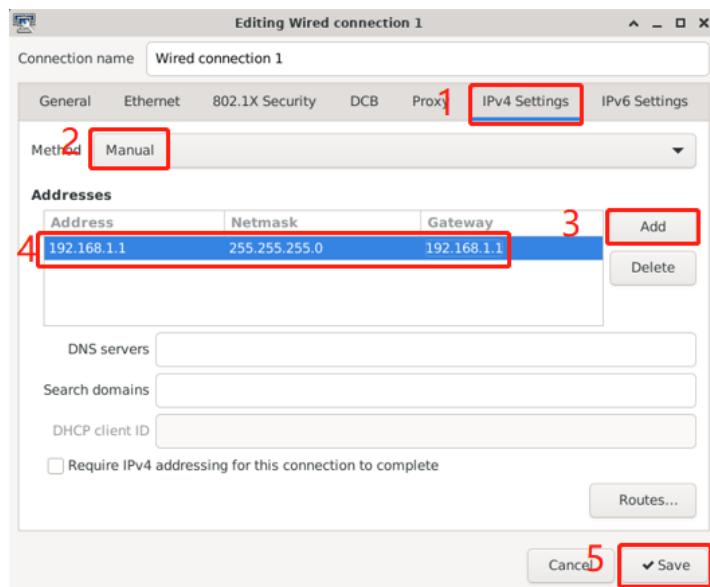


3.9.2 Configure to DHCP

1. Click “Applications” -> “Settings -> “Advanced Network Configuration”.

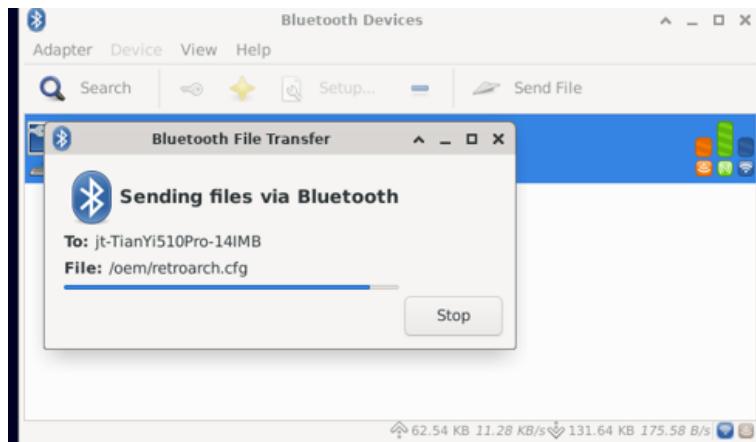

2. Double-click “Wired Connection 1” to configure it.

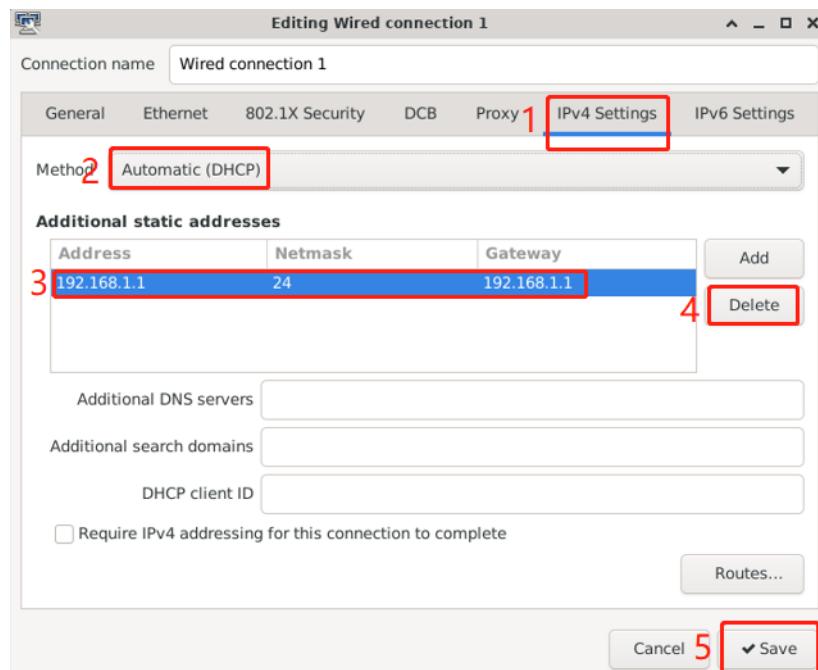

3.9.3 Ethernet Test

After connection, Ethernet will create a net point “eth0”, “eth1”.

```
# ----- Test eth0 -----#
# ping -I eth0 www.advantech.com

# ----- Test eth1 -----#
# ping -I eth1 www.advantech.com
```

3.10 UART

User Debian/Linux UART/serial port access is through the tty-devices. The tty-devices have different names depending on UART drivers for different boards.

Table 3.2:

Device Node	COM Port Name
/dev/ttyFIQ0	Debug
/dev/ttyS0	COM1(RS232 2-wire)
/dev/ttyS6	M.2_E1(UART)

3.10.1 Configure Parameters

Use “stty” command to configure serial port parameters. The commonly used parameters include “Baud rate”, “Data bits”, “Stop bits”, “Parity”, “Flow control”.

See details of the usage of “stty”:

```
# stty --help
...
csN      set character size to N bits, N in [5..8]
[-]cstopb  use two stop bits per character (one with '-')
[-]parenb  generate parity bit in output and expect parity bit in input
[-]crtscs  enable RTS/CTS handshaking
...
```

For example, set COM1
 “Baud rate” to 115200
 “Data bits” to 8
 “Stop bits” to 1
 “Parity” to None
 “Flow control” to None

```
# stty -F /dev/ttyS0 115200 cs8 -parenb -cstopb
```

3.10.2 Send and receive data

Taking COM1 as receiver or sender (An external COM is required to do the sending or receiving). For example, AOM-3821 is responsible for receiving and inputting instructions. The PC computer is connected via a cable and COM1. The PC computer uses the PuTTY serial port tool, opens the COM port, configures the baud rate to 115200, data bits to 8, stop bits to 1, parity to none, flow control to none, and sends "pass" to the serial port assistant. If no error, the external COM receiver will receive "pass".

```
# ----- COM1 as receiver -----# #
# stty -F /dev/ttyS0 115200 cs8 -cstopb -parenb
# cat /dev/ttyS0 &

# ----- COM1 as sender -----# #
# stty -F /dev/ttyS0 115200 cs8 -cstopb -parenb
# echo pass > /dev/ttyS0

# -----If no error, the external COM receiver will receive "pass"-----# #
pass
```

Note! 1. Receiver should run before sender.



2. The "serial port parameters" should be the same for sender and receiver.

3.11 GPIO

The RK3588 bank/bit notation for GPIOs must be formed as

"GPIO<GPIO_bank>_<gpio_bit>"

The numeric value of GPIO is calculated as follows:

32 x (gpio_bank) + gpio_bit

gpio_bit: A0~A7 0-7 B0~B7 8-15 C0~C7 16-23 D0~D7 24-31

E.g. GPIO3_A0 becomes 96

Table 3.3:

GPIO Number	GPIO formed	Numeric Representation
GPIO4	GPIO1_C6	54

Export GPIO then you can use control GPIO from user space through sysfs.

- Export GPIO

```
# echo 54 > /sys/class/gpio/export
```

- Set GPIO direction to in/out

```
# echo "out" > /sys/class/gpio/gpio54/direction
```

- Set GPIO value 0/1 if GPIO pin define is output

```
# echo 1 > /sys/class/gpio/gpio54/value
```

- Unexport GPIO

```
# echo 54 > /sys/class/gpio/export
```

3.12 RTC

Set the system to the current time then set the RTC.

```
# date 021710452016 && hwclock -w && date
Wed Feb 17 10:45:00 UTC 2016
Wed Feb 17 10:45:01 UTC 2016
```

Set one incorrect time, then read RTC to verify.

```
# date 010100002000 && hwclock -r && date
Sat Jan 1 12:00:00 AM UTC 2000
2016-02-17 10:45:14.178208+00:00
Sat Jan 1 12:00:00 AM UTC 2000
```

Restore the RTC time to system time.

```
# hwclock -s && date
Wed Feb 17 10:45:30 AM UTC 2016
```

3.13 Watchdog

A Watchdog Timer (WDT) is a hardware circuit that can reset the computer system in case of a software fault.

AOM-3821 supports one external watchdog.

The default value of timeout is 60 seconds, and it can be set from 1 second to 6527 seconds.

3.13.1 Check watchdog device

List watchdog device.

```
# ls /dev/watchdog
/dev/watchdog
```

3.13.2 Usage

Here are two ways to use watchdog:

1. Use “echo” command|

Writing any character except the specific magic character 'V' will open the watchdog, and write once before the timeout (60 seconds by default) passes, otherwise the system will reboot.

```
# echo A > /dev/watchdog
```

Writing the specific magic character 'V' to stop the watchdog.

```
# echo V > /dev/watchdog
```

2. Write a program using “ioctl”

See more details in [BSP]/kernel/Documentation/watchdog/watchdog-api.rst

- 3.

3.14 PCIE

AOM-3821 supports three PCIE ports.

Using the PCIE disk (SQF-C8BV2-128G-EDE) to test the M.2_B-Key PCIE interface.

Using the WIFI module (EWM-W179M201E) to test the M.2_E-Key PCIE interface.

Using NVMe (UGREEN KB-SA0093-A1 + JZ-SSD256G-5) to test PCIEX4 interface.

3.14.1 PCIE Mode Switch

PCIE and SATA are alternative, M.2 Interface commands for setting PCIe mode.

1. M.2_E-KEY PCIe Mode

```
# fw_setenv combphy0 pcie
# reboot
```

2. M.2_B-KEY PCIe Mode

```
# fw_setenv combphy1 pcie
# reboot
```

3.14.2 PCIE Test

M.2_B-KEY PCIE TEST Preparation:

- Insert PCIE disk.



Note!

1. *Make sure the device is power off before insert PCIE disk, otherwise the device and/or PCIE disk may be damaged.*
2. *Make sure PCIE disk is partitioned and formatted.*

- List disk information.

```
# fdisk -l /dev/nvme0n1
Disk /dev/nvme0n1: 119.24 GiB, 128035676160 bytes, 250069680 sectors
Disk model: SQF-C8BV2-128G-EDE
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disklabel type: dos
Disk identifier: 0x217a69bc

Device           Boot Start      End  Sectors  Size Id Type
/dev/nvme0n1p1      2048 250069679 250067632 119.2G 83 Linux
```

- Check mount point

```
# mount | grep nvme
/dev/nvme0n1p1 on /run/media/nvme0n1p1 type ext4 (rw,relatime)
```

- **Speed Test**
Read Speed.

```
# echo 3 > /proc/sys/vm/drop_caches
# dd if=/dev/nvme0n1 of=/dev/zero bs=1M count=400
400+0 records in
400+0 records out
419430400 bytes (419 MB, 400 MiB) copied, 0.728982 s, 575 MB/s
```

Write Speed

```
# echo 3 > /proc/sys/vm/drop_caches
# dd if=/dev/zero of=/dev/nvme0n1 bs=1M count=400
400+0 records in
400+0 records out
419430400 bytes (419 MB, 400 MiB) copied, 0.915896 s, 458 MB/s
```

M.2_E-KEY PCIE TEST:

- Please refer to Section 3.8 for the connection of the WIFI module EWM-W179M201E. If the WIFI function works properly, it indicates that the PCIE function is normal and in use.

PCIE X 4 TEST:

- Insert NVMe SSD.

Note!

- 1. *Make sure the device is power off before insert PCIE disk, otherwise the device and/or PCIE disk may be damaged.*
- 2. *Make sure PCIE disk is partitioned and formatted.*

- Check mount point

```
# mount | grep nvme
/dev/nvme0n1p1 on /run/media/nvme0n1p1 type ext4 (rw,relatime)
```

- **Speed Test.**
Read Speed

```
# echo 3 > /proc/sys/vm/drop_caches
# dd if=/dev/nvme0n1 of=/dev/zero bs=1M count=400
400+0 records in
400+0 records out
419430400 bytes (419 MB, 400 MiB) copied, 0.226504 s, 1.9 GB/s
```

Write Speed

```
# echo 3 > /proc/sys/vm/drop_caches
# dd if=/dev/zero of=/dev/nvme0n1 bs=1M count=400
400+0 records in
400+0 records out
419430400 bytes (419 MB, 400 MiB) copied, 0.314809 s, 1.3 GB/s
```

3.15 SATA

AOM-3821 supports 2 x PCIe 2.1/SATA 3.0, default PCIe, you can set SATA by SW Configuration.

1. M.2_E-KEY SATA Mode

```
# fw_setenv combphy0 sata  
# reboot
```

2. M.2_B-KEY SATA Mode

```
# fw_setenv combphy1 sata  
# reboot
```

3.16 I²C PIN Header

AOM-3821 has two I2C-PIN-Header channels.

Table 3.4: I2C-PIN-Header

I2C Number	Bus Number	I2C Address	AOM-DB3500 Number
I2C0	5	0x51	CN2
I2C1	3	0x51	CN4

Using EG70 Test Board to read I2C flash. Using I2C0 as an example:

```
# i2cdetect -y 5  
 0 1 2 3 4 5 6 7 8 9 a b c d e f  
00:          -- -- -- -- -- -- -- -- -- --  
10:          -- -- -- -- -- -- -- -- -- --  
20:          -- -- -- -- -- -- UU -- -- -- -- --  
30:          -- -- -- -- -- -- -- -- -- -- -- --  
40:          -- -- -- -- -- -- -- -- -- -- -- --  
50:          51 -- 53 -- -- -- -- -- -- -- -- --  
60:          -- -- -- -- -- -- -- -- -- -- -- --  
70:          -- 71 -- -- -- -- -- -- -- -- --  
# i2ctransfer -y 5 w4@0x51 0x1f 0xf0 0x22 0x33  
# i2ctransfer -y 5 w2@0x51 0x1f 0xf0 r2  
0x22 0x33
```

3.17 SPI PIN Header

AOM-3821 has two SPI-PIN-Header channels. SPIs on AOM-DB3500 have multi-functions, change to SPI PIN Header.

Using EG70 Test Board to read SPI flash.

Test one SPI port alternatively:

```
# cat /proc/mtd | grep -c mtd01
```

Test two SPI ports at the same time:

```
# cat /proc/mtd | grep -c mtd11
```

3.18 Camera

AOM-3821 has two MIPI-CSI camera ports.

Table 3.5: MIPI-CSI camera ports		Table 3.6:	
Camera Number	Video Port	Note	AOM-DB3500 Number
Camera 1	22	(I2C 4) 4 Lane	CSI0_FPC
Camera 2	31	(I2C 8) 4 Lane	CSI1_FPC

3.18.1 View Resolution

Taking port 22 as an example, you can enter the following instructions to view information such as the resolution, pixel format, Field, Number of planes, Flags, Colorspace, Transfer Function, YCbCr/HSV Encoding, Quantization, Bytes per Line and Size Image.

```
# v4l2-ctl -d /dev/video22 --get-fmt-video
Format Video Capture Multiplanar:
    Width/Height      : 3840/2160
    Pixel Format      : 'NV12' (Y/UV 4:2:0)
    Field             : None
    Number of planes  : 1
    Flags             :
    Colorspace        : sRGB
    Transfer Function : Rec. 709
    YCbCr/HSV Encoding: Rec. 709
    Quantization      : Full Range
    Plane 0           :
        Bytes per Line : 3840
        Size Image     : 12441600
```

3.18.2 Set Resolution

Taking port 22 as an example, you can enter the following commands to set the resolution to 1920*1080.

```
# v4l2-ctl -d /dev/video22 --set-fmt-video=width=1920,height=1080,\pixel-
format='NV12'
```

3.18.3 Preview Camera

Taking port 22 as an example, you can set the preview of the camera video by using the following command.

```
# export DISPLAY=:0.0
# export LD_LIBRARY_PATH=$LD_LIBRARY_PATH:/usr/lib/aarch64-linux-gnu/
gstreamer-1.0
#gst-launch-1.0 v4l2src device=/dev/video22 \! video/x-raw,for-
mat=NV12,width=1920,height=1080,framerate=30/1 \! xvimagesink
```

3.18.4 Camera Photography

Taking port 22 as an example, the following command can be used to take a camera photo, and the save address is picture.jpg in the current directory

```
# gst-launch-1.0 v4l2src device=/dev/video22 num-buffers=1 \
! video/x-raw,format=NV12,width=1920,height=1080 ! jpegenc ! filesink loca-
tion= picture.jpg
```

3.18.5 Camera Screen Recording

Taking port 22 as an example, the following command can be used to record videos with the camera, and the save address is video.mp4 in the current directory.

```
# gst-launch-1.0 -e \
v4l2src device=/dev/video22 \
! video/x-raw,format=NV12,width=1920,height=1080,framerate=25/1 \
! videoconvert \
! x264enc bitrate=5000 speed-preset=ultrafast tune=zerolatency \
! h264parse \
! mp4mux \
! filesink location= video.mp4
```

3.19 ADC PIN Header

AOM-3821 has two ADC channels. According to the hardware specification, the user needs to modify the connection status of the jumper on the substrate, adjust it to position 2-3.

Table 3.7: ADC PIN Header

Device Name	ADC Port Pin
ADC1	J32 (2-3)
ADC2	J29 (2-3)

Test one ADC1 port.

```
# cat /sys/bus/iio/devices/iio\:device0/in_voltage3_raw
4089
```

Test one ADC2 port.

```
# cat /sys/bus/iio/devices/iio\:device0/in_voltage4_raw
4095
```

The value collected by ADC is not a fixed value. The figures in the manual are for reference only.


3.20 More Technical Support and Assistance

Click on the screenshot or link below to get more information about Advantech Arm computing products.



ESS-WIKI (advantech.com.tw)
<http://ess-wiki.advantech.com.tw/view/RISC>

Also, you can post your questions or queries on our AIM-Linux community. Click on the screenshot or link below to join us now.

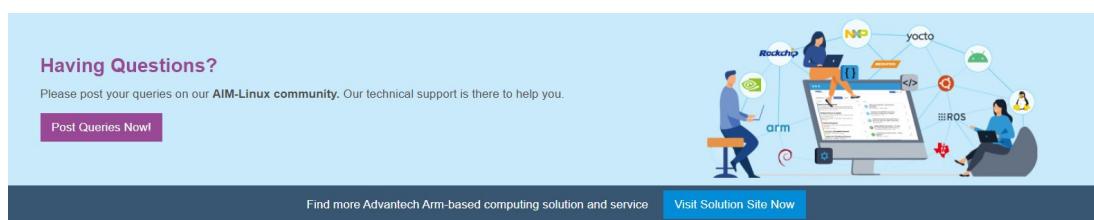

Advantech AIM-Linux Community - Welcome to the Advantech AIM-Linux Community!

<https://forum.aim-linux.advantech.com>

Chapter 4

System Recovery

This chapter introduces how to recover the Linux operating system if it is damaged accidentally.

4.1 Create “update.img”

1. Download Release Image to PC (Windows OS).
2. Decompress the Image, double click mkupdate.bat in folder “rockdev”.

名称	修改日期	类型	大小
image	2023/6/9 17:53	文件夹	
AFPTool.exe	2023/6/9 16:52	应用程序	229 KB
mkupdate.bat	2023/6/9 16:52	Windows 批处理文件	1 KB
package-file	2023/6/9 16:52	文件	1 KB
px3se-mkupdate.bat	2023/6/9 16:52	Windows 批处理文件	1 KB
px3se-package-file	2023/6/9 16:52	文件	1 KB
px30-mkupdate.bat	2023/6/9 16:52	Windows 批处理文件	1 KB

```


Android Firmware Package Tool v2.27
-----
PACKAGE -----
Add file: ./package-file
package-file done, offset=0x800, size=0x263, userspace=0x1
Add file: ./Image/MiniLoaderAll.bin
bootloader.Add file: ./Image/MiniLoaderAll.bin done, offset=0x1000, size=0x761c0, userspace=0x0ed
Add file: ./Image/parameter.txt
parameter.Add file: ./Image/parameter.txt done, offset=0x77800, size=0x227, userspace=0x1, flash_address=0x00000000
Add file: ./Image/uboot.img
uboot.Add file: ./Image/uboot.img done, offset=0x78000, size=0x400000, userspace=0x800, flash_address=0x00004000
Add file: ./Image/misc.ing
misc.Add file: ./Image/misc.ing done, offset=0x478000, size=0x000, userspace=0x18, flash_address=0x00006000
Add file: ./Image/boot.ing
boot.Add file: ./Image/boot.ing done, offset=0x484000, size=0x2191200, userspace=0x4323, flash_address=0x00008000
Add file: ./Image/rwconfig.ing
rwconfig.Add file: ./Image/rwconfig.ing done, offset=0x2615800, size=0x16b200000, userspace=0x2d6400, flash_address=0x00078000
Add file: ./Image/recovery.ing
recovery.Add file: ./Image/recovery.ing done, offset=0x16d515800, size=0x2b19800, userspace=0x5633, flash_address=0x00028000
Add file: ./Image/oem.ing
oem.Add file: ./Image/oem.ing done, offset=0x17032f000, size=0x11f5000, userspace=0x23ea, flash_address=0x01c78000
Add file: ./Image/userdata.ing
userdata.Add file: ./Image/userdata.ing done, offset=0x171524000, size=0x44e000, userspace=0x89c, flash_address=0x01cb8000
Add CRC...
Make firmware.OK!
----- OR -----

```


Then you can find “update.img” in folder “rockdev”.

4.2 Using SDDiskTool to Create upgrade SD

1. Insert SD Card to PC (Windows OS).
2. Decompress SDDiskTool, double click SD_Firmware_Tool.exe
3. Create upgrade SD card
 - (1) Choose the SD device.
 - (2) Choose the "Upgrade firmware"
 - (3) Choose the update.img path
 - (4) Create the update SD

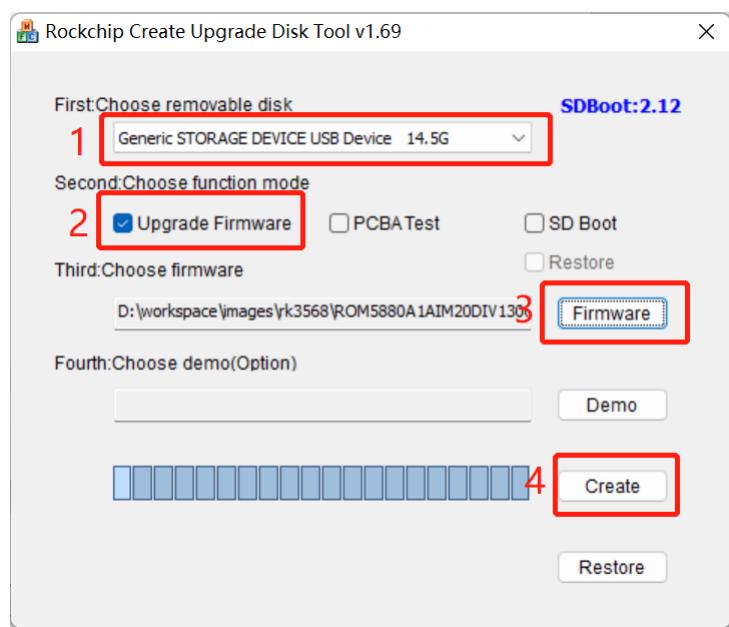

4. Create the upgrade SD card Success

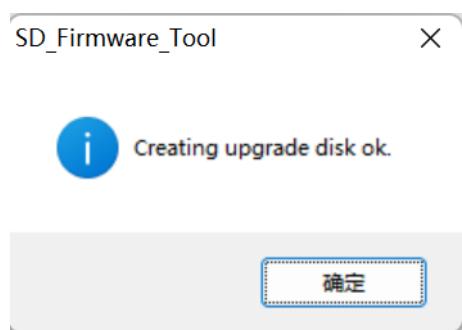

4.3 Upgrade or Recovery AOM-3821


1. Power off AOM-3821.
2. Insert the upgrade SD card to AOM-3821.
3. Power on AOM-3821. It will automatic enter recovery mode to upgrade system.
4. If upgrade success, you will get the message “Please remove SD CARD!!!, wait for reboot” on screen and debug console.
5. Remove SD card.

Chapter 5

Advantech Services

This chapter details
Advantech Design-In
serviceability, technical support
and warranty policy for AOM-3821
evaluation kit

5.1 RISC Design-In Services

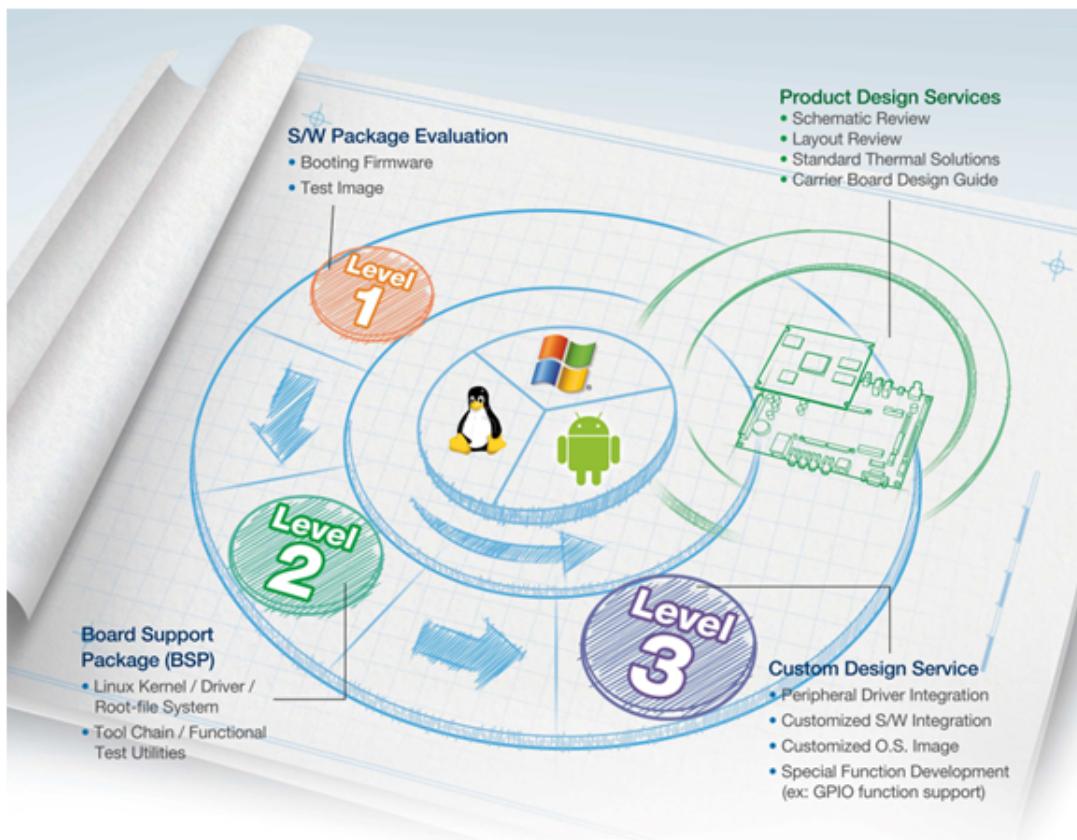

Advantech RISC Design-in Services help customers reduce the time and work involved in designing new carrier boards. We handle the complexities of technical research and greatly minimize the development risk associated with carrier boards.

Easy Development

Advantech features support firmware, root file-system, BSP, or other development tools for customers. These tools help customers develop their carrier board and differentiate their embedded products and applications.

- Full Range of RISC Product Offerings
- Comprehensive Document Support

Design Assistance Service

Advantech provides a check list for engineers to check their schematics and also review service based on customer carrier board schematics. Those services are preventative and help to catch design errors before they happen. This helps to save time and costs related to the development of carrier boards.

- Schematic Review
- Placement and Layout Review
- Debugging Assistance Services
- General/Special Reference Design Database

Thermal Solution Services

In order to provide quicker and more flexible solutions for customers' thermal designs. Advantech provides a thermal solution service—with reference to modularized thermal solutions and customized thermal solutions.

- Standard Thermal Solutions
- Customized Thermal Solutions

Embedded Software Services

Supports driver/software integration, or customized firmware, root file-system, and Linux image. Customer can save time and focus on their core development.

- Embedded Linux/ Android OS
- Advantech Boot Loader Customization

With the spread of industrial computing, a whole range of new applications have been developed, resulting in a fundamental change to the IPC industry. In the past, System Integrators (SI) were accustomed to completing projects without outside assistance. Now such working models are obsolete. Due to diverse market demands and intense competition, cooperation for (both upstream and downstream) vertical integration has become a much more effective way to create competitive advantages. As a result, ARM-based CPU modules were born out of this trend. Concentrating all necessary components on the CPU modules and placing other parts on the carrier board in response to market requirements for specialization, provides greater flexibility while retaining low power consumption credentials.

Advantech has been involved in the industrial computer industry for many years and finds that customers usually have the following questions when implementing modular designs.

General I/O Design Capability

Although customers often possess the ability to perform vertical integration and have enough know-how and core competitiveness in the professional application field, the lack of general expertise and experience in power and I/O design causes many challenges for them; especially when integrating CPU modules into carrier boards.

The Acquisition of Information

Even if an individual client is able to obtain sufficient information to make the right decision for a specialized vertical application, some customers encounter problems dealing with general platform design and communicating with CPU or chipset manufacturers, thereby increasing carrier board design difficulties and risk as well as seriously impacting time-to-market and losing potential market opportunities.

Software Development and Modification

Compared to x86 architectures—RISC architectures use simpler instruction sets. Therefore the software support for x86 platforms cannot be used on RISC platforms. System integrators need to develop software for their system and do the hardware and software integration themselves. Unlike x86 platforms, RISC platforms have less support for Board Support Packages (BSP) and drivers as well. Even though driver support is provided, SI still have to make a lot of effort to integrate it into the system core. Moreover, the BSP provided by CPU manufacturers are usually for carrier board designs, so it's difficult for SI to have an environment for software development.

In view of this, Advantech proposed the concept of Streamlined Design-in Support Services for RISC-based Computers On Modules (COM). With dedicated professional design-in services, Advantech actively participates in carrier board design and problem solving. Our services not only enable customers to effectively distribute their resources, but also reduce R&D manpower cost and hardware investment.

By virtue of a close interactive relationship with leading original manufacturers of CPUs and chipsets such as ARM, TI, and NXP, Advantech helps solve communication and technical support difficulties, which, in turn, can reduce the uncertainties of product development. Advantech's professional software team also focuses on providing a complete Board Support Package and assists customers in building a software development environment for their RISC platforms.

Advantech RISC design-in services helps customers overcome their problems to achieve the most important goal of faster time to market through a streamlined RISC Design-in services.

Along with our multi-stage development process, which includes: planning, design, integration, and validation, Advantech's RISC design-in service provides comprehensive support through the following different phases:

Planning Stage

Before deciding to adopt Advantech RISC COM, customers must go through a complete survey process detailing product features, specifications, and compatibility testing with software. Advantech offers a RISC Customer Solution Board (CSB) as an evaluation tool for carrier boards which are simultaneously designed when developing RISC COMs. In the planning stage, customers can use this evaluator board to assess RISC modules and test peripheral hardware. What's more, Advantech provides standard software Board Support Package (BSP) for RISC COM, so that customers can define their product's specifications as well as verifying I/O and performance at the same time. We not only offer hardware planning and technology consulting, but also software evaluation and peripheral module recommendations (such as Wi-Fi, 3G, and BT). At this stage, resolving customer concerns is Advantech's primary goal. Since we all know that product evaluation regarding performance and specification is the key task in the planning period, we try to help our customers conduct all the necessary tests for their RISC COM.

Design Stage

When a product moves into the design stage, Advantech will supply a reference design guide for the carrier board. The carrier board design guide provides pin definitions for the COM connector with limitations and recommendations for carrier board design. Customers have access to a clear guideline during their carrier board development. Regarding different form factors, Advantech offers a complete pin-out check list for different form factors such as Q7, ULP, and RTX2.0, so that customers can examine the carrier board signals and layout design accordingly. In addition, our team is able to assist customers review the placement/layout and schematics to ensure the carrier board design meets their full requirements. For software development, Advantech RISC software team can help customers establish an environment for software development and evaluate the amount of time and resources needed. If customers outsource software development to a third party, Advantech can also cooperate with the third party to provide proficient consulting services. With Advantech's professional support, the design process becomes much easier and product quality will be improved to meet customer targets.

Integration Stage

This phase comprises HW/SW integration, application development, and peripheral module implementation. Due to the lack of knowledge and experience on platforms, customers need to spend a certain amount of time analyzing integration problems. In addition, peripheral module implementation is relevant to driver designs on carrier boards, RISC platforms usually have less support for ready-made drivers on the carrier board, therefore customers have to learn by trial and error to get the best solution with the least effort. Advantech's team has years of experience in customer support and HW/SW development. We can support customers with professional advice and information to shorten development time and enable more effective product integration.

Validation stage

After customer's ES sample is completed, the next step is a series of verification procedures. In addition to verifying a product's functionality, the related test of the product's efficiency is also an important part at this stage especially for RISC platforms.

Advantech helps customers solve their problems in the testing process and will give suggestions and tips as well. Through an efficient verification process backed by our technical support, customers are able to optimize their applications with less fuss. Furthermore, Advantech's team can provide professional consulting services about further testing and equipment usage, so customers can find the right tools to efficiently identify and solve problems to further enhance their products quality and performance.

5.2 Contact Information

Below is the contact information for Advantech customer service

Region/Country	Contact Information
America	1-888-576-9688
Brazil	0800-770-5355
Mexico	01-800-467-2415
Europe (Toll Free)	00800-2426-8080
Singapore & SAP	65-64421000
Malaysia	1800-88-1809
Australia (Toll Free)	1300-308-531
	800-810-0345
China (Toll Free)	800-810-8389 Sales@advantech.com.cn
India (Toll Free)	1-800-425-5071
Japan (Toll Free)	0800-500-1055
Korea (Toll Free)	080-363-9494 080-363-9495
Taiwan (Toll Free)	0800-777-111
Russia (Toll Free)	8-800-555-01-50

You can also reach our service team through the website below; our technical support engineer will provide quick response once the form is filled out:

http://www.advantech.com.tw/contact/default.aspx?page=contact_form2&subject=Technical+Support

5.3 Technical Support and Assistance

5.3.1 Warranty Policy

Below is the warranty policy for Advantech products:

5.3.1.1 Warranty Period

Advantech branded off-the-shelf products and third party off-the-shelf products used to assemble Advantech's Configure-to-Order products are entitled to a two year complete and prompt global warranty service. Product defects in design, materials, and workmanship are covered from the date of shipment.

All customized products will, by default, carry a 15-month regional warranty service. The actual product warranty terms and conditions may vary based on sales contract.

All third party products purchased separately will be covered by the original manufacturer's warranty and time period, and shall not exceed one year of coverage through Advantech.

5.3.1.2 Repairs Under Warranty

It is possible to obtain a replacement (Cross-Shipment) within the first 30 days of purchase through your original Advantech supplier. Arrange Dead on Arrival (DOA) replacement if the products purchased directly from Advantech are DOA. The DOA Cross-Shipment excludes any shipping damage to customized and/or build-to-order products.

For those products which are not DOA, the return fee to an authorized ADVANTECH repair facility will be the customers' expense. The return shipping fee for refurbished products from Advantech to the customers' sites will be Advantech's expense.

5.3.1.3 Exclusions From Warranty

The product is excluded from warranty if:

- The product has been found to be defective after expiry of the warranty period.
- Warranty has been voided by removal or alteration of product or part identification labels.
- The product has been misused, abused, or subjected to unauthorized disassembly/modification; placed in an unsuitable physical or operating environment, improperly maintained by the customer, or a failure for which Advantech is not responsible—whether by accident or other cause. Such conditions will be determined by Advantech at its sole unfettered discretion.
- The product is damaged beyond repair due to a natural disaster such as a lighting strike, flood, earthquake, etc.
- Product updates/upgrades and tests upon the request of customers who are without warranty.

5.3.2 Repair Process

5.3.2.1 Obtaining an RMA Number

All returns from customers must be authorized with an Advantech Return Merchandise Authorization (RMA) number. Any returns of defective units or parts without valid RMA numbers will not be accepted; they will be returned to the customer at the customer's cost without prior notice.

An RMA number is only an authorization for returning a product; it is not an approval for repair or replacement. When requesting an RMA number, please access Advantech's RMA web site: <http://erma.Advantech.com.tw> with an authorized user ID and password.

You must fill out basic product and customer information as well as describe the problems encountered in detail in "Problem Description". Vague entries such as "does not work" or "failure" are not acceptable.

If you are uncertain about the cause of the problem, please contact Advantech's Application Engineers (AE). They may be able to find a solution that does not require sending the product for repair.

The serial number of the whole set is required if only a key defective part is returned for repair. Otherwise, the case will be regarded as out-of-warranty.

5.3.2.2 Returning Products for Repair

It's possible customers can save time and meet end-user requirements by returning defective products to any authorized Advantech repair facility without an extra cross-region charge. You are required to contact the local repair center before requesting global repair services.

It is recommended that you send cards without accessories (manuals, cables, etc.). Remove any unnecessary components from the card, such as CPU, DRAM, and CF Card. If you send all these parts back (because you believe they may be part of the problem), please note their inclusion clearly. Otherwise, Advantech is not responsible for any items not listed. Make sure the "Problem Description" is enclosed.

European Customers that are located outside European Community should use UPS as the forwarding company. We strongly recommend adding a packing list to all shipments. Please prepare a shipment invoice according to the following guidelines to decrease goods clearance time:

1. Give a low value to the product on the invoice, or additional charges will be levied by customs that will be borne by the sender.
2. Add information "Invoice for customs purposes only with no commercial value" on the shipment invoice.
3. Show RMA numbers, product serial numbers and warranty status on the shipment invoice.
4. Add information about Country of origin of goods.

In addition, please attach an invoice with RMA number to the package, then write the RMA number on the outside of the carton and attach the packing slip to save handling time. Please also address the parts directly to the Service Department and mark the package "Attn. RMA Service Department".

All products must be returned in properly packed ESD material or anti-static bags. ADVANTECH reserves the right to return un-repaired items at the customer's cost if they are inappropriately packed.

"Door-to-Door" transportation such as speed post is recommended for delivery, otherwise, the sender should bear additional charges such as clearance fees if Air-Cargo is adopted.

Should DOA cases fail, Advantech will take full responsibility for the product and transportation charges. If the items are not DOA, but fail within warranty, the sender will bear the freight charges. For out-of-warranty cases, customers must cover the cost and take care of both outward and inward transportation.

5.3.2.3 Service Charges

The product is excluded from warranty if:

- The product is repaired after expiry of the warranty period.
- The product is tested or calibrated after expiry of the warranty period, and a No Problem Found (NPF) result is obtained.
- The product, though repaired within the warranty period, has been misused, abused, or subjected to unauthorized disassembly/modification; placed in an unsuitable physical or operating environment; improperly maintained by the customer; or failure caused which Advantech is not responsible whether by accident or other cause. Such conditions will be determined by Advantech at its sole unfettered discretion.
- The product is damaged beyond repair due to a natural disaster such as a lightning strike, flood, earthquake, etc.
- Product updates and tests upon the request of customers who are without warranty.

If a product has been repaired by V, and within three months after such a repair the product requires another repair for the same problem, Advantech will do this repair free of charge. However, such free repairs do not apply to products which have been misused, abused, or subjected to unauthorized disassembly/modification; placed in an unsuitable physical or operating environment; improperly maintained by the customer; or have failed for reasons in which Advantech is not responsible whether by accident or other cause.

Please contact your nearest regional service center for detailed service quotations.

Before we start out-of-warranty repairs, we will send you a pro forma invoice (P/I) with the repair charges. When you remit the funds, please reference the P/I number listed under "Our Ref". Advantech reserves the right to deny repair services to customers that do not return the DOA unit or sign the P/I. Meanwhile, Advantech will scrap defective products without prior notice if customers do not return the signed P/I within 3 months.

5.3.2.4 Repair Report

Advantech returns each product with a "Repair Report" which shows the result of the repair. A "Repair Analysis Report" is also provided to customers upon request. If the defect is not caused by Advantech design or manufacturing, customers will be charged US\$60 or US\$120 for in-warranty or out-of-warranty repair analysis reports respectively.

5.3.2.5 Custody of Products Submitted for Repair

Advantech will retain custody of a product submitted for repair for one month while it is waiting for return of a signed P/I or payment (A/R). If the customer fails to respond within such period, Advantech will close the case automatically. Advantech will take reasonable measures to stay in proper contact with the customer during this one month period.

5.3.2.6 Shipping Back to Customer

The forwarding company for RMA returns from Advantech to customers is selected by Advantech. Per customer requirement, other express services can be adopted, such as UPS, FedEx and etc. The customer must bear the extra costs of such alternative shipment. If you require any special arrangements, please indicate this when shipping the product to us.

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission from the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2025