

MAB-T690

Box PC with Intel 12th/13th/14th Alder Lake/ Raptor
Lake/Raptor Lake Refresh/Bartlett Lake-S
FCLGA700 Processor support
Compatible with medical standard

Quick Reference Guide

1st Ed –07 April 2026

Copyright Notice

Copyright © 2026 Avalue Technology Inc., ALL RIGHTS RESERVED.

Document Amendment History

Revision	Date	By	Comment
1 st	April 2026	Avalue	Initial Release

Declaration of Conformity



This device complies with part 15 FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class "B" digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE statement

The product(s) described in this manual complies with all application European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

Copyright Notice

© 2026 by Avalue Technology Inc. All rights are reserved. No parts of this manual may be copied, modified, or reproduced in any form or by any means for commercial use without the prior written permission of Avalue Technology Inc. All information and specification provided in this manual are for reference only and remain subject to change without prior notice.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows is registered trademark of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Disclaimer

This manual is intended to be used as a practical and informative guide only and is subject to change without notice. It does not represent a commitment on the part of Avalue. This

product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support and Assistance

1. Visit the Avalue website at <https://www.avalue.com/> where you can find the latest information about the product.
2. Contact your distributor or our technical support team or sales representative for technical support if you need additional assistance. Please have following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

To receive the latest version of the user's manual; please visit our Web site at:

www.avalue.com

Product Warranty (Returns & Warranties policy)

1. Purpose

Avalue establishes the following maintenance specifications and operation procedures for providing the best quality of service and shortened repair time to our customers.

2. Warranty

2.1 Warranty Period

Avalue endeavors to offer customers the most comprehensive post-sales services and protection; besides offering a 2-year warranty for standard Avalue products, an extended warranty service can also be provided based on additional request from the customer.

Within the warranty period, customers are entitled to receive comprehensive and prompt repair and warranty.

Standard products manufactured by Avalue are offered a 2-year warranty, from the date of delivery from Avalue. For ODM/OEM products manufactured by Avalue or PCBA with conformal coating, will follow up the define warranty of the agreement, otherwise will be offered 1-year warranty for ODM/OEM products but non-warranty for PCBA with conformal coating. For outsourcing parts kit by Avalue (ex: Motherboard, LCD touch panel, CPU, RAM, HDD) are offered a 6-month warranty, and Mobile/Tablet PC battery are offered a warranty of the half year, from the date of delivery by Avalue. Products before the mass production stage, i.e. engineering samples are not applied in this warranty or service policy. For extended warranty and cross-territory services, product defects resulting from design, production process or material are covered by the pre-set warranty period after the date of delivery from Avalue. For non-Avalue products, the product warranty and repair time shall be based on the service standards provided by the original manufacturer; in principle Avalue will provide these products a warranty service for no more than one year.

2.2 Maintenance services within the warranty period

In the case of Avalue product DOA (Defect-on-Arrival) when the customer finds any defect within 1 month after the delivery, Avalue will replace it with a new product in a soonest way. Except for custom products, once the customer is approved of a Cross-Shipment Agreement, which allows for delivery a new product to the customer before receiving the defective one, Avalue will immediately proceed with new product replacement for the said DOA case. On validation of the confirmed defect, Avalue is entitled to reserve the right whether to provide a new product for replacement. For the returned defective new product, it is necessary to verify that there shall be no bruise, alteration, scratch or marking to the appearance, and that none of the delivered accessories missing; otherwise, the customer will be requested to pay a processing fee. On the other hand, if the new product defect is resulting from incorrect configuration or erroneous use by the user instead of any problem of the hardware itself, the customer will also be requested to pay for relevant handling fees.

MAB-T690

As for other conditions, Avalue will handle defects by way of repair. The customer will be requested to send the defective product to an Avalue authorized service center, and Avalue will return the repaired product back to the customer as soon as possible.

2.3 Ruling of an out-of-warranty defect

The following situations are not included in the warranty:

- The warranty period has expired.
- Product has been altered or its label of the serial number has been torn off.
- Product functionality issues resulting from improper use by the user, unauthorized dismantle or alteration, unfit operation environment, improper maintenance, accident or other causes. Avalue reserves the right for the ruling of the aforementioned situations.
- Product damage resulting from lightning, flood, earthquake or other calamities.
- The warranty rules of non-Avalue products and accessories shall be in accordance with standards set up by the original manufacturer. These products and accessories include RAM, HDD, FDD, CD-ROM, CPU, FAN, etc.
- Product upgrade request or test request submitted by the customer after expiration of the warranty.
- PCBA with conformal coating.
- Avalue semi-product and outsourced products without Avalue serial number.
- Products before the mass production stage, i.e. engineering samples.

3. Procedure for sending for repair

3.1 Attain a RMA number

A customer's rejected product returned for repair shall have a RMA (Return Merchandise Authorization) number. Without a RMA number, Avalue will not provide any repair service for the rejected product, and the product will be returned to the customer at customer's cost. Avalue will not issue any notice for the return of the product.

Each returned product for repair shall have a RMA number, which is simply the authorization of the return for repair; it is not a guarantee that the returned goods can be repaired or replaced. For applying for a RMA number, the customer may enter the eRMA webpage of Avalue <https://www.avalue.com/en/member> and log-in with an account number and a password authorized by Avalue. The system will then automatically issue a RMA number.

When applying for the RMA number, it is essential to fill in basic information of the customer and the product, together with detailed description of the problem encountered. If possible, avoid using ambiguous words such as "does not work" or "problematic". Without a substantial description of the problem, it is hard to start the repair and will cause prolonged repair time. Lacking detailed statement of fault steps also makes the problem hard to be identified, sometimes resulting in second-time repairs.

In case the customer can't define the cause of problem, please contact Avalue application engineers. Sometimes when the problem can be resolved even before the customer sends back the product.

3.2 Maintenance Charge

Avalue will charge a moderate repair fee for the following conditions:

- The warranty period has expired.
- Product has been altered or its label of the serial number has been torn off.
- Product functionality issues resulting from improper use by the user, unauthorized dismantle or alteration, unfit operation environment, improper maintenance, accident or other causes. Avalue reserves the right for the ruling of the aforementioned situations.
- Product damage resulting from lightning, flood, earthquake or other calamities.
- The warranty rules for non-Avalue products and accessories shall be in accordance with standards set up by the original supplier. These products and accessories include RAM, HDD, FDD, CD-ROM, CPU, FAN, etc.
- Product upgrade request or test request submitted by the customer after expiry of the warranty.
- PCBA with conformal coating.
- Avalue semi-product and outsourced products without Avalue serial number
- Products before the mass production stage, i.e. engineering samples.
- In case the products received are examined as NPF (No Problem Found) within the warranty period, the customer shall be responsible for the freight of both trips.
- Please contact your local distributor to examine in advance to prevent unnecessary freight cost.

For system failure of out-of-warranty products, Avalue will provide a quotation prior to repair service. When the customer applies for the cost, please refer to the Quotation number. In case the customer does not return the DOA product that has already been replaced by a new one, or the customer does not sign back the quotation of the out-of-warranty maintenance, Avalue reserves the right of whether or not to provide the repair service. In case the customer does not reply in 3 months, Avalue shall directly scrap or return the product back to customer at customer's cost without further notice to the customer.

3.3 Maintenance service of phased-out products

For servicing phased-out products, Avalue provides an extended period, starting the date of phase-out, as a guaranteed maintenance period of such products, for continuance of the maintenance service to meet customer's requirements. In case of unexpected factors causing Avalue to be unable to repair/replace a warranted but phased-out product, Avalue will, depending on the availability, upgrade the product (free of charge with continued

MAB-T690

warranty period as of the original product), or, give partial refund (based on the length of the remaining warranty period) to solve this kind of problem.

3.4 Maintenance Report

On completion of repair of a defective product, a Maintenance Report indicating the maintenance result and part(s) replaced (if any) will be sent to the customer together with the product. If the customer demands an additional maintenance analysis report, a service fee of various level will be charged depending on the warranty status. In case the analysis result shows that the defect attributes to Avalue's faulty design or process, the analysis fee will be exempted.

4. Service Products

Avalue provides service products to manage with different customer needs. Should you have any need, please consult to Avalue Sales Department.

Defect Analysis Report (DAR)

Avalue provides DAR (Defect Analysis Report) services aiming to elevating customer satisfaction. A DAR includes defect cause identification/verification/suggestion and improvement precautions, with instructions on correct usage for the avoidance of any reoccurrence.

Upgrade Service

Avalue is capable to provide system upgrade service for customization requirements. This upgrade service is applicable for main parts, such as CPU, memory, HDD, SSD, storage devices; also replacements motherboards of systems. Please contact Avalue sales for details to evaluate the possibility of system upgrade service and obtain information of lead time and price.

Safety Instructions












Safety Precautions







Before installing and using this device, please note the following precautions.

1. Read these safety instructions carefully.
2. Keep this User's Manual for future reference.
3. Disconnected this equipment from any AC outlet before cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.

7. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
8. Use a power cord that has been approved for using with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel. If one of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well, or you cannot get it work according to the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.
13. **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
14. Equipment intended only for use in a **RESTRICTED ACCESS AREA**.
15. Equipment designed for use below 5000 meters above sea level.

Explanation of Graphical Symbols

	Warning	A WARNING statement provides important information about a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	Caution	A CAUTION statement provides important information about a potentially hazardous situation which, if not avoided, may result in minor or moderate injury to the user or patient or in damage to the equipment or other property.
	Note	A NOTE provides additional information intended to avoid inconveniences during operation.
		Direct current.
		Alternating current
		Stand-by, Power on
		FCC Certification
		CE Certification
		Follow the national requirements for disposal of equipment.
		Stacking layer limit
		This side up

		<p>Fragile Packaging</p>
		<p>Beware of water damage, moisture-proof</p>
		<p>Carton recyclable</p>
		<p>Handle with care</p>
		<p>Follow operating instructions or consult instructions for use.</p>
		<p>WARNING</p> <ul style="list-style-type: none"> ● INGESTION HAZARD: This product contains a button cell or coin battery. ● DEATH or serious injury can occur if ingested. ● A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. ● KEEP new and used batteries OUT OF REACH of CHILDREN. ● Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

Disposing of your old product

WARNING:

There is danger of explosion if the battery is mishandled or incorrectly replaced. Replace only with the same type of battery. Do not disassemble it or attempt to recharge it outside the system. Do not crush, puncture, dispose of in fire, short the external contacts, or expose to water or other liquids. Dispose of the battery in accordance with local regulations and instructions from your service provider.

CAUTION:

- Lithium Battery Caution: Danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type. Dispose batteries according to manufacturer's instructions.
- Disposal of a BATTERY into fire or a hot oven, or mechanically crushing or cutting of a BATTERY, that can result in an EXPLOSION
- Leaving a BATTERY in an extremely high temperature surrounding environment that can result in an EXPLOSION or the leakage of flammable liquid or gas.
- A BATTERY subjected to extremely low air pressure that may result in an EXPLOSION or the leakage of flammable liquid or gas.

Mise en garde!

AVERTISSEMENT : Il existe un risque d'explosion si la batterie est mal manipulée ou remplacée de manière incorrecte. Remplacez uniquement par le même type de batterie. Ne le démontez pas et ne tentez pas de le recharger en dehors du système. Ne pas écraser, percer, jeter au feu, court-circuiter les contacts externes ou exposer à l'eau ou à d'autres liquides. Jetez la batterie conformément aux réglementations locales et aux instructions de votre fournisseur de services.

MISE EN GARDE:

- Pile au lithium Attention : Danger d'explosion si la pile n'est pas remplacée correctement. Remplacer uniquement par un type identique ou équivalent. Jetez les piles conformément aux instructions du fabricant.
- L'élimination d'une BATTERIE dans le feu ou dans un four chaud, ou l'écrasement ou le découpage mécanique d'une BATTERIE, pouvant entraîner une EXPLOSION
- Laisser une BATTERIE dans un environnement à température extrêmement élevée pouvant entraîner une EXPLOSION ou une fuite de liquide ou de gaz inflammable.
- UNE BATTERIE soumise à une pression d'air extrêmement basse pouvant entraîner une EXPLOSION ou une fuite de liquide ou de gaz inflammable.

Content

1. Getting Started	17
1.1 Packing List.....	17
1.2 System Specifications	19
1.3 System Overview	24
1.3.1 I/O View	24
1.4 System Dimensions	26
1.5 Operating Principle.....	27
2. Hardware Configuration	28
2.1 MAB-T690 connector mapping.....	29
2.1.1 Serial port connector (RS232).....	29
2.2 Powering On the System.....	30
2.3 EAX-R680BP Overviews.....	31
2.4 EAX-R680BP Jumpers & Connectors list.....	32
2.5 EAX-R680BP Jumpers & Connectors settings.....	34
2.5.1 Serial port 3 pin9 signal select (JRI3).....	34
2.5.2 Serial port 2 pin9 signal select (JRI2).....	34
2.5.3 Serial port 1 pin9 signal select (JRI1).....	35
2.5.4 BIOS ME function configuration (JME1).....	35
2.5.5 Clear CMOS (JCMOS1)	36
2.5.6 CPU TDP (Watts) (JCFGID1) **The original setting is not allowed to be changed by user**.....	36
2.5.7 AT/ATX Power Mode Select (JSATX1)	37
2.5.8 General purpose I/O connector (DIO1)	37
2.5.9 ATX Power connector (ATXPWR1).....	38
2.5.10 Power connector (ATX12V1).....	38
2.5.11 SMBus connector (JSMB1)	39
2.5.12 RTC Battery connector (BAT2).....	39
2.5.13 BIOS SPI connector (SPI1)	40
2.5.14 Front Panel connector (JFP1)	40
2.5.15 CPU fan connector (CPUFAN1).....	41
2.5.16 System fan connector (SYSFAN1).....	41
2.5.17 External Speaker connector (JBZ1)	42
2.5.18 Auxiliary Panel connector (JAUXP1).....	42
2.5.19 Auxiliary Panel connector (JAUXP2).....	43
2.5.20 Serial port 2 connector (COM2).....	43
2.5.21 USB2.0 connector (JUSB1).....	44

MAB-T690

2.5.22	USB2.0 connector (JUSB2)	44
2.5.23	USB2.0 connector (JUSB4)	45
2.5.24	COM2 RS422/485 (J1RS2)	45
2.5.25	COM3 RS422/485 (J1RS3)	46
2.5.26	Auxiliary Fan connector (AUXFAN1)	46
2.5.27	power F/W programming (JPC1)	47
2.5.28	Speaker connector (SPK1)	47
2.5.29	S/PDIF connector (JSPDIF1)	48
2.5.30	AUDIO connector (FAUD1)	48
2.5.31	ESPI Debug connector (JESPI1)	49
2.5.32	Mic & Line-in connector (REAR1)	49
2.5.33	Serial port 3-6 connector (4COM1)	50
2.5.34	Serial port 1 connector (COM1)	51
3.	Installation	52
3.1	Disassembly Procedures (MAB-T690)	54
3.2	System Mounting	55
4.	Drivers Installation	56
4.1	Install Chipset Driver	57
4.2	Install Graphics Driver	58
4.3	Install ME Driver	59
4.4	Install Audio Driver (For Realtek ALC888S HD Audio)	60
4.5	Install LAN Driver	61
4.6	Install GNA Driver	62
4.7	Install HID Driver	63
4.8	Install SIO Driver	64
5.	BIOS Setup	65
5.1	Introduction	66
5.2	Starting Setup	66
5.3	Using Setup	67
5.4	Getting Help	68
5.5	In Case of Problems	68
5.6	BIOS setup	69
5.6.1	Main Menu	69
5.6.1.1	System Language	70
5.6.1.2	System Date	70
5.6.1.3	System Time	70
5.6.2	Advanced Menu	70
5.6.2.1	CPU Configuration	71
5.6.2.1.1	Efficient-core Information	72
5.6.2.1.2	Performance-core Information	72

5.6.2.1.3	CPU - Power Management Control	73
5.6.2.2	PCH-FW Configuration	73
5.6.2.3	AMT Configuration	74
5.6.2.3.1	Firmware Update Configuration	74
5.6.2.3.2	PTT Configuration	75
5.6.2.4	Trusted Computing	76
5.6.2.5	ACPI Settings	76
5.6.2.6	Super IO Configuration	77
5.6.2.6.1	Serial Port 1 Configuration	78
5.6.2.6.2	Serial Port 2 Configuration	78
5.6.2.6.3	Serial Port 3 Configuration	79
5.6.2.6.4	Serial Port 4 Configuration	79
5.6.2.6.5	Serial Port 5 Configuration	80
5.6.2.6.6	Serial Port 6 Configuration	80
5.6.2.7	CT6126D HW Monitor	81
5.6.2.7.1	Smart Fan Configuration	81
5.6.2.8	S5 RTC Wake Settings	82
5.6.2.9	Serial Port Console Redirection	83
5.6.2.10	USB Configuration	84
5.6.2.11	Network Stack Configuration	85
5.6.2.12	NVMe Configuration	85
5.6.3	Chipset	86
5.6.3.1	System Agent (SA) Configuration	86
5.6.3.1.1	Memory Configuration	87
5.6.3.1.2	Graphics Configuration	87
5.6.3.1.3	DMI/OPI Configuration	88
5.6.3.1.4	VMD Configuration	88
5.6.3.1.5	PCI Express Configuration	89
5.6.3.1.5.1	M.2 KeyM 2	89
5.6.3.1.5.2	PCI Express Slot 1 (PEG1)	90
5.6.3.1.5.3	PCI Express Slot 2 (PEG2)	90
5.6.3.2	PCH-IO Configuration	91
5.6.3.2.1	PCI Express Configuration	91
5.6.3.2.1.1	PCI Express Slot 3 (PCI-E Port 1~4)	92
5.6.3.2.1.2	PCI Express Slot 4 (PCI-E Port 5~6)	92
5.6.3.2.1.3	Intel I225/I226 LAN Chip (PCI-E Port 7)	93
5.6.3.2.1.4	Intel I225/I226 LAN Chip (PCI-E Port 8)	93
5.6.3.2.1.5	Intel I225/I226 LAN Chip (PCI-E Port 9)	94
5.6.3.2.1.6	Intel I225/I226 LAN Chip (PCI-E Port 10)	94
5.6.3.2.1.7	M.2 KeyM 1 (PCI-E Port 13~16)	95

MAB-T690

5.6.3.2.1.8	PCI Express Slot 1 (PCI-E Port 21~24)	95
5.6.3.2.1.9	PCI Express Slot 2 (PCI-E Port 25~28)	96
5.6.3.2.2	SATA Configuration	96
5.6.3.2.3	HD Audio Configuration	97
5.6.3.3	Board Configuration	98
5.6.4	Security	99
5.6.4.1	Secure Boot	99
5.6.4.1.1	Restore Factory Keys	100
5.6.4.1.2	Reset To Setup Mode	100
5.6.4.1.3	Expert Key Management	101
5.6.5	Boot	101
5.6.6	Save & Exit	102
5.6.6.1	Save Changes and Reset	102
5.6.6.2	Discard Changes and Reset	102
5.6.6.3	Restore Defaults	103
5.6.6.4	Launch EFI Shell from filesystem device	103
5.6.7	MEBx	103
6.	Maintenance & Troubleshooting	104
7.	Product Application	110

1. Getting Started

1.1 Packing List

Before installation, please ensure all the items listed in the following table are included in the package.

Item	Description	Q'ty
1	MAB-T690 Barebone system	1
2	CPU cooler 0.84A/12V/Fan 91*87.5*64.6mm	1
3	Screws (M3*8mm) for 2.5" drive installation	16
4	Screws (6#-32*8mm) for 3.5" drive installation	16
5	Rubber for shockproof	16
6	Screws (M3*4mm) for M.2	2
7	PSU cable kit	1



If any of the above items is damaged or missing, contact your retailer.

Unpacking

Note:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the Avalue reseller or vendor the product was purchased from or contact an Avalue sales representative directly by sending an email to sales@avalue.com.

To unpack the flat bezel box PC, follow the steps below.

Step 1: Carefully cut the tape sealing the box. Only cut deep enough to break the tape.

Step 2: Open the outside box.

Step 3: Carefully cut the tape sealing the box. Only cut deep enough to break the tape.

Step 4: Open the inside box.

Step 5: Lift the box PC out of the boxes.

Step 6: Remove the peripheral parts box from the main box.

1.2 System Specifications

System	
Processor	Intel® 12/13/14 th Gen, Alder Lake/Raptor Lake/Raptor Lake-Refresh/Bartlett Lake-S Core™ i9/i7/i5/i3 Processors, supports LGA 1700 CPU Up to 125W Max
Platform Controller Hub	Intel® R680E chipsets
System Memory	4 x 288-pin DDR5 UDIMM support up to 192GB, optional ECC support (CPU dependent) Note : If using GPU on the system, the suggestion for memory size will be double of GPU memory. (ex : using Nvidia RTX PRO 5000 (48GB), system memory should use larger the 96GB)
System Fan	2 x FAN 4P/12V/20cm 70x70x20mm 5000rpm
I/O Chipset	Nuvoton NCT6126D (eSPI super IO)
BIOS Information	AMI uEFI BIOS, 256Mbit SPI Flash ROM
Watchdog Timer	H/W Reset, 5~255 seconds/5~255 minutes
H/W Status Monitor	CPU temperature monitoring, Voltages monitoring, CPU fan speed control
RAID	Support RAID 0, 1, 5, 10
TPM	Onboard NuvoTon NPCT760 supports TPM 2.0
iAMT	By CPU (i9/i7/i5)
SBC	EAX-R680BP
Expansion	
M.2 Key-X Size (Signals)	2 x M.2 NVMe Key M 2242/2280/22110 (PCIe Gen4x4, no SATA)
PCIeX (Gen X)	2 x PCIe x16 slot for 1 x PCIe x16 Gen5 or 2 x PCIe x8 Gen5 (PEG1/2) 2 x PCIe x4 Gen 4 (PCIE1/2) 1 x PCIe x4 Gen3 (PCIE3) 1 x PCIe x4 slot for 1 x PCIe x2 Gen 3 only (from PCH) (PCIE4)
Storage	
M.2 Key-X Size (Signals)	2 x M.2 NVMe Key M 2242/2280/22110 (PCIe Gen4x4, no SATA)
2.5" Drive Bay (Height)	4 x Internal 2.5" or 3.5" Drive Bay (3 x Internal 2.5" or 3.5" Drive Bay if DVD is selected)
CD/DVD ROM	Option for ACC-DVD-03R (SATA Slim Slot type DVD+/-RW Drive GTC2N)
Front I/O	
USB Port	2 x USB 2.0
Power Button	Yes
LED Indicator	Yes

Rear I/O	
USB Port	8 x USB3.2 Gen 2
COM Port	1 x DB9 Connector at IO support RS-232 Optional up to 5 RS-232 COM port (occupy PCIe slot)
HDMI	1 x HDMI 2.1b
DP	2 x DP 1.4a
Audio	Line-out, Mic-in
LAN Port	4 x RJ45
AC/DC Input	AC Input
Onboard I/O	
GPIO	1 x 16-bit GPIO Header
USB Port	<ul style="list-style-type: none"> • 2 x 2 x 5-pin Header, 2.54mm Pitch for 4x USB 2.0 (5V/0.5A per port) • 1 x 1 x 5-pin Header, 2.54mm Pitch for 1x USB 2.0 (5V/0.5A), BIOS Wake-up Supported • 1 x USB 3.2 Gen1 Vertical Type-A Connector (5V/0.9A)
COM Port	<p><u>COM1: by DB9 connector at rear IO support RS232</u></p> <ul style="list-style-type: none"> • 1 x 2 x 3 pin, pitch 2.00mm connector for COM1 pin9 RI/5V/12V, 0.9A jumper select (JRI1) <p><u>COM2: by onboard pin-header support RS232/422/485 selected by BIOS</u></p> <ul style="list-style-type: none"> • 1 x 2 x 5 pin, pitch 2.00mm connector for COM2 to support RS232 (COM2) • 1 x 2 x 3 pin, pitch 2.00mm connector for COM2 pin9 RI/5V/12V, 0.9A jumper select (JRI2) • 1 x 2 x 3 pin, pitch 2.00mm connector for COM2 to support RS422/485, Pin 5 with +5V, 0.9A (J1RS2) <p><u>COM3: support RS232/422/485 selected by BIOS</u></p> <p><u>COM3~6: support RS232</u></p> <ul style="list-style-type: none"> • 1 x 2 x 20 pin, pitch 2.00mm connector for COM3~6 support RS232 (4COM1) • 1 x 2 x 3 pin, pitch 2.00mm connector for COM3 pin9 RI/5V/12V, 0.9A jumper select (JRI3) • 1 x 2 x 3 pin, pitch 2.00mm connector for COM3 to support RS422/485, Pin 5 with +5V, 0.9A (J1RS3)
AT/ATX Selector	1 x 1 x 3 pin pitch 2.00mm connector for AT/ATX jumper 1 x 2 x 12 pin ATX power connector 1 x 2 x 4 pin ATX 12V power connector
RTC Battery	1 x Horizontal type battery connector (CR2450 Battery)

eSPI	Yes																										
Front Panel	1 x 2 x 5 pin, pitch 2.54mm connector for front panel																										
Audio	1 x 2 x 5 pin, pitch 2.54mm connector for front Audio (Mic-in, Line-out) 1 x 2 x 6 pin, pitch 2.54mm connector for Audio (5.1-CH Audio) 1 x 1 x 4 pin, pitch 2.54mm connector for S/PDIF																										
DC-Input	Onboard buzzer and Power good LED																										
Buzzer	Onboard																										
CPU/System FAN	CPU TDP depends CPU Cooler(65W) : 1 x CPU cooler 0.84A/12V/Fan 91*87.5*64.6mm CPU Cooler(125W) : 1 x CPU cooler 4P/12V/Fan 90*90*67 125W																										
Display																											
Graphic Chipset	Intel® Graphics w/ up to 32 EU																										
Resolution	2 x DP (DP1.4a): Max: 7680 x 4320@60 Hz 1 x HDMI: HDMI 2.1b, max resolution 4096x2160@60Hz (with HDR)																										
Audio																											
Audio Codec	Realtek ALC888S HD Audio Decoding Controller with 6W Amplifier																										
Audio Amplifier	TI TPA3113D2 Class-D 2 x 6W 8Ω Amplifier																										
Ethernet																											
LAN Chipset	2 x Intel® i226-LM 2.5G Gigabit Controller 2 x Intel® i226V 2.5G Gigabit Controller																										
Data Rate Per Port	i226-LM: 10/100/1000/2500 Base-Tx GbE compatible i226V: 10/100/1000/2500 Base-Tx GbE compatible																										
LED Indicator	<table border="1"> <thead> <tr> <th colspan="4">Max. 2.5G LAN Port</th> </tr> <tr> <th colspan="2">ACT/LINK</th> <th colspan="2">SPEED</th> </tr> <tr> <th></th> <th>Definition</th> <th>LED</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td>Light Off</td> <td>No Link</td> <td>Solid Orange</td> <td>2.5G</td> </tr> <tr> <td>Solid Yellow</td> <td>Connection</td> <td>Solid Green</td> <td>1G/100M</td> </tr> <tr> <td>Yellow Flashing</td> <td>Activity</td> <td>Light Off</td> <td>10M</td> </tr> </tbody> </table>			Max. 2.5G LAN Port				ACT/LINK		SPEED			Definition	LED	Definition	Light Off	No Link	Solid Orange	2.5G	Solid Yellow	Connection	Solid Green	1G/100M	Yellow Flashing	Activity	Light Off	10M
Max. 2.5G LAN Port																											
ACT/LINK		SPEED																									
	Definition	LED	Definition																								
Light Off	No Link	Solid Orange	2.5G																								
Solid Yellow	Connection	Solid Green	1G/100M																								
Yellow Flashing	Activity	Light Off	10M																								
Power Requirement																											
Power Mode	AT/ATX (ATX is default setting)																										
Power Supply Unit	IT grade(Default) : 1000W, LITEON HS-5102-12 Medical grade(Optional) : 1000W, FSP FSP1000M-60PG																										
Mechanical & Environment																											
Operating Temp.	0°C ~ 40°C (32°F ~ 104°F) with 0.5m/s air flow (turbo mode off) Note : 0°C ~ 35°C (32°F ~ 95°F) with 0.5m/s air flow (turbo mode off) for using TDP 125W CPU and Nvidia RTX PRO 5000 (48GB)																										
Storage Temp.	-20°C ~ 60°C(-4°F ~ 140°F)																										

MAB-T690

Operating Humidity	40°C @ 95% Relative Humidity, Non-condensing
Dimension (W*L*H)	437*433*189.2 mm
Weight	10 Kg
Vibration Test	<p>Random Vibration Operation</p> <p>1 Test PSD : 0.00050513G²/Hz , 0.5 Grms</p> <p>2 System condition : operation mode</p> <p>3 Test frequency : 5~500 Hz</p> <p>4 Test axis : X,Y and Z axis</p> <p>5 Test time : 30 minutes per each axis</p> <p>6 IEC60068-2-64 Test Fh</p> <p>6 Storage : SSD</p> <p>Sine Vibration test (Non-operation)</p> <p>1 Test Acceleration : 1G</p> <p>2 Test frequency : 5~500 Hz</p> <p>3 Sweep : 1 Oct/ per one minute. (logarithmic)</p> <p>4 Test Axis : X,Y and Z axis</p> <p>5 Test time :30 min. each axis</p> <p>6 System condition : Non-Operating mode</p> <p>7. Reference IEC 60068-2-6 Testing procedures</p> <p>Package Vibration Test:</p> <p>1 Test PSD : 0.026G²/Hz , 2.16 Grms</p> <p>2 Test frequency : 5~500 Hz</p> <p>3 Test axis : X,Y and Z axis</p> <p>4 Test time : 30 minutes per each axis</p> <p>5 IEC 60068-2-64 Test Fh</p>
Shock Test	<p>1 Wave from : Half Sine wave</p> <p>2 Acceleration Rate : 10g</p> <p>3 Duration Time : 11ms</p> <p>4 No. of shock : Z axis 300 times</p> <p>5 Test Axis : Z axis</p> <p>6 operation mode</p> <p>7 Reference IEC 60068-2-27 testing procedures</p> <p>Test Eb : Shock Test</p>
Drop Test	<p>Package Drop</p> <p>Reference ISTA 2A, Method : IEC-60068-2-32 Test: Ed</p> <p>Drop Test</p> <p>1 One corner , three edges, six faces</p> <p>2 ISTA 2A, IEC-60068-2-32 Test:Ed</p>


Software Support	
OS Information	Win10, Win11, Linux



Note: Specifications are subject to change without notice.

1.3 System Overview


1.3.1 I/O View

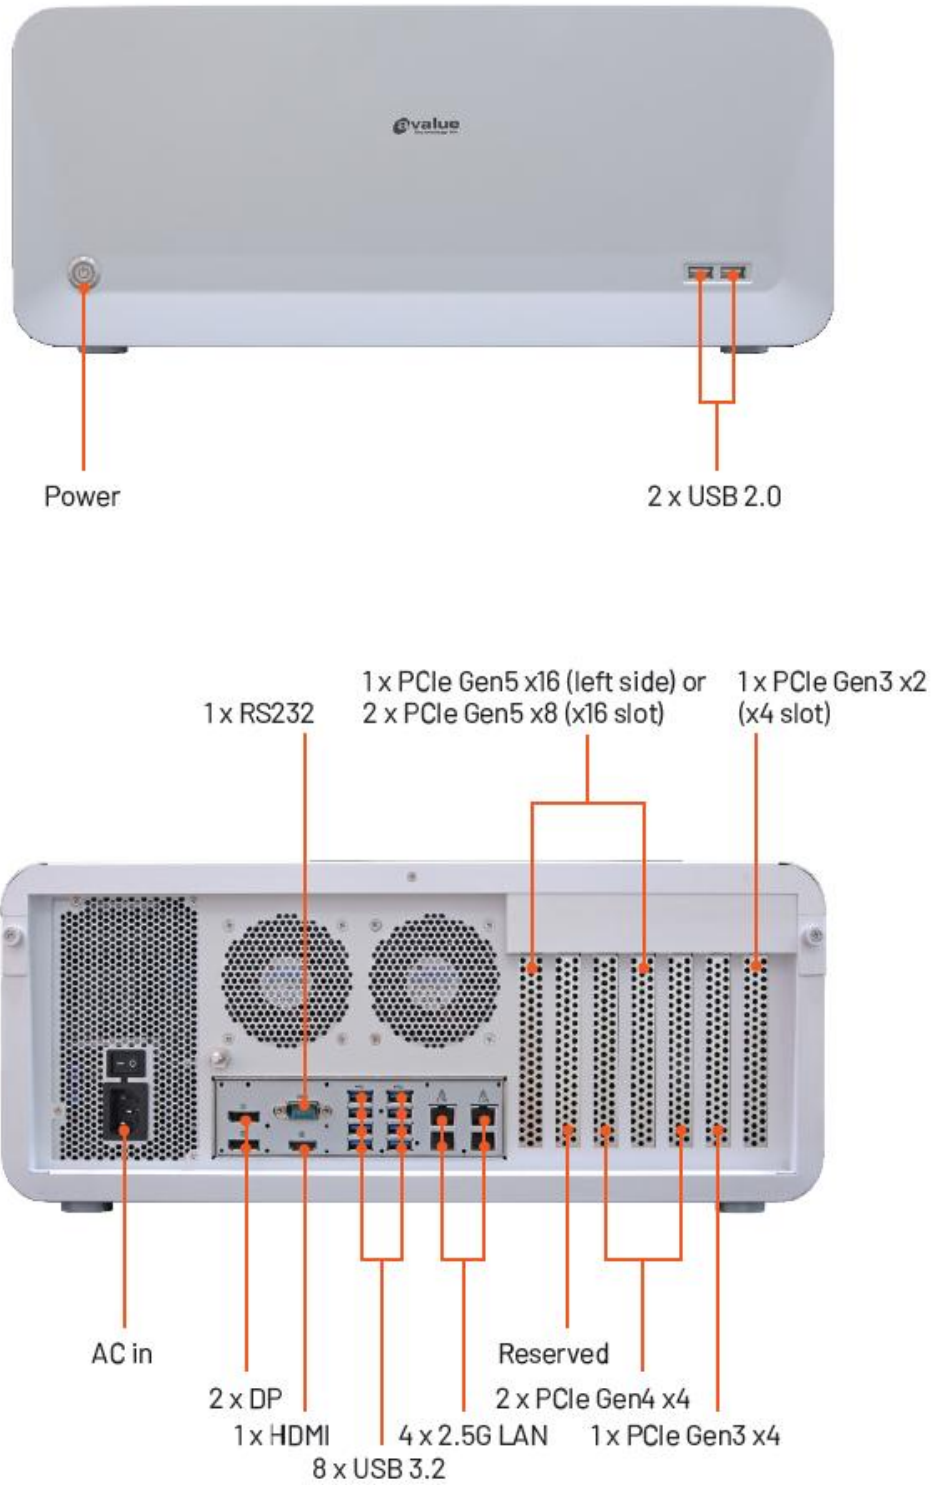

Connectors

Label	Function	Note
Power	Power on button	
USB 2.0	2 x USB2.0 connector	
USB 3.2	8 x USB3.2 connector	
2.5G LAN	4 x RJ-45 Ethernet	
DP	2 x DP connector	
HDMI	HDMI connector	
AC in	AC power-in connector	
RS232	Serial port connector	
PCIe Gen3 x2	PCIe Gen3 x2 slot (x4 slot)	
PCIe Gen3 x4	PCIe Gen3 x4 slot	
PCIe Gen4 x4	2 x PCIe Gen4 x4 slot	
PCIe Gen5 x8	2 x PCIe Gen5 x8 slot (x16 slot)	
PCIe Gen5 x16	PCIe Gen5 x16 slot (left side)	

1.4 System Dimensions

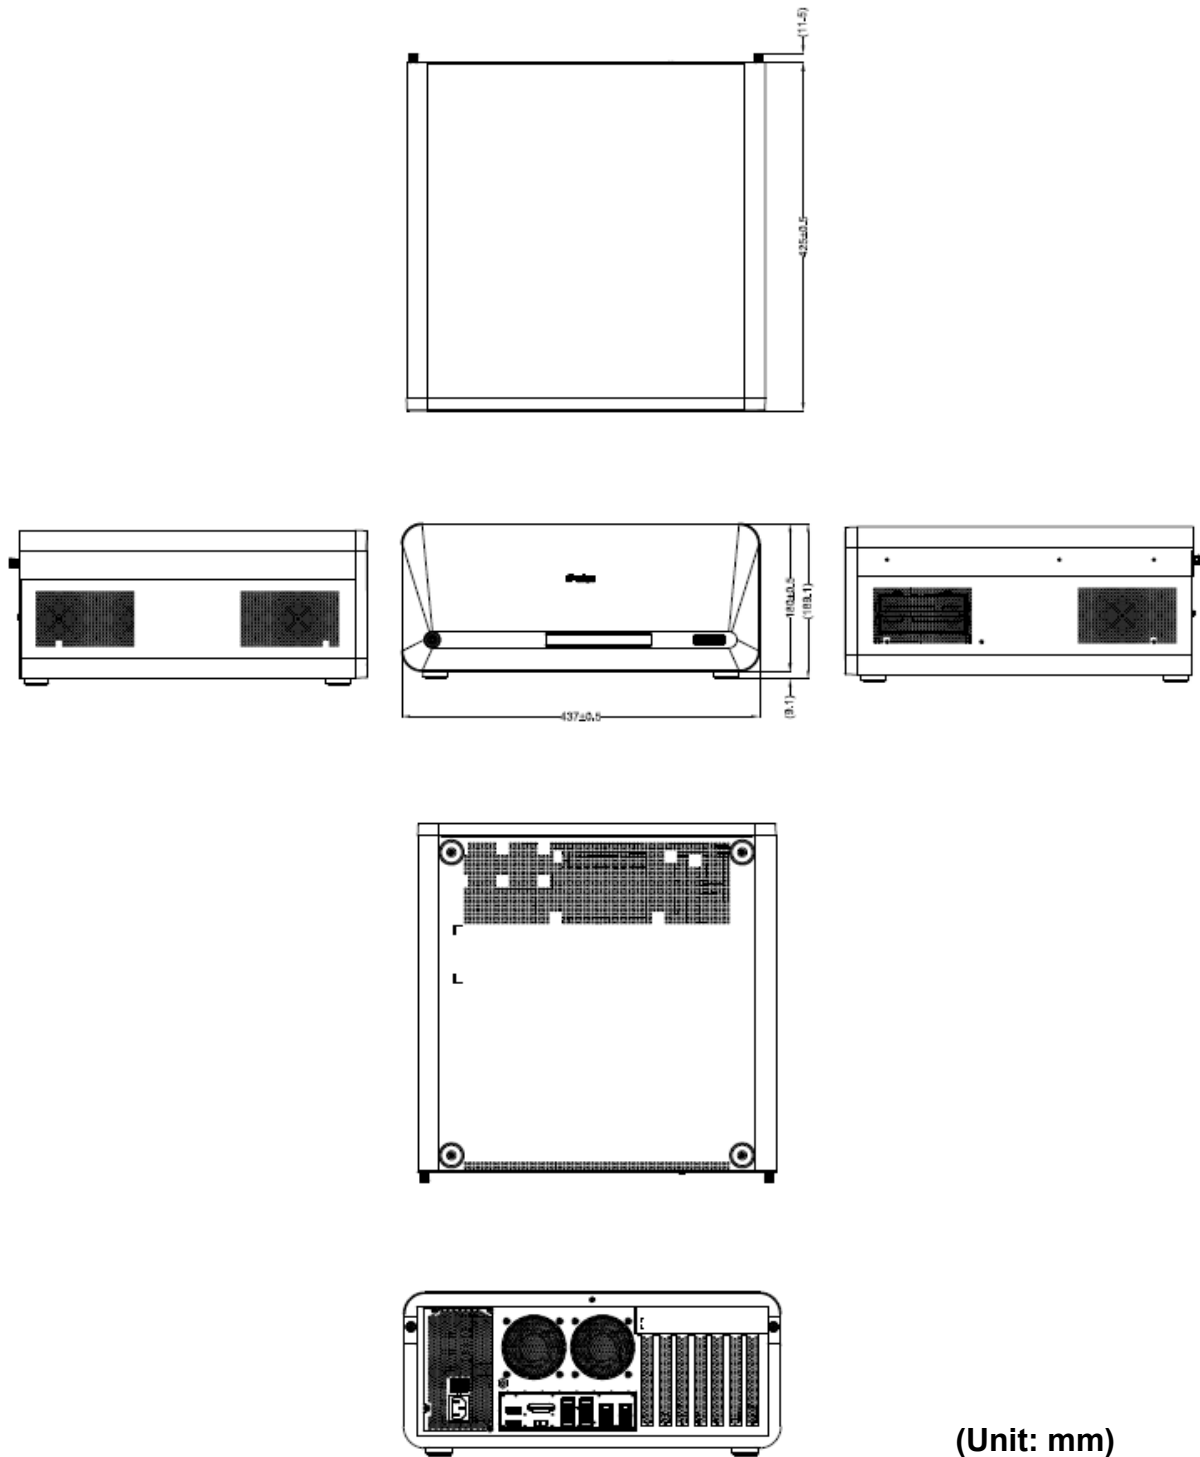

1.5 Operating Principle

(a) Installation:

- Take the device and accessories from package and put in the suitable place.
- Check the packing list (accessories).
- Connect the power cord to the device.
- Put the plug of power cord into receptacle of power source.
- Press power button "Power Icon" on the device to start the device.

(b) Installation for monitor:

- Plug in the monitor cable (HDMI or DP).

(c) Installation keyboard and mouse.

- Plug in mouse and keyboard.

(d) Operation for Turn ON the system

- Turn ON the system.
- Press the power ON/OFF icon firmly to turn power ON/OFF.
- The power ON/OFF LED will turn blue to indicate power is on.
- Check with the Icon behavior for power status.

2. Hardware Configuration

For advanced information, please refer to:

- 1- EAX-R680BP included in this manual.





Note: If you need more information, please visit our website:

www.avalue.com

2.1 MAB-T690 connector mapping

2.1.1 Serial port connector (RS232)

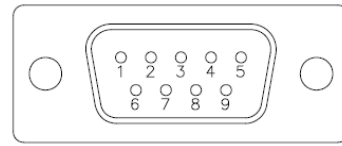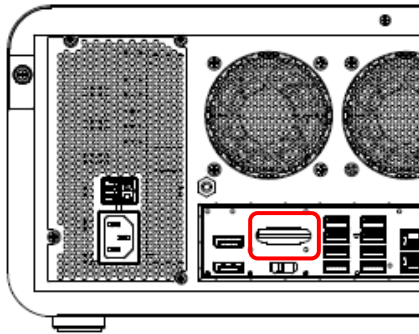

Signal	PIN	PIN	Signal
DCD	1	6	DSR
RXD	2	7	RTS
TXD	3	8	CTS
DTR	4	9	RI
GND	5		

2.2 Powering On the System


To power on the system, follow the steps below.

Step 1: Connect the power cord to the power adapter. Connect the other end of the power cord to a power source. Ensure to connect the power cord to a socket-outlet with earthing connection.


Step 2: Connect the power adapter to the power connector of the product.

Step 3: Locate the power button on the product.

Step 4: Switch on the power button can turn on the system. Keep holding the power button on can force shutdown the PC.

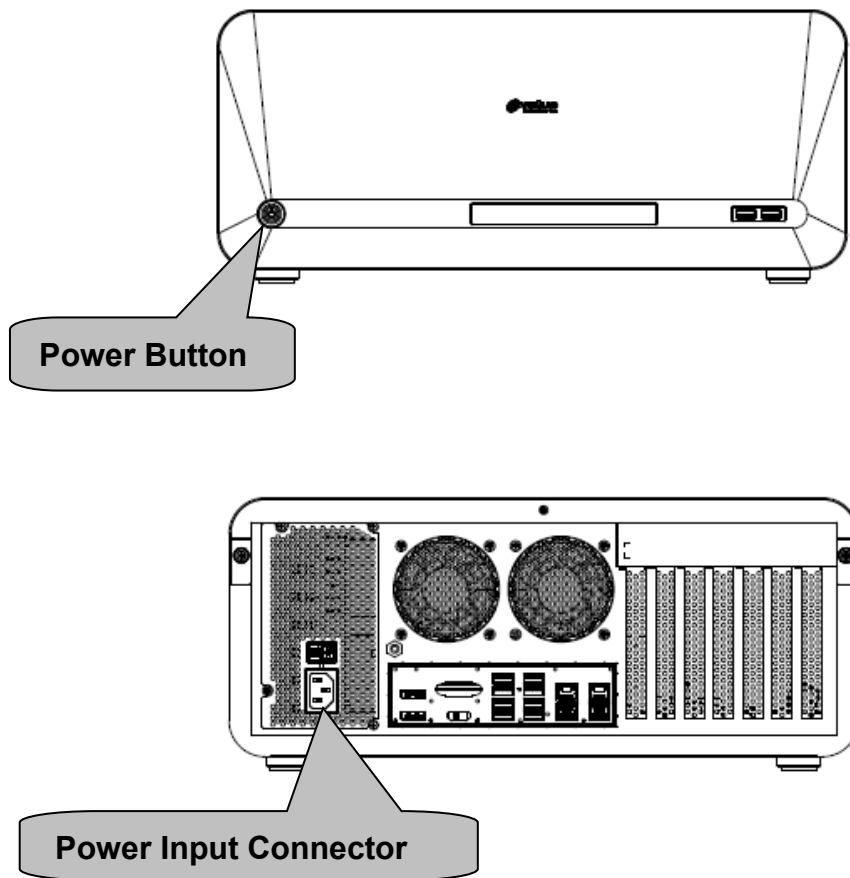

2.3 EAX-R680BP Overviews

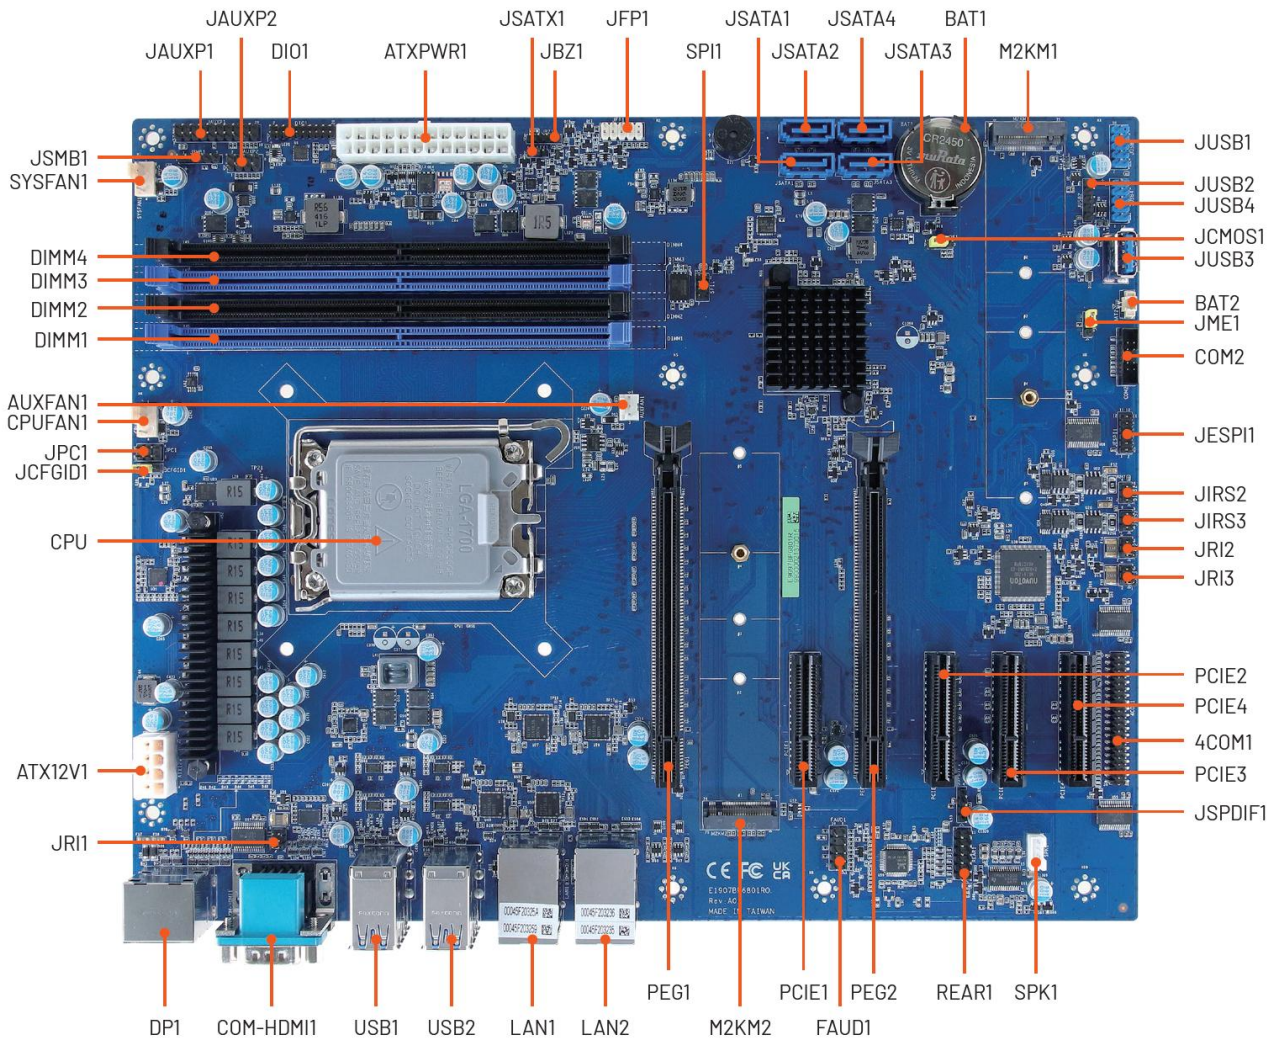

2.4 EAX-R680BP Jumpers & Connectors list

Jumpers

Label	Function	Note
JRI1/2/3	Serial port 1/2/3 pin9 signal select	3 x 2 header, pitch 2.00mm
JME1	BIOS ME function configuration	3 x 1 header, pitch 2.54mm
JSATX1	AT/ATX Power Mode Select	3 x 1 header, pitch 2.00mm
JCMOS1	Clear CMOS	3 x 1 header, pitch 2.54mm
JCFGID1	CPU TDP (Watts)	3 x 1 header, pitch 2.54mm


Connectors

Label	Function	Note
CPUFAN1	CPU fan connector (with smart fan function supported)	4 x 1 wafer, pitch 2.54mm
SYSFAN1	System fan connector (with smart fan function supported)	4 x 1 wafer, pitch 2.54mm
JFP1	Front Panel connector	5 x 2 header, pitch 2.54 mm
DIMM1/2/3/4	288-pin DDR5 UDIMM Slot 1/2/3/4	
JSMB1	SMBus connector	5 x 1 header, pitch 2.54 mm
JAUXP1	Auxiliary Panel connector 1	10 x 2 header, pitch 2.54 mm
JAUXP2	Auxiliary Panel connector 2	4 x 2 header, pitch 2.54 mm
SPI1	BIOS SPI connector	4 x 2 header, pitch 2.00mm
COM2	Serial Port 2 connector	5 x 2 box header, pitch 2.00 mm
4COM1	Serial Port 3/4/5/6 connector	20 x 2 header, pitch 2.00mm
JBZ1	External Speaker connector	4 x 1 header, pitch 2.54 mm
DIO1	General purpose I/O connector	10 x 2 header, pitch 2.00mm
LAN	RJ-45 Ethernet 1/2	
COM-HDMI1	COM1 & HDMI	
USB1/2	8 x USB3.2 connector	
JUSB1	2 x USB2.0 connector	5 x 2 header, pitch 2.54mm
JUSB2	USB2.0 connector	5 x 1 header, pitch 2.54mm
JUSB3	USB3.2 Vertical Type A connector	
JUSB4	2 x USB2.0 connector	5 x 2 header, pitch 2.54mm
J1RS2	COM2 RS422/485	3 x 2 header, pitch 2.00 mm
J1RS3	COM3 RS422/485	3 x 2 header, pitch 2.00 mm

PCIE1/2	2 x PCIe x4 Gen4 slot	
PCIE3	PCIe x4 Gen3 slot	
PCIE4	PCIe x2 Gen3 slot	
M2KM1/2	M.2 Key M 2242/2280/22110 connector 1/2	
BAT1	RTC Battery connector 1	For CR2450
BAT2	RTC Battery connector 2	2 x 1 wafer, pitch 1.25mm
AUXFAN1	Auxiliary Fan connector	3 x 1 wafer, pitch 2.54mm
ATXPWR1	ATX Power connector	12 x 2 wafer, pitch 4.20mm
ATX12V1	ATX Power connector	2 x 4 wafer, pitch 4.20mm
JSATA1/2/3/4	Serial ATA connector 1/2/3/4	
CPU1	CPU socket	
DP1	2 x DP++ connector	
PEG1/2	PCI-e x16 slots 1/2	
JPC1	power F/W programming	3 x 2 header, pitch 2.54 mm
SPK1	Speaker connector	4 x 1 wafer, pitch 2.00mm
JSPDIF1	S/PDIF connector	4 x 1 header, pitch 2.54mm
FAUD1	AUDIO connector	5 x 2 header, pitch 2.54mm
JESPI1	ESPI Debug connector	6 x 2 header, pitch 2.00 mm
REAR1	Mic & Line-in connector	6 x 2 header, pitch 2.54mm


2.5 EAX-R680BP Jumpers & Connectors settings

2.5.1 Serial port 3 pin9 signal select (JRI3)

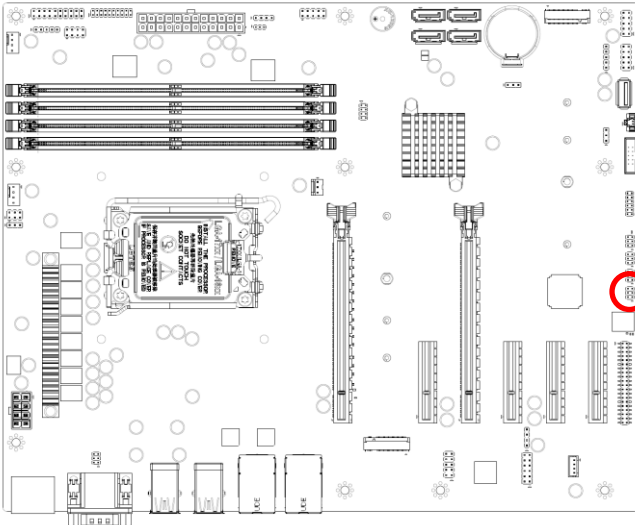


* Default


Ring*

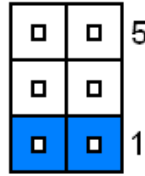


+12V

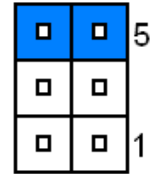

+5V

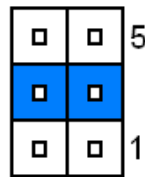


2.5.2 Serial port 2 pin9 signal select (JRI2)

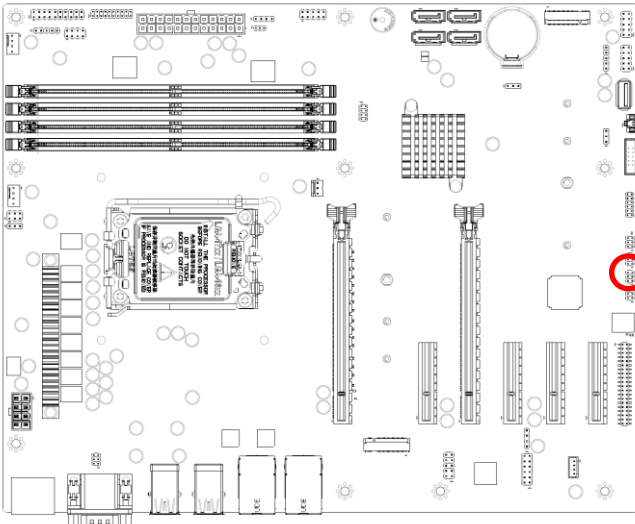


* Default


Ring*

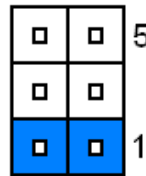


+12V

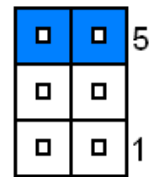

+5V

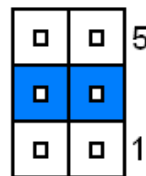


2.5.3 Serial port 1 pin9 signal select (JRI1)

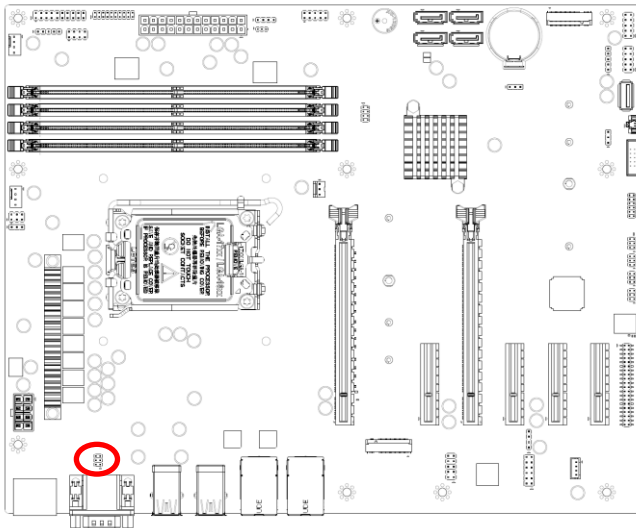


* Default


Ring*

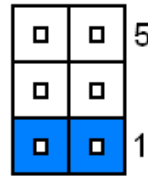


+5V

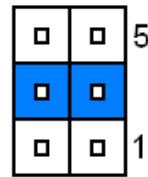

+12V

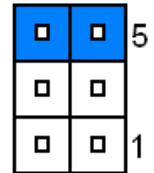


2.5.4 BIOS ME function configuration (JME1)

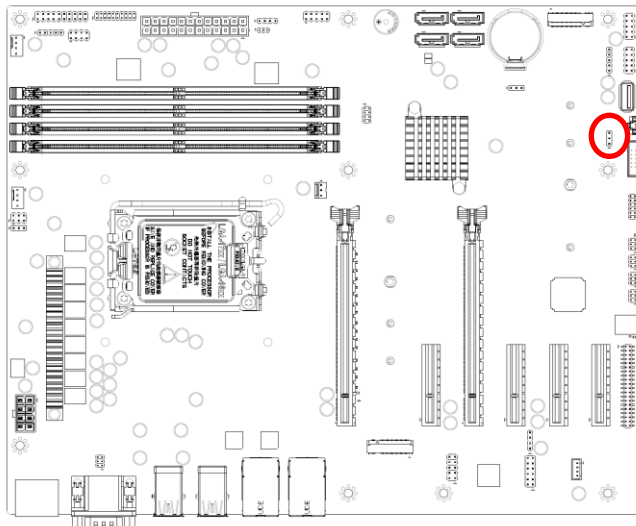


* Default

 Enable ME *




Disable ME

 


MAB-T690


2.5.5 Clear CMOS (JCMOS1)

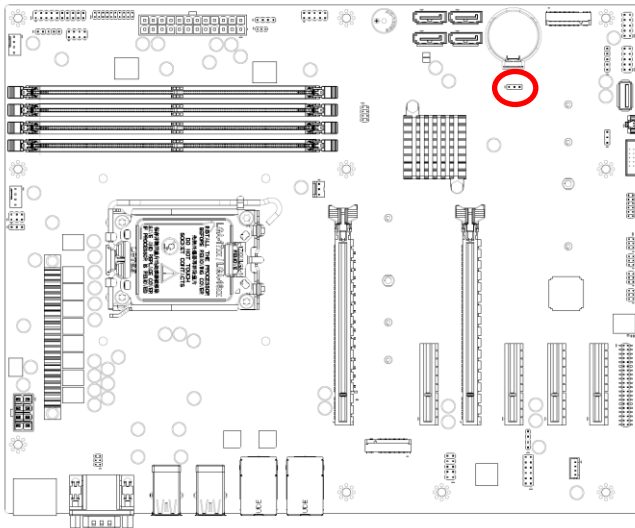

Protect*

 


Clear CMOS

 


* Default


2.5.6 CPU TDP (Watts) (JCFGID1) ****The original setting is not allowed to be changed by user****

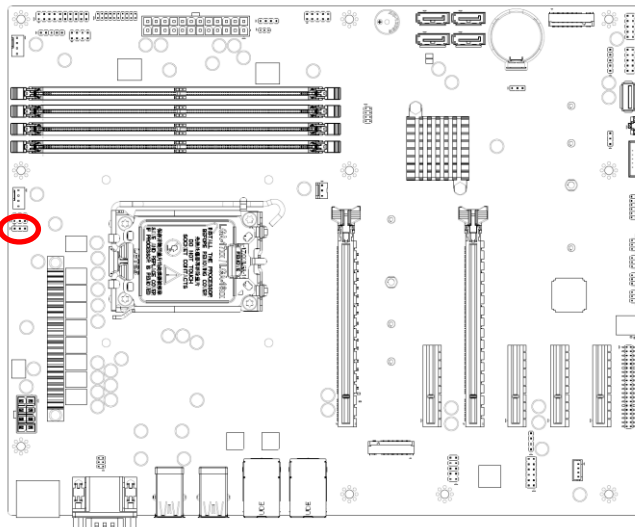

Config ID0*

 

Config ID1

 




* Default



Note: Config ID0: JCFGID (1-2), default.


Config ID1: JCFGID (2-3), for CPU power F/W adjustment.

2.5.7 AT/ATX Power Mode Select (JSATX1)

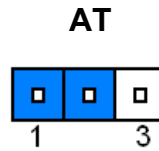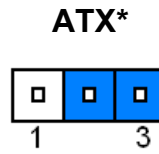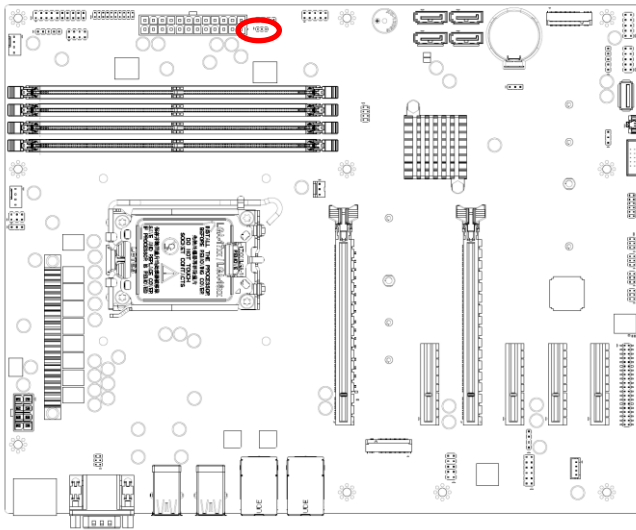


* Default

2.5.8 General purpose I/O connector (DIO1)


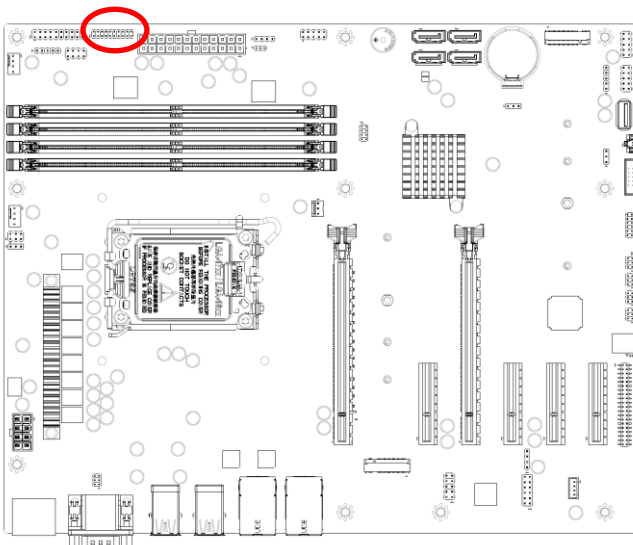


Signal	PIN	PIN	Signal
D10	1	2	DO0
D11	3	4	DO1
D12	5	6	DO2
D13	7	8	DO3
D14	9	10	DO4
D15	11	12	DO5
D16	13	14	DO6
D17	15	16	DO7
5V_SMB_CLK	17	18	5V_SMB_DATA
GND	19	20	+5V

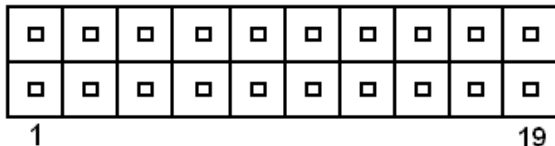



MAB-T690

2.5.9 ATX Power connector (ATXPWR1)

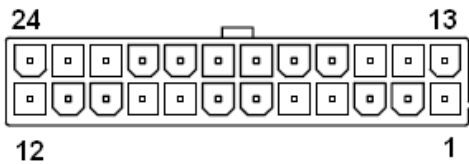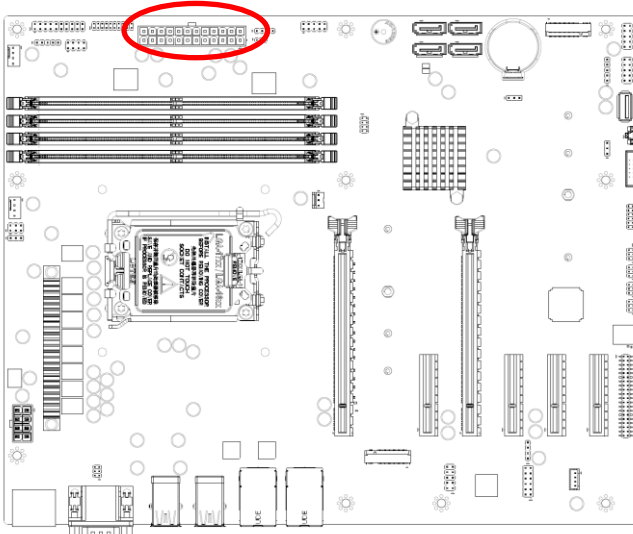



Signal	PIN	PIN	Signal
+3.3V	13	1	+3.3V
NC	14	2	+3.3V
GND	15	3	GND
ATX_PSON#	16	4	+5V
GND	17	5	GND
GND	18	6	+5V
GND	19	7	GND
NC	20	8	ATX24_PWROK
+5V	21	9	+5VSB
+5V	22	10	+12V
+5V	23	11	+12V
GND	24	12	+3.3V

2.5.10 Power connector (ATX12V1)

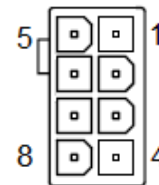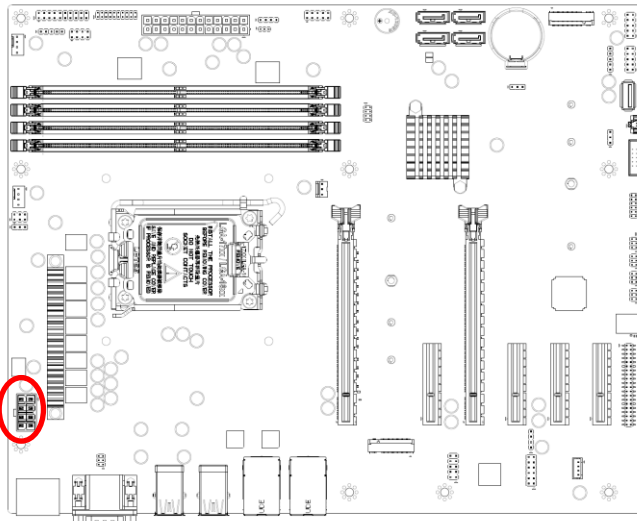

Signal	PIN	PIN	Signal
+12V	5	1	GND
+12V	6	2	GND
+12V	7	3	GND
+12V	8	4	ATX_2X4_DET

 

2.5.11 SMBus connector (JSMB1)

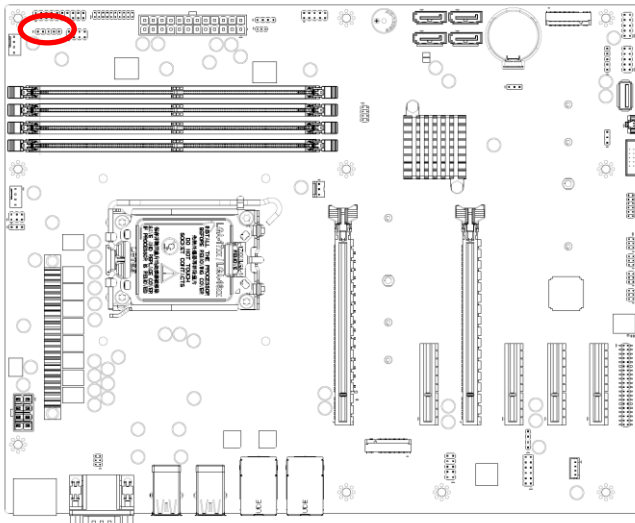

1

Signal	PIN
SMB_CLK	1
SMB_DATA	2
SMB_ALERT#	3
GND	4
+3.3V	5

 2.5.12 RTC Battery connector (BAT2)


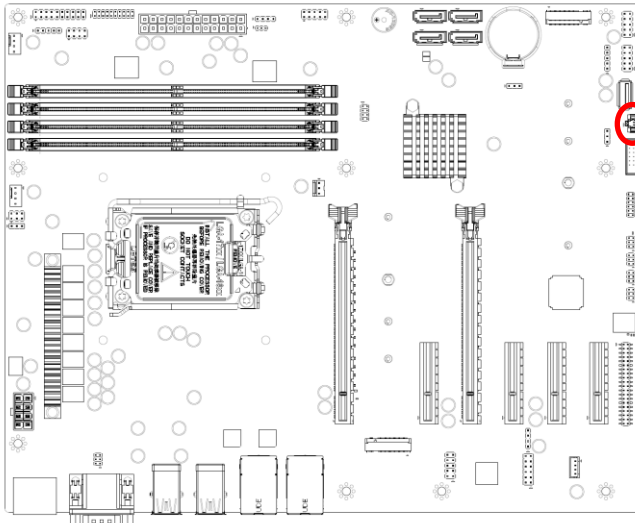


1

Signal	PIN
GND	2
VDD_RTC	1



MAB-T690

2.5.13 BIOS SPI connector (SPI1)

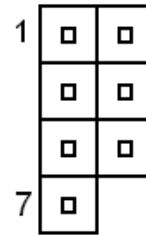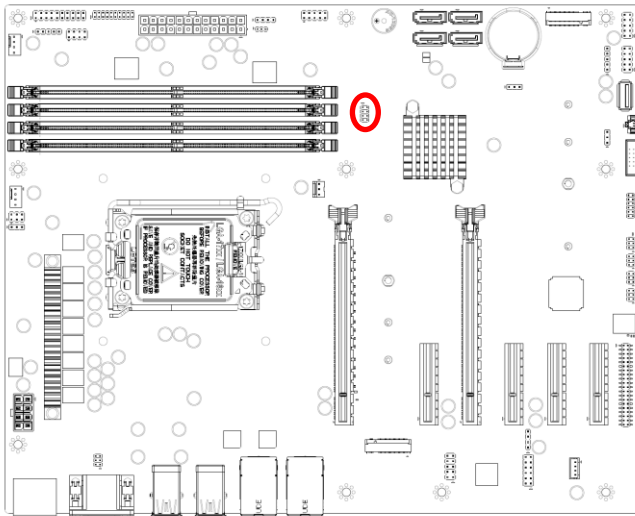



Signal	PIN	PIN	Signal
+3.3V	1	2	GND
CS0#	3	4	CLK
MISO	5	6	MOSI
HOLD#	7		

2.5.14 Front Panel connector (JFP1)

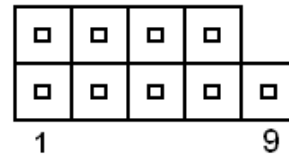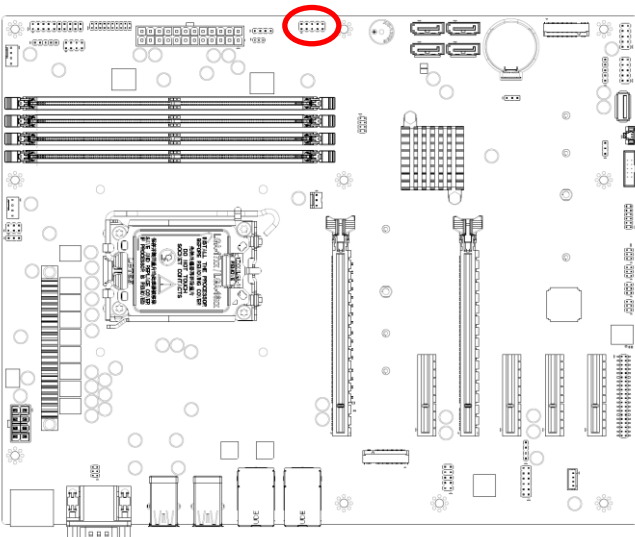



Funtion	Signal	PIN	PIN	Signal	Funtion
HDD LED	HDD_LED+	1	2	PWR_LED+	Power LED
	HDD_LED-	3	4	PWR_LED-	
Reset button	SYS_RST#	5	6	PWRBTN#	Power button
	GND	7	8	GND	
	NC	9			

 2.5.15 CPU fan connector (CPUFAN1)

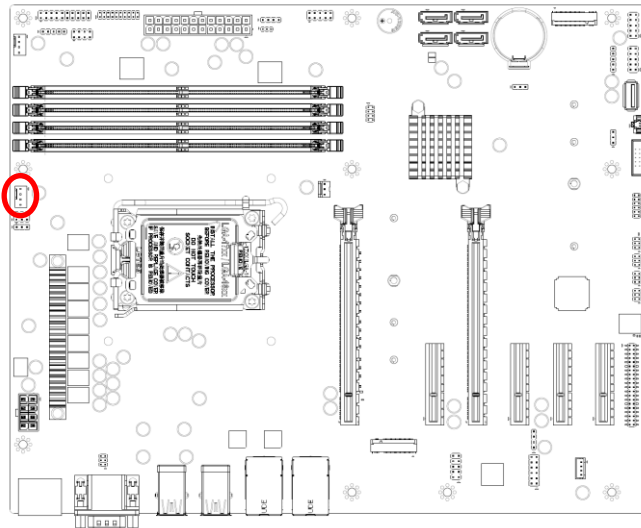



Signal	PIN
GND	1
+12V	2
TACH	3
PWM	4

 2.5.16 System fan connector (SYSFAN1)

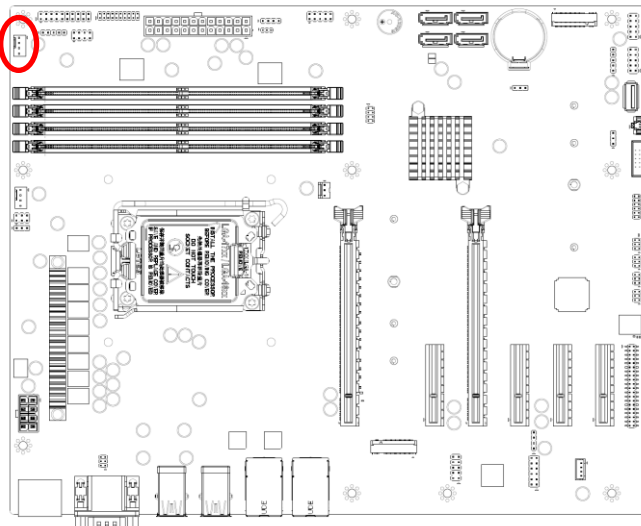



Signal	PIN
GND	1
+12V	2
TACH	3
PWM	4

 2.5.17 External Speaker connector (JBZ1)

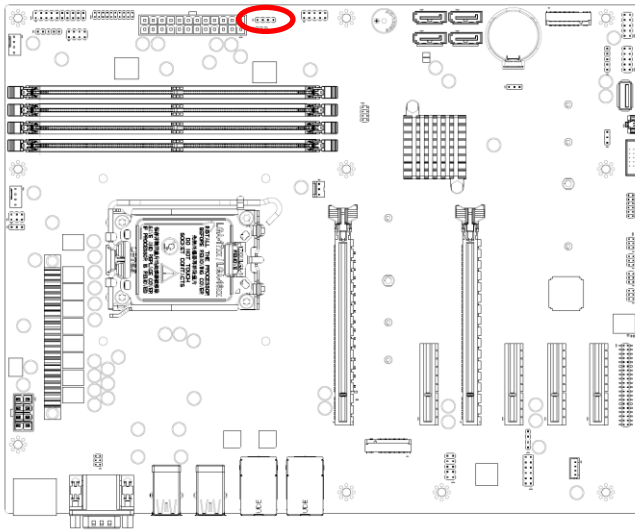



Signal	PIN
+5V	1
NC	2
NC	3
GND	4

2.5.18 Auxiliary Panel connector (JAUXP1)

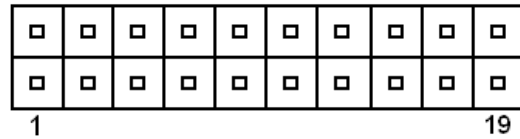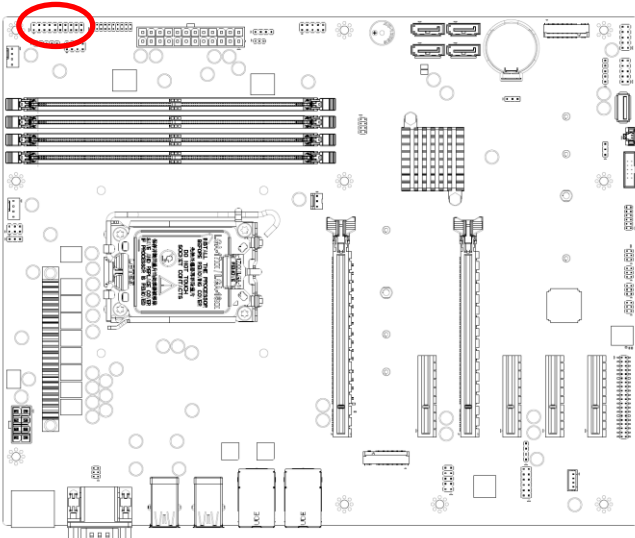



Signal	PIN	PIN	Signal
+5V	1	2	NC
NC	3	4	SMB_CLK
CASEOPEN#	5	6	NC
GND	7	8	GND
+5V	9	10	SMB_DATA
ERROR_LED#	11	12	+5V
FRONT_LAN1_ACT	13	14	FRONT_LAN1_LINK100_1000#
GND	15	16	FRONT_LAN1_LINK2500#
FRONT_LAN2_ACT	17	18	FRONT_LAN2_LINK100_1000#
GND	19	20	FRONT_LAN2_LINK2500#

2.5.19 Auxiliary Panel connector (JAUXP2)

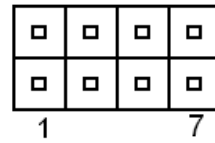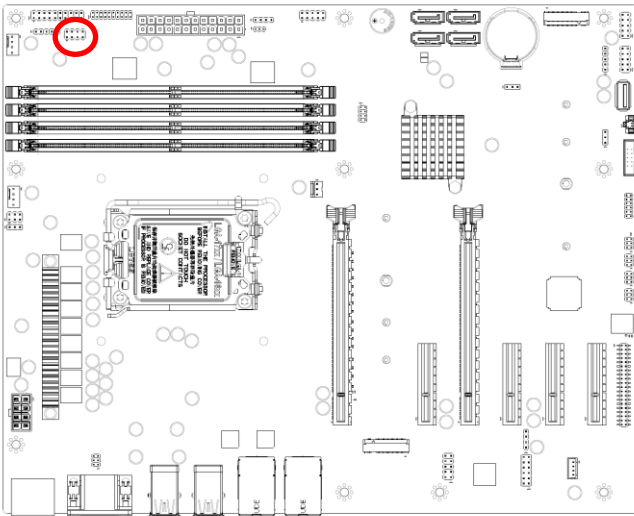

Signal	PIN	PIN	Signal
GND	1	2	GND
FRONT_LAN4_ACT	3	4	FRONT_LAN3_ACT
FRONT_LAN4_LINK100_1000#	5	6	FRONT_LAN3_LINK100_1000#
FRONT_LAN4_LINK_2500#	7	8	FRONT_LAN3A_LINK_2500#

2.5.20 Serial port 2 connector (COM2)

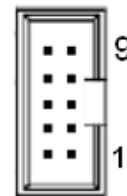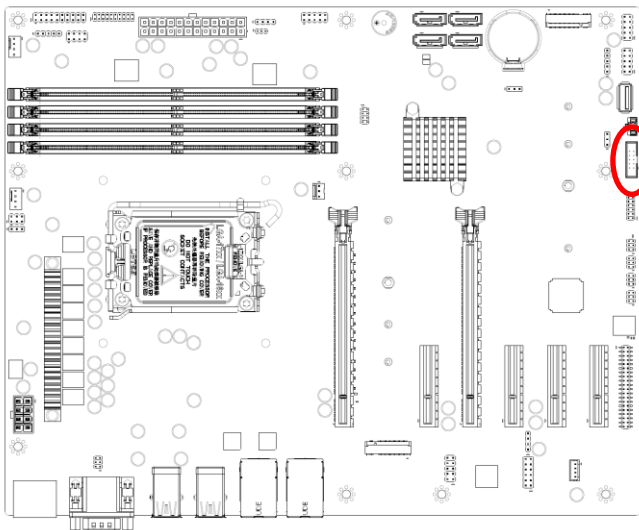



Signal	PIN	PIN	Signal
NC	10	9	RI#
CTS#	8	7	RTS#
DSR#	6	5	GND
DTR#	4	3	TXD
RXD	2	1	DCD#

Note:

PIN 9 can be selected to RI / 5V / 12V by jumper (JRI2).



MAB-T690

2.5.21 USB2.0 connector (JUSB1)

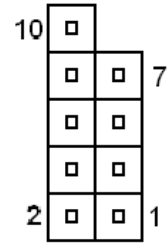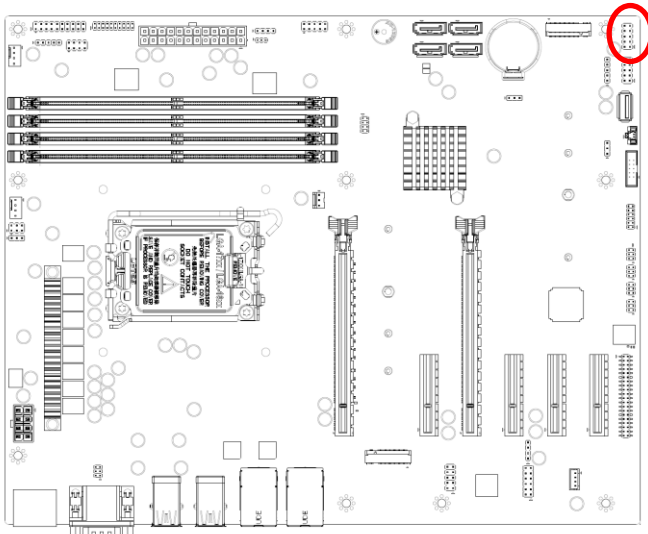



Signal	PIN	PIN	Signal
NC	10		
GND	8	7	GND
DATA+	6	5	DATA+
DATA-	4	3	DATA-
+5V	2	1	+5V

 2.5.22 USB2.0 connector (JUSB2)

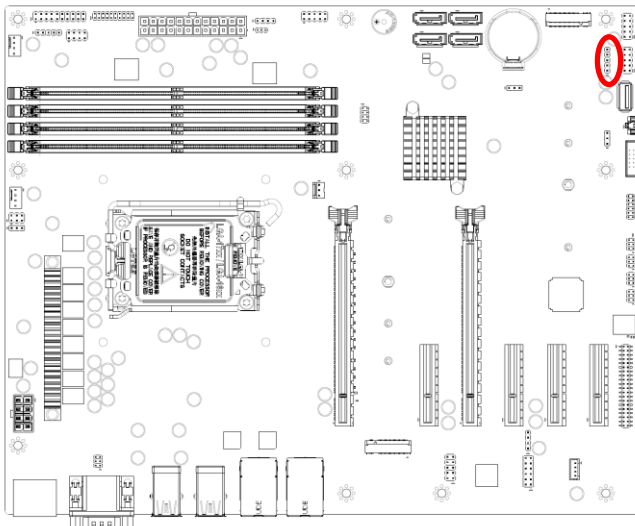



Signal	PIN
NC	5
GND	4
DATA+	3
DATA-	2
+5V	1

2.5.23 USB2.0 connector (JUSB4)

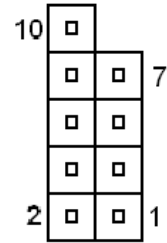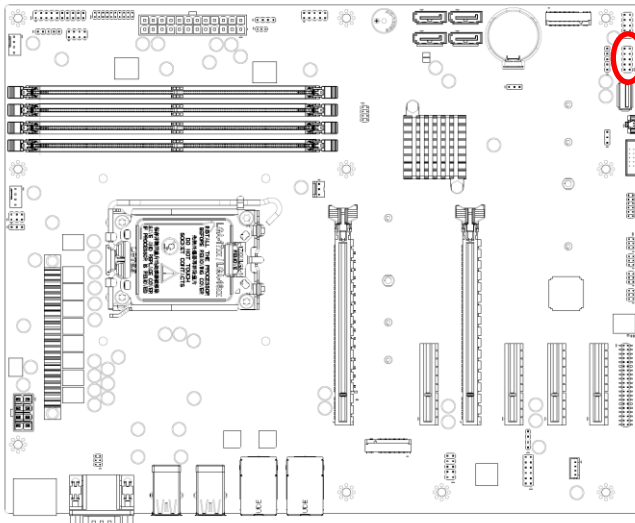

Signal	PIN	PIN	Signal
NC	10		
GND	8	7	GND
DATA+	6	5	DATA+
DATA-	4	3	DATA-
+5V	2	1	+5V

2.5.24 COM2 RS422/485 (J1RS2)

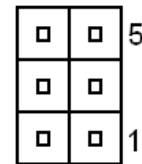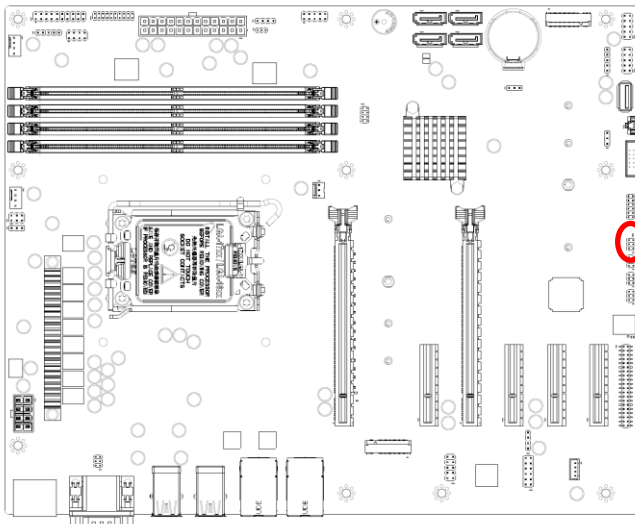

RS422



Signal	PIN	PIN	Signal
GND	6	5	+5V
RX-	4	3	RX+
TX+	2	1	TX-

RS485

Signal	PIN	PIN	Signal
GND	6	5	+5V
NC	4	3	NC
DATA+	2	1	DATA -

MAB-T690

2.5.25 COM3 RS422/485 (J1RS3)

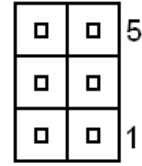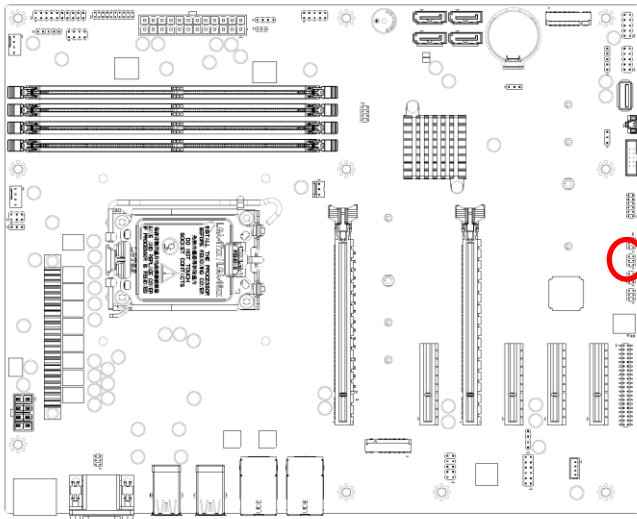



RS422

Signal	PIN	PIN	Signal
GND	6	5	+5V
RX-	4	3	RX+
TX+	2	1	TX-

RS485

Signal	PIN	PIN	Signal
GND	6	5	+5V
NC	4	3	NC
DATA+	2	1	DATA -



2.5.26 Auxiliary Fan connector (AUXFAN1)

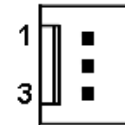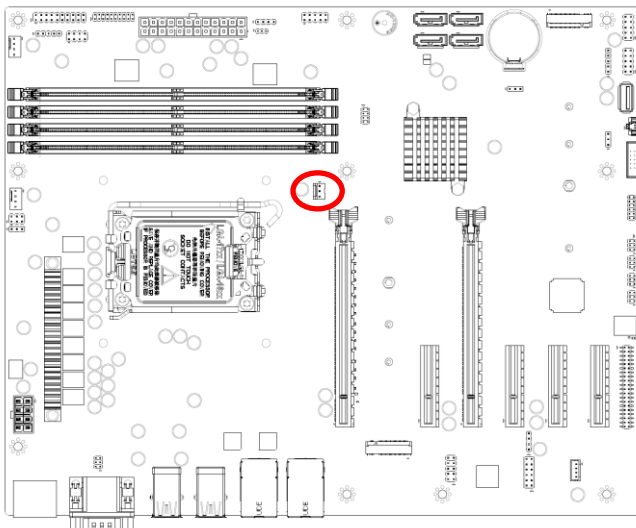

Signal	PIN
GND	1
+12V	2
TACH	3


2.5.27 power F/W programming (JPC1)

****The original setting is not allowed to be changed by user****

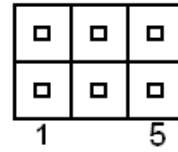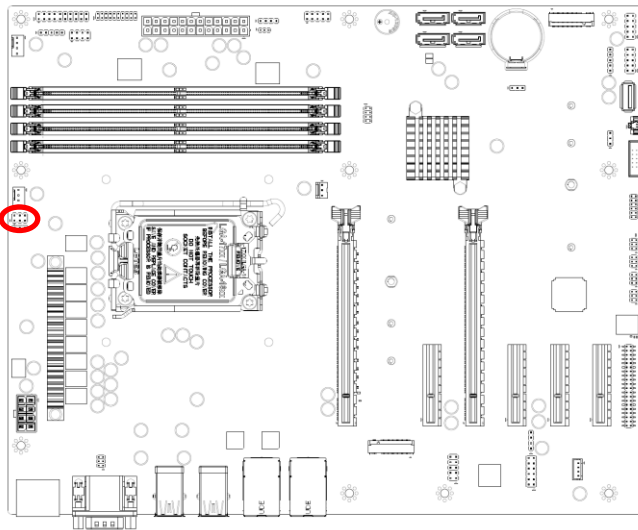

Signal	PIN	PIN	Signal
nPMALERT	1	2	PMSDA
GND	3	4	PMSCL
NC	5	6	+3.3V



2.5.28 Speaker connector (SPK1)

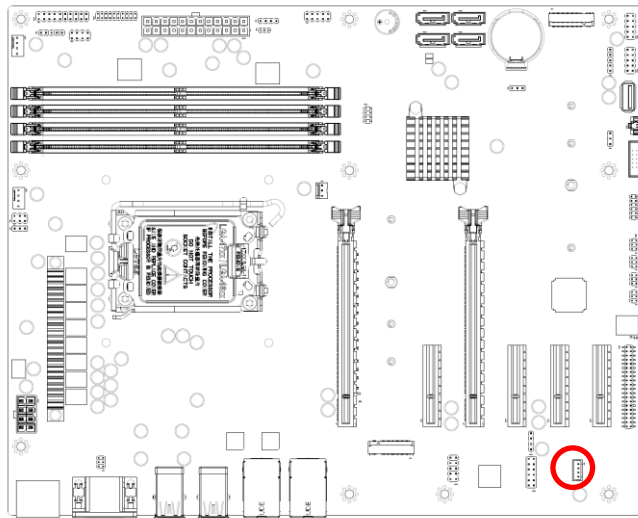

Signal	PIN
LSPK+	1
LSPK-	2
RSPK+	3
RSPK-	4



MAB-T690

 2.5.29 S/PDIF connector (JSPDIF1)

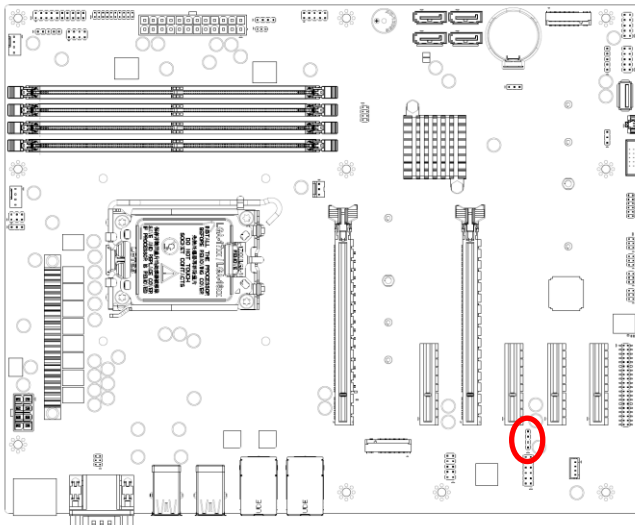



Signal	PIN
GND	4
SPDIF_OUT	3
+5V	1

2.5.30 AUDIO connector (FAUD1)

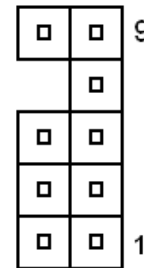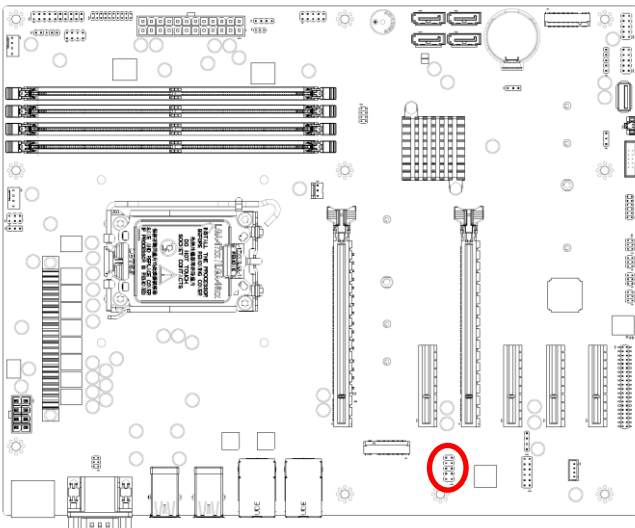



Signal	PIN	PIN	Signal
LINE2_JD	20	9	LINE2_L
		7	SENSE_B_JD3
MIC2_JD	6	5	LINE2_R
AUD_FRONT_DET	4	3	MIC2_R
GND	2	1	MIC2_L

2.5.31 ESPI Debug connector (JESPI1)

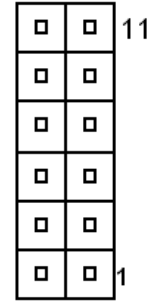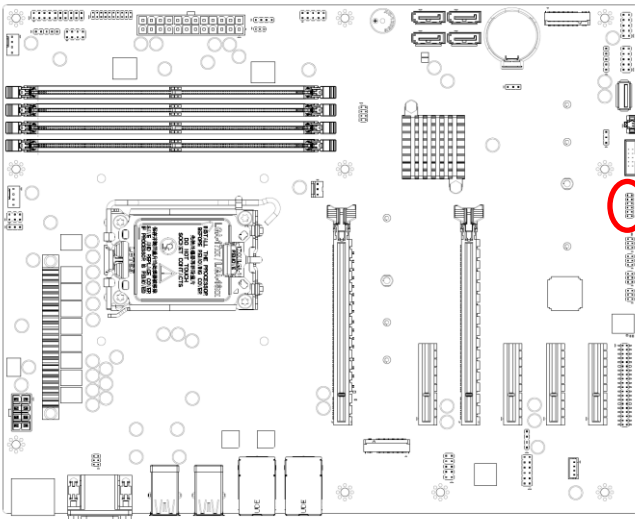

Signal	PIN	PIN	Signal
ESPI_ALERT#	12	11	ESPI_RST#
GND	10	9	ESPI_CS1#
ESPI_DEG_CLK	8	7	ESPI_IO3
ESPI_CS#	6	5	ESPI_IO2
PLT_RST#_BUF	4	3	ESPI_IO1
+3.3V	2	1	ESPI_IO0


2.5.32 Mic & Line-in connector (REAR1)

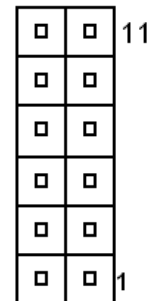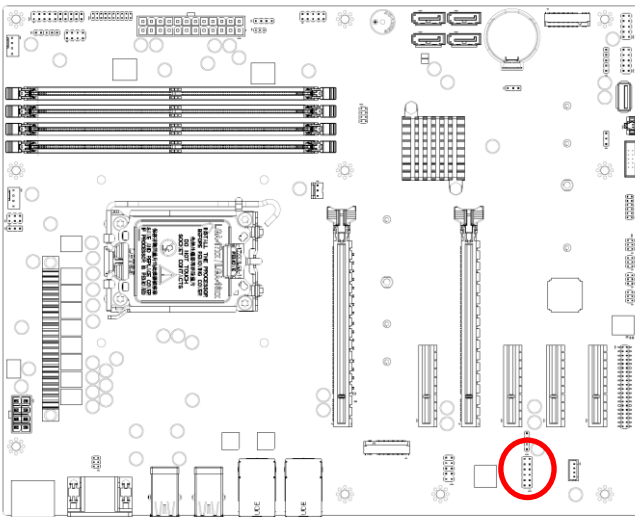

Signal	PIN	PIN	Signal
GND	12	11	MIC1_JD
LINE1_JD	10	9	AMP_DIS_JD
MIC1_LIN	8	7	MIC1_RIN
LINE1_LIN	6	5	LINE1_RIN
GND	4	3	GND
FRONT_LIN	2	1	FRONT_RIN


MAB-T690

2.5.33 Serial port 3-6 connector (4COM1)

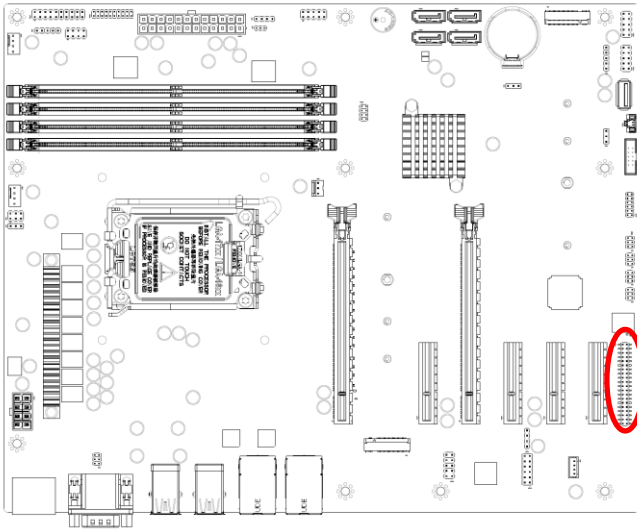



Note:

COM3 PIN 9 can be selected to RI / 5V / 12V by jumper (JRI3).

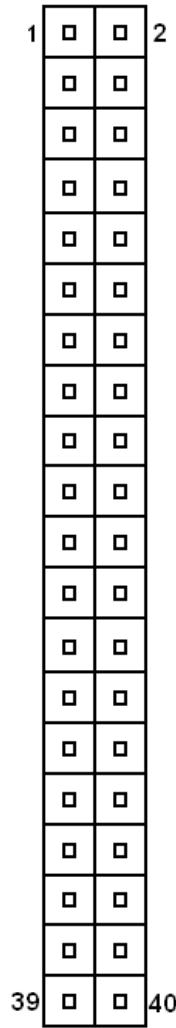

Signal	PIN	PIN	Signal
DCD3#	1	2	RXD3
TXD3	3	4	DTR3#
GND	5	6	DSR3#
RTS3#	7	8	CTS3#
RI3#	9	10	NC
DCD4#	11	12	RXD4
TXD4	13	14	DTR4#
GND	15	16	DSR4#
RTS4#	17	18	CTS4#
NRI4#	19	20	NC
DCD5#	21	22	RXD5
TXD5	23	24	DTR5#
GND	25	26	DSR5#
RTS5#	27	28	CTS5#
RI5#	29	30	NC
DCD6#	31	32	RXD6
TXD6	33	34	DTR6#
GND	35	36	DSR6#
RTS6#	37	38	CTS6#
RI6#	39	40	NC

 2.5.34 Serial port 1 connector (COM1)

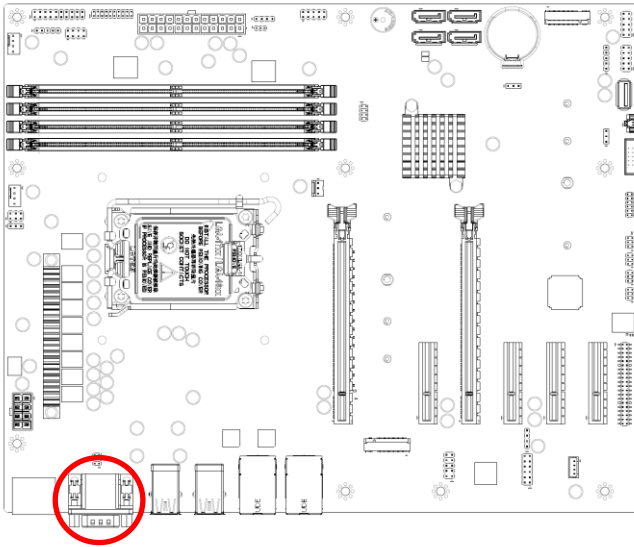

Signal	PIN	PIN	Signal
DCD#	1	2	RXD
TXD	3	4	DTR#
GND	5	6	DSR#
RTS#	7	8	CTS#
RI#	9	10	NC

Note:

Note: PIN 9 can be selected to RI / 5V / 12V by jumper (JR11).

3. Installation



Removing the Top Cover Warning

To prevent electric shock or system damage, before removing the chassis cover, must turn off power and disconnect the unit from power source.

Electrostatic discharge (ESD) can cause serious damage to electronic components. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the product is accessed internally, or any other electrical component is handled, the following anti-static precautions are strictly adhered to:


- Wear an anti-static wristband: Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- Self-grounding: Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- Use an anti-static pad: When configuring the product, place it on an anti-static pad. This reduces the possibility of ESD damaging the product.
- Only handle the edges of the PCB: When handling the PCB, hold the PCB by the edges.

Installation Precautions

When installing the box PC, please follow the precautions listed below:

- Power turned off: When installing the box PC, make sure the power is off. Failing to turn off the power may cause severe injury to the body and/or damage to the system.
- Certified Engineers: Never open the equipment. For safety reasons, the equipment should be opened only by qualified skilled person.
- Anti-static Discharge: If a user open the rear of the box PC, to configure the jumpers or plug in added peripheral devices, ground themselves first and wear an anti-static wristband.

3.1 Disassembly Procedures (MAB-T690)

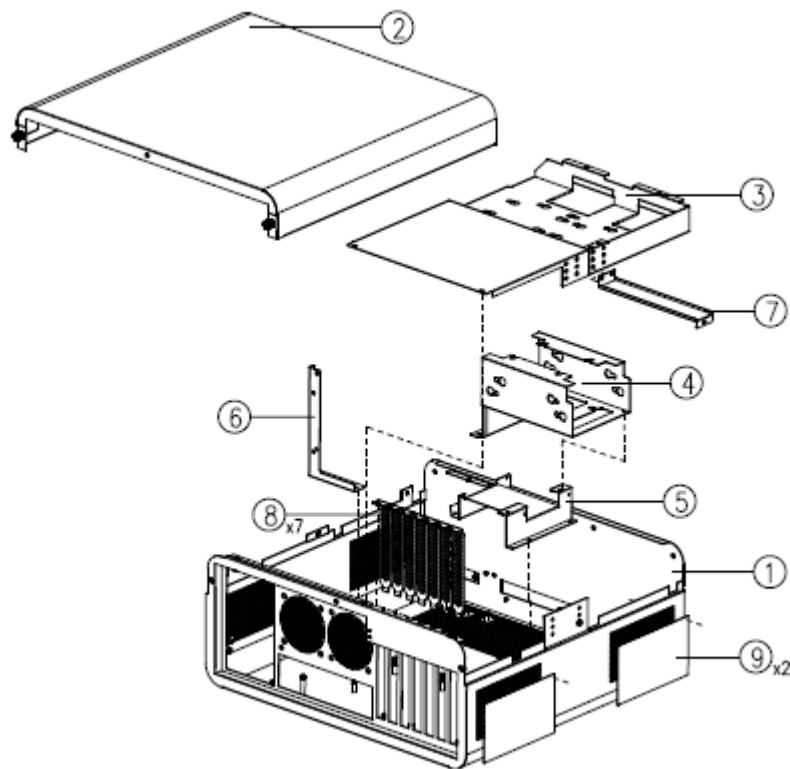

Step1. Loosen the screws securing the top cover. (Turn off the power before proceeding)

Step2. Lift the top cover upward carefully.

Step3. Unscrew and remove the HDD bracket.

Step4. Remove the HDD from the bracket, keep screws for reassembly.

Step5. Unscrew the IO bracket and pull it out.

Step6. Unscrew the PCIe bracket and slide the bracket out.

Step7. Disconnect power cables first, unscrew and remove the PSU bracket.

Step8. Disconnect fan cables and unscrew and remove all fans (total 7 pcs).

Step9. Release clips or screws and pull the front cover outward.

3.2 System Mounting

Warning! *More than one person should participate in mounting the box PC to prevent accidental damage to the personal injury.*



Safety Precautions

Observe the following common safety precautions before installing any electronic device:


- Use separate, non-intersecting paths to route power and networking wires. If power wiring and device wiring paths must be crossed make sure the wires are perpendicular at the intersection point.
- Keep the wires separated according to the interface. Wires that share similar electrical characteristics must be bundled together.
- Do not bundle input wiring with output wiring. Keep them separate.
- When necessary, it is strongly advised that you label wiring to all devices in the system.

4. Drivers Installation

All the drivers are available on Avalue Downloads Area (<https://www.avalue.com/en/support/download>). Type the model name and press Enter to find all the relevant software, utilities, and documentation.



Chipset **1**
Audio **2**
Graphics **1**
LAN **1**
Other Driver **3**
ME **1**

Chipset

No.	Release Date	Title, Description	Operating System	Download
01	2025-05-09	Intel MTL Chipset driver 10.1.19627.8423 Intel MTL Chipset driver 10.1.19627.8423	Windows 11 64bit	

Total **1** Files

Audio

No.	Release Date	Title, Description	Operating System	Download
01	2025-05-09	Realtek Audio Driver 9721.1 Realtek Audio Driver 9721.1	Windows 11 64bit	
02	2025-05-09	Intel(R)_SST_MTL_v20.40.10915.2 Intel(R)_SST_MTL_v20.40.10915.2	Windows 11 64bit	

Total **2** Files

(For reference only)



Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.


4.1 Install Chipset Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalu.com>



Note: The installation procedures and screen shots in this section are based on Windows 11 operation system. If the warning message appears while the installation process, click Continue to go on.

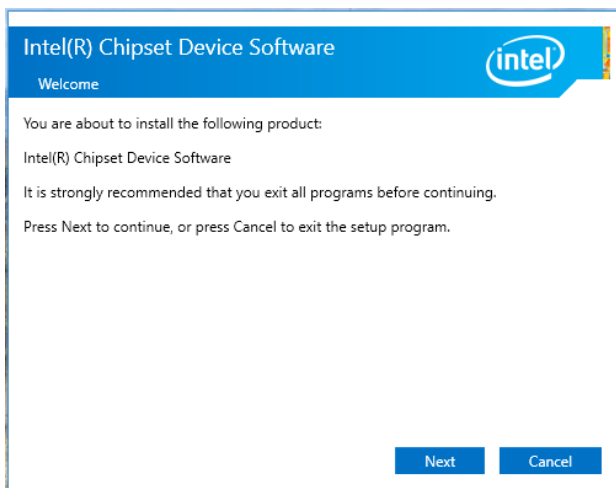

Step1. Click Next.

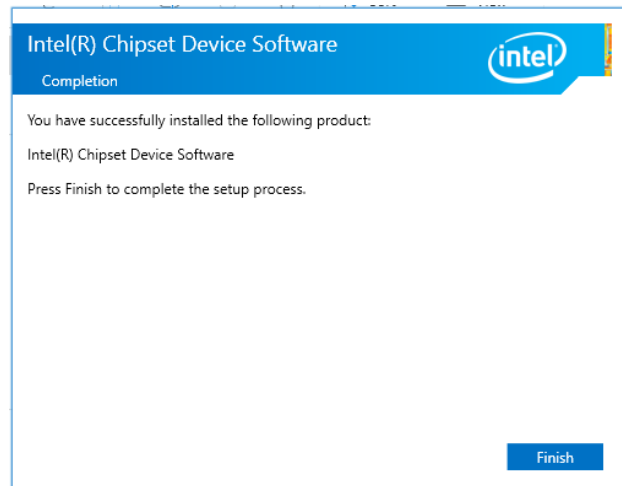

Step 3. Click Finish.



Step 2. Click Accept.

4.2 Install Graphics Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com>




Note: The installation procedures and screen shots in this section are based on Windows 11 operation system.




Step 1. Click **Begin installation.**

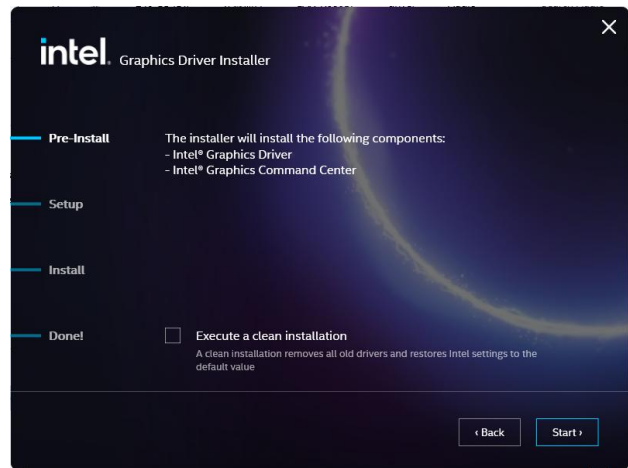

Step 3. Click **Start.**

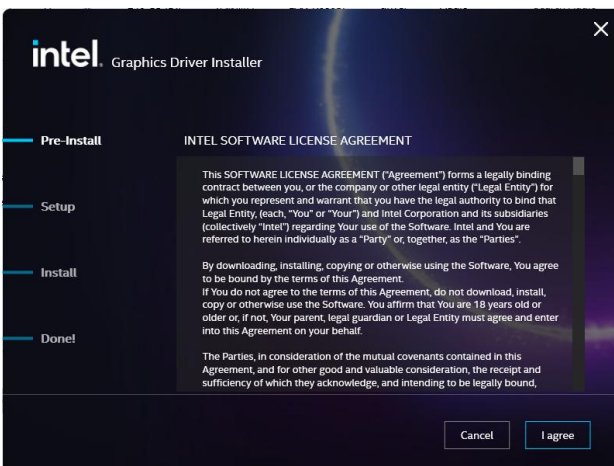

Step 2. Click **I agree.**

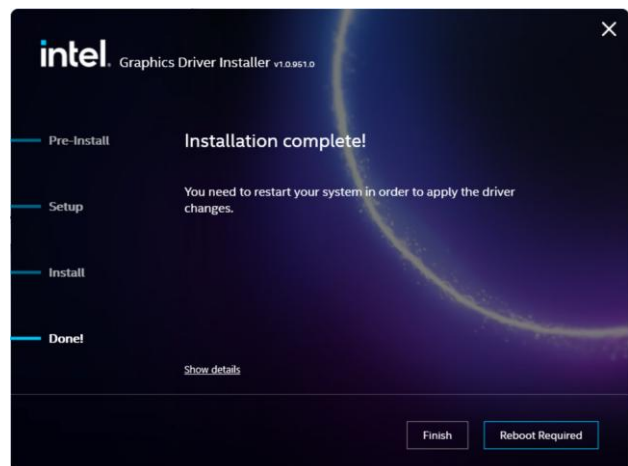

Step 4. Click **Finish** to complete setup.


4.3 Install ME Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com>




Note: The installation procedures and screen shots in this section are based on Windows 11 operation system.

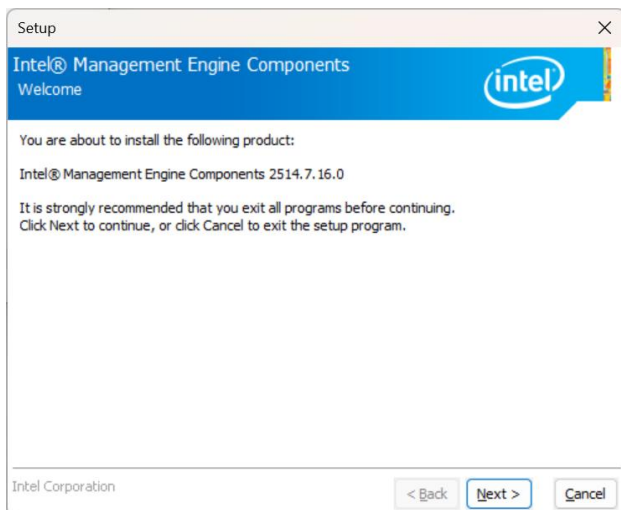


Step 1. Click **Next** to continue setup.

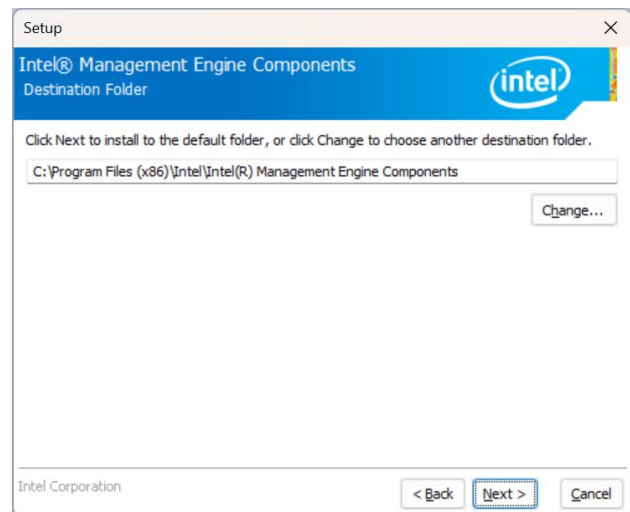

Step 3. Click **Next**

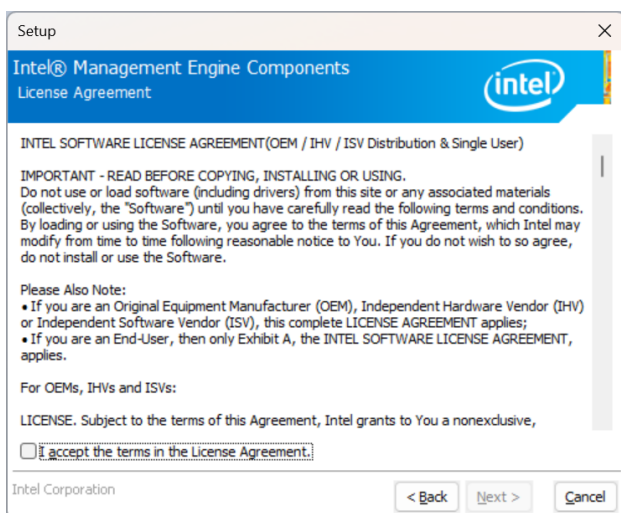

Step 2. Click **Next**.

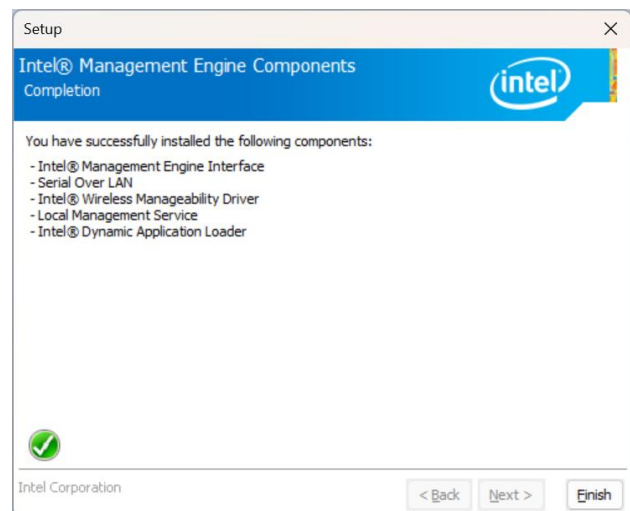

Step 4. Click **Finish** to complete the setup

4.4 Install Audio Driver (For Realtek ALC888S HD Audio)

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com>



Note: The installation procedures and screen shots in this section are based on Windows 11 operation system.



Step 1. Click **Next** to Install.

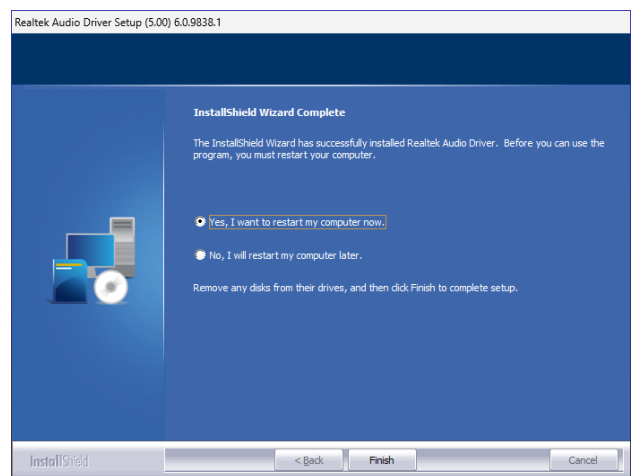

Step 2. Select **Finish** to complete Installation.

4.5 Install LAN Driver


All drivers can be found on the Avalue

Official Website:


<http://www.avalu.com>



Note: The installation procedures and screen shots in this section are based on Windows 11 operation system.

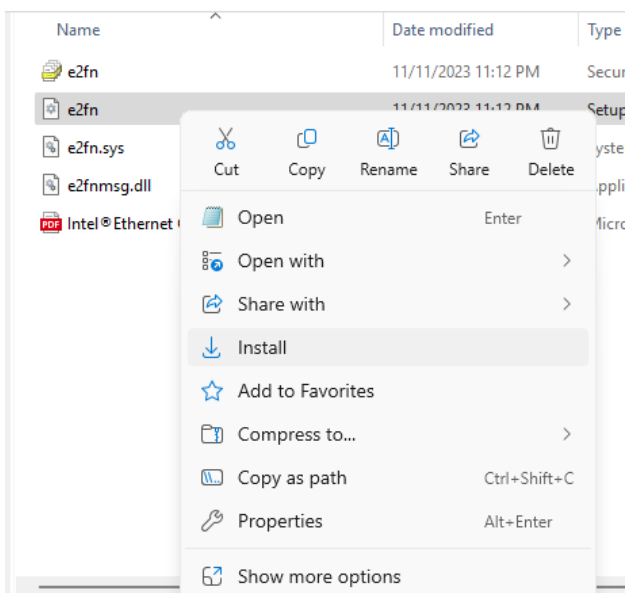

Step 1. Click **Install Drivers and Software**.

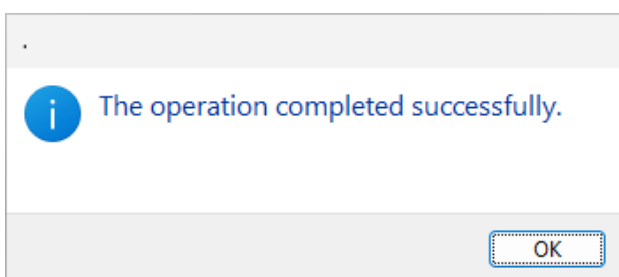

Step 2. Click **OK**.


4.6 Install GNA Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com>



Note: The installation procedures and screen shots in this section are based on Windows 11 operation system.

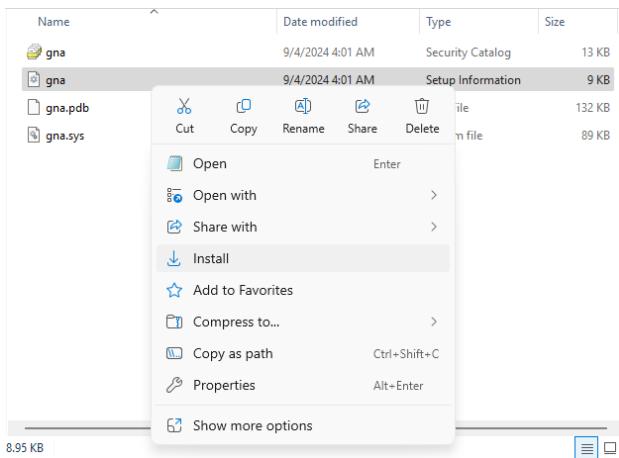

Step 1. Click Install Drivers and Software.

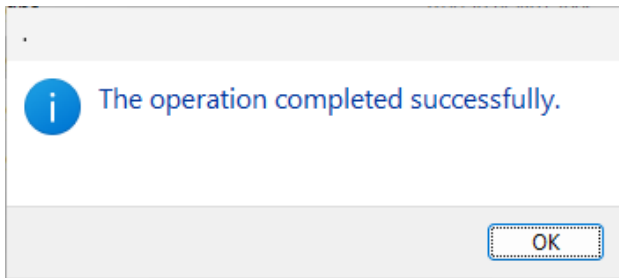

Step 2. Click OK.


4.7 Install HID Driver

All drivers can be found on the Avalue
Official Website:


<http://www.avalu.com>



Note: The installation procedures and screen shots in this section are based on Windows 11 operation system.

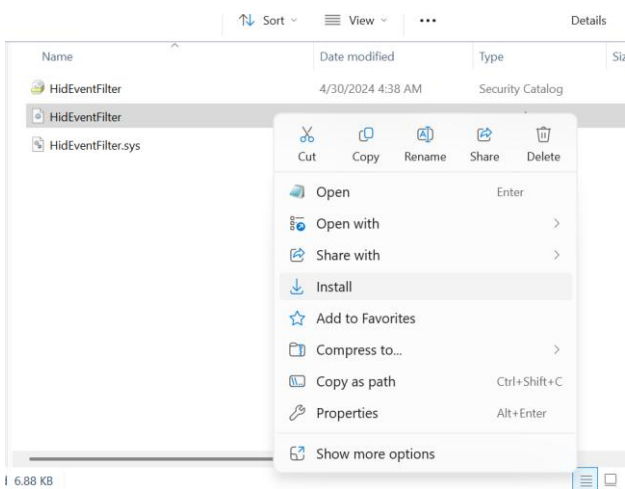

Step 1. Click Install Drivers and Software.

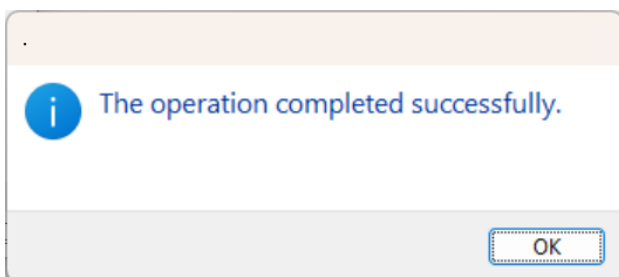

Step 2. Click OK.


4.8 Install SIO Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com>




Note: The installation procedures and screen shots in this section are based on Windows 11 operation system.

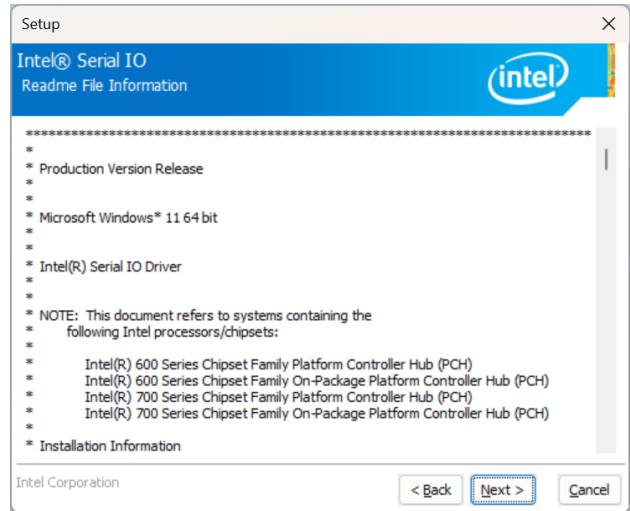


Step 3. Click Next




Step 1. Click Next to continue setup.

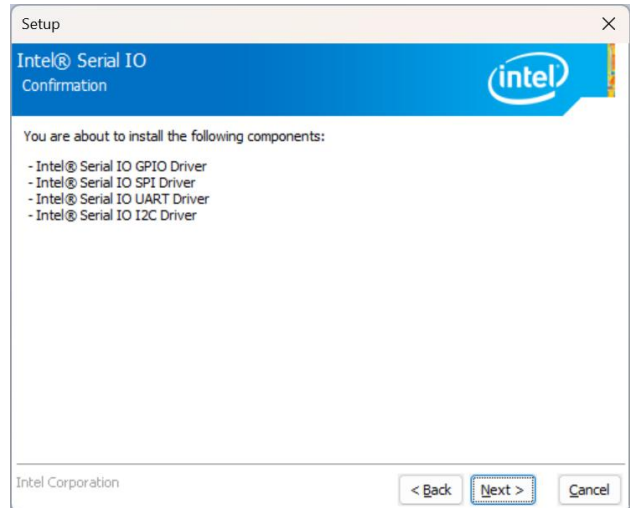

Step 4. Click Next

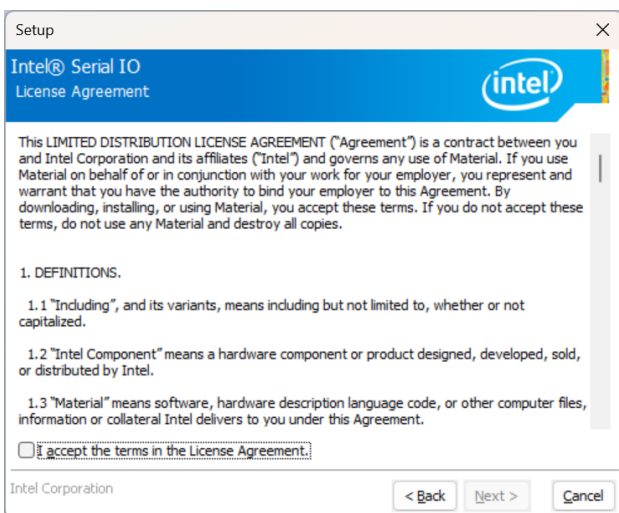

Step 2. Click Next.

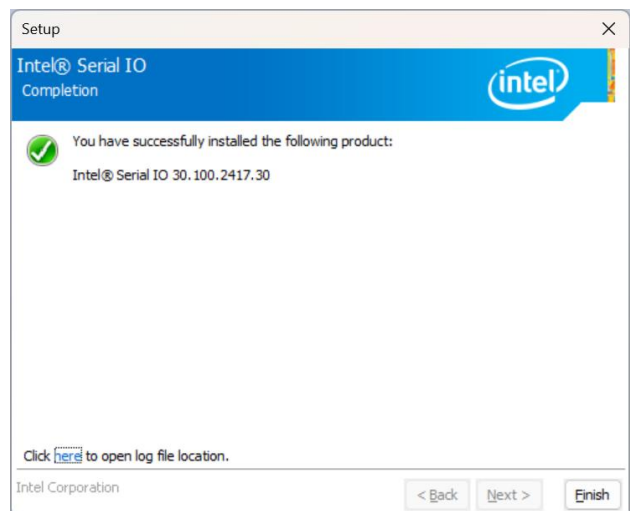

Step 5. Click Finish to complete the setup

5. BIOS Setup

5.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

5.2 Starting Setup

The AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing or <F2> immediately after switching the system on, or

By pressing the or <F2> key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

Press or <F2> to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to.

Press F1 to Continue, DEL to enter SETUP

5.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values.
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

5.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the F1 key again.

5.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.


The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

5.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

5.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

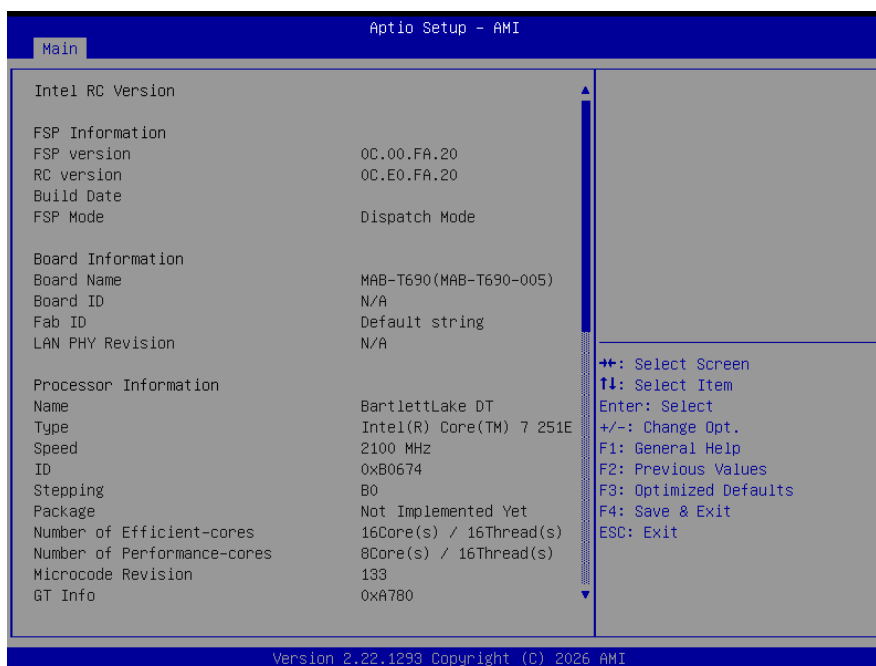

MAB-T690

5.6.1.1 System Language

This option allows choosing the system default language.

5.6.1.2 System Date

Use the system date option to set the system date. Manually enter the mm-dd-yyyy.

5.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.



Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen. Visit the Avalue website (www.avalu.com) to download the latest product and BIOS information.

5.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.




5.6.2.1 CPU Configuration




Item	Options	Description
Intel (VMX) Virtualization Technology	Disabled Enabled [Default] ,	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Active Performance-cores	All[Default] , /7/6/5/4/3/2/1	Number of P-cores to enable in each processor package. Note: Number of Cores and E-cores are looked at together. When both are {0,0}, Pcode will enable all cores.
Active Efficient-cores	All[Default] , 15/14/13/12/11/10/9/8 /7/6/5/4/3/2/1/0	Number of E-cores to enable in each processor package. Note: Number of Cores and E-cores are looked at together. When both are {0,0}, Pcode will enable all cores.
Hyper-Threading	Disabled Enabled [Default] ,	Enable or Disable Hyper-Threading Technology.

MAB-T690


5.6.2.1.1 Efficient-core Information

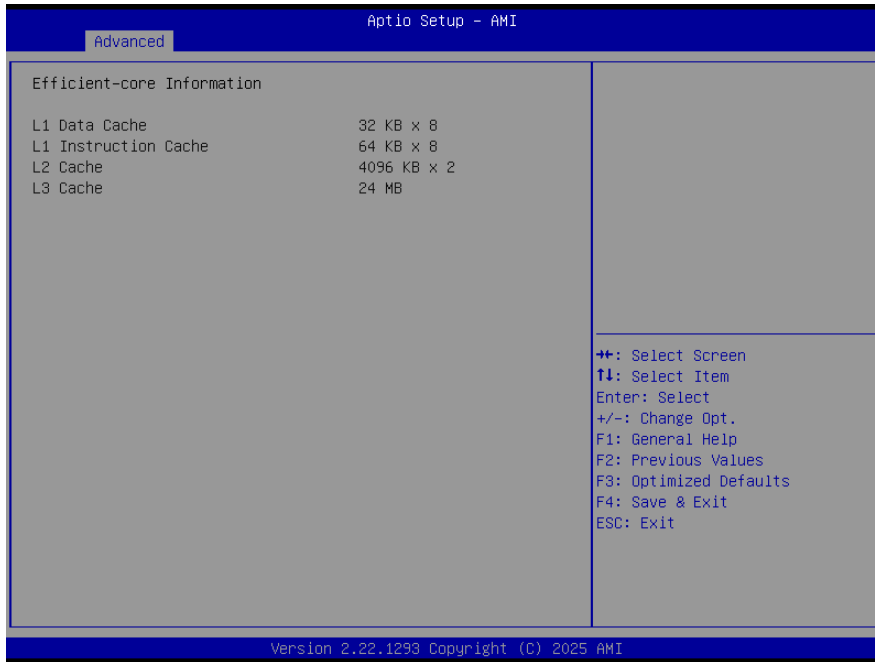

5.6.2.1.2 Performance-core Information

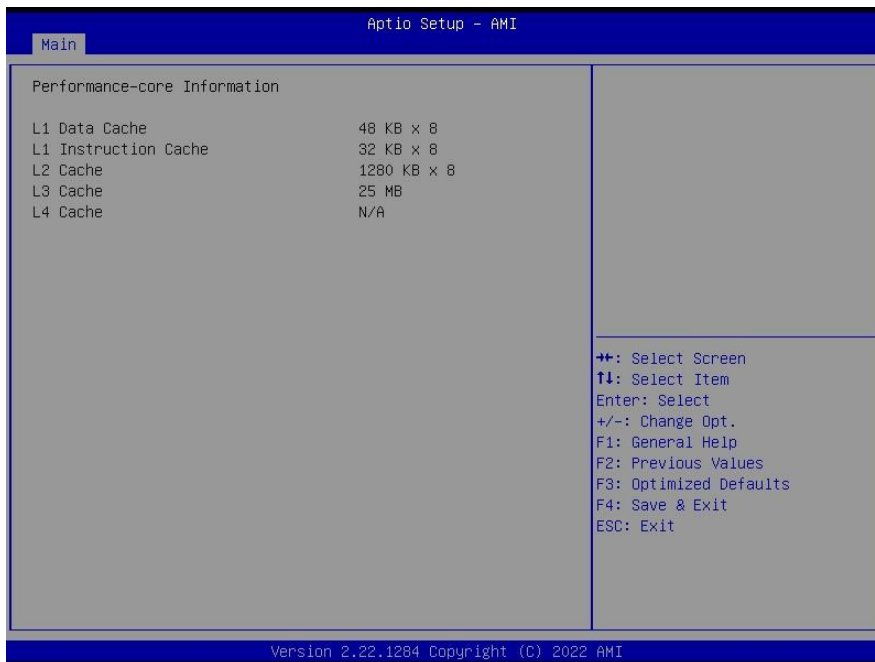


5.6.2.1.3 CPU - Power Management Control

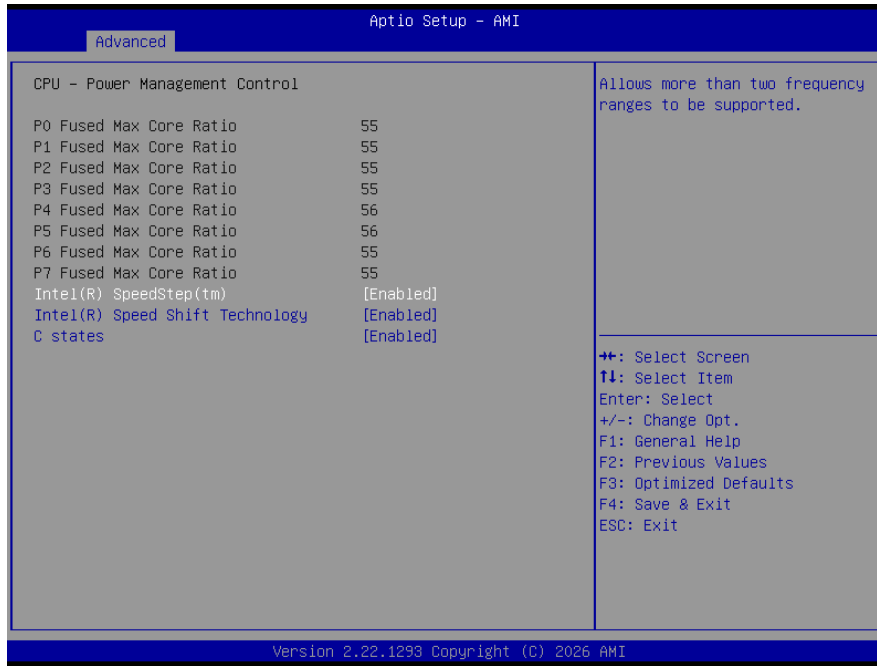


Item	Options	Description
Intel(R) SpeedStep(tm)	Disabled Enabled[Default],	Allows more than two frequency ranges to be supported.
Intel(R) Speed Shift Technology	Disabled Enabled[Default],	Enable/Disable Intel(R) Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.
C states	Disabled Enabled[Default],	Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

5.6.2.2 PCH-FW Configuration

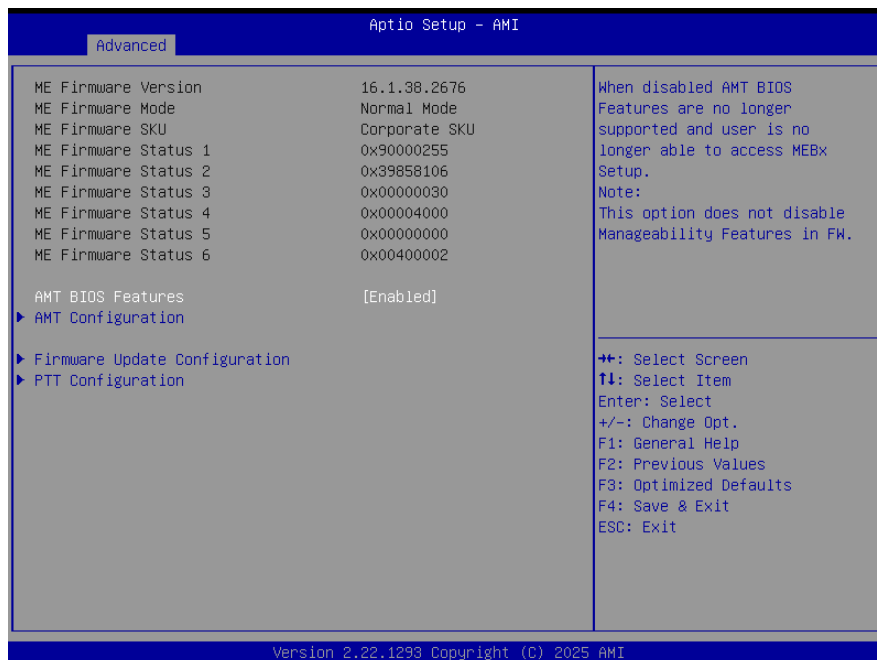


Item	Options	Description
AMT BIOS Features	Disabled Enabled[Default],	When disabled AMT BIOS Features are no longer supported and user is no longer able to access MEBx Setup. Note: This option does not disable Manageability Features in FW.

5.6.2.3 AMT Configuration

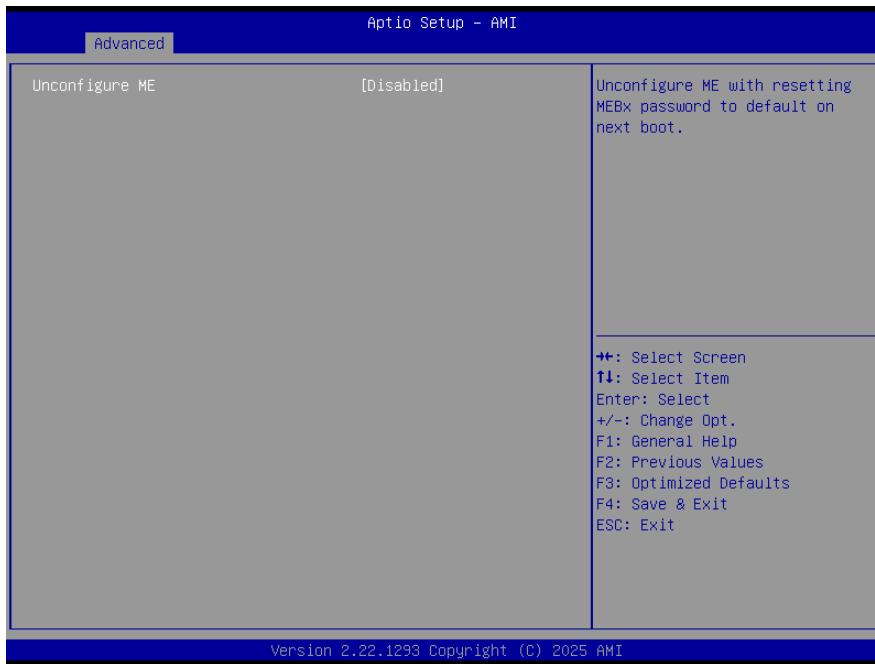


Item	Description
Unconfigure ME	Unconfigure ME with resetting MEBx password to default on next boot.

5.6.2.3.1 Firmware Update Configuration

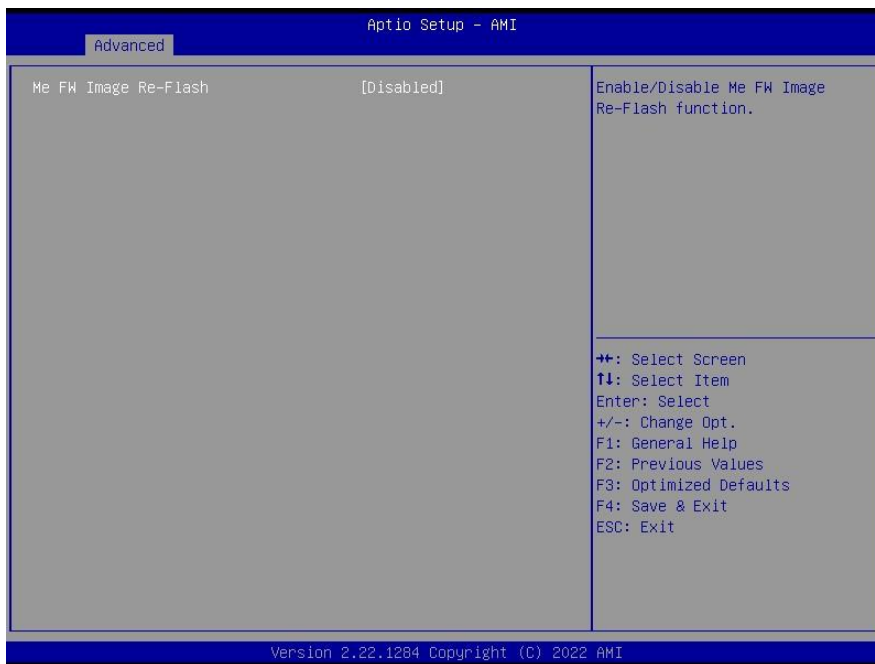

Item	Option	Description
Me FW Image Re-Flash	Disabled[Default], Enabled	Enable/Disable Me FW Image Re-Flash function.

5.6.2.3.2 PTT Configuration

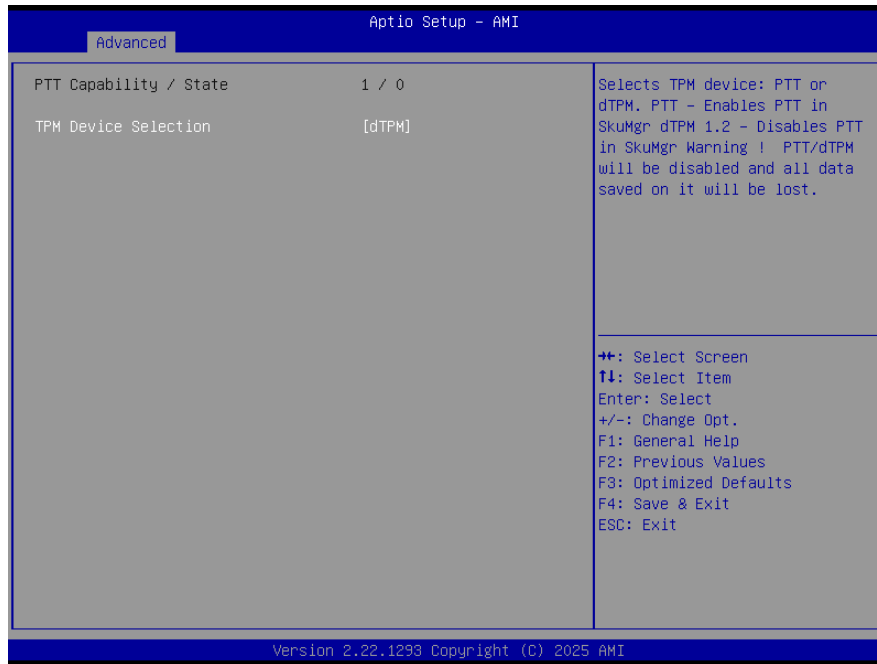


Item	Option	Description
TPM Device Selection	dTPM[Default], PTT	Selects TPM device: PTT or dTPM. PTT - Enables PTT in SkuMgr dTPM 1.2 - Disables PTT in SkuMgr Warning ! PTT/dTPM will be disabled and all data saved on it will be lost.

5.6.2.4 Trusted Computing



Item	Options	Description
Security Device Support	Disabled Enabled[Default],	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not available.

5.6.2.5 ACPI Settings

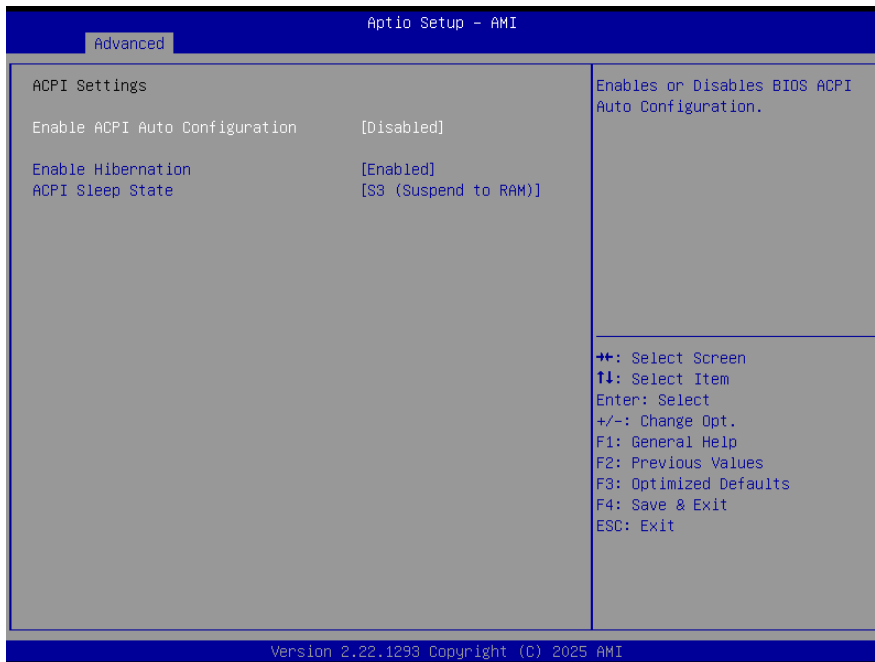


Item	Options	Description
Enable ACPI Auto Configuration	Disabled[Default], Enabled	Enables or Disables BIOS ACPI Auto Configuration.

Enable Hibernation	Disabled Enabled[Default],	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems.
ACPI Sleep State	Suspend Disabled, S3 (Suspend to RAM)[Default]	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.


5.6.2.6 Super IO Configuration

You can use this item to set up or change the Super IO configuration for serial ports. Please refer to 5.6.2.6.1~ 5.6.2.6.6 for more information.

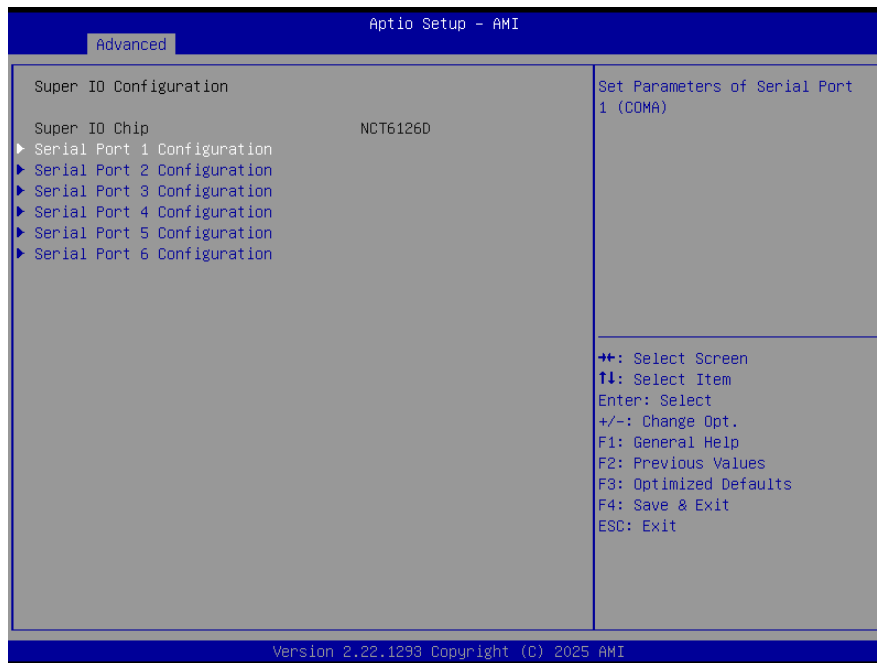


Item	Description
Serial Port 1 Configuration	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Set Parameters of Serial Port 2 (COMB).
Serial Port 3 Configuration	Set Parameters of Serial Port 3 (COMC).
Serial Port 4 Configuration	Set Parameters of Serial Port 4 (COMD).
Serial Port 5 Configuration	Set Parameters of Serial Port 5 (COME).
Serial Port 6 Configuration	Set Parameters of Serial Port 6 (COMF).

5.6.2.6.1 Serial Port 1 Configuration

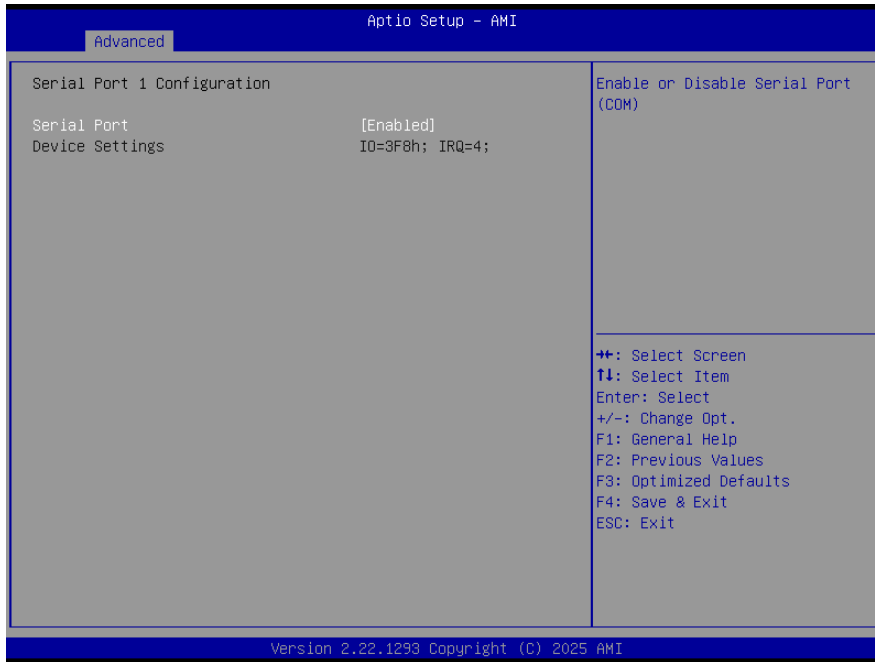


Item	Option	Description
Serial Port	Disabled Enabled[Default],	Enable or Disable Serial Port (COM).

5.6.2.6.2 Serial Port 2 Configuration

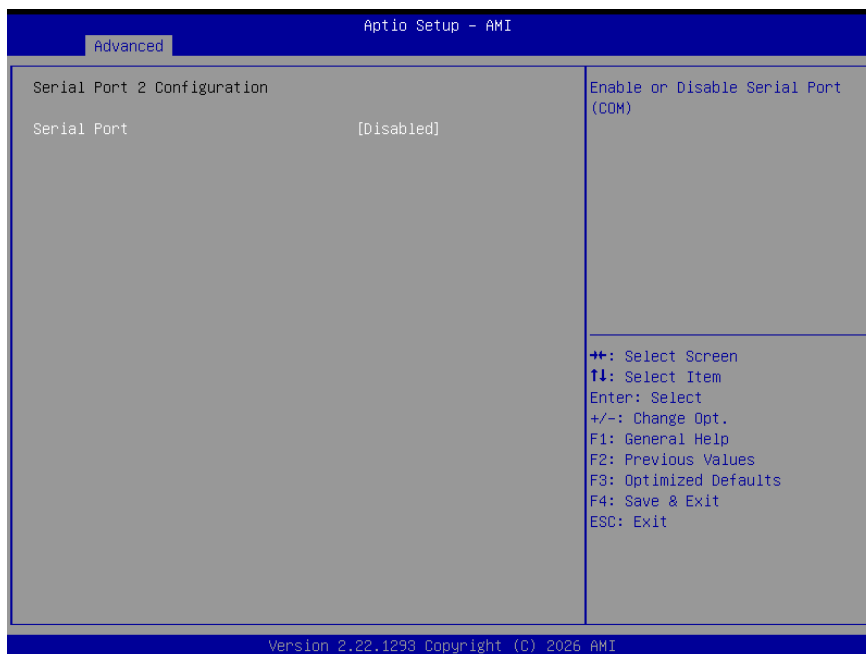


Item	Option	Description
Serial Port	Disabled[Default], Enabled	Enable or Disable Serial Port (COM).

5.6.2.6.3 Serial Port 3 Configuration

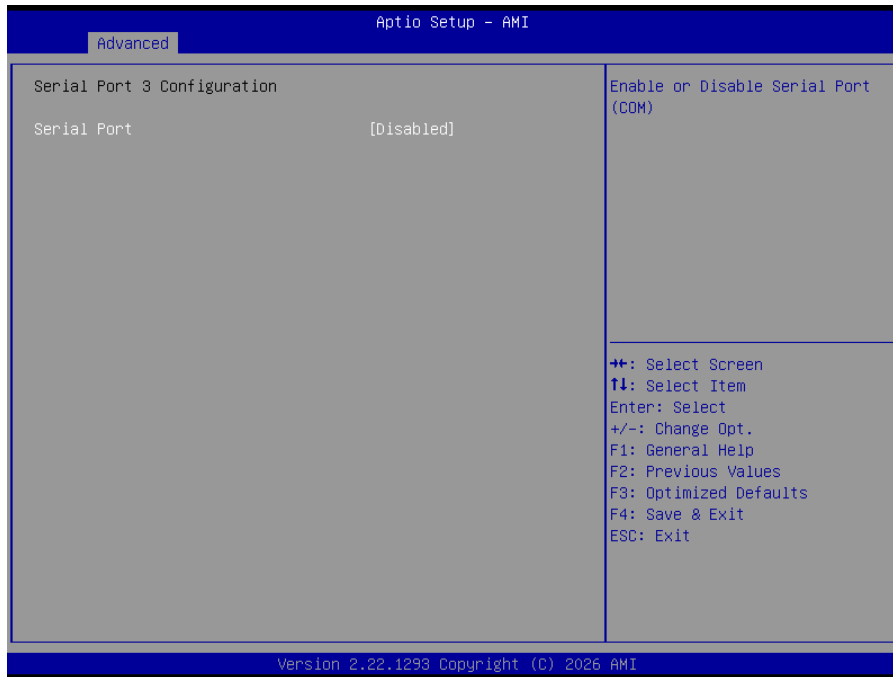


Item	Option	Description
Serial Port	Disabled[Default], Enabled	Enable or Disable Serial Port (COM).

5.6.2.6.4 Serial Port 4 Configuration

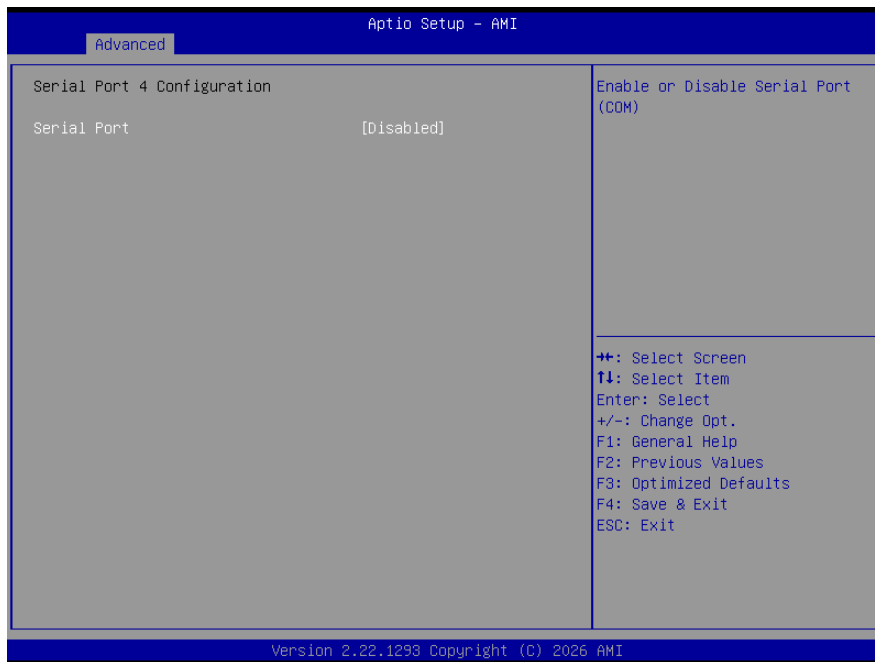

Item	Option	Description
Serial Port	Disabled[Default], Enabled	Enable or Disable Serial Port (COM).

5.6.2.6.5 Serial Port 5 Configuration

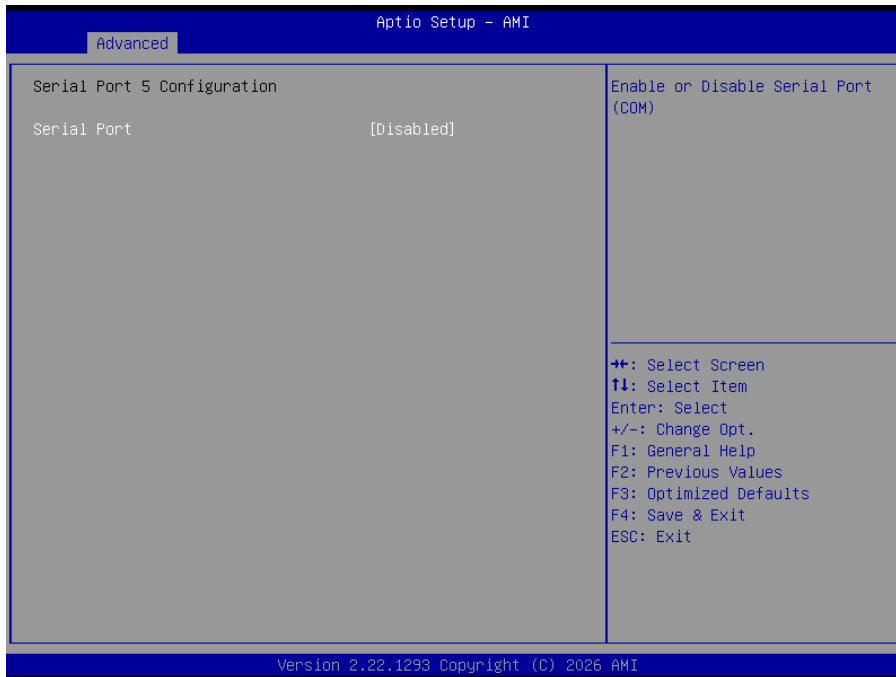


Item	Option	Description
Serial Port	Disabled[Default], Enabled	Enable or Disable Serial Port (COM).

5.6.2.6.6 Serial Port 6 Configuration



Item	Option	Description
Serial Port	Disabled[Default], Enabled	Enable or Disable Serial Port (COM).

5.6.2.7 CT6126D HW Monitor

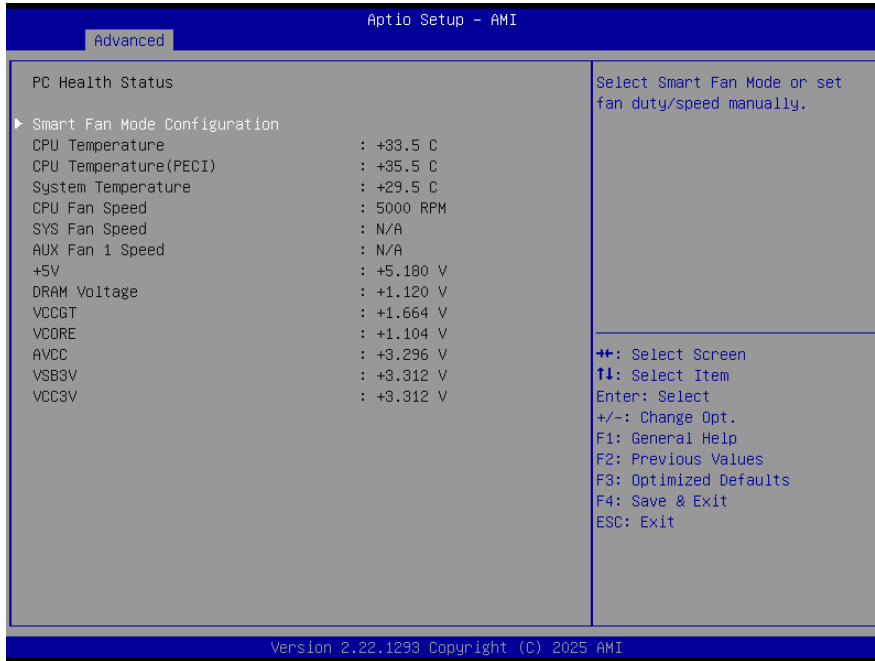

5.6.2.7.1 Smart Fan Configuration



MAB-T690


Item	Option	Description
CPU Fan Mode	Manual Mode /Mode 01[Default] /Mode 02/Mode 03 /Mode 04/Mode 05 /Mode 06/Mode 07 /Mode 08/Mode 09 /Mode 10/Mode 11 /Mode 12/Mode 13 /Mode 14/Mode 15 /Mode 16/Mode 17 /Mode 18/Mode 19 /Mode 20	Avalue Smart Fan Mode Select: Mode 01 to Mode 20 Or Manual (No Smart Fan)
SYS FAN Mode	Manual Mode /Mode 01/Mode 02 /Mode 03/Mode 04 /Mode 05/Mode 06 /Mode 07/Mode 08[Default] /Mode 09/Mode 10 /Mode 11/Mode 12 /Mode 13/Mode 14 /Mode 15/Mode 16 /Mode 17/Mode 18 /Mode 19/Mode 20	Avalue Smart Fan Mode Select: Mode 01 to Mode 20 Or Manual (No Smart Fan)

5.6.2.8 S5 RTC Wake Settings



Item	Options	Description
Wake system from S5	Disabled [Default] , Fixed Time Dynamic Time	Enable or disable System wake on alarm event. Select FixedTime, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).


5.6.2.9 Serial Port Console Redirection

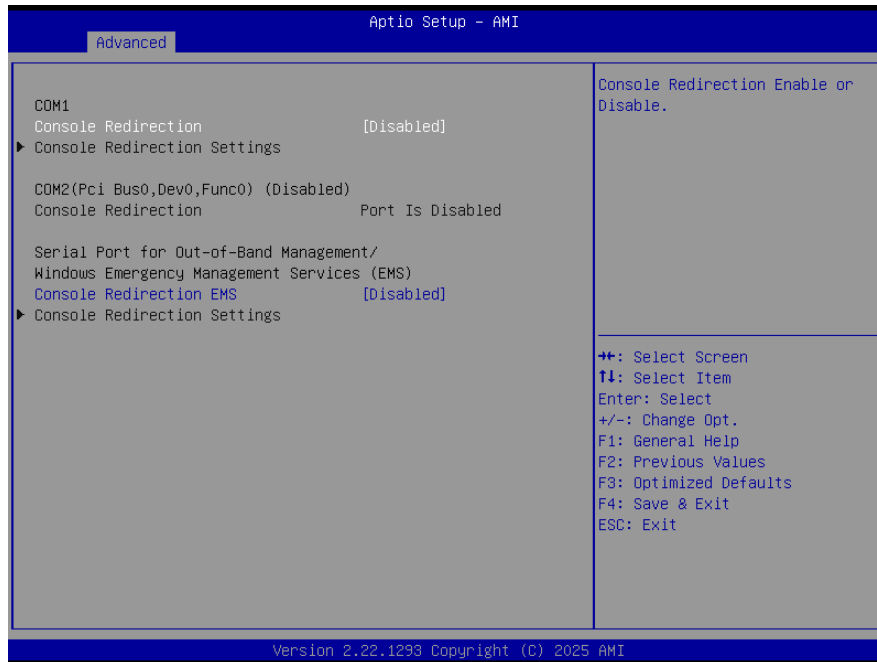

Item	Options	Description
Console Redirection	Disabled [Default] , Enabled	Console Redirection Enable or Disable.
Console Redirection EMS	Disabled [Default] , Enabled	Console Redirection Enable or Disable.


5.6.2.10 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

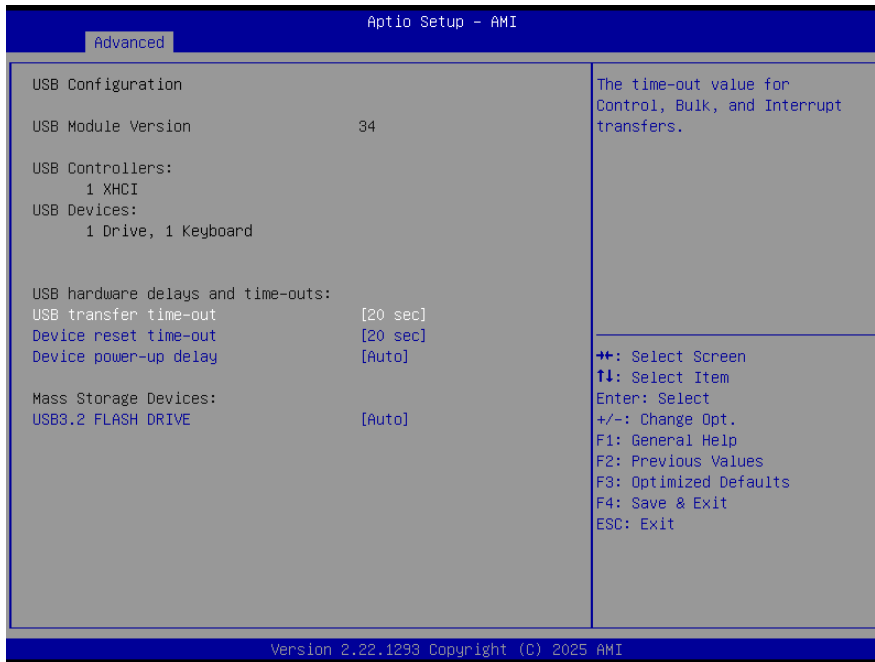

Item	Options	Description
USB transfer time-out	1 sec 5 sec 10 sec 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	10 sec 20 sec[Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
Device power-up delay	Auto[Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken form Hub descriptor.
Mass Storage Devices	Auto[Default] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.

5.6.2.11 Network Stack Configuration

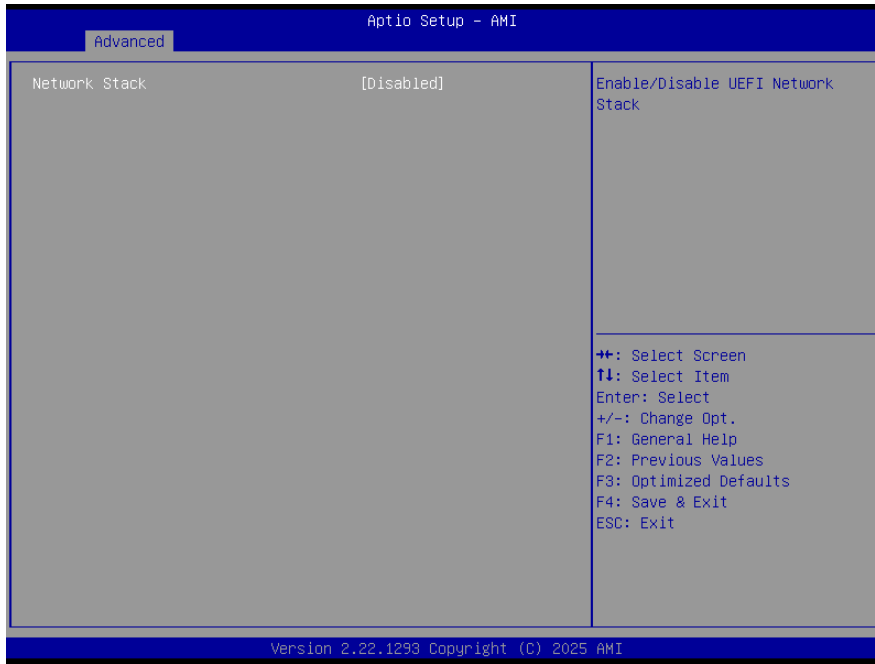


Item	Options	Description
Network Stack	Disabled[Default], Enabled	Enable/Disable UEFI Network Stack.


5.6.2.12 NVMe Configuration



5.6.3 Chipset

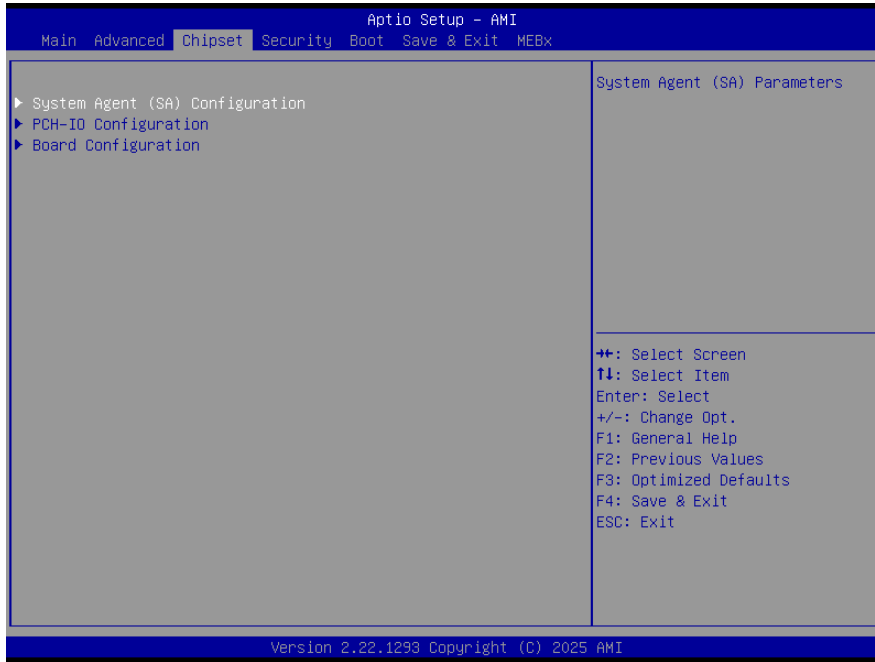


5.6.3.1 System Agent (SA) Configuration

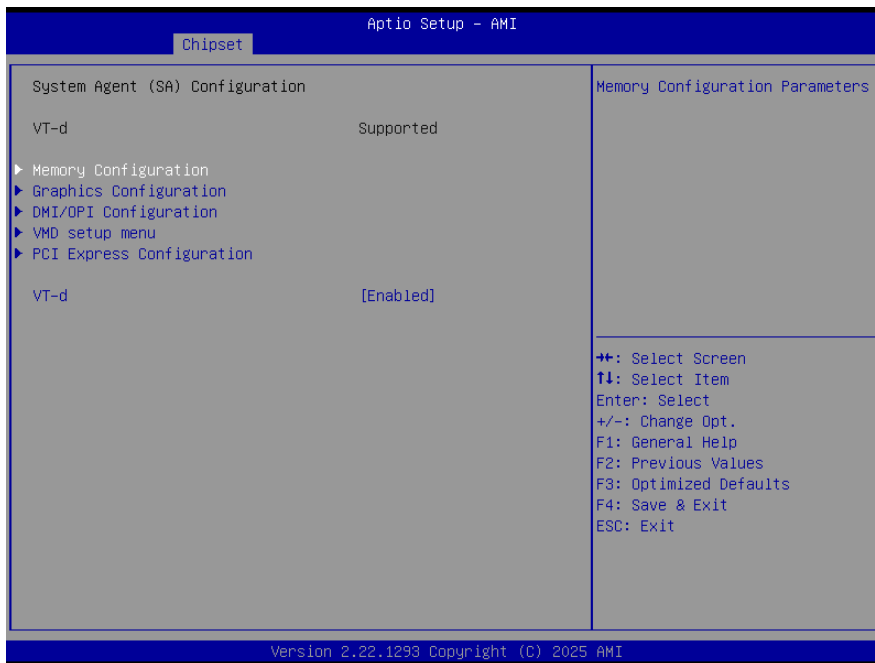


Item	Option	Description
VT-d	Disabled Enabled[Default]	VT-d capability

5.6.3.1.1 Memory Configuration

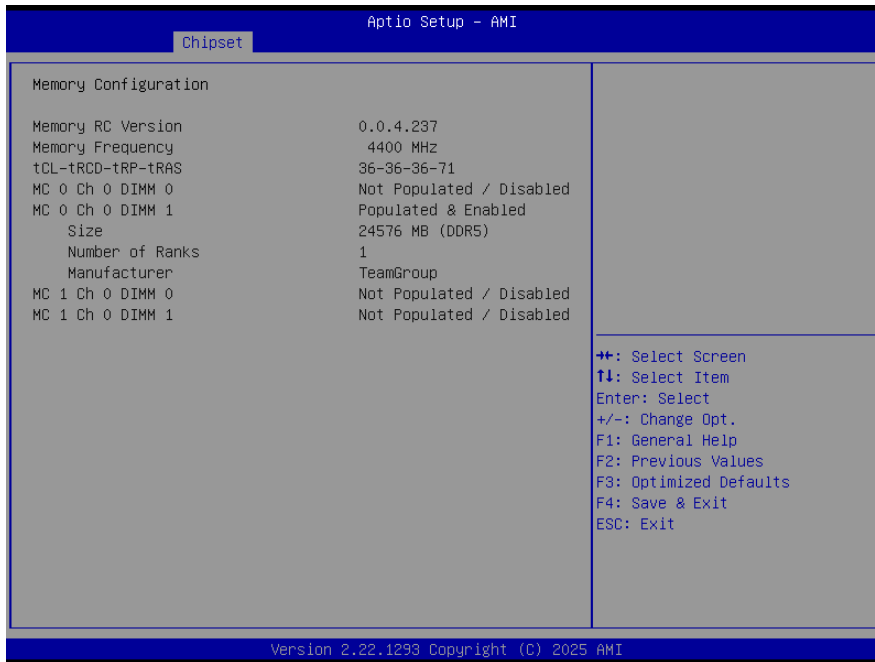


5.6.3.1.2 Graphics Configuration

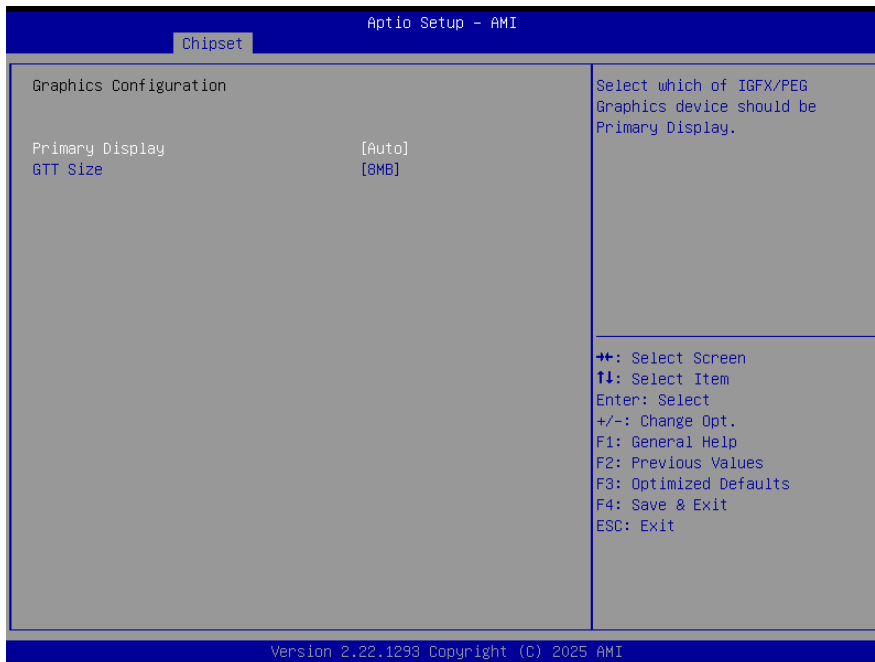

Item	Option	Description
Primary Display	Auto[Default]	Select which of IGFX/PEG Graphics device should be Primary Display.
	IGFX	
	PEG/PCIE	
GTT Size	2MB	Select the GTT Size
	4MB	
	8MB[Default]	

5.6.3.1.3 DMI/OPI Configuration

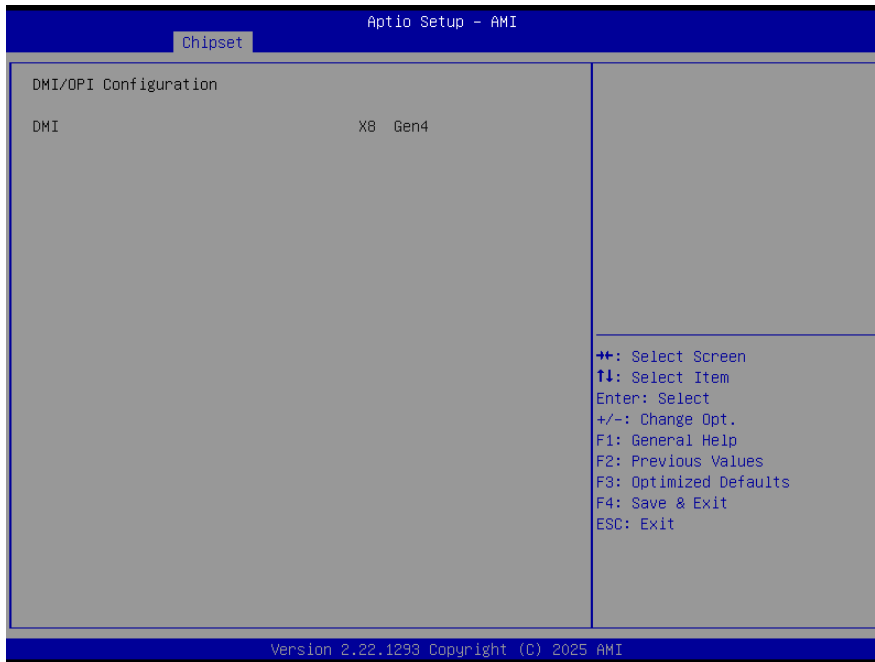


5.6.3.1.4 VMD Configuration




Item	Option	Description
Enable VMD controller	Disabled[Default] Enabled	Enable/Disable Intel(R) RST VMD controller

5.6.3.1.5 PCI Express Configuration

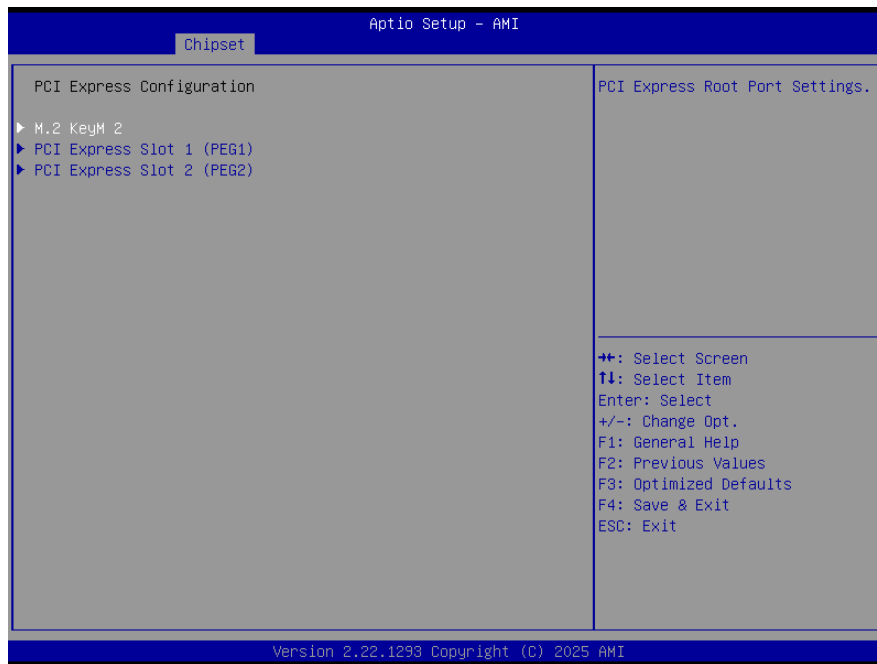


5.6.3.1.5.1 M.2 KeyM 2

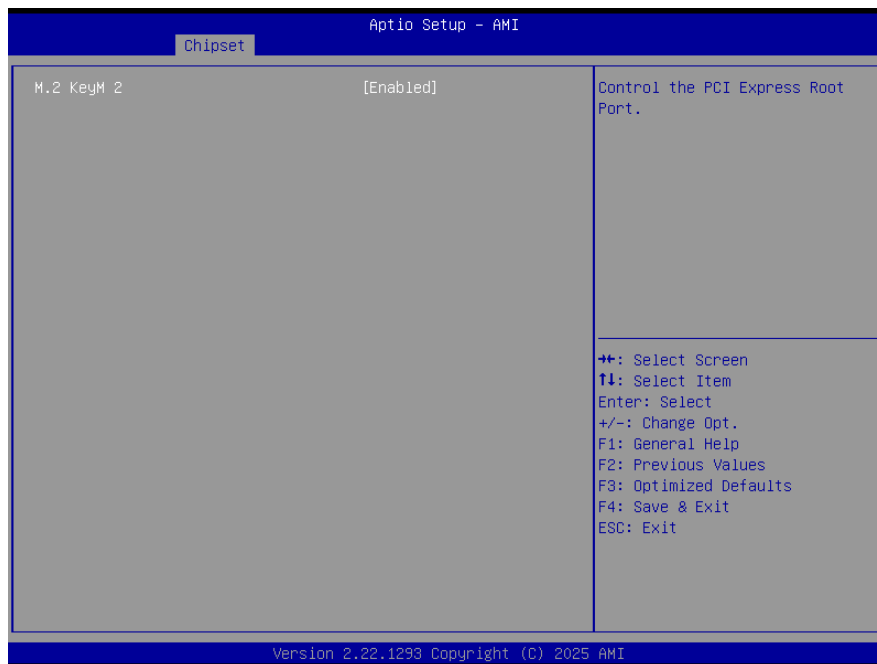


Item	Option	Description
M.2 KeyM 2	Disabled Enabled[Default],	Control the PCI Express Root Port.

5.6.3.1.5.2 PCI Express Slot 1 (PEG1)

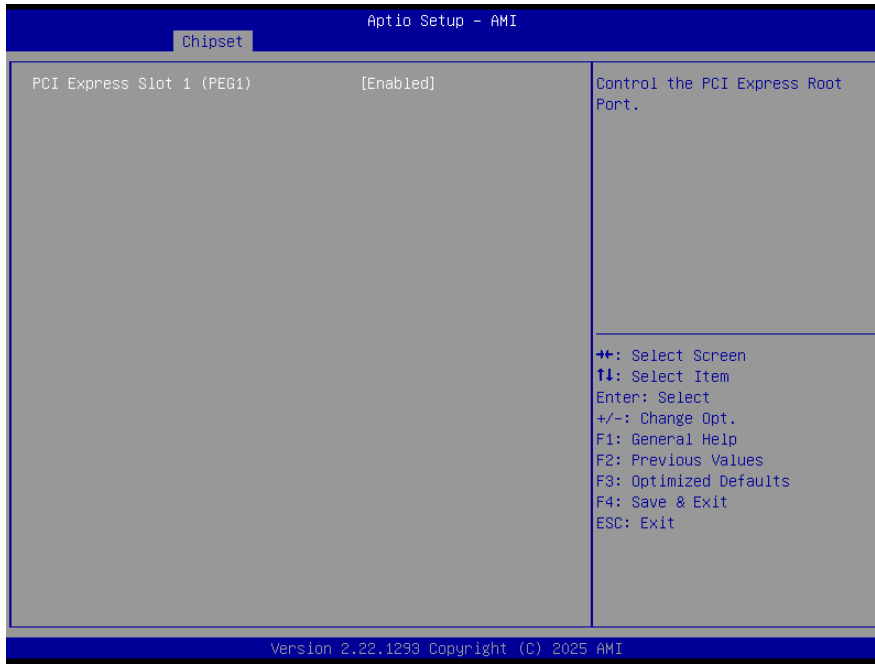

Item	Option	Description
PCI Express Slot 1 (PEG1)	Disabled Enabled[Default],	Control the PCI Express Root Port.

5.6.3.1.5.3 PCI Express Slot 2 (PEG2)

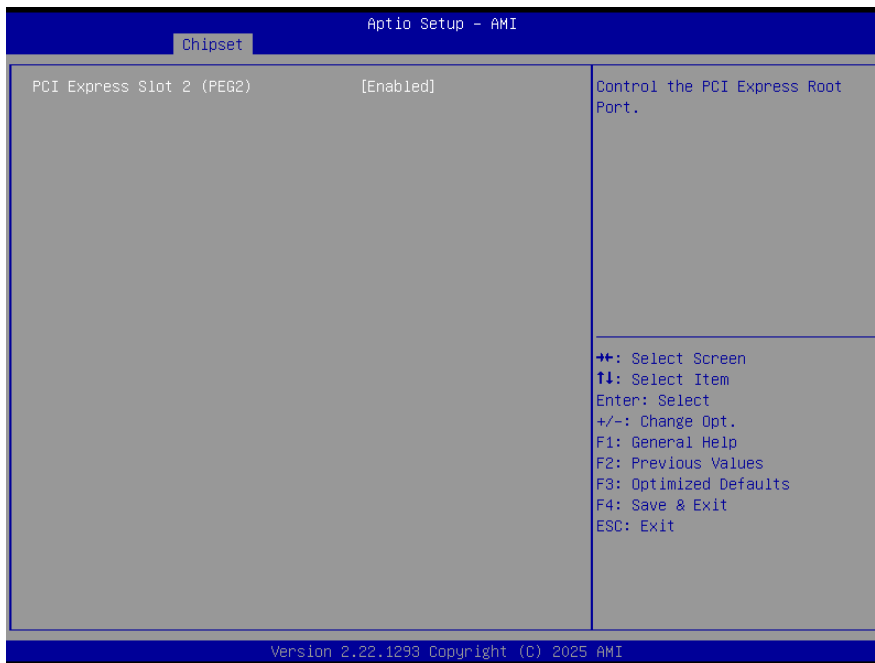


Item	Option	Description
PCI Express Slot 2 (PEG2)	Disabled Enabled[Default],	Control the PCI Express Root Port.

5.6.3.2 PCH-IO Configuration



5.6.3.2.1 PCI Express Configuration

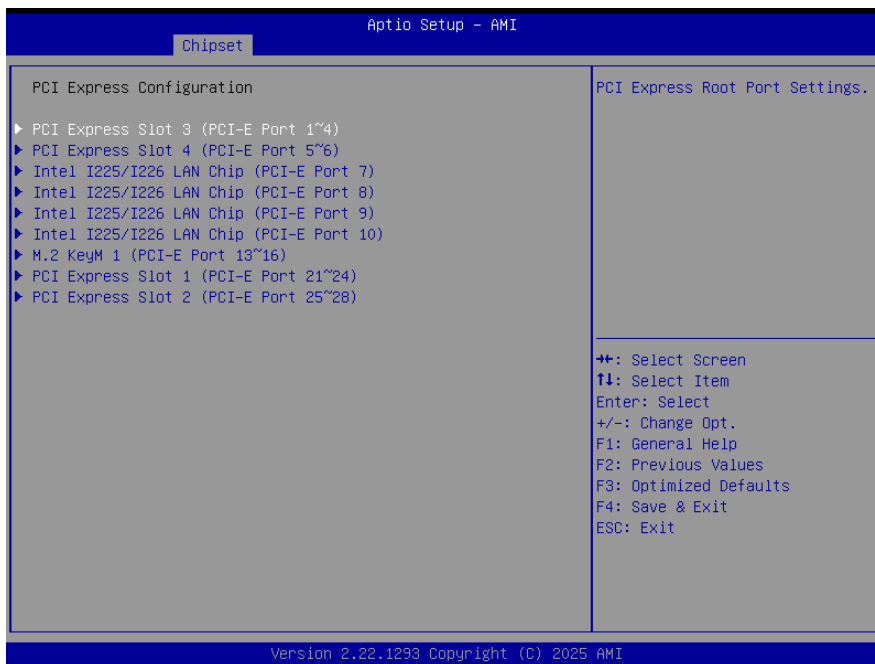

5.6.3.2.1.1 PCI Express Slot 3 (PCI-E Port 1~4)




Item	Option	Description
PCI Express Slot 3 (PCI-E Port 1~4)	Disabled Enabled[Default],	PCI Express Slot 3 (PCI-E Port 1~4)

5.6.3.2.1.2 PCI Express Slot 4 (PCI-E Port 5~6)



Item	Option	Description
PCI Express Slot 4 (PCI-E Port 5~6)	Disabled Enabled[Default],	PCI Express Slot 4 (PCI-E Port 5~6)

5.6.3.2.1.3 Intel I225/I226 LAN Chip (PCI-E Port 7)

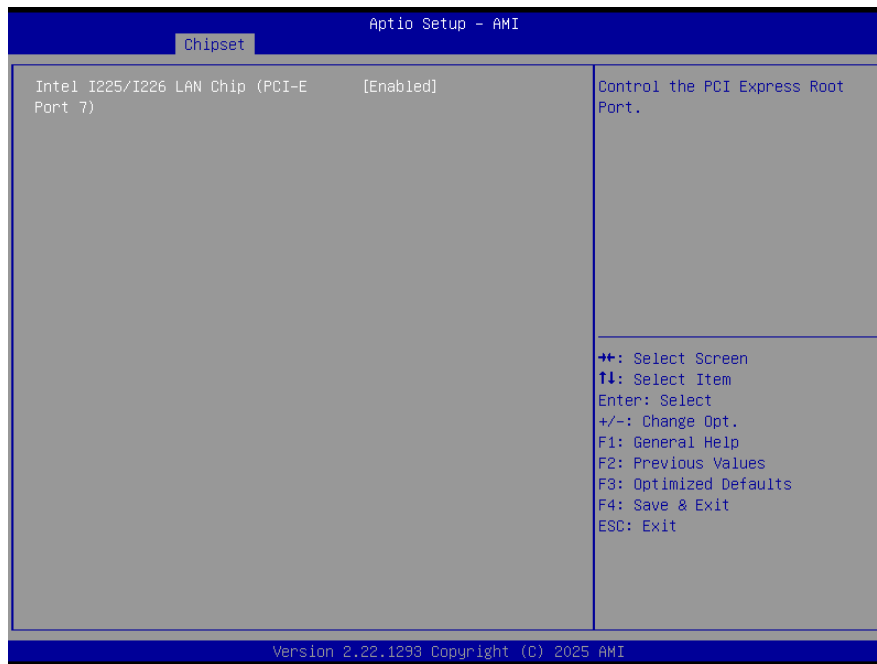


Item	Option	Description
Intel I225/I226 LAN Chip (PCI-E Port 7)	Disabled Enabled[Default],	Intel I225/I226 LAN Chip (PCI-E Port 7)

5.6.3.2.1.4 Intel I225/I226 LAN Chip (PCI-E Port 8)



Item	Option	Description
Intel I225/I226 LAN Chip (PCI-E Port 8)	Disabled Enabled[Default],	Intel I225/I226 LAN Chip (PCI-E Port 8)

5.6.3.2.1.5 Intel I225/I226 LAN Chip (PCI-E Port 9)

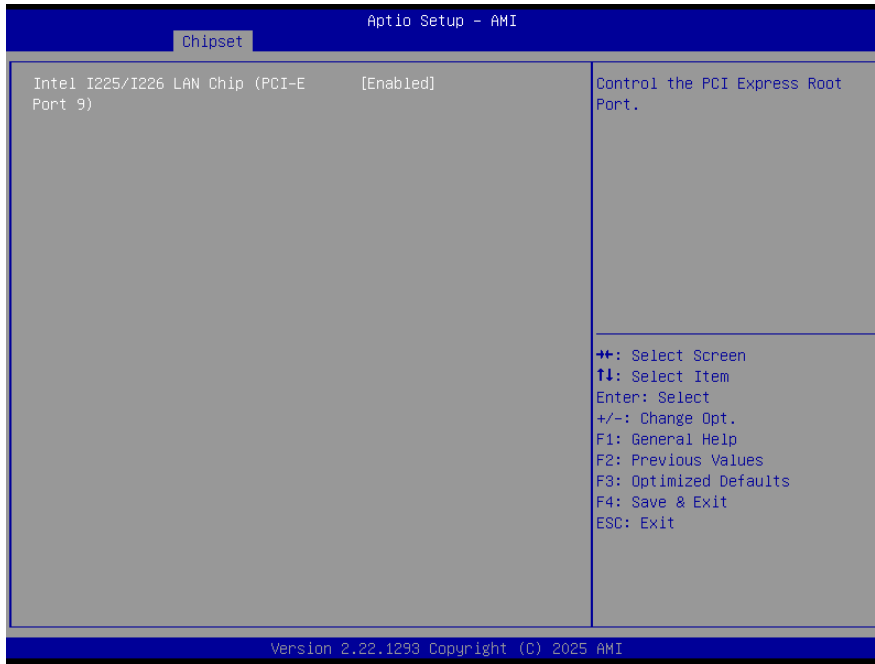


Item	Option	Description
Intel I225/I226 LAN Chip (PCI-E Port 9)	Disabled Enabled[Default],	Intel I225/I226 LAN Chip (PCI-E Port 9)

5.6.3.2.1.6 Intel I225/I226 LAN Chip (PCI-E Port 10)



Item	Option	Description
Intel I225/I226 LAN Chip (PCI-E Port 10)	Disabled Enabled[Default],	Intel I225/I226 LAN Chip (PCI-E Port 10)

5.6.3.2.1.7 M.2 KeyM 1 (PCI-E Port 13~16)

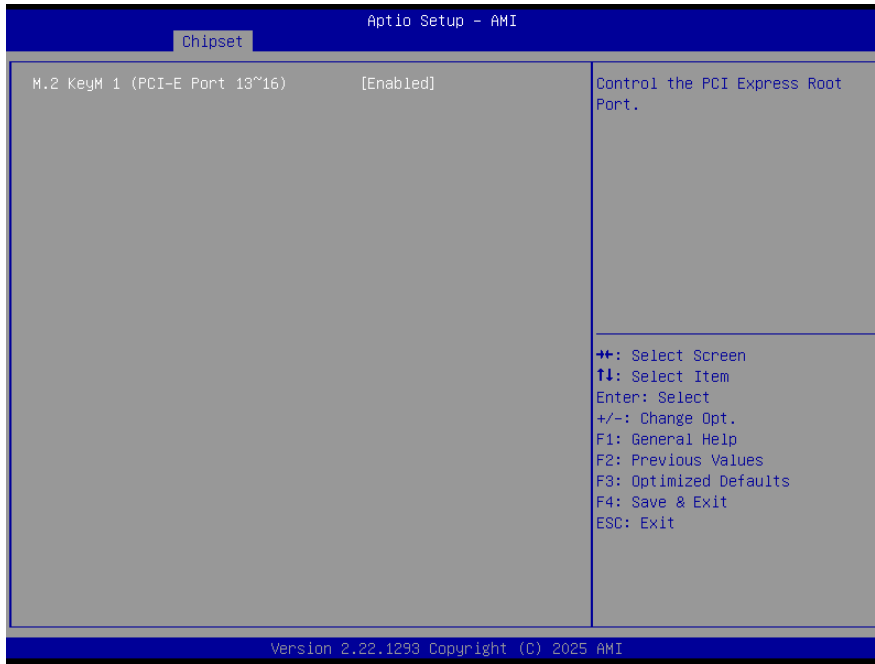

Item	Option	Description
M.2 KeyM 1 (PCI-E Port 13~16)	Default Enabled[Default],	M.2 KeyM 1 (PCI-E Port 13~16)

5.6.3.2.1.8 PCI Express Slot 1 (PCI-E Port 21~24)



Item	Option	Description
PCI Express Slot 1 (PCI-E Port 21~24)	Disabled Enabled[Default],	PCI Express Slot 1 (PCI-E Port 21~24)

5.6.3.2.1.9 PCI Express Slot 2 (PCI-E Port 25~28)



Item	Option	Description
PCI Express Slot 2 (PCI-E Port 25~28)	Disabled Enabled[Default],	PCI Express Slot 2 (PCI-E Port 25~28)

5.6.3.2.2 SATA Configuration



Item	Options	Description
SATA Configuration(S)	Enabled[Default], Disabled	Enable/Disable SATA Device.


SATA Mode Selection	AHCI	Determines how SATA controller(s) operate.
SATA Test Mode	Enabled Disabled[Default],	Test Mode Enable/Disable (Loop Back).
SATA Port	Disabled Enabled[Default],	Enable or Disable SATA Port
SATA Device Type	Hard Disk Drive[Default], Solid State Drive	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive

5.6.3.2.3 HD Audio Configuration




Item	Options	Description
HD Audio	Disabled Enabled[Default],	Control Detection of HD-Audio device. Disabled = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled.

5.6.3.3 Board Configuration

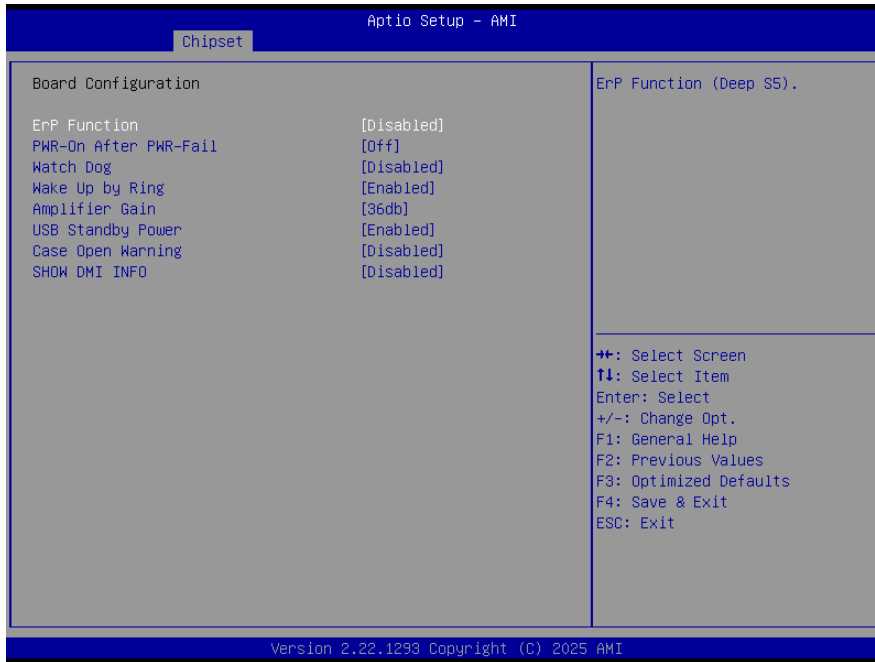

Item	Option	Description
ErP Function	Disabled[Default], Enabled	ErP Function (Deep S5).
PWR-On After PWR-Fail	Off[Default], On Last state	AC loss resume.
Watch Dog	Disabled[Default], 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.
Wake Up by Ring	Disabled Enabled[Default],	Wake Up by Ring from S3/S4/S5
Amplifier Gain	36db	Amplifier Gain
USB Standby Power	Disabled Enabled[Default],	Enable/Disable USB Standby Power during S3/S4/S5
Case Open Warning	Disabled[Default], Enabled	Enable/Disable Case Open Warning.
SHOW DMI INFO	Disabled[Default], Enabled	SHOW DMI INFO

5.6.4 Security

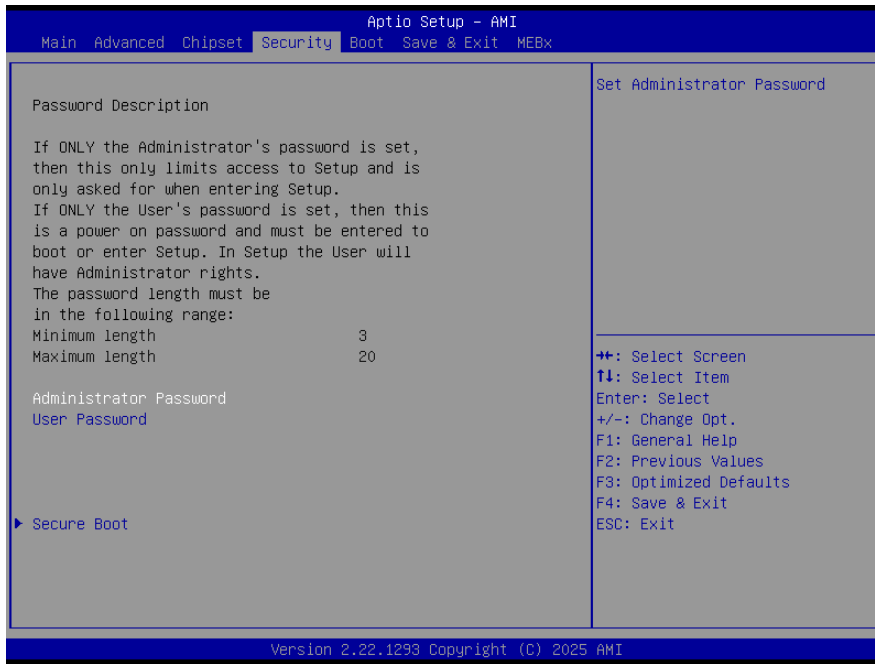


Item	Description
Administrator Password	Set Administrator Password
User Password	Set User Password

5.6.4.1 Secure Boot




Item	Option	Description
Secure Boot	Disabled Enabled[Default],	Secure Boot feature is Active if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset
Secure Boot Mode	Standard Custom[Default],	Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication


5.6.4.1.1 Restore Factory Keys

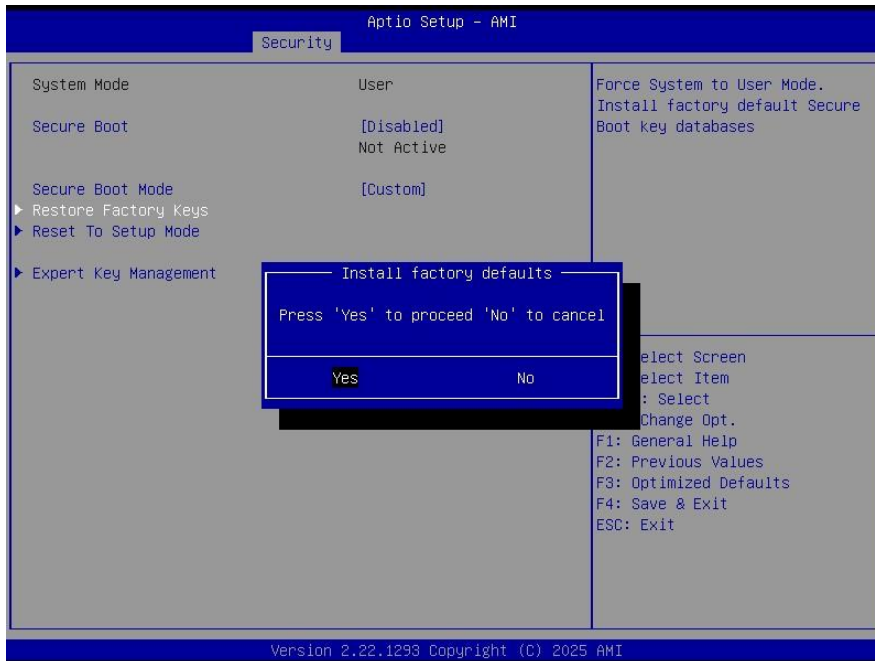


5.6.4.1.2 Reset To Setup Mode

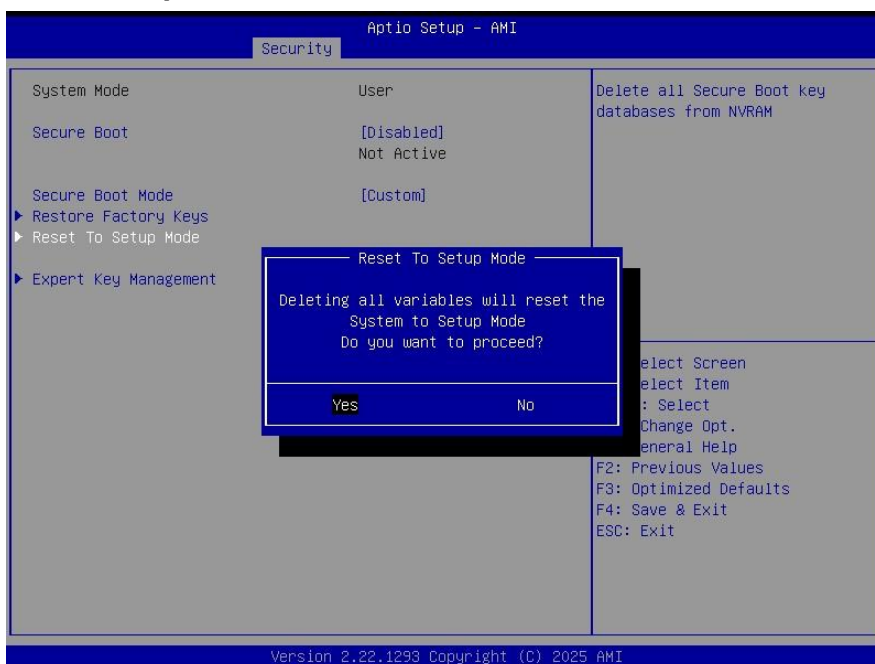

5.6.4.1.3 Expert Key Management


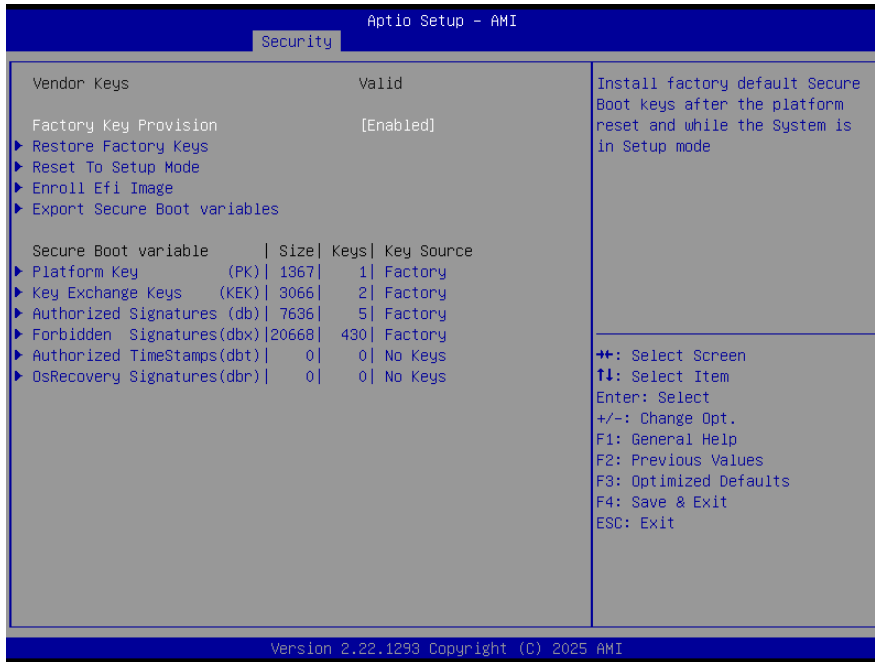


5.6.5 Boot

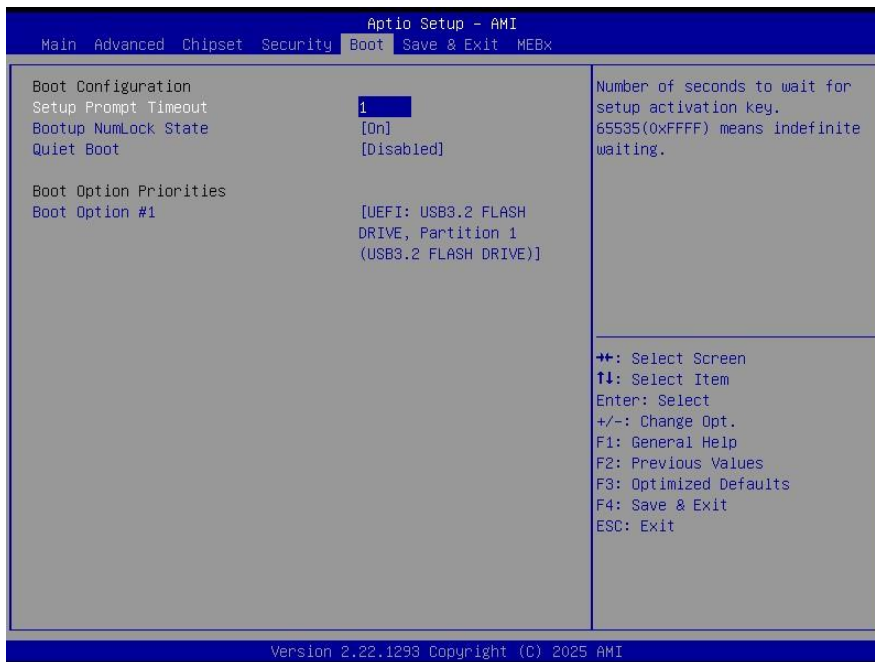

Item	Option	Description
Setup Prompt Timeout	1	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default] Off	Select the keyboard NumLock state.
Quiet Boot	Disabled[Default] Enabled	Enable or disable Quiet Boot option.
Boot Option	Sets the system boot order	

5.6.6 Save & Exit

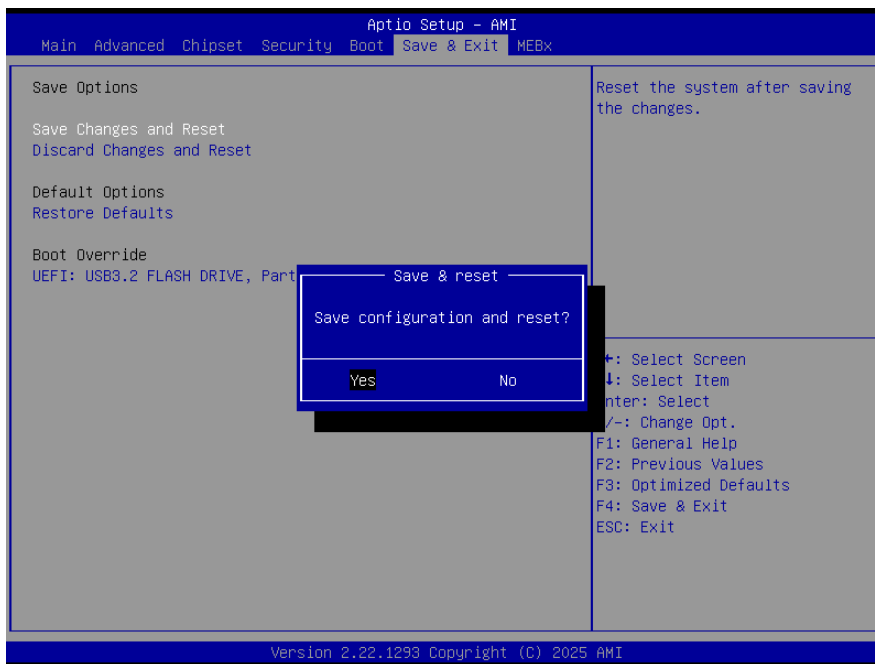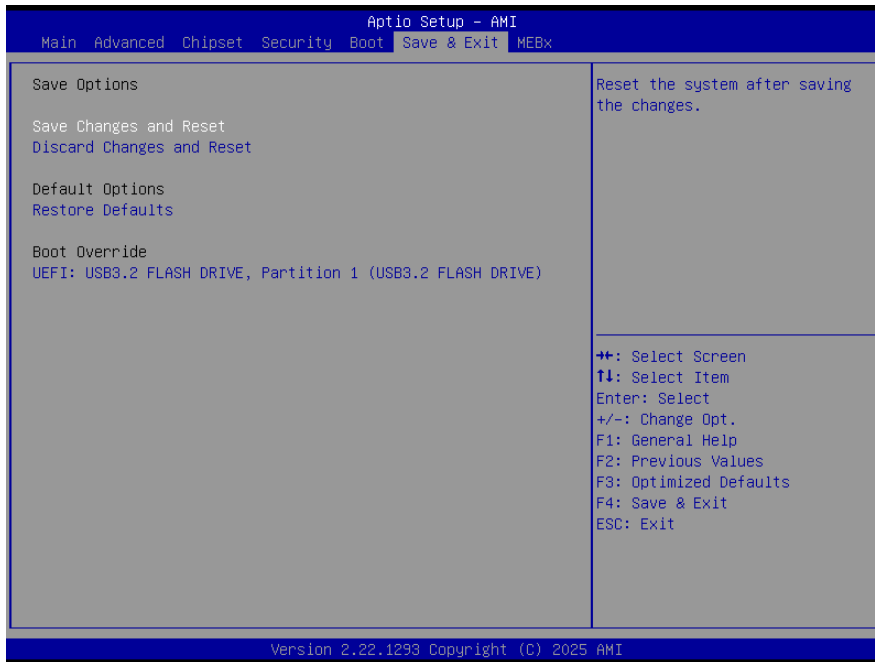

5.6.6.1 Save Changes and Reset

Reset the system after saving the changes.

5.6.6.2 Discard Changes and Reset

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

5.6.6.3 Restore Defaults

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

5.6.6.4 Launch EFI Shell from filesystem device

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

5.6.7 MEBx



Item	Description
Intel(R) ME Password	MEBx Login

6. Maintenance & Troubleshooting

System Maintenance Introduction

If the components of the product fail they must be replaced.

Please contact the system reseller or vendor to purchase the replacement parts. Please follow the safety precautions outlined in the sections that follow

General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

1. Follow the electrostatic precautions outlined below whenever the device is opened.
2. Make sure the power is turned off and the power cord is disconnected whenever the product is being installed, moved or modified.
3. To prevent the risk of electric shock, make sure power cord is unplugged from wall socket. To fully disengage the power to the unit, please disconnect the power cord from the AC outlet. Refer servicing to qualified service personnel. The AC outlet shall be readily available and accessible.
4. Do not apply voltage levels that exceed the specified voltage range. Doing so may cause fire and/or an electrical shock. Use a power cord that matches the voltage of the power outlet, which has been approved and complies with the safety standard of your particular country.
5. Electric shocks can occur if the product chassis is opened when it is running. To avoid risk of electric shock, this device must only be connected to a supply mains with protective earth.
6. Do not drop or insert any objects into the ventilation openings of the product.
7. If considerable amounts of dust, water, or fluids enter the device, turn off the power supply immediately, unplug the power cord, and contact your dealer or the nearest service center.
8. This equipment is not suitable for use in locations where children are likely to be present.
9. DO NOT:
 - Drop the device against a hard surface.
 - In a site where the ambient temperature exceeds the rated temperature.

Anti-Static Precautions

WARNING:

Failure to take ESD precautions during the installation of the product may result in permanent damage to the product and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the product. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the product is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- **Self-grounding:** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- **Only handle the edges of the electrical component.** When handling the electrical component, hold the electrical component by its edges. Please ensure the following safety precautions are adhered to at all times.

Maintenance and Cleaning

When maintaining or cleaning the product, please follow the guidelines below.

WARNING:

- For safety reasons, turn-off the power and unplug the box PC before cleaning.
- If you dropped any material or liquid such as water onto the box PC when cleaning, unplug the power cable immediately and contact your dealer or the nearest service center. Always make sure your hands are dry when unplugging the power cable.

Maintenance and Cleaning

Prior to cleaning any part or component of the product, please read the details below.

- Never spray or squirt liquids directly onto any other components. To clean the box PC, gently wipe it with a piece of soft dry cloth or a slightly moistened cloth.
- The interior of the device does not require cleaning. Keep fluids away from the device interior.
- Be cautious of all small removable components when vacuuming the device.
- Never drop any objects or liquids through the openings of the device.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the device.
- Avoid eating, drinking and smoking within vicinity of the device.

Cleaning Tools

Some components in the box PC may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the box PC.

- Cloth: Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the device.
- Water or rubbing alcohol: A cloth moistened with water or rubbing alcohol can be used to clean the device.
- Using solvents: The use of solvents is not recommended when cleaning the device as they may damage the plastic parts.
- Vacuum cleaner: Using a vacuum specifically designed for computers is one of the best methods of cleaning the device. Dust and dirt can restrict the airflow in the device and cause its circuitry to corrode.
- Cotton swabs: Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- Foam swabs: Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Basic Troubleshooting

PEI Beep Codes

# of Beeps	Description
1	Memory not Installed
2	Recovery started
3	Typically for development use. The beep code is generated when DXE IPL PPI or DXE Core is not found.
4	Recovery failed
4	S3 Resume failed
7	Typically for development use. The beep code is generated when platform cannot be reset because reset PPI is not available.

DXE Beep Codes

# of Beeps	Description
1	Invalid password
4	Typically for development use. The beep code is generated when some of the Architectural Protocols are not available.
5	No Console Input or Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Typically for development use. The beep code is generated when platform cannot be reset because reset protocol is not available.
8	Platform PCI resource requirements cannot be met

7. Product Application

For detailed instructions on the operation of the Watchdog Timer and Digital I/O (DIO) features of this box PC, please refer to the comprehensive guide available in the "AvalueIOAPI" manual. Please reaching out to your respective distributors, Avalue technical support team, or Avalue customer service representatives for further information. Feel free to inquire about this supplementary resource to enhance your understanding of the Watchdog Timer and Digital I/O (DIO) Application for optimal utilization of your box PC.