

# **GIGABYTE™**

## **MS03-6L0**

Motherboard - 4th/5th Gen Intel® Xeon® Scalable UP

### **User Manual**

Rev. 1.0

## **Copyright**

© 2023 Giga Computing Technology CO., LTD. All rights reserved.

The trademarks mentioned in this manual are legally registered to their respective owners.

## **Disclaimer**

Information in this manual is protected by copyright laws and is the property of Giga Computing. Changes to the specifications and features in this manual may be made by Giga Computing without prior notice. No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without Giga Computing's prior written permission.

## **Documentation Classifications**

In order to assist in the use of this product, Giga Computing provides the following types of documentation:

- User Manual: detailed information & steps about the installation, configuration and use of this product (e.g. motherboard, server barebones), covering hardware and BIOS.
- User Guide: detailed information about the installation & use of an add-on hardware or software component (e.g. BMC firmware, rail-kit) compatible with this product.
- Quick Installation Guide: a short guide with visual diagrams that you can reference easily for installation purposes of this product (e.g. motherboard, server barebones).

Please see the support section of the online product page to check the current availability of these documents.

## **For More Information**

For related product specifications, the latest firmware and software, and other information please visit our website at <http://www.gigabyte.com/Enterprise>

For GIGABYTE distributors and resellers, additional sales & marketing materials are available from our reseller portal: <http://reseller.b2b.gigabyte.com>

For further technical assistance, please contact your GIGABYTE representative or visit <https://esupport.gigabyte.com/> to create a new support ticket


For any general sales or marketing enquiries, you may also message GIGABYTE server directly by email: [server.grp@gigabyte.com](mailto:server.grp@gigabyte.com)

# Table of Contents

|                                                                               |    |
|-------------------------------------------------------------------------------|----|
| MS03-6L0 Motherboard Layout.....                                              | 5  |
| Block Diagram .....                                                           | 7  |
| Chapter 1 Hardware Installation .....                                         | 8  |
| 1-1 Installation Precautions.....                                             | 8  |
| 1-2 Product Specifications.....                                               | 9  |
| 1-3 Installing and Removing the CPU .....                                     | 12 |
| 1-4 Installing and Removing Memory.....                                       | 14 |
| 1-4-1 Eight-Channel Memory Configuration .....                                | 14 |
| 1-4-2 Installing and Removing a Memory Module .....                           | 15 |
| 1-4-3 DIMM Population Table .....                                             | 16 |
| 1-4-4 Processor and Memory Module Matrix Table .....                          | 16 |
| 1-5 Installing the M.2 SSD Module.....                                        | 17 |
| 1-6 Back Panel Connectors.....                                                | 18 |
| 1-7 Internal Connectors.....                                                  | 19 |
| 1-8 Jumper Settings .....                                                     | 30 |
| Chapter 2 BIOS Setup .....                                                    | 31 |
| 2-1 The Main Menu .....                                                       | 33 |
| 2-2 Advanced Menu .....                                                       | 36 |
| 2-2-1 Trusted Computing .....                                                 | 37 |
| 2-2-2 Serial Port Console Redirection .....                                   | 38 |
| 2-2-3 SIO Configuration .....                                                 | 41 |
| 2-2-4 PCI Subsystem Settings.....                                             | 42 |
| 2-2-5 USB Configuration.....                                                  | 44 |
| 2-2-6 Network Stack Configuration .....                                       | 45 |
| 2-2-7 Post Report Configuration .....                                         | 46 |
| 2-2-8 NVMe Configuration .....                                                | 47 |
| 2-2-9 Chipset Configuration.....                                              | 48 |
| 2-2-10 Tls Auth Configuration .....                                           | 49 |
| 2-2-11 iSCSI Configuration .....                                              | 50 |
| 2-2-12 Intel(R) i210 Gigabit Network Connection .....                         | 51 |
| 2-2-13 VLAN Configuration.....                                                | 53 |
| 2-2-14 Broadcom BCM57416 NetXtreme-E 10GBASE-T RDMA Ethernet Controller ..... | 54 |
| 2-2-15 VLAN Configuration.....                                                | 60 |
| 2-2-16 Driver Health.....                                                     | 61 |
| 2-3 Chipset Menu.....                                                         | 62 |
| 2-3-1 Processor Configuration .....                                           | 63 |


|        |                                               |     |
|--------|-----------------------------------------------|-----|
| 2-3-2  | Common RefCode Configuration .....            | 66  |
| 2-3-3  | UPI Configuration .....                       | 67  |
| 2-3-4  | Memory Configuration .....                    | 69  |
| 2-3-5  | IIO Configuration .....                       | 72  |
| 2-3-6  | Advanced Power Management Configuration ..... | 74  |
| 2-3-7  | PCH Configuration.....                        | 76  |
| 2-3-8  | Miscellaneous Configuration .....             | 78  |
| 2-3-9  | Server ME Configuration .....                 | 79  |
| 2-3-10 | Runtime Error Logging Settings .....          | 80  |
| 2-3-11 | Power Policy.....                             | 82  |
| 2-4    | Server Management Menu.....                   | 84  |
| 2-4-1  | System Event Log .....                        | 86  |
| 2-4-2  | View FRU Information .....                    | 87  |
| 2-4-3  | BMC VLAN Configuration.....                   | 88  |
| 2-4-4  | BMC Network Configuration.....                | 89  |
| 2-4-5  | IPv6 BMC Network Configuration .....          | 90  |
| 2-5    | Security Menu .....                           | 91  |
| 2-5-1  | Secure Boot .....                             | 92  |
| 2-6    | Boot Menu.....                                | 95  |
| 2-7    | Save & Exit Menu.....                         | 97  |
| 2-8    | BIOS Recovery .....                           | 99  |
| 2-9    | BIOS POST Beep code (AMI standard) .....      | 100 |
| 2-9-1  | PEI Beep Codes.....                           | 100 |
| 2-9-2  | DXE Beep Codes .....                          | 100 |

# MS03-6L0 Motherboard Layout

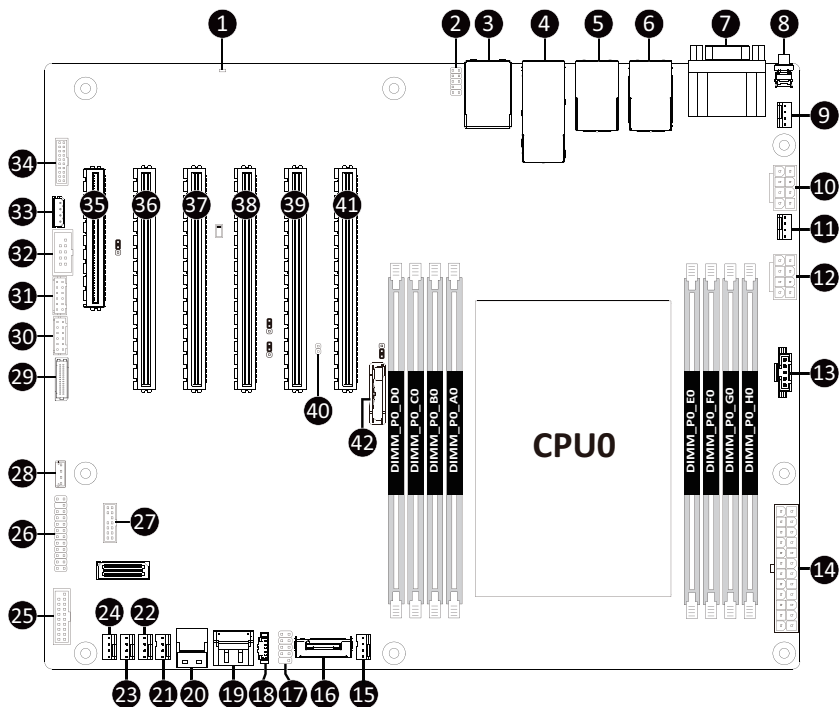

| Item | Code       | Description                                                  |
|------|------------|--------------------------------------------------------------|
| 1    | LED_BMC    | BMC Firmware Readiness LED                                   |
| 2    | F_AUDIO1   | Front Audio Header                                           |
| 3    | USB3_MLAN  | Server Management LAN Port (Top)/USB 3.2 Gen1 Ports (Bottom) |
| 4    | 10G_LAN1_2 | 10GbE LAN Port #1/#2                                         |
| 5    | LAN_3_4    | 1GbE LAN Port #3/#4                                          |
| 6    | LAN_5_6    | 1GbE LAN Port #5/#6                                          |
| 7    | COM1_VGA   | Serial Port (Top)/VGA Port (Bottom)                          |
| 8    | SW_ID      | ID Button with LED                                           |
| 9    | SYS_FAN6   | System Fan Connector #6                                      |
| 10   | P12V_AUX1  | 2x4 Pin 12V Power Connector                                  |
| 11   | CPU0_FAN   | CPU Fan Connector                                            |
| 12   | P12V_AUX2  | 2x4 Pin 12V Power Connector                                  |
| 13   | PMBUS      | PMBus Connector                                              |
| 14   | ATX1       | 2x12 Pin Main Power Connector                                |
| 15   | SYS_FAN5   | System Fan Connector #5                                      |
| 16   | M2_0       | M.2 Slot (PCIe Gen3 x4, Support NGFF-2280)                   |
| 17   | F_USB2     | Front USB 2.0 Header                                         |
| 18   | SATA_SGPIO | SATA SGPIO Connector                                         |
| 19   | SATA_4_5   | SATA 6Gb/s Connector #4/#5                                   |
| 20   | SL_SATA1   | Slimline Connector (SATA 6Gb/s Signal)                       |
| 21   | SYS_FAN4   | System Fan Connector #4                                      |
| 22   | SYS_FAN2   | System Fan Connector #2                                      |
| 23   | SYS_FAN1   | System Fan Connector #1                                      |
| 24   | SYS_FAN3   | System Fan Connector #3                                      |
| 25   | F_USB1     | Front Panel USB 3.2 Gen1 Connector                           |
| 26   | FP_1       | Front Panel Header                                           |
| 27   | SPI_TPM    | TPM Connector                                                |
| 28   | SW_RAID    | VROC Module Connector                                        |
| 29   | BP_1       | HDD Backplane Board Connector                                |
| 30   | GPIO_CNT_1 | GPIO Connector #1                                            |
| 31   | GPIO_CNT_2 | GPIO Connector #2                                            |
| 32   | COM2       | Serial Port Cable Connector                                  |
| 33   | IPMB       | IPMB Connector                                               |
| 34   | CN_NCSI    | NCSI Connector                                               |
| 35   | PCIE_1     | PCIe x16 Slot #1 (Gen5 x8)                                   |
| 36   | PCIE_2     | PCIe x16 Slot #2 (Gen5 x16)                                  |
| 37   | PCIE_3     | PCIe x16 Slot #3 (Gen5 x16)                                  |
| 38   | PCIE_4     | PCIe x16 Slot #4 (Gen5 x16)                                  |
| 39   | PCIE_5     | PCIe x16 Slot #5 (Gen5 x16)                                  |
| 40   | CASE_OPEN  | Case Open Intrusion Alert Header                             |
| 41   | PCIE_6     | PCIe x16 Slot #6 (Gen5 x16)                                  |
| 42   | BAT        | Battery Socket                                               |

# Block Diagram

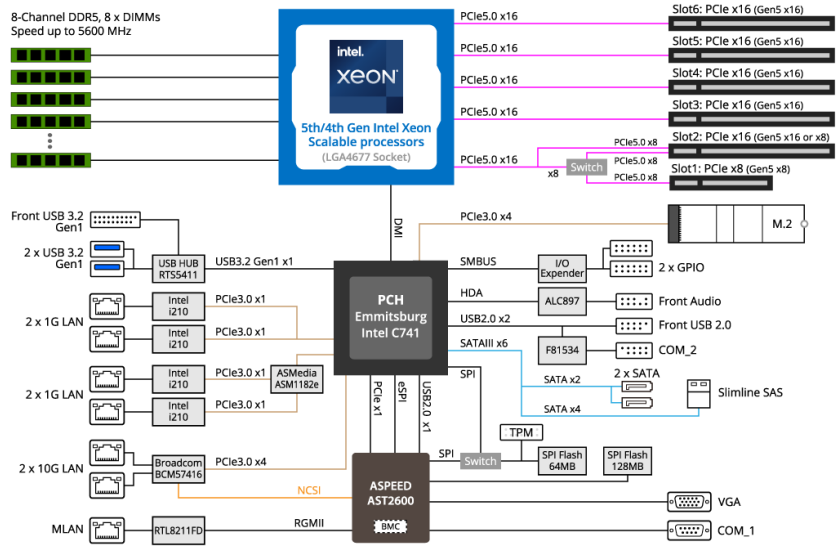

# Chapter 1 Hardware Installation

## 1-1 Installation Precautions

The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Prior to installation, carefully read the user's manual and follow these procedures:

- Prior to installation, do not remove or break motherboard S/N (Serial Number) sticker or warranty sticker provided by your dealer. These stickers are required for warranty validation.
- Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.
- When connecting hardware components to the internal connectors on the motherboard, make sure they are connected tightly and securely.
- When handling the motherboard, avoid touching any metal leads or connectors.
- It is best to wear an electrostatic discharge (ESD) wrist strap when handling electronic components such as a motherboard, CPU or memory. If you do not have an ESD wrist strap, keep your hands dry and first touch a metal object to eliminate static electricity.
- Prior to installing the motherboard, please have it on top of an antistatic pad or within an electrostatic shielding container.
- Before unplugging the power supply cable from the motherboard, make sure the power supply has been turned off.
- Before turning on the power, make sure the power supply voltage has been set according to the local voltage standard.
- Before using the product, please verify that all cables and power connectors of your hardware components are connected.
- To prevent damage to the motherboard, do not allow screws to come in contact with the motherboard circuit or its components.
- Make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
- Do not place the computer system on an uneven surface.
- Do not place the computer system in a high-temperature environment.
- Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
- If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.
- To avoid any potential short circuit of the DIMM slots, please remove any stand-offs from the chassis that will be located underneath the DIMM slots, before installing the motherboard into the chassis.

## 1-2 Product Specifications



### NOTE:

We reserve the right to make any changes to the product specifications and product-related information without prior notice.

|                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Form Factor         | <ul style="list-style-type: none"><li>♦ ATX</li><li>♦ 304.8W x 244D (mm)</li></ul>                                                                                                                                                                                                                                                                                              |
|  CPU                 | <ul style="list-style-type: none"><li>♦ 5th Generation Intel® Xeon® Scalable Processors</li><li>♦ 4th Generation Intel® Xeon® Scalable Processors</li><li>♦ Intel® Xeon® CPU Max Series</li><li>♦ Single processor, CPU TDP up to 350W</li></ul>                                                                                                                                |
|  Socket              | <ul style="list-style-type: none"><li>♦ 1 x LGA 4677</li><li>♦ Socket E</li></ul>                                                                                                                                                                                                                                                                                               |
|  Chipset             | <ul style="list-style-type: none"><li>♦ Intel® C741</li></ul>                                                                                                                                                                                                                                                                                                                   |
|  Memory              | <ul style="list-style-type: none"><li>♦ 8 x DIMM slots</li><li>♦ DDR5 memory supported only</li><li>♦ 8-Channel memory architecture</li><li>♦ RDIMM up to 96GB supported</li><li>♦ 3DS RDIMM up to 256GB supported</li><li>♦ 5th Gen Intel® Xeon®: Up to 5600 MT/s</li><li>♦ 4th Gen Intel® Xeon®: Up to 4800 MT/s</li><li>♦ Intel® Xeon® Max Series: Up to 4800 MT/s</li></ul> |
|  LAN                 | <ul style="list-style-type: none"><li>♦ 2 x 10Gb/s LAN ports (Broadcom® BCM57416)</li><li>♦ 4 x 1Gb/s LAN ports (Intel® I210-AT)</li><li>♦ BCM57416 supports NCSI function</li><li>♦ 1 x 10/100/1000 Mbps Management LAN</li></ul>                                                                                                                                              |
|  Onboard Graphics  | <ul style="list-style-type: none"><li>♦ Integrated in Aspeed® AST2600</li><li>- 1 x VGA port</li></ul>                                                                                                                                                                                                                                                                          |
|  Audio             | <ul style="list-style-type: none"><li>♦ Realtek® ALC897 HD Audio Codec</li><li>♦ Supports 2-channel configurations</li></ul>                                                                                                                                                                                                                                                    |
|  Storage Interface | <b>PCH:</b> <ul style="list-style-type: none"><li>♦ 1 x SlimSAS connector for 4 x SATA 6Gb/s</li><li>♦ 2 x SATA 6Gb/s ports</li></ul>                                                                                                                                                                                                                                           |
|  RAID              | <ul style="list-style-type: none"><li>♦ Intel® SATA RAID 0/1/10/5</li></ul>                                                                                                                                                                                                                                                                                                     |

|                                                                                     |                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Expansion Slots         | <ul style="list-style-type: none"> <li>♦ Slot_6: PCIe x16 (Gen5 x16) slot, from CPU</li> <li>♦ Slot_5: PCIe x16 (Gen5 x16) slot, from CPU</li> <li>♦ Slot_4: PCIe x16 (Gen5 x16) slot, from CPU</li> <li>♦ Slot_3: PCIe x16 (Gen5 x16) slot, from CPU</li> <li>♦ Slot_2: PCIe x16 (Gen5 x16 or x8) slot, from CPU, shared with Slot_1</li> <li>♦ Slot_1: PCIe x8 (Gen5 x8) slot, from CPU</li> <li>♦ 1 x M.2 slot: <ul style="list-style-type: none"> <li>- M-key</li> <li>- PCIe Gen3 x4, from PCH</li> <li>- Supports 2280 cards</li> </ul> </li> </ul>                                 |
|    | Internal I/O Connectors | <ul style="list-style-type: none"> <li>♦ 1 x 24-pin ATX main power connector</li> <li>♦ 2 x 8-pin ATX 12V power connectors</li> <li>♦ 1 x CPU fan header</li> <li>♦ 7 x System fan headers</li> <li>♦ 1 x Front audio header</li> <li>♦ 2 x USB 3.2 Gen1 headers</li> <li>♦ 2 x USB 2.0 headers</li> <li>♦ 1 x M.2 slot</li> <li>♦ 1 x SlimSAS connector</li> <li>♦ 2 x SATA connectors</li> <li>♦ 1 x VROC connector</li> <li>♦ 1 x Front panel header</li> <li>♦ 1 x Backplane board header</li> <li>♦ 1 x PMBus header</li> <li>♦ 1 x IPMB header</li> <li>♦ 1 x TPM header</li> </ul> |
|    | Rear I/O Connectors     | <ul style="list-style-type: none"> <li>♦ 2 x USB 3.2 Gen1</li> <li>♦ 1 x VGA</li> <li>♦ 1 x COM</li> <li>♦ 6 x RJ45</li> <li>♦ 1 x MLAN</li> <li>♦ 1 x ID button with LED</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                      |
|  | TPM                     | <ul style="list-style-type: none"> <li>♦ 1 x TPM Header with SPI Interface</li> <li>♦ Optional TPM2.0 kit: CTM010</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

|                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Board Management     | <ul style="list-style-type: none"> <li>◆ Aspeed® AST2600 Baseboard Management Controller</li> <li>◆ GIGABYTE Management Console web interface</li> <li>◆ Dashboard</li> <li>◆ HTML5 KVM</li> <li>◆ Sensor Monitor (Voltage, RPM, Temperature, CPU Status ...etc.)</li> <li>◆ Sensor Reading History Data</li> <li>◆ FRU Information</li> <li>◆ SEL Log in Linear Storage / Circular Storage Policy</li> <li>◆ Hardware Inventory</li> <li>◆ Fan Profile</li> <li>◆ System Firewall</li> <li>◆ Power Consumption</li> <li>◆ Power Control</li> <li>◆ Advanced power capping</li> <li>◆ LDAP / AD / RADIUS Support</li> <li>◆ Backup &amp; Restore Configuration</li> <li>◆ Remote BIOS/BMC/CPLD Update</li> <li>◆ Event Log Filter</li> <li>◆ User Management</li> <li>◆ Media Redirection Settings</li> <li>◆ PAM Order Settings</li> <li>◆ SSL Settings</li> <li>◆ SMTP Settings</li> </ul> |
|  Operating Properties | <ul style="list-style-type: none"> <li>◆ Operating temperature: 10°C to 40°C</li> <li>◆ Operating humidity: 8-80% (non-condensing)</li> <li>◆ Non-operating temperature: -40°C to 60°C</li> <li>◆ Non-operating humidity: 20%-95% (non-condensing)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## 1-3 Installing and Removing the CPU



Read the following guidelines before you begin to install the CPU:

- Make sure that the motherboard supports the CPU.
- Always turn off the computer and unplug the power cord from the power outlet before installing the CPU to prevent hardware damage.
- Unplug all cables from the power outlets.
- Disconnect all telecommunication cables from their ports.
- Place the system unit on a flat and stable surface.
- Open the system according to the instructions.





### **WARNING!**


Failure to properly turn off the server before you start installing components may cause serious damage. Do not attempt the procedures described in the following sections unless you are a qualified service technician.

### **Follow these instructions to Install the CPU:**

1. Align and install the processor on the carrier.  
**NOTE:** Apply thermal compound evenly on the top of the CPU. Remove the protective cover from the underside of the heat sink.
2. Carefully flip the heat sink cover. Then install the carrier assembly on the bottom of the heat sink and make sure the gold arrow is located in the correct direction.
3. Remove the CPU cover.  
**NOTE:** Save the CPU cover in the event that you need to remove the CPU from the socket.
4. Align the heat sink with the CPU socket by the guide pins and make sure the gold arrow is located in the correct direction. Then place the heat sink onto the top of the CPU socket.
5. Position the rotating wires into the latch position. Tighten the screws in sequential order (1→2→3→4).

**NOTE:** When disassembling the heat sink, loosen the screws in reverse order (4→3→2→1) and then move the rotating wires into the unlatch position.

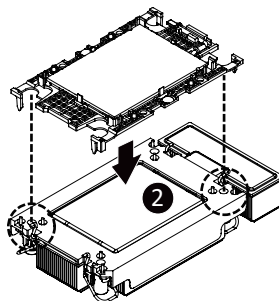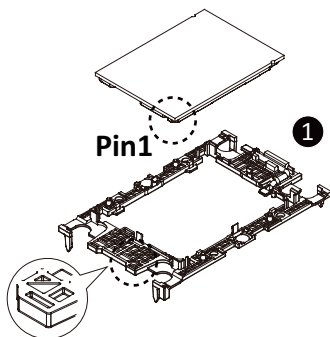

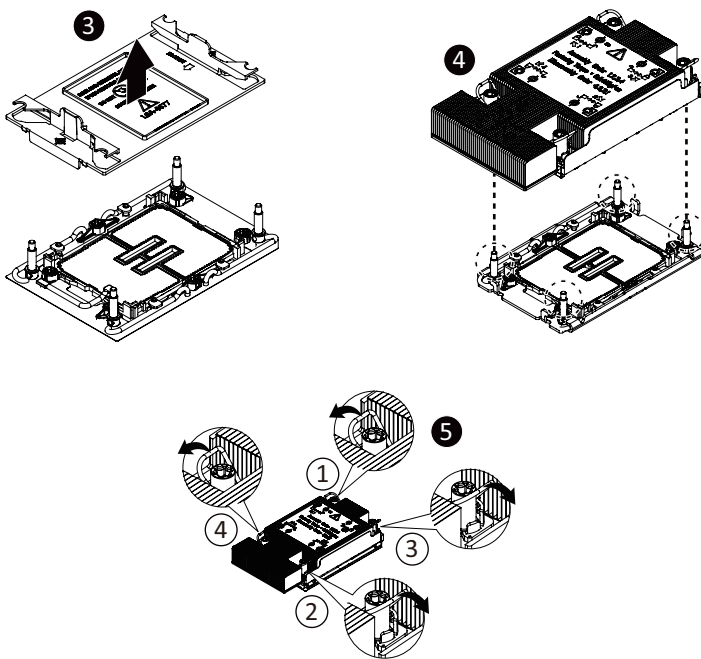

### Carrier Types used for Package Types

| Package Type | Xeon® SP XCC | Xeon® SP MCC | Xeon® SP+HBM |
|--------------|--------------|--------------|--------------|
| Carrier Code | E1A          | E1B          | E1C          |

#### Note!

- The carrier code is marked on each carrier and matches a code laser marked on to the IHS(Integrated Heat Spreader) to ensure the right parts are used together
- The illustrations of the heat-sink installation shown are for reference only.

## 1-4 Installing and Removing Memory




Read the following guidelines before you begin to install the memory:

- Make sure that the motherboard supports the memory. It is recommended to use memory of the same capacity, brand, speed, and chips.
- Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage.
- Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction.

### 1-4-1 Eight-Channel Memory Configuration

This motherboard provides 8 DDR5 memory slots and supports Eight-Channel Technology. After the memory is installed, the BIOS will automatically detect the specifications and capacity of the memory.

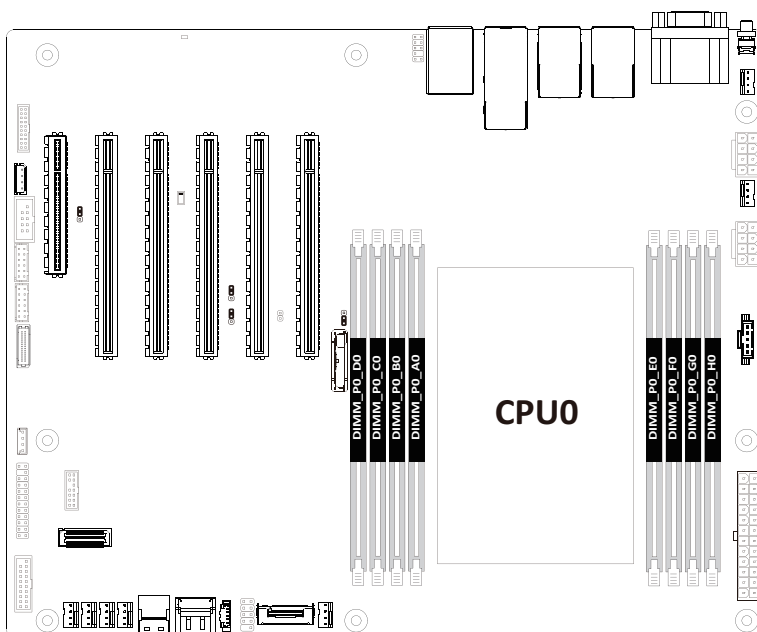

## 1-4-2 Installing and Removing a Memory Module




Before installing a memory module, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the memory module.

Be sure to install DDR5 DIMMs on this motherboard.


Make sure your DIMM slots have a single latch or a double latch.

Follow these instructions to install a DIMM module with Single Latch :


1. Open the plastic latch of the memory slot, then place the memory module as pre-inserted vertically position.

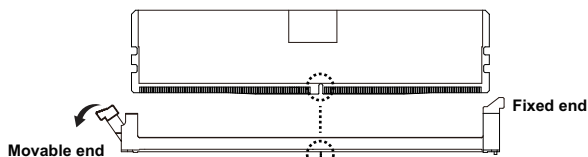

2. Hold it with both hands, insert the memory module into the movable end first, and then insert the memory module into the fixed end.

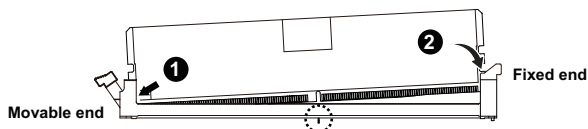


3. Then use both hands to insert the memory module vertically into the DIMM slot and push it down. Close the plastic latch at the edge of the DIMM slots to lock the memory module.



4. Reverse the installation steps when you want to remove the memory module.

Follow these instructions to install a DIMM module with Double Latch:

1. Insert the DIMM memory module vertically into the DIMM slot and push it down.
2. Close the plastic clip at both edges of the DIMM slots to lock the DIMM module.
3. Reverse the installation steps when you want to remove the DIMM module.

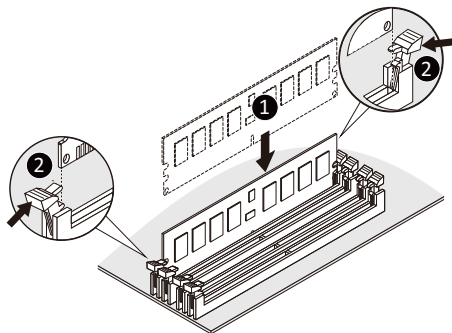

# 1-4-3 DIMM Population Table

## 4th Gen Intel Xeon Scalable Processors-SP Memory Support

| Type      | Ranks Per DIMM and Data Width | DIMM Capacity (GB)   |                   |       | Speed (MT/s); Voltage (V);<br>DIMM per Channel (DPC) |      |
|-----------|-------------------------------|----------------------|-------------------|-------|------------------------------------------------------|------|
|           |                               |                      |                   |       | 1DPC <sup>1</sup>                                    | 2DPC |
|           |                               | 16Gb                 | 24Gb <sup>2</sup> | 36Gb  | 1.1V                                                 |      |
| RDIMM     | SRx8 (RC D)                   | 16GB                 | 24GB              | NA    | 4800                                                 | 4400 |
|           | SRx4 (RC C)                   | 32GB                 | 48GB              | NA    |                                                      |      |
|           | SRx4 (RC F) 9x4               | 32GB                 | NA                | NA    |                                                      |      |
|           | DRx8 (RC E)                   | 32GB                 | 48GB              | NA    |                                                      |      |
|           | DRx4 (RC A)                   | 64GB                 | 96GB              | 128GB |                                                      |      |
|           | DRx4 (RC B) 9x4               | 64GB                 | NA                | NA    |                                                      |      |
| RDIMM 3DS | (4R/8R)x4<br>(RC A)           | 2H-128GB<br>4H-256GB | NA                | NA    |                                                      |      |

NOTE:

1. 1DPC applies to 1SPC or 2SPC implementations (SPC - Sockets Per Channel)

2. 24Gb XCC only w/ limited configs: 1DPC all DIMM types, 2DPC 96GB only. Only 8 and 16 DIMM configs, no fallbacks.

## 5th Gen Intel Xeon Scalable Processors-SP Memory Support

| Type      | Ranks Per DIMM and Data Width | DIMM Capacity (GB)   |                   |       | Speed (MT/s); Voltage (V);<br>DIMM per Channel (DPC) |                   |
|-----------|-------------------------------|----------------------|-------------------|-------|------------------------------------------------------|-------------------|
|           |                               |                      |                   |       | 1DPC <sup>1</sup>                                    | 2DPC              |
|           |                               | 16Gb                 | 24Gb <sup>2</sup> | 36Gb  | 1.1V                                                 |                   |
| RDIMM     | SRx8 (RC D)                   | 16GB                 | 24GB              | NA    | 5600 <sup>3</sup>                                    | 4400 <sup>3</sup> |
|           | SRx4 (RC C)                   | 32GB                 | 48GB              | NA    |                                                      |                   |
|           | SRx4 (RC F) 9x4               | NA                   | NA                | NA    |                                                      |                   |
|           | DRx8 (RC E)                   | 32GB                 | 48GB              | NA    |                                                      |                   |
|           | DRx4 (RC A)                   | 64GB                 | 96GB              | 128GB |                                                      |                   |
|           | DRx4 (RC B) 9x4               | NA                   | NA                | NA    |                                                      |                   |
| RDIMM 3DS | (4R/8R)x4<br>(RC A)           | 2H-128GB<br>4H-256GB | NA                | NA    | 5600 <sup>4</sup>                                    |                   |

NOTE:

1. 1DPC applies to 1SPC or 2SPC implementations (SPC - Sockets Per Channel)

2. 24Gb 2DPC not POR w/ 24GB and 48GB DIMMs.

3. DDR5-5600 RDIMMs will be limited to 5600 MT/s 1DPC and 4400 MT/s 2DPC. DDR5-4800 DIMMs will be limited to 4800 MT/s 1DPC and 4400 MT/s 2DPC.

4. DDR5-5600 DIMMs are required for 5600 and 5200 1DPC speeds.

# 1-4-4 Processor and Memory Module Matrix Table

| Memory Q'ty | CPU0 |    |    |    |    |    |    |    |
|-------------|------|----|----|----|----|----|----|----|
|             | D0   | C0 | B0 | A0 | E0 | F0 | G0 | H0 |
| 1 DIMM      |      |    |    | v  |    |    |    |    |
| 2 DIMM      |      |    |    | v  |    |    | v  |    |
| 4 DIMM      |      | v  |    | v  | v  |    | v  |    |
| 8 DIMM      | v    | v  | v  | v  | v  | v  | v  | v  |

## 1-5 Installing the M.2 SSD Module



### WARNING:

Installation of the thermal pad over the M.2 device is required when installing an M.2 device. Lack of the thermal pad may result in the system overheating and throttle the system performance.




### CAUTION


The position of the stand-off screw will depend on the size of the M.2 device. The stand-off screw is pre-installed for 2280 cards as standard. Refer to the size of the M.2 device and change the position of the stand-off screw accordingly.

### Follow these instructions to install the M.2 device and heat sink:

1. Insert the M.2 device into the M.2 connector.
2. Press down on the M.2 device.
3. Install the thermal pad of the M.2 device to the M.2 device.
4. Press down on the thermal pad.
5. Secure the M.2 device and its thermal pad to the motherboard with a single screw.
6. Reverse steps 1-5 to remove the M.2 device.

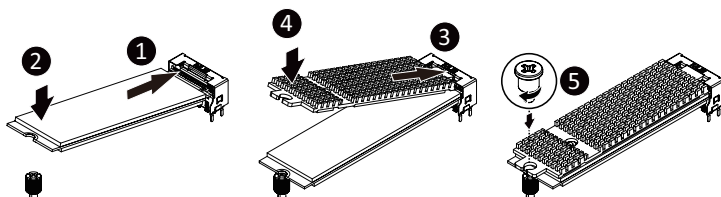

# 1-6 Back Panel Connectors

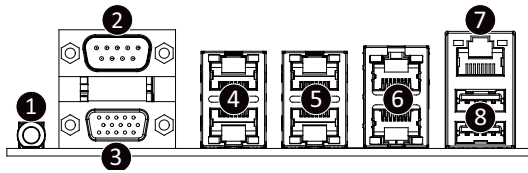

## 1 ID button with LED

When the system identification is active, the ID LED on the front/ back panel glows blue.

## 2 Serial Port

Connect to serial-based mouse or data processing devices.

## 3 VGA Port

Connect to a monitor device.

## 4 1GbE LAN Port #5/#6

The Gigabit Ethernet LAN port provides Internet connection at up to 1 Gbps data rate. See the section below for a description of the states of the LAN port LEDs.

## 5 1GbE LAN Port #3/#4

The Gigabit Ethernet LAN port provides Internet connection at up to 1 Gbps data rate. See the section below for a description of the states of the LAN port LEDs.

## 6 10GbE LAN Port #1/#2

The Gigabit Ethernet LAN port provides Internet connection at up to 10 Gbps data rate. See the section below for a description of the states of the LAN port LEDs.


## 7 Server Management LAN Port

The LAN port provides Internet connection with data transfer speeds of 10/100/1000Mbps. This port is the dedicated LAN port for Server Management.

## 8 USB 3.2 Gen1 Ports

The USB port supports the USB 3.2 specification. Use this port for USB devices such as a USB keyboard/mouse, USB printer, USB flash drive etc.

### LAN and ID Button LEDs

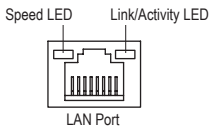

#### 10GbE LAN LED:

| State     | Description                     |
|-----------|---------------------------------|
| Yellow On | 5Gbps, 2.5Gbps, 1Gbps data rate |
| Green On  | 10Gbps data rate                |
| Off       | 100Mbps data rate               |

#### 10/100/1000 LAN LED:

| State     | Description       |
|-----------|-------------------|
| Yellow On | 1Gbps data rate   |
| Green On  | 100Mbps data rate |
| Off       | 10Mbps data rate  |


#### ID button/LED:

| State   | Description                       |
|---------|-----------------------------------|
| Blue On | System identification is active   |
| Off     | System identification is disabled |



- When removing the cable connected to a back panel connector, first remove the cable from your device and then remove it from the motherboard.
- When removing the cable, pull it straight out from the connector. Do not rock it side to side to prevent an electrical short inside the cable connector.

# 1-7 Internal Connectors

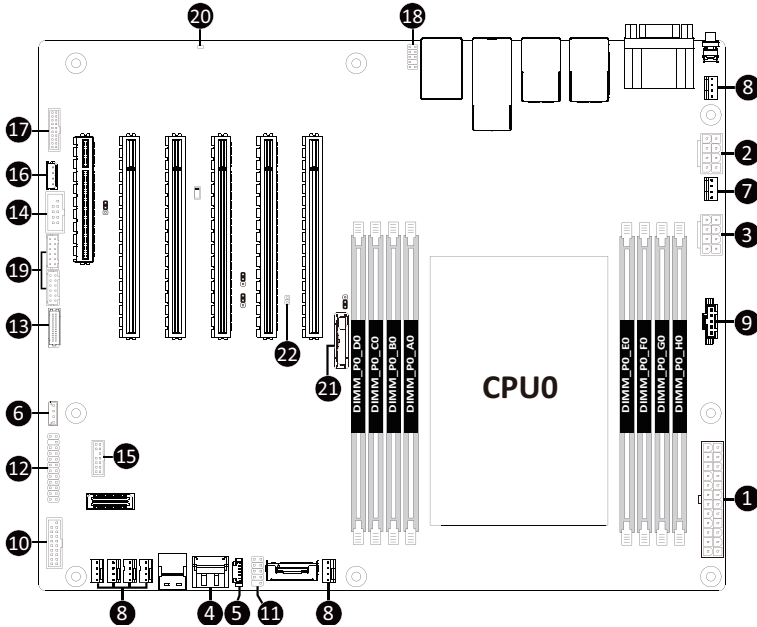

|                       |                           |
|-----------------------|---------------------------|
| 1) ATX1               | 12) FP_1                  |
| 2) P12V_AUX1          | 13) BP_1                  |
| 3) P12V_AUX2          | 14) COM2                  |
| 4) SATA_4_5           | 15) SPI_TPM               |
| 5) SATA_SGP2          | 16) IPMB                  |
| 6) SW_RAID            | 17) CN_NCSI               |
| 7) CPU0_FAN           | 18) F_AUDIO1              |
| 8) SYS_FAN1/2/3/4/5/6 | 19) GPIO_CNT_1/GPIO_CNT_2 |
| 9) PMBUS              | 20) LED_BMC               |
| 10) F_USB1            | 21) BAT                   |
| 11) F_USB2            | 22) CASE_OPEN             |



Read the following guidelines before connecting external devices:

- First make sure your devices are compliant with the connectors you wish to connect.
- Before installing the devices, be sure to turn off the devices and your computer. Unplug the power cord from the power outlet to prevent damage to the devices.
- After installing the device and before turning on the computer, make sure the device cable has been securely attached to the connector on the motherboard.


## 1/2/3) ATX1/P12V\_AUX1/P12V\_AUX2

### (2x12 Main Power Connector and 2x4 12V Power Connector)

With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, first make sure the power supply is turned off and all devices are properly installed. The power connector possesses a foolproof design. Connect the power supply cable to the power connector in the correct orientation. The 12V power connector mainly supplies power to the CPU. If the 12V power connector is not connected, the computer will not start.



To meet expansion requirements, it is recommended that a power supply that can withstand high power consumption be used (500W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable or unbootable system.

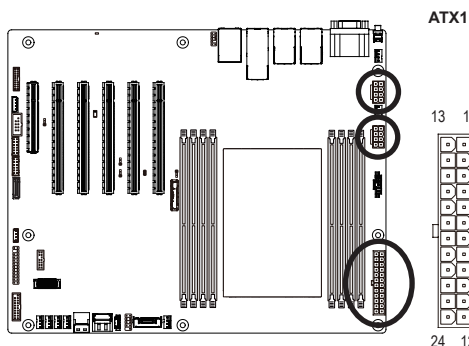

ATX1

| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1       | 3.3V       | 13      | 3.3V       |
| 2       | 3.3V       | 14      | -12V       |
| 3       | GND        | 15      | GND        |
| 4       | +5V        | 16      | PS_ON      |
| 5       | GND        | 17      | GND        |
| 6       | +5V        | 18      | GND        |
| 7       | GND        | 19      | GND        |
| 8       | Power Good | 20      | NC         |
| 9       | 5VSB       | 21      | +5V        |
| 10      | +12V       | 22      | +5V        |
| 11      | +12V       | 23      | +5V        |
| 12      | 3.3V       | 24      | GND        |



P12V\_AUX1/P12V\_AUX2



| Pin No. | Definition |
|---------|------------|
| 1       | GND        |
| 2       | GND        |
| 3       | GND        |
| 4       | GND        |
| 5       | +12V       |
| 6       | +12V       |
| 7       | +12V       |
| 8       | +12V       |

4) SATA\_4\_5 (SATA III 6Gb/s Connectors)


The SATA connectors conform to SATA III 6Gb/s standard and are compatible with SATA 3Gb/s standard. Each SATA connector supports a single SATA device.

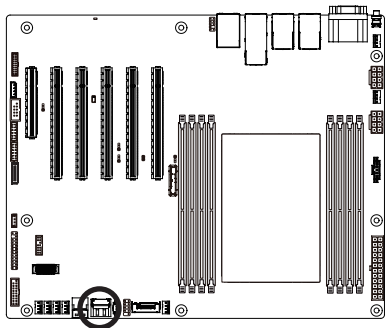

| Pin No. | Definition |
|---------|------------|
| 1       | GND        |
| 2       | TXP        |
| 3       | TXN        |
| 4       | GND        |
| 5       | RXN        |
| 6       | RXP        |
| 7       | GND        |


5) SATA\_SGP2 (SATA SGPIO Connector)

Serial General Purpose Input/Output (SGPIO) is a communication method used between a host bus adapter (HBA) and a main board.

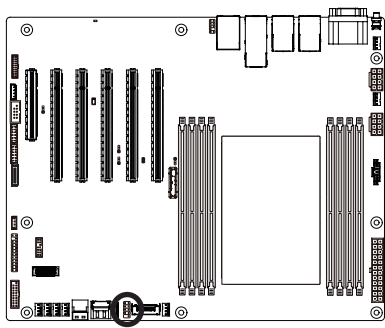

| Pin No. | Definition |
|---------|------------|
| 1       | DATAOUT    |
| 2       | GND        |
| 3       | NC         |
| 4       | Load       |
| 5       | Clock      |



### 6) SW\_RAID (VROC Module Connector)

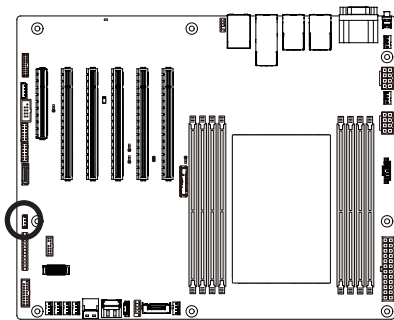

| Pin No. | Definition        |
|---------|-------------------|
| 1       | GND               |
| 2       | P_3V3_AUX         |
| 3       | GND               |
| 4       | PCH_SATA_RAID_KEY |

### 7/8) CPU0\_FAN/SYS\_FAN1/SYS\_FAN2/SYS\_FAN3/SYS\_FAN4/SYS\_FAN5/SYS\_FAN6 (Fan Headers)

The motherboard has one 4-pin CPU fan header (CPU\_FAN), and six 4-pin (SYS\_FAN) system fan headers. Most fan headers possess a foolproof insertion design. When connecting a fan cable, be sure to connect it in the correct orientation (the black connector wire is the ground wire). The motherboard supports CPU fan speed control, which requires the use of a CPU fan with fan speed control design. For optimum heat dissipation, it is recommended that a system fan be installed inside the chassis.

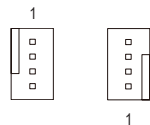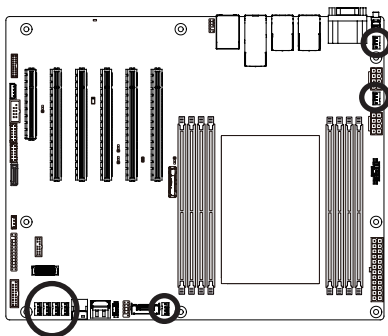


| Pin No. | Definition    |
|---------|---------------|
| 1       | GND           |
| 2       | +12V          |
| 3       | Sense         |
| 4       | Speed Control |



- Be sure to connect fan cables to the fan headers to prevent your CPU and system from overheating. Overheating may result in damage to the CPU or the system may hang.
- These fan headers are not configuration jumper blocks. Do not place a jumper cap on the headers.

9) PMBus Connector


The Power Management Bus (PMBus) is a variant of the System Management Bus (SMBus) which is targeted at digital management of power supplies.

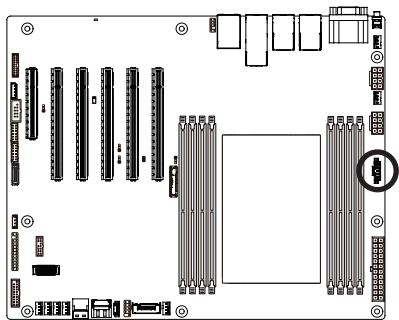


| Pin No. | Definition  |
|---------|-------------|
| 1       | PMBus Clock |
| 2       | PMBus Data  |
| 3       | PMBus Alert |
| 4       | GND         |
| 5       | 3.3V Sense  |

10/11) F\_USB1/F\_USB2 (Front Panel USB 3.2 Gen1 Connector/2.0 Header)

The connector/header conform to USB 2.0/3.2 specification. Each USB connector/header can provide two USB ports via an optional USB bracket. For purchasing the optional USB bracket, please contact the local dealer.

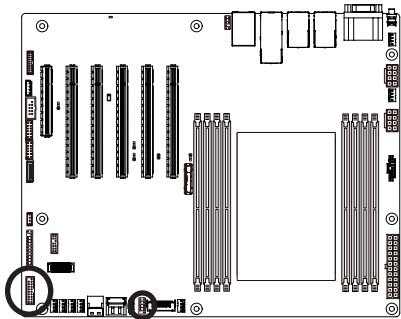

USB 3.2 Gen1 Connector



| Pin No. | Definition    | Pin No. | Definition    |
|---------|---------------|---------|---------------|
| 1       | Power         | 11      | IntA_P2_D+    |
| 2       | IntA_P1_SSRX- | 12      | IntA_P2_D-    |
| 3       | IntA_P1_SSRX+ | 13      | GND           |
| 4       | GND           | 14      | IntA_P2_SSTX+ |
| 5       | IntA_P1_SSTX- | 15      | IntA_P2_SSTX- |
| 6       | IntA_P1_SSTX+ | 16      | GND           |
| 7       | GND           | 17      | IntA_P2_SSRX+ |
| 8       | IntA_P1_D-    | 18      | IntA_P2_SSRX- |
| 9       | IntA_P1_D+    | 19      | Power         |
| 10      | NC            | 20      | No Pin        |


USB 2.0 Header



| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1       | Power (5V) | 6       | USB DY+    |
| 2       | Power (5V) | 7       | GND        |
| 3       | USB DX-    | 8       | GND        |
| 4       | USB DY-    | 9       | No Pin     |
| 5       | USB DX+    | 10      | No Connect |

## 12) FP\_1 (Front Panel Header)

Connect the power switch, reset switch, speaker, chassis intrusion switch/sensor and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

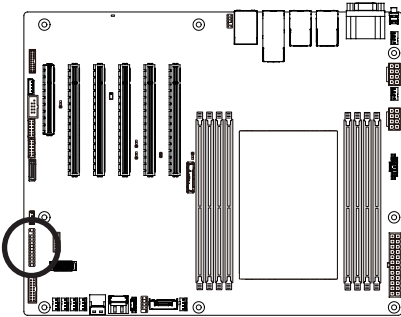


| Pin No. | Definition   | Pin No. | Definition          |
|---------|--------------|---------|---------------------|
| 1       | Power LED+   | 2       | 5V Standby          |
| 3       | No Pin       | 4       | ID LED+             |
| 5       | Power LED-   | 6       | ID LED-             |
| 7       | HDD LED+     | 8       | System Status LED+  |
| 9       | HDD LED-     | 10      | System Status LED - |
| 11      | Power Button | 12      | LAN1 Active LED+    |
| 13      | GND          | 14      | LAN1 Link LED-      |
| 15      | Reset Button | 16      | SMBus Data          |
| 17      | GND          | 18      | SMBus Clock         |
| 19      | ID Button    | 20      | Case Open           |
| 21      | GND          | 22      | LAN2 Active LED+    |
| 23      | NMI Switch   | 24      | LAN2 Link LED-      |



The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.


## 13) BP\_1 (HDD Backplane Board Connector)

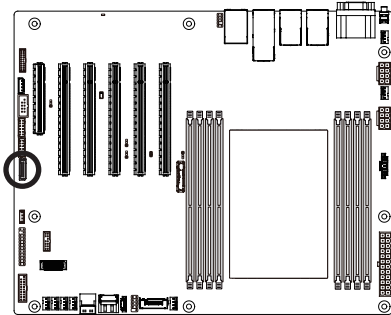


| Pin No. | Definition     | Pin No. | Definition     |
|---------|----------------|---------|----------------|
| 1       | Reserved       | 2       | BPMI DIN/OUT   |
| 3       | GND            | 4       | BPMI DOUT/IN   |
| 5       | BPMI_LOAD      | 6       | GND            |
| 7       | BPMI_CLK       | 8       | PLD_Program_EN |
| 9       | GLED_AMB_N     | 10      | GLED_GRN_N     |
| 11      | FAN_IRQ_N      | 12      | Reserved       |
| 13      | BP_SCL         | 14      | GND            |
| 15      | BP_SDA         | 16      | BP_RST_N       |
| 17      | SMB_U2_TMP_SCL | 18      | GND            |
| 19      | SMB_U2_TMP_SDA | 20      | I2C_DEV_RST    |
| 21      | PH_HP_SCL0     | 22      | GND            |
| 23      | PH_HP_SDA0     | 24      | GND            |
| 25      | PH_HP_SCL1     | 26      | GND            |
| 27      | PH_HP_SDA1     | 28      | GND            |
| 29      | P3V3_AUX       | 30      | P3V3_AUX       |

14) COM2 (Serial Port Cable Connector)

The COM header can provide one serial port via an optional COM port cable. For purchasing the optional COM port cable, please contact the local dealer.

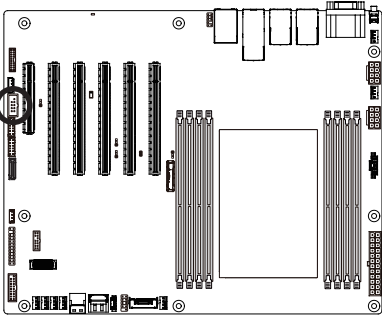





| Pin No. | Definition |
|---------|------------|
| 1       | NDCDB#     |
| 2       | NDSRB#     |
| 3       | NSINB      |
| 4       | NRTSB#     |
| 5       | NSOUTB     |
| 6       | NCTSB#     |
| 7       | NDTRB#     |
| 8       | NEIB#      |
| 9       | GND        |
| 10      | No Pin     |

15) SPI\_TPM (Trusted Platform Module Connector)

Trusted Platform Module (TPM) is an international standard for a secure cryptoprocessor, a dedicated microcontroller designed to secure hardware through integrated cryptographic keys.

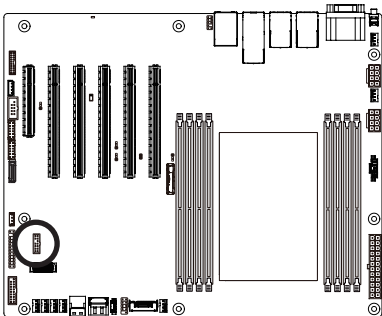




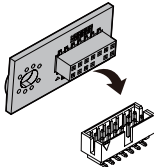


| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1       | Clock      | 8       | NC         |
| 2       | P_3V3_AUX  | 9       | NC         |
| 3       | LPC_RST    | 10      | No Pin     |
| 4       | NC         | 11      | NC         |
| 5       | SPI_MISO   | 12      | GND        |
| 6       | IRQ_SPI    | 13      | SPI_CS_N   |
| 7       | SPI_MOSI   | 14      | GND        |

16) IPMB (Intelligent Platform Management Bus) Connector

The Intelligent Platform Management Bus Communications Protocol defines a byte-level transport for transferring Intelligent Platform Management Interface Specification (IPMI) messages between intelligent I2C devices.


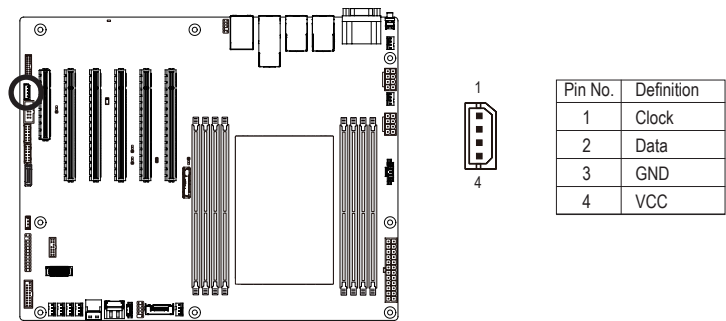


17) CN\_NCSI (NCSI Connector)

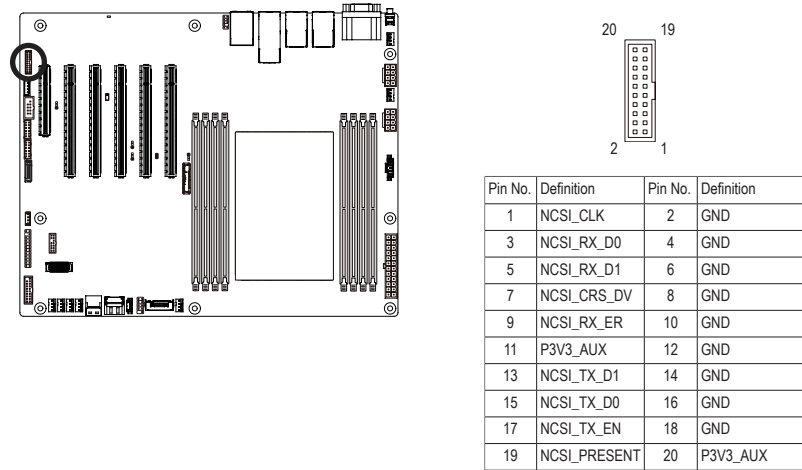


### 18) F\_AUDIO1 (Front Panel Audio Header)

The front panel audio header supports Intel High Definition audio (HD). You may connect your chassis front panel audio module to this header. Make sure the wire assignments of the module connector match the pin assignments of the motherboard header. Incorrect connection between the module connector and the motherboard header will make the device unable to work or even damage it.

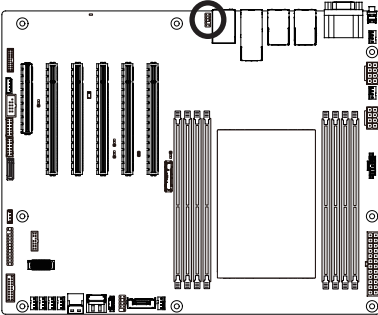

| Pin No. | Definition   |
|---------|--------------|
| 1       | MIC_L        |
| 2       | GND          |
| 3       | MIC_R        |
| 4       | Power (3.3V) |
| 5       | LINE_R       |
| 6       | GND          |
| 7       | AUDIO_JD     |
| 8       | NA           |
| 9       | LINE_L       |
| 10      | GND          |

### 19) GPIO\_CNT\_1/GPIO\_CNT\_2 (General-Purpose Input/Output Connector)

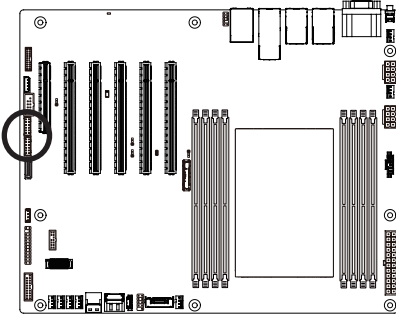


#### GPIO\_CNT\_1

| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1       | SOGP0_1    | 7       | SOGP0_4    |
| 2       | SOGP1_1    | 8       | SOGP1_4    |
| 3       | SOGP0_2    | 9       | SMB_CLK    |
| 4       | SOGP1_2    | 10      | SMB_DATA   |
| 5       | SOGP0_3    | 11      | VCC(5V)    |
| 6       | SOGP1_3    | 12      | GND        |

#### GPIO\_CNT\_2

| Pin No. | Definition | Pin No. | Definition |
|---------|------------|---------|------------|
| 1       | SOGP2_1    | 7       | SOGP2_4    |
| 2       | SOGP3_1    | 8       | SOGP3_4    |
| 3       | SOGP2_2    | 9       | SMB_CLK    |
| 4       | SOGP3_2    | 10      | SMB_DATA   |
| 5       | SOGP2_3    | 11      | VCC(5V)    |
| 6       | SOGP3_3    | 12      | GND        |



## 20) LED\_BMC (BMC Firmware Readiness LED)

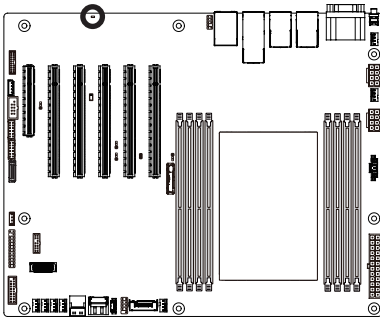

| State | Description             |
|-------|-------------------------|
| On    | BMC firmware is initial |
| Blink | BMC firmware is ready   |
| Off   | AC loss                 |

## 21) BAT (Battery Socket)


The battery provides power to keep the values (such as BIOS configurations, date, and time information) in the CMOS when the computer is turned off. Replace the battery when the battery voltage drops to a low level, or the CMOS values may not be accurate or may be lost.

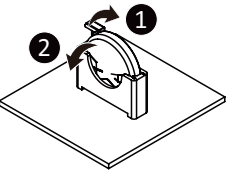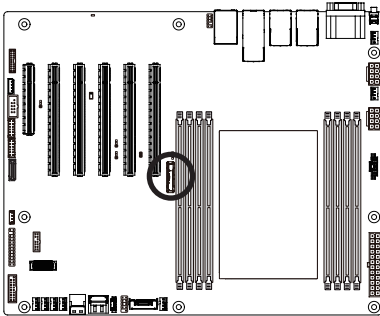

- Always turn off your computer and unplug the power cord before replacing the battery.
- Replace the battery with an equivalent one. Danger of explosion if the battery is replaced with an incorrect model.
- Contact the place of purchase or local dealer if you are not able to replace the battery by yourself or uncertain about the battery model.
- Used batteries must be handled in accordance with local environmental regulations.


## 22) CASE\_OPEN (Case Open Intrusion Alert Header)

This motherboard provides a chassis detection feature that detects if the chassis cover has been removed. This function requires a chassis with chassis intrusion detection design.

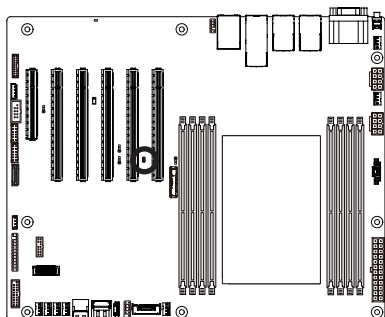

- ☐ Open: Normal Operation (Default)
- ☐ Closed: Active Chassis Intrusion Alert

# 1-8 Jumper Settings

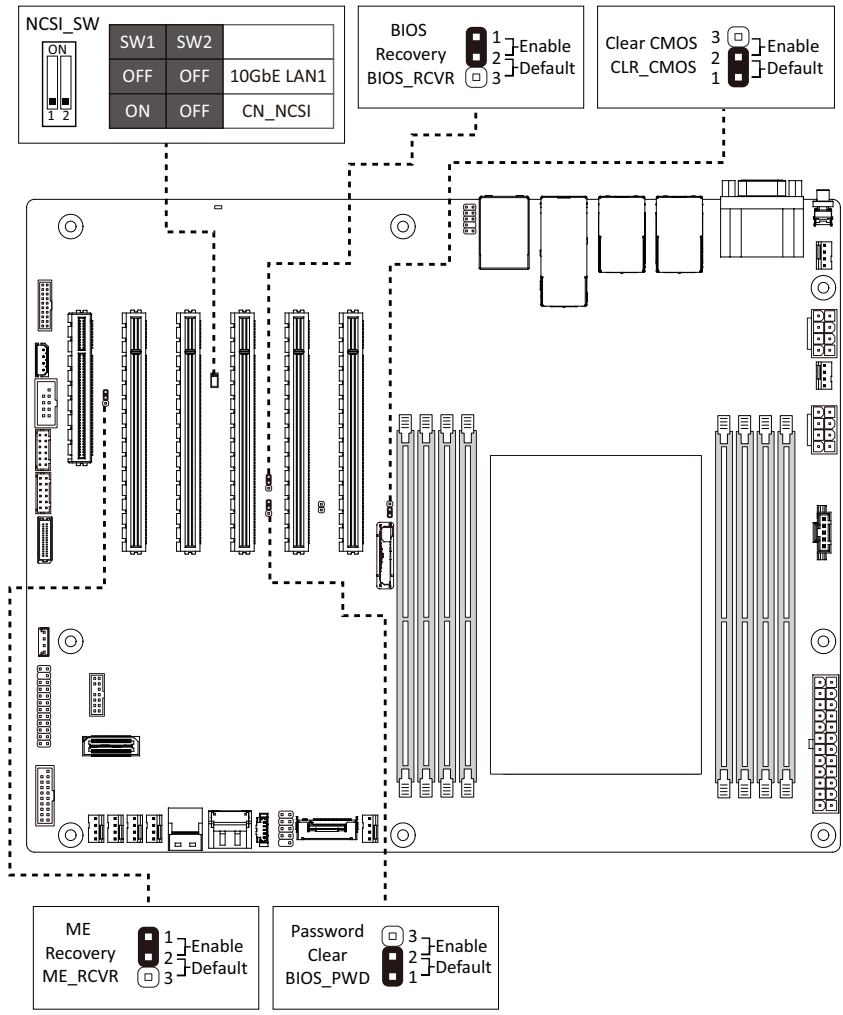

## Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) records hardware parameters of the system in the EFI on the motherboard. Its major functions include conducting the Power-On Self-Test (POST) during system startup, saving system parameters, loading the operating system etc. The BIOS includes a BIOS Setup program that allows the user to modify basic system configuration settings or to activate certain system features. When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS to keep the configuration values in the CMOS.

To access the BIOS Setup program, press the <DEL> key during the POST when the power is turned on.



- BIOS flashing is potentially risky, if you do not encounter any problems when using the current BIOS version, it is recommended that you don't flash the BIOS. To flash the BIOS, do it with caution. Inadequate BIOS flashing may result in system malfunction.
- It is recommended that you not alter the default settings (unless you need to) to prevent system instability or other unexpected results. Inadequately altering the settings may result in system's failure to boot. If this occurs, try to clear the CMOS values and reset the board to default values. (Refer to the **Exit** section in this chapter or introductions of the battery/clearing CMOS jumper in Chapter 1 for how to clear the CMOS values.)

### BIOS Setup Program Function Keys

|          |                                                                          |
|----------|--------------------------------------------------------------------------|
| <<-><->> | Move the selection bar to select the screen                              |
| <↑><↓>   | Move the selection bar to select an item                                 |
| <+>      | Increase the numeric value or make changes                               |
| <->      | Decrease the numeric value or make changes                               |
| <Enter>  | Execute command or enter the submenu                                     |
| <Esc>    | Main Menu: Exit the BIOS Setup program<br>Submenus: Exit current submenu |
| <F1>     | Show descriptions of general help                                        |
| <F3>     | Restore the previous BIOS settings for the current submenus              |
| <F9>     | Load the Optimized BIOS default settings for the current submenus        |
| <F10>    | Save all the changes and exit the BIOS Setup program                     |

■ **Main**

This setup page includes all the items of the standard compatible BIOS.

■ **Advanced**

This setup page includes all the items of AMI BIOS special enhanced features.

(ex: Auto detect fan and temperature status, automatically configure hard disk parameters.)

■ **Chipset**

This setup page includes all the submenu options for configuring the functions of the Platform Controller Hub.

■ **Server Management**

Server additional features enabled/disabled setup menus.

■ **Security**

Change, set, or disable supervisor and user password. Configuration supervisor password allows you to restrict access to the system and BIOS Setup.

A supervisor password allows you to make changes in BIOS Setup.

A user password only allows you to view the BIOS settings but not to make changes.

■ **Boot**

This setup page provides items for configuration of the boot sequence.

■ **Save & Exit**

Save all the changes made in the BIOS Setup program to the CMOS and exit BIOS Setup. (Pressing <F10> can also carry out this task.)

Abandon all changes and the previous settings remain in effect. Pressing <Y> to the confirmation message will exit BIOS Setup. (Pressing <Esc> can also carry out this task.)

# 2-1 The Main Menu

Once you enter the BIOS Setup program, the Main Menu (as shown below) appears on the screen. Use arrow keys to move among the items and press <Enter> to accept or enter other sub-menu.

## Main Menu Help


The on-screen description of a highlighted setup option is displayed on the bottom line of the Main Menu.


## Submenu Help

While in a submenu, press <F1> to display a help screen (General Help) of function keys available for the menu. Press <Esc> to exit the help screen. Help for each item is in the Item Help block on the right side of the submenu.



- When the system is not stable as usual, select the **Restore Defaults** item to set your system to its defaults.
- The BIOS Setup menus described in this chapter are for reference only and may differ by BIOS version.

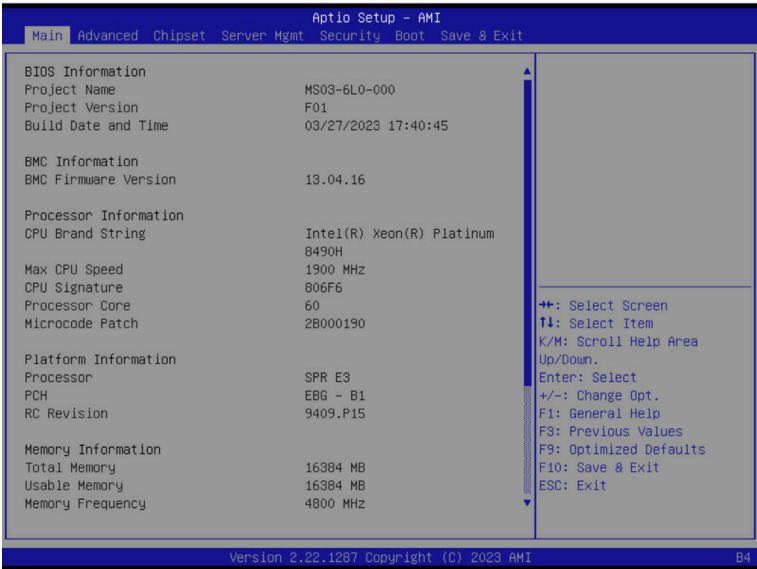

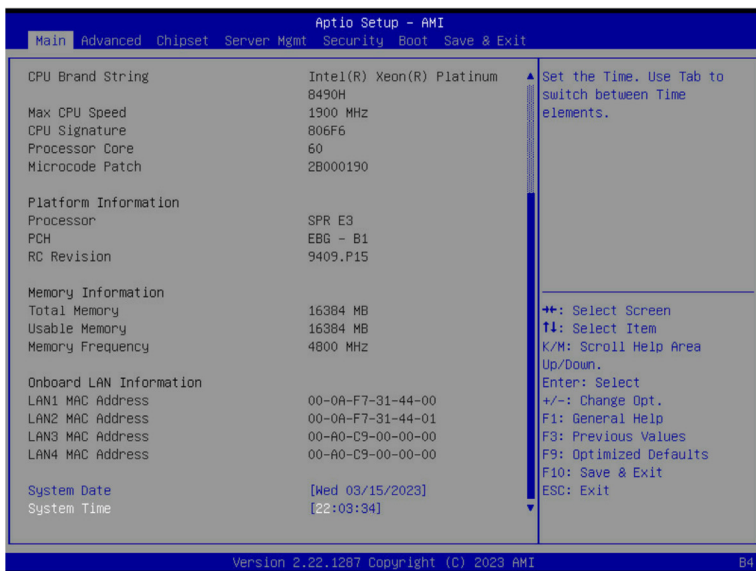

| Parameter                                                                          | Description                                                         |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------|
| BIOS Information                                                                   |                                                                     |
| Project Name                                                                       | Displays the project name information.                              |
| Project Version                                                                    | Displays version number of the BIOS setup utility.                  |
| Build Date and Time                                                                | Displays the date and time when the BIOS setup utility was created. |
| BMC Information <sup>(Note1)</sup>                                                 |                                                                     |
| BMC Firmware Version <sup>(Note1)</sup>                                            | Displays BMC firmware version information.                          |
| Processor Information                                                              |                                                                     |
| CPU Brand String/ Max CPU Speed / CPU Signature / Processor Core / Microcode Patch | Displays the technical information for the installed processor(s).  |
| Platform Information                                                               |                                                                     |
| Processor/ PCH/ RC Revision                                                        | Displays the information of the installed processor(s) and PCH.     |
| Memory Information <sup>(Note2)</sup>                                              |                                                                     |
| Total Memory                                                                       | Displays the total memory size of the installed memory.             |
| Usable Memory                                                                      | Displays the usable memory size of the installed memory.            |

(Note1) Functions available on selected models.



(Note2) This section will display capacity and frequency information of the memory that the customer has installed.

| Parameter                                  | Description                                                   |
|--------------------------------------------|---------------------------------------------------------------|
| Memory Frequency                           | Displays the frequency information of the installed memory.   |
| Onboard LAN Information <sup>(Note3)</sup> |                                                               |
| LAN# MAC Address                           | Displays LAN MAC address information.                         |
| System Date                                | Sets the date following the weekday-month-day-year format.    |
| System Time                                | Sets the system time following the hour-minute-second format. |


(Note3) The number of LAN ports listed will depend on the motherboard / system model.

## 2-2 Advanced Menu

The Advanced Menu displays submenu options for configuring the function of various hardware components. Select a submenu item, then press <Enter> to access the related submenu screen.

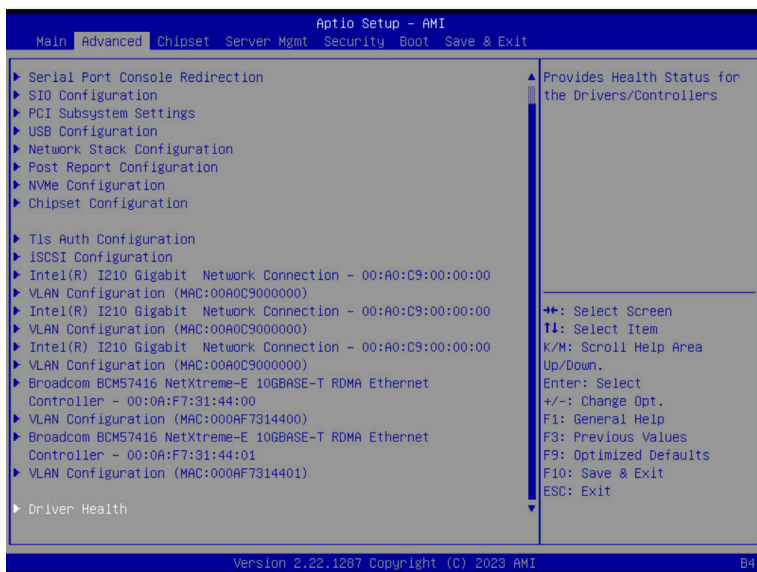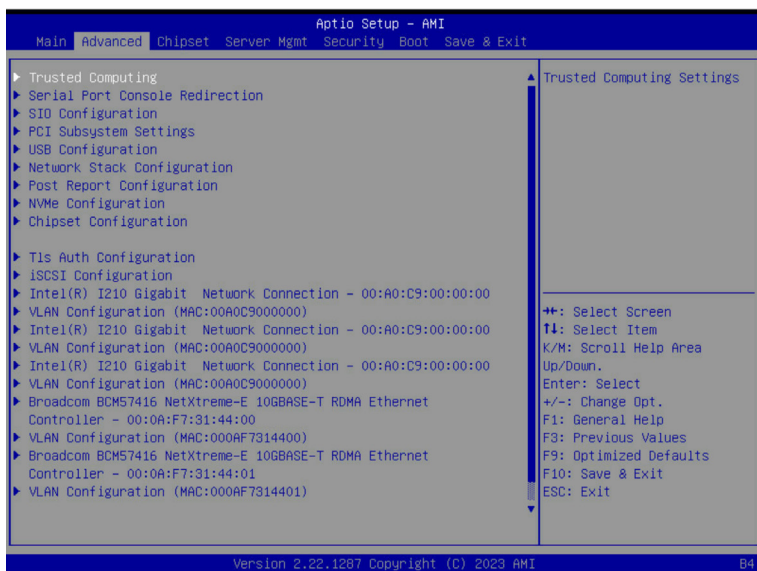

2-2-1 Trusted Computing

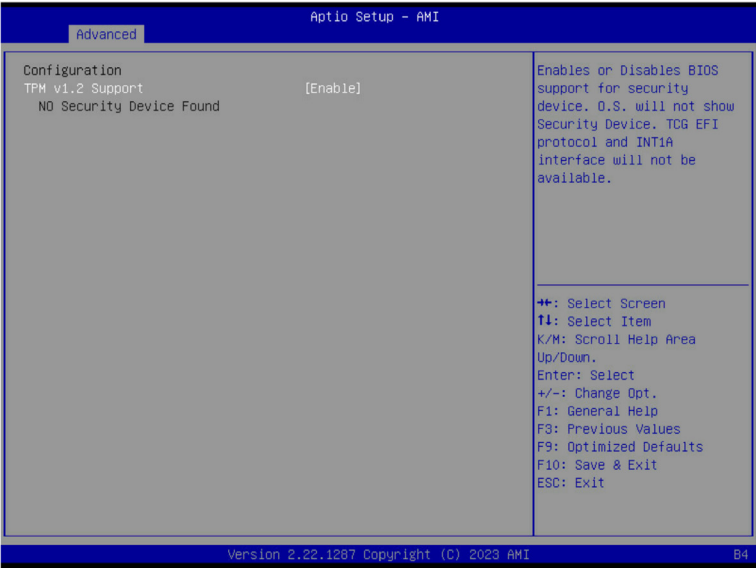

| Parameter        | Description                                                                                                                                                                                                              |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Configuration    |                                                                                                                                                                                                                          |
| TPM v1.2 Support | Enable/Disable BIOS support for security device. OS will not show security device. TCG EFI protocol and INT1A interface will not be available.<br>Options available: Disable, Enable. Default setting is <b>Enable</b> . |

## 2-2-2 Serial Port Console Redirection




| Parameter                                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| COM1 Console Redirection <sup>(Note)</sup> | <p>Console redirection enables the users to manage the system from a remote location.</p> <p>Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| COM1 Console Redirection Settings          | <p>Press [Enter] to configure advanced items.</p> <p><b>Please note that this item is configurable when COM1 Console Redirection is set to Enabled.</b></p> <ul style="list-style-type: none"><li>◆ Terminal Type<ul style="list-style-type: none"><li>– Selects a terminal type to be used for console redirection.</li><li>– Options available: VT100, VT100PLUS, VT-UTF8, ANSI. Default setting is <b>VT100PLUS</b>.</li></ul></li><li>◆ Bits per second<ul style="list-style-type: none"><li>– Selects the transfer rate for console redirection.</li><li>– Options available: 9600, 19200, 38400, 57600, 115200. Default setting is <b>115200</b>.</li></ul></li><li>◆ Data Bits<ul style="list-style-type: none"><li>– Selects the number of data bits used for console redirection.</li><li>– Options available: 7, 8. Default setting is <b>8</b>.</li></ul></li></ul> |

(Note) Advanced items prompt when this item is defined.

| Parameter                                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| COM1 Console Redirection Settings (continued) | <ul style="list-style-type: none"> <li>◆ Parity <ul style="list-style-type: none"> <li>– A parity bit can be sent with the data bits to detect some transmission errors.</li> <li>– Even: parity bit is 0 if the num of 1's in the data bits is even.</li> <li>– Odd: parity bit is 0 if num of 1's in the data bits is odd.</li> <li>– Mark: parity bit is always 1. Space: Parity bit is always 0.</li> <li>– Mark and Space Parity do not allow for error detection.</li> <li>– Options available: None, Even, Odd, Mark, Space. Default setting is <b>None</b>.</li> </ul> </li> <li>◆ Stop Bits <ul style="list-style-type: none"> <li>– Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.</li> <li>– Options available: 1, 2. Default setting is <b>1</b>.</li> </ul> </li> <li>◆ Flow Control <ul style="list-style-type: none"> <li>– Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.</li> <li>– Options available: None, Hardware RTS/CTS. Default setting is <b>None</b>.</li> </ul> </li> <li>◆ VT-UTF8 Combo Key Support <ul style="list-style-type: none"> <li>– Enable/Disable the VT-UTF8 Combo Key Support.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> <li>◆ Recorder Mode <ul style="list-style-type: none"> <li>– When this mode enabled, only texts will be send. This is to capture Terminal data.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ Resolution 100x31 <ul style="list-style-type: none"> <li>– Enable/Disable extended terminal resolution.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> <li>◆ Putty KeyPad <ul style="list-style-type: none"> <li>– Selects Function Key and KeyPad on Putty.</li> <li>– Options available: VT100, LINUX, XTERMR6, SC0, ESCN, VT400. Default setting is <b>VT100</b>.</li> </ul> </li> </ul> |

| Parameter                                                                                                                  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Serial Port for Out-of-Band Management / Windows Emergency Management Services (EMS) Console Redirection <sup>(Note)</sup> | <p>EMS console redirection allows the user to configure Console Redirection Settings to support Out-of-Band Serial Port management.</p> <p>Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Serial Port for Out-of-Band EMS Console Redirection Settings                                                               | <p>Press [Enter] to configure advanced items.</p> <p><b>Please note that this item is configurable when Serial Port for Out-of-Band Management EMS Console Redirection is set to Enabled.</b></p> <ul style="list-style-type: none"> <li>◆ Out-of-Band Mgmt Port <ul style="list-style-type: none"> <li>– Microsoft Windows Emergency Management Service (EMS) allows for remote management of a Windows Server OS through a serial port.</li> <li>– Default setting is <b>COM1</b>.</li> </ul> </li> <li>◆ Terminal Type EMS <ul style="list-style-type: none"> <li>– Selects a terminal type to be used for console redirection.</li> <li>– Options available: VT100, VT100PLUS, VT-UTF8, ANSI. Default setting is <b>VT100PLUS</b>.</li> </ul> </li> <li>◆ Bits per second EMS <ul style="list-style-type: none"> <li>– Selects the transfer rate for console redirection.</li> <li>– Options available: 9600, 19200, 57600, 115200. Default setting is <b>115200</b>.</li> </ul> </li> <li>◆ Flow Control EMS <ul style="list-style-type: none"> <li>– Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.</li> <li>– Options available: None, Hardware RTS/CTS, Software Xon/Xoff. Default setting is <b>None</b>.</li> </ul> </li> </ul> |

### 2-2-3 SIO Configuration

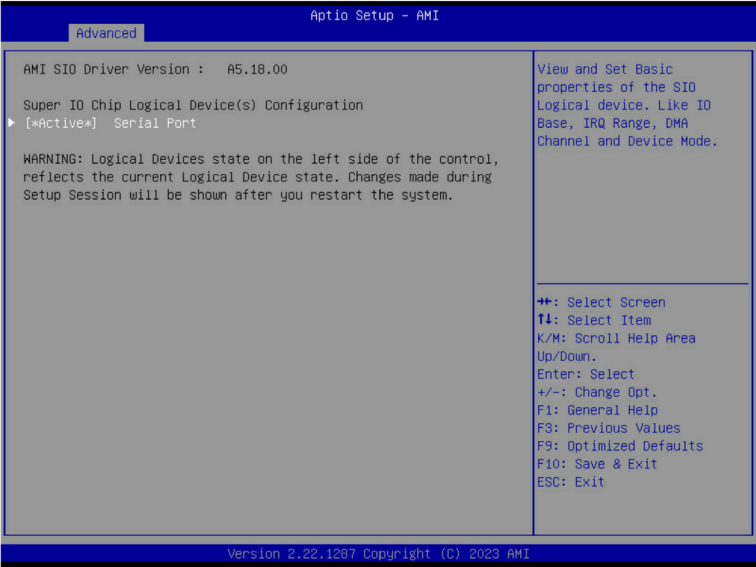

| Parameter                                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AMI SIO Driver Version                        | Displays the AMI SIO driver version information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Super IO Chip Logical Device(s) Configuration |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                               | Press [Enter] to configure advanced items.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                                               | <ul style="list-style-type: none"><li>◆ Use This Device<ul style="list-style-type: none"><li>– When set to Enabled allows you to configure the serial port settings. When set to Disabled, displays no configuration for the serial port.</li><li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li></ul></li><li>◆ Logical Device Settings/Current:<ul style="list-style-type: none"><li>– Displays the serial port base I/O address and IRQ.</li></ul></li><li>◆ Possible:<ul style="list-style-type: none"><li>– Configures the serial port base I/O address and IRQ.</li></ul></li></ul> |
| [*Active*] Serial Port                        | Use Automatic Settings<br>IO=3F8h; IRQ=4; DMA;<br>IO=3F8h; IRQ=4; DMA;<br>IO=2F8h; IRQ=4; DMA;<br>IO=3E8h; IRQ=4; DMA;<br>IO=2E8h; IRQ=4; DMA;<br>Default setting is <b>Use Automatic Settings</b> .                                                                                                                                                                                                                                                                                                                                                                                                                      |

## 2-2-4 PCI Subsystem Settings

| Aptio Setup - AMI                        |           |                                                                                                                                                                                                                                                              |
|------------------------------------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Advanced                                 |           |                                                                                                                                                                                                                                                              |
| PCI Bus Driver Version                   | A5.01.29  | ▲ Enable/Disable PCIE_1 I/O ROM<br>▼<br>++: Select Screen<br>T1: Select Item<br>K/M: Scroll Help Area<br>Up/Down:<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |
| PCIE_1 I/O ROM                           | [Enabled] |                                                                                                                                                                                                                                                              |
| PCIE_1 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_1 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_2 I/O ROM                           | [Enabled] |                                                                                                                                                                                                                                                              |
| PCIE_2 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_2 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_3 I/O ROM                           | [Enabled] |                                                                                                                                                                                                                                                              |
| PCIE_3 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_3 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_4 I/O ROM                           | [Enabled] |                                                                                                                                                                                                                                                              |
| PCIE_4 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_4 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_5 I/O ROM                           | [Enabled] |                                                                                                                                                                                                                                                              |
| PCIE_5 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_5 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_6 I/O ROM                           | [Enabled] |                                                                                                                                                                                                                                                              |
| PCIE_6 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                              |
| PCIE_6 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                              |
| Version 2.22.1287 Copyright (C) 2023 AMI |           |                                                                                                                                                                                                                                                              |


| Aptio Setup - AMI                        |           |                                                                                                                                                                                                                                                                                                                                                  |
|------------------------------------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Advanced                                 |           |                                                                                                                                                                                                                                                                                                                                                  |
| PCIE_4 I/O ROM                           | [Enabled] | ▲ If system has SR-IOV capable PCIe Devices, this option Enables or Disables Single Root ID Virtualization Support.<br>▼<br>++: Select Screen<br>T1: Select Item<br>K/M: Scroll Help Area<br>Up/Down:<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |
| PCIE_4 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                                                                                                                  |
| PCIE_4 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                                                                                                                  |
| PCIE_5 I/O ROM                           | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| PCIE_5 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                                                                                                                  |
| PCIE_5 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                                                                                                                  |
| PCIE_6 I/O ROM                           | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| PCIE_6 Lanes                             | [Auto]    |                                                                                                                                                                                                                                                                                                                                                  |
| PCIE_6 Max Link Speed                    | [Auto]    |                                                                                                                                                                                                                                                                                                                                                  |
| Onboard LAN3 Controller                  | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| Onboard LAN4 Controller                  | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| Onboard LAN1 I/O ROM                     | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| Onboard LAN2 I/O ROM                     | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| Onboard LAN3 I/O ROM                     | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| Onboard LAN4 I/O ROM                     | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| PCI Devices Common Settings:             |           |                                                                                                                                                                                                                                                                                                                                                  |
| Above 4G Decoding                        | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| SR-IOV Support                           | [Enabled] |                                                                                                                                                                                                                                                                                                                                                  |
| Version 2.22.1287 Copyright (C) 2023 AMI |           |                                                                                                                                                                                                                                                                                                                                                  |

| Parameter                                   | Description                                                                                                                                                                                 |
|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PCI Bus Driver Version                      | Displays the PCI Bus Driver version information.                                                                                                                                            |
| PCIE_# I/O ROM <sup>(Note1)</sup>           | When enabled, this setting will initialize the device expansion ROM for the related PCI-E slot.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                |
| PCIE_# Lanes <sup>(Note1)</sup>             | Change the PCIe lanes. Default setting is <b>Auto</b> .                                                                                                                                     |
| PCIE_#_Max Link Speed <sup>(Note1)</sup>    | Configure PCIe max link speed.<br>Options available: Auto, Gen1, Gen2, Gen3, Gen4, Gen5.<br>Default setting is <b>Auto</b> .                                                                |
| Onboard LAN1# Controller <sup>(Note2)</sup> | Enable/Disable the onboard LAN controller.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                                                                     |
| Onboard LAN# I/O ROM <sup>(Note2)</sup>     | Enable/Disable the onboard LAN devices, and initializes device expansion ROM.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                                  |
| PCI Devices Common Settings                 |                                                                                                                                                                                             |
| Above 4G Decoding                           | Enable/Disable memory mapped I/O to 4GB or greater address space (Above 4G Decoding).<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                          |
| SR-IOV Support                              | If the system has SR-IOV capable PCIe devices, this item Enable/Disable Single Root IO Virtualization Support.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> . |

(Note1) This section is dependent on the available PCIe Slot.

(Note2) This section is dependent on the available LAN controller.


## 2-2-5 USB Configuration

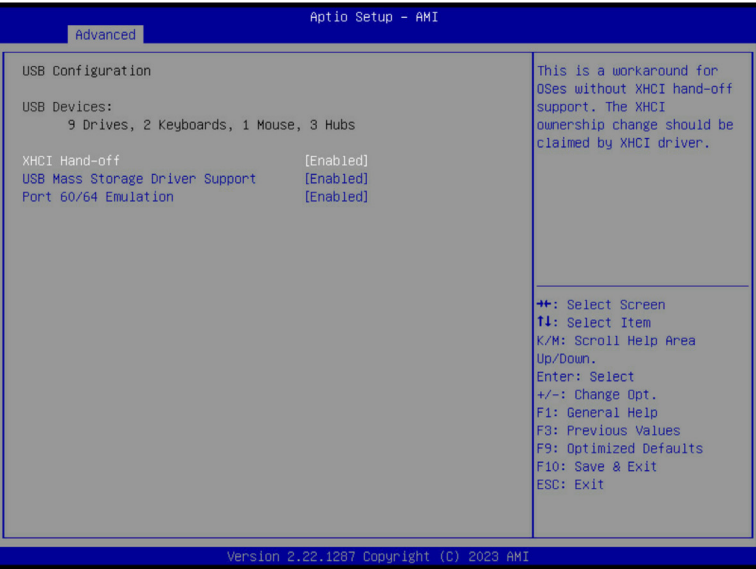

| Parameter                                         | Description                                                                                                                                                                                                              |
|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| USB Configuration                                 |                                                                                                                                                                                                                          |
| USB Devices:                                      | Displays the USB devices connected to the system.                                                                                                                                                                        |
| XHCI Hand-off                                     | Enable/Disable the XHCI (USB 3.0) Hand-off support.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                                                                                         |
| USB Mass Storage Driver Support <sup>(Note)</sup> | Enable/Disable the USB Mass Storage Driver Support.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                                                                                         |
| Port 60/64 Emulation                              | Enables the I/O port 60h/64h emulation support. This should be enabled for the complete USB Keyboard Legacy support for non-USB aware OSes.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> . |


(Note) This item is present only if you attach USB devices.

## 2-2-6 Network Stack Configuration

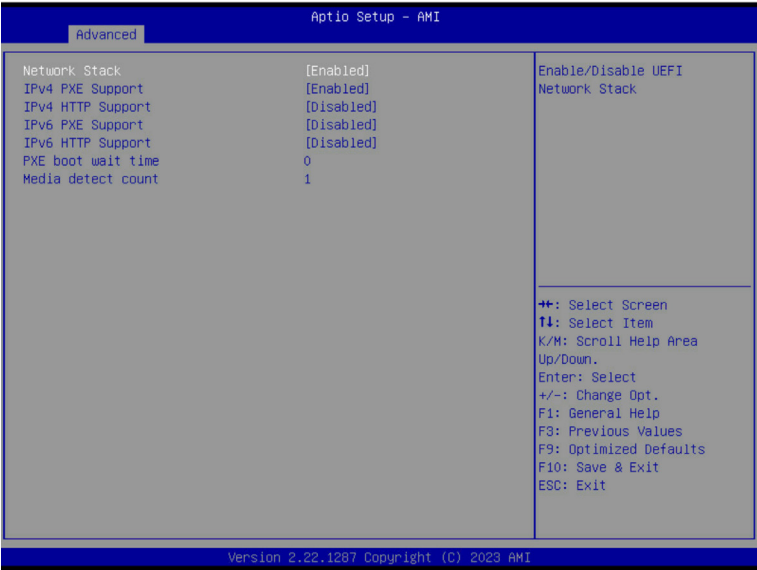

| Parameter          | Description                                                                                                                          |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Network Stack      | Enable/Disable the UEFI network stack.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                  |
| Ipv4 PXE Support   | Enable/Disable the Ipv4 PXE feature.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                    |
| Ipv4 HTTP Support  | Enable/Disable the Ipv4 HTTP feature.<br>Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                  |
| Ipv6 PXE Support   | Enable/Disable the Ipv6 PXE feature.<br>Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                   |
| Ipv6 HTTP Support  | Enable/Disable the Ipv6 HTTP feature.<br>Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                  |
| PXE boot wait time | Wait time in seconds to press ESC key to abort the PXE boot.<br>Press the <+> / <-> keys to increase or decrease the desired values. |
| Media detect count | Number of times the presence of media will be checked.<br>Press the <+> / <-> keys to increase or decrease the desired values.       |

### 2-2-7 Post Report Configuration

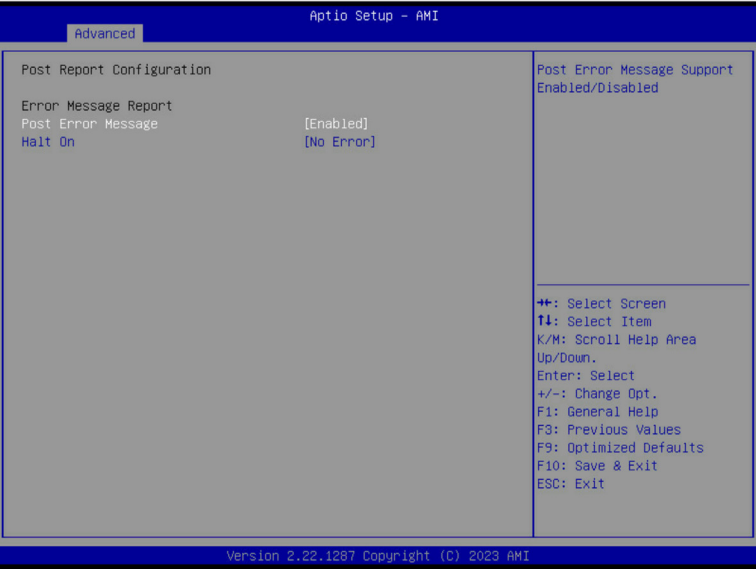


| Parameter                 | Description                                                                                                                 |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Post Report Configuration |                                                                                                                             |
| Error Message Report      |                                                                                                                             |
| Post Error Message        | Enable/Disable the POST Error Message support.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> . |
| Halt On                   | Options available: No Error, All Error. Default setting is <b>No Error</b> .                                                |

### 2-2-8 NVMe Configuration



| Parameter          | Description                                                                                                                                                                     |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NVMe Configuration | Displays the NVMe devices connected to the system.                                                                                                                              |
| NVMe OPRoM Select  | Options available: BIOS Build-In, NVMe Device. Default setting is <b>BIOS Build-In</b> .                                                                                        |
| NVMe LED Control   | Enable/Disable allow user control NVMe LED. It only available the NVMe device direct connect to CPU.<br>Options available: Disable, Enable. Default setting is <b>Disable</b> . |


## 2-2-9 Chipset Configuration

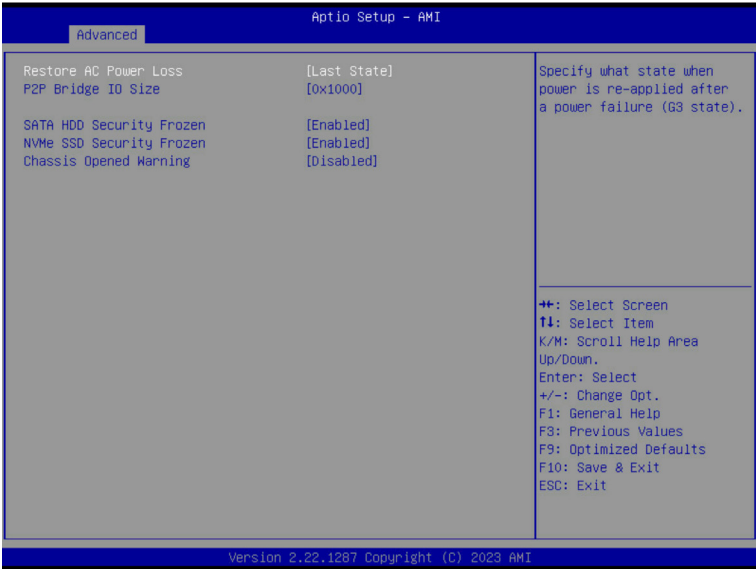

| Parameter                                  | Description                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Restore on AC Power Loss <sup>(Note)</sup> | Defines the power state to resume to after a system shutdown that is due to an interruption in AC power. When set to Last State, the system will return to the active power state prior to shutdown. When set to Power Off, the system remains off after power shutdown. Options available: Last State, Power Off, Power On, Unspecified. The default setting depends on the BMC setting. |
| P2P Bridge IO Size                         | Specifies P2P Bridge IO aligned to the size. Options available: 0x100, 0x150, 0x1000. Default setting is <b>0x1000</b> .                                                                                                                                                                                                                                                                  |
| SATA HDD Security Frozen                   | Enable/Disable this item to send freeze lock command to SATA HDD. Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                                                                                                                                                                                                                                               |
| NVMe SSD Security Frozen                   | Attempt to send freeze lock command to NVMe SSDs during boot. Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                                                                                                                                                                                                                                                   |
| Chassis Opened Warning                     | Enable/Disable the chassis intrusion alert function. Options available: Enabled, Disabled, Clear. Default setting is <b>Disabled</b> .                                                                                                                                                                                                                                                    |

(Note) When the power policy is controlled by BMC, please wait for 15-20 seconds for BMC to save the last power state.

## 2-2-10 Tls Auth Configuration

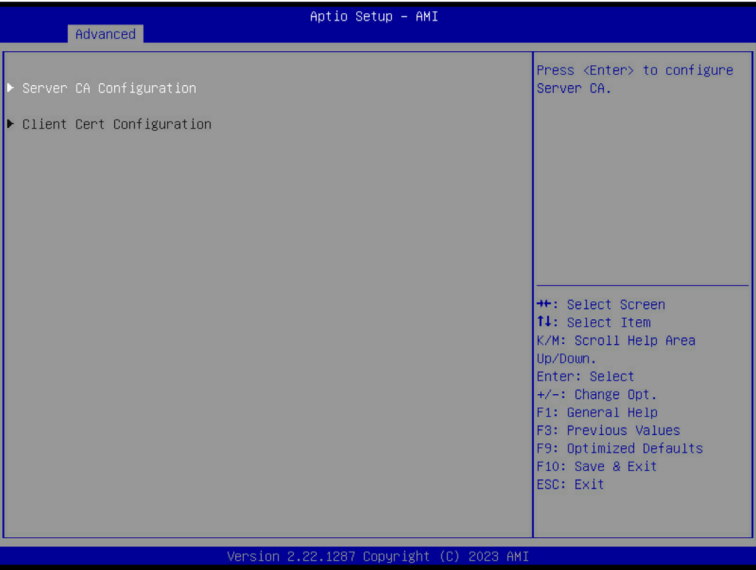

| Parameter                 | Description                                                                                                                                                                                                                                                           |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Server CA Configuration   | Press [Enter] for configuration of advanced items.                                                                                                                                                                                                                    |
|                           | ◆ Enroll Cert <ul style="list-style-type: none"><li>– Press [Enter] to enroll a certificate<ul style="list-style-type: none"><li>• Enroll Cert Using File</li><li>• Cert GUID</li></ul></li></ul> Input digit character in 111111-2222-3333-4444-1234567890ab format. |
|                           | – Commit Changes and Exit<br>– Discard Changes and Exit                                                                                                                                                                                                               |
| Client Cert Configuration | ◆ Delete Cert                                                                                                                                                                                                                                                         |
|                           | Press [Enter] for configuration of advanced items.                                                                                                                                                                                                                    |

## 2-2-11 iSCSI Configuration



| Parameter                | Description                                                                                                                                                                                                                                                                                                           |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Attempt Priority         | <p>Press [Enter] configure advanced items.</p> <ul style="list-style-type: none"><li>◆ Attempt Priority<ul style="list-style-type: none"><li>– Use arrow keys to select the attempt, then press +/- keys to move the attempt up/down in the attempt order list.</li></ul></li><li>◆ Commit Changes and Exit</li></ul> |
| Host iSCSI Configuration | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"><li>◆ iSCSI Initiator Name<ul style="list-style-type: none"><li>– Only IQN format is accepted. Range: from 4 to 223</li></ul></li><li>◆ Add an Attempt</li><li>◆ Delete Attempts</li><li>◆ Change Attempt Order</li></ul>         |

## 2-2-12 Intel(R) i210 Gigabit Network Connection

| Aptio Setup - AMI   |                                          |                                                                                                                                                                                                                  |
|---------------------|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Advanced            |                                          |                                                                                                                                                                                                                  |
| ▶ NIC Configuration |                                          | Click to configure the network device port.                                                                                                                                                                      |
| Blink LEDs          | 0                                        |                                                                                                                                                                                                                  |
| UEFI Driver         | Intel(R) PRO/1000 8.5.21 PCI-E           |                                                                                                                                                                                                                  |
| Adapter PBA         | 000500-000                               |                                                                                                                                                                                                                  |
| Device Name         | Intel(R) I210 Gigabit Network Connection |                                                                                                                                                                                                                  |
| Chip Type           | Intel i210                               |                                                                                                                                                                                                                  |
| PCI Device ID       | 1533                                     |                                                                                                                                                                                                                  |
| PCI Address         | 01:00:00                                 |                                                                                                                                                                                                                  |
| Link Status         | [Disconnected]                           | ↔: Select Screen<br>↑↓: Select Item<br>K/M: Scroll Help Area Up/Down.<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |
| MAC Address         | 00:A0:C9:00:00:00                        |                                                                                                                                                                                                                  |
| Virtual MAC Address | 00:00:00:00:00:00                        |                                                                                                                                                                                                                  |

Version 2.22.1267 Copyright (C) 2023 AMI


| Aptio Setup - AMI |                   |                                                               |
|-------------------|-------------------|---------------------------------------------------------------|
| Advanced          |                   |                                                               |
| Link Speed        | [Auto Negotiated] | Specifies the port speed used for the selected boot protocol. |
| Wake On LAN       | [Enabled]         |                                                               |

↔: Select Screen  
↑↓: Select Item  
K/M: Scroll Help Area Up/Down.  
Enter: Select  
+/-: Change Opt.  
F1: General Help  
F3: Previous Values  
F9: Optimized Defaults  
F10: Save & Exit  
ESC: Exit

Version 2.22.1267 Copyright (C) 2023 AMI


| Parameter           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NIC Configuration   | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>♦ Link Speed <ul style="list-style-type: none"> <li>– Allows for automatic link speed adjustment.</li> <li>– Options available: Auto Negotiated, 10 Mbps Half, 10 Mbps Full, 100 Mbps Half, 100 Mbps Full. Default setting is <b>Auto Negotiated</b>.</li> </ul> </li> <li>♦ Wake On LAN <ul style="list-style-type: none"> <li>– Enables power on of the system via LAN. Note that configuring Wake on LAN in the operating system does not change the value of this setting, but does override the behavior of Wake on LAN in OS controlled power states.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> </ul> |
| Blink LEDs          | <p>Identifies the physical network port by blinking the associated LED.</p> <p>Press the numeric keys to adjust desired values (up to 15 seconds).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| UEFI Driver         | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Adapter PBA         | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Device Name         | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Chip Type           | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| PCI Device ID       | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| PCI Address         | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Link Status         | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| MAC Address         | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Virtual MAC Address | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## 2-2-13 VLAN Configuration

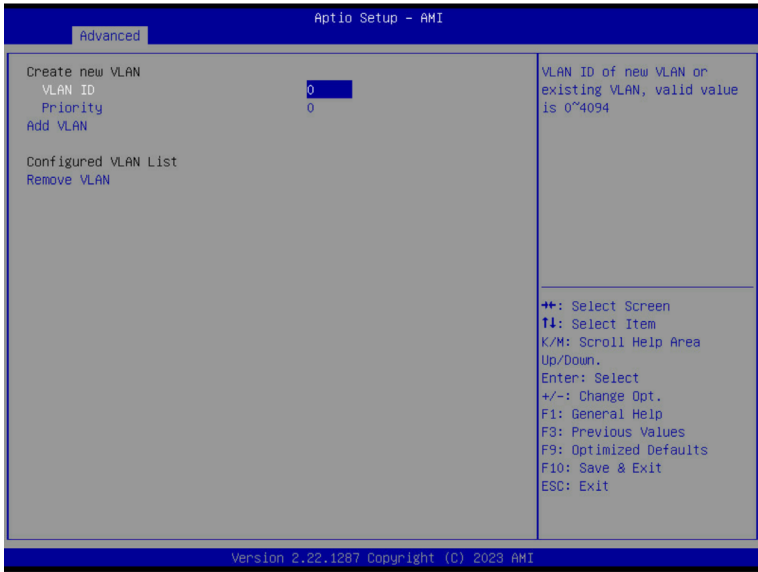

| Parameter                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enter Configuration Menu | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"><li>♦ Create new VLAN</li><li>♦ VLAN ID<ul style="list-style-type: none"><li>– Sets VLAN ID for a new VLAN or an existing VLAN.</li><li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li><li>– The valid range is from 0 to 4094.</li></ul></li><li>♦ Priority<ul style="list-style-type: none"><li>– Sets 802.1Q Priority for a new VLAN or an existing VLAN.</li><li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li><li>– The valid range is from 0 to 7.</li></ul></li><li>♦ Add VLAN<ul style="list-style-type: none"><li>– Press [Enter] to create a new VLAN or update an existing VLAN.</li></ul></li><li>♦ Configured VLAN List</li><li>♦ Remove VLAN<ul style="list-style-type: none"><li>– Press [Enter] to remove an existing VLAN.</li></ul></li></ul> |

## 2-2-14 Broadcom BCM57416 NetXtreme-E 10GBASE-T RDMA Ethernet Controller

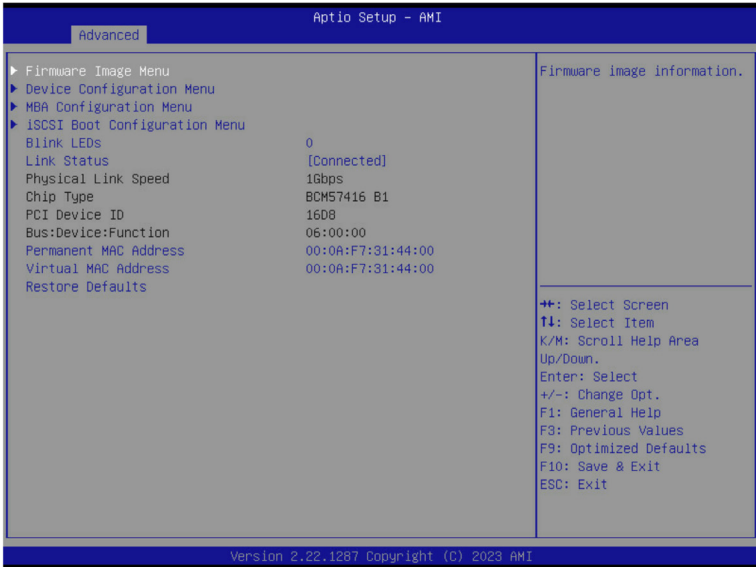


| Parameter                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Firmware Image Menu       | Press [Enter] to view firmware image information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Device Configuration Menu | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"><li>◆ Multi-Function Mode<ul style="list-style-type: none"><li>– Configures the NIC Hardware Mode.</li><li>– Options available: SF, NPAR 1.0. Default setting is <b>SF</b>.</li></ul></li><li>◆ SR-IOV<ul style="list-style-type: none"><li>– Enable/Disable Single Root I/O Virtualization.</li><li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li></ul></li><li>◆ Number of MSI-X Vectors per VF<ul style="list-style-type: none"><li>– Configures the number of MSI-X Vectors per VF (0-128).</li><li>– Default setting is <b>16</b>.</li></ul></li><li>◆ Maximum Number of PF MSI-X Vectors<ul style="list-style-type: none"><li>– Configures the maximum number of PF MSI-X Vectors (0-512 per controller).</li><li>– Default setting is <b>74</b>.</li></ul></li><li>◆ Energy Efficient Ethernet<ul style="list-style-type: none"><li>– Enable/Disable Energy Efficient Ethernet operation.</li><li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li></ul></li><li>◆ Operational Link Speed<ul style="list-style-type: none"><li>– Configures the link speed setting to be used as the default link speed for the selected port.</li><li>– Default setting is <b>AutoNeg</b>.</li></ul></li></ul> |

| Parameter                                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device Configuration Menu<br>(continued) | <ul style="list-style-type: none"> <li>◆ Support RDMA <ul style="list-style-type: none"> <li>– Enable/Disable RDMA support for this port.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ DCB Protocol <ul style="list-style-type: none"> <li>– Enable/Disable DCB protocol.</li> <li>– Options available: Disabled, Enabled (IEEE only), CEE (only), Both (IEEE preferred with fallback to CEE). Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ LLDP nearest bridge <ul style="list-style-type: none"> <li>– Enable/Disable LLDP nearest bridge state.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> <li>◆ Default EVB Mode <ul style="list-style-type: none"> <li>– Configures the default Edge Virtual Bridging mode.</li> <li>– Options available: VEB, VEPA, None. Default setting is <b>VEB</b>.</li> </ul> </li> <li>◆ Enable PME Capability <ul style="list-style-type: none"> <li>– Enable/Disable PME Capability support.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> <li>◆ Flow Offload <ul style="list-style-type: none"> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ Live Firmware Upgrade <ul style="list-style-type: none"> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ Adapter Error Recovery <ul style="list-style-type: none"> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> </ul> |
| MBA Configuration Menu                   | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ Option ROM <ul style="list-style-type: none"> <li>– Enable/Disable Boot Option ROM.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> <li>◆ Legacy Boot Protocol <ul style="list-style-type: none"> <li>– Selects non-UEFI Boot Protocol: Preboot Execution Environment (PXE)/iSCSI.</li> <li>– Options available: PXE, iSCSI, NONE. Default setting is <b>PXE</b>.</li> </ul> </li> <li>◆ Boot Strap Type <ul style="list-style-type: none"> <li>– Selects the boot strap type. Options available: Auto Detect, BBS, Int 18h, Int 19h. Default setting is <b>Auto Detect</b>.</li> </ul> </li> <li>◆ Hide Setup Prompt <ul style="list-style-type: none"> <li>– Configures whether the Setup Prompt is displayed during ROM initialization.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ Setup Key Stroke <ul style="list-style-type: none"> <li>– Configures key strokes to invoke the configuration menu.</li> <li>– Options available: Ctrl-S, Ctrl-B. Default setting is <b>Ctrl-S</b>.</li> </ul> </li> <li>◆ Banner Message Timeout <ul style="list-style-type: none"> <li>– Selects the timeout value. (0 defaults to 4 seconds, 15 is no delay, 1-14 is timeout value in seconds)</li> <li>– Default setting is <b>5</b>.</li> </ul> </li> </ul>                                                                                                                                                                                                |

| Parameter                             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MBA Configuration Menu<br>(continued) | <ul style="list-style-type: none"> <li>◆ Pre-boot Wake On LAN <ul style="list-style-type: none"> <li>– Configures Pre-boot Wake on LAN (WOL).</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> <li>◆ VLAN Mode <ul style="list-style-type: none"> <li>– Configures the virtual LAN (VLAN) mode.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ VLAN ID <ul style="list-style-type: none"> <li>– Configures the VLAN ID (1...4094).</li> <li>– This item is available only when VLAN Mode is Enabled.</li> </ul> </li> <li>◆ Boot Retry Count <ul style="list-style-type: none"> <li>– Selects the number of boot retries.</li> <li>– Options available: No Retry, 1 Retry, 2 Retries, 3 Retries, 4 Retries, 5 Retries, 6 Retries, Indefinite Retries. Default setting is <b>5 Retries</b>.</li> </ul> </li> </ul> |
| iSCSI Boot Configuration<br>Menu      | Press [Enter] to configure advanced items.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Blink LEDs                            | Identifies the physical network port by blinking the associated LED.<br>Press the numeric keys to adjust desired values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Link Status                           | Specifies the link status of the port.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Physical Link Speed                   | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Chip Type                             | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| PCI Device ID                         | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Bus:Device:Function                   | Displays the technical specifications for the Network Interface Controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Permanent MAC Address                 | Displays the MAC address of the Ethernet controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Virtual MAC Address                   | Displays the virtual MAC address of the Ethernet controller.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Restore Defaults                      | Resets the adapter to factory defaults.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## 2-2-14-1 iSCSI Boot Configuration Menu

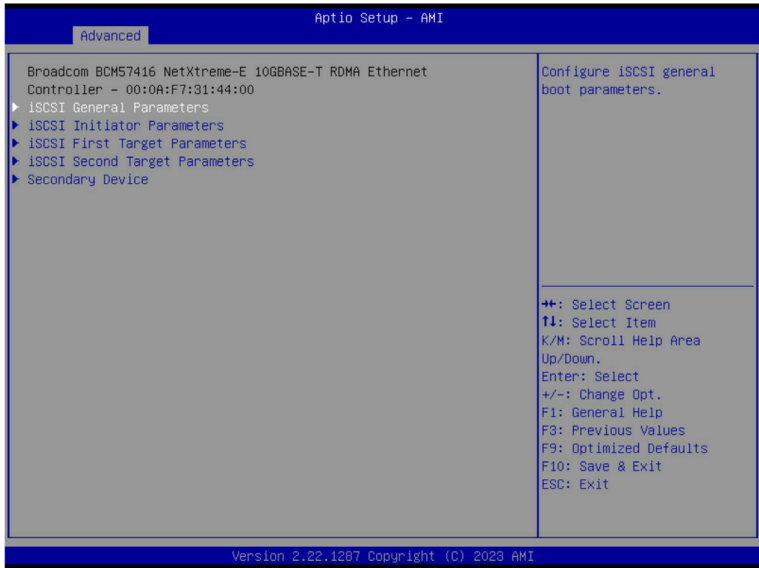


| Parameter                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                          | Press [Enter] to configure advanced items.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                          | <ul style="list-style-type: none"><li>♦ TCP/IP Parameters via DHCP<ul style="list-style-type: none"><li>– Acquires TCP/IP Parameters via DHCP.</li><li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li></ul></li><li>♦ IP Autoconfiguration<ul style="list-style-type: none"><li>– Auto-configures the IP configuration.</li><li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li></ul></li><li>♦ iSCSI Parameters via DHCP<ul style="list-style-type: none"><li>– Acquires iSCSI Parameters via DHCP.</li><li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li></ul></li></ul>                                                                                           |
| iSCSI General Parameters | <ul style="list-style-type: none"><li>♦ CHAP Authentication<ul style="list-style-type: none"><li>– Enable/Disable the CHAP authentication.</li><li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li></ul></li><li>♦ Boot to iSCSI Target<ul style="list-style-type: none"><li>– Enable/Disable booting to iSCSI target after log-on.</li><li>– Options available: Enabled, Disabled, One Time Disabled. Default setting is <b>Enabled</b>.</li></ul></li><li>♦ DHCP Vendor ID<ul style="list-style-type: none"><li>– Configures the DHCP vendor ID (up to 32 characters long).</li></ul></li><li>♦ Link Up Delay Time<ul style="list-style-type: none"><li>– Configures the link up delay time in seconds (0-225).</li></ul></li></ul> |

| Parameter                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| iSCSI General Parameters<br>(continued) | <ul style="list-style-type: none"> <li>◆ Use TCP Timestamp <ul style="list-style-type: none"> <li>– Enable/Disable the TCP timestamp.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ Target as First HDD <ul style="list-style-type: none"> <li>– Enable/Disable target appears as first hard disk drive (HDD) in the system.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ LUN Busy Retry Count <ul style="list-style-type: none"> <li>– Configures the number of retries in 2 second intervals when LUN is busy (0-60).</li> <li>– Default setting is <b>0</b>.</li> </ul> </li> <li>◆ IP Version <ul style="list-style-type: none"> <li>– Displays the IP version supported. Modifying this parameter will reset all IP-related fields.</li> <li>– Options available: IPv4, IPv6. Disabled. Default setting is <b>IPv4</b>.</li> </ul> </li> </ul>                                                                                                                                                                                     |
| iSCSI Initiator Parameters              | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ IP Address <ul style="list-style-type: none"> <li>– Configures the initiator IP address.</li> </ul> </li> <li>◆ Subnet Mask <ul style="list-style-type: none"> <li>– Configures the IP subnet mask.</li> </ul> </li> <li>◆ Default Gateway <ul style="list-style-type: none"> <li>– Configures the default gateway IP address.</li> </ul> </li> <li>◆ Primary DNS <ul style="list-style-type: none"> <li>– Configures the primary DNS IP address.</li> </ul> </li> <li>◆ Secondary DNS <ul style="list-style-type: none"> <li>– Configures the secondary DNS IP address.</li> </ul> </li> <li>◆ iSCSI Name <ul style="list-style-type: none"> <li>– Configures the iSCSI name.</li> </ul> </li> <li>◆ CHAP ID <ul style="list-style-type: none"> <li>– Configures the Challenge-Handshake Authentication Protocol (CHAP) ID (up to 128 characters in length).</li> </ul> </li> <li>◆ CHAP Secret <ul style="list-style-type: none"> <li>– Configure the Challenge-Handshake Authentication Protocol (CHAP) Secret (12 to 16 characters in length).</li> </ul> </li> </ul> |
| iSCSI First/Second Target Parameters    | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ Connect <ul style="list-style-type: none"> <li>– Enable/Disable the target establishment.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ IP Address <ul style="list-style-type: none"> <li>– Configures the Target IP address.</li> </ul> </li> <li>◆ TCP Port <ul style="list-style-type: none"> <li>– Configures the Target TCP port number (1-65535).</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |


| Parameter                                        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| iSCSI First/Second Target Parameters (continued) | <ul style="list-style-type: none"> <li>◆ Boot LUN <ul style="list-style-type: none"> <li>– Configures the Target boot LUN number (0-255).</li> </ul> </li> <li>◆ iSCSI Name <ul style="list-style-type: none"> <li>– Configures the iSCSI name.</li> </ul> </li> <li>◆ CHAP ID <ul style="list-style-type: none"> <li>– Configures the Challenge-Handshake Authentication Protocol (CHAP) ID (up to 128 characters in length).</li> </ul> </li> <li>◆ CHAP Secret <ul style="list-style-type: none"> <li>– Configure the Challenge-Handshake Authentication Protocol (CHAP) Secret (12 to 16 characters in length).</li> </ul> </li> </ul>                                                                       |
| Secondary Device                                 | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ Secondary Device <ul style="list-style-type: none"> <li>– Inputs the secondary device MAC address.</li> </ul> </li> <li>◆ Use Independent Target Portal <ul style="list-style-type: none"> <li>– Use Independent target portal when multipath I/O is enabled.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ Use Independent Target Name <ul style="list-style-type: none"> <li>– Use Independent target name when multipath I/O is enabled.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> </ul> |

## 2-2-15 VLAN Configuration

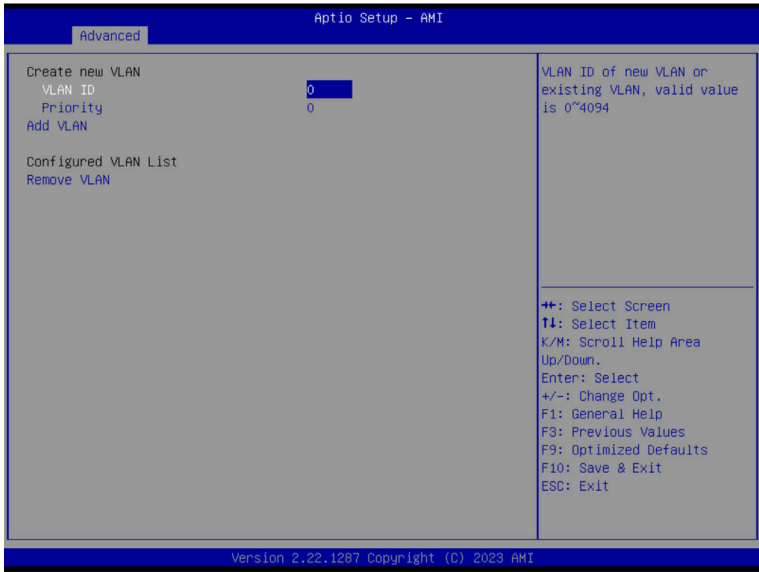

| Parameter                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enter Configuration Menu | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"><li>♦ Create new VLAN</li><li>♦ VLAN ID<ul style="list-style-type: none"><li>– Sets VLAN ID for a new VLAN or an existing VLAN.</li><li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li><li>– The valid range is from 0 to 4094.</li></ul></li><li>♦ Priority<ul style="list-style-type: none"><li>– Sets 802.1Q Priority for a new VLAN or an existing VLAN.</li><li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li><li>– The valid range is from 0 to 7.</li></ul></li><li>♦ Add VLAN<ul style="list-style-type: none"><li>– Press [Enter] to create a new VLAN or update an existing VLAN.</li></ul></li><li>♦ Configured VLAN List</li><li>♦ Remove VLAN<ul style="list-style-type: none"><li>– Press [Enter] to remove an existing VLAN.</li></ul></li></ul> |


## 2-2-16 Driver Health

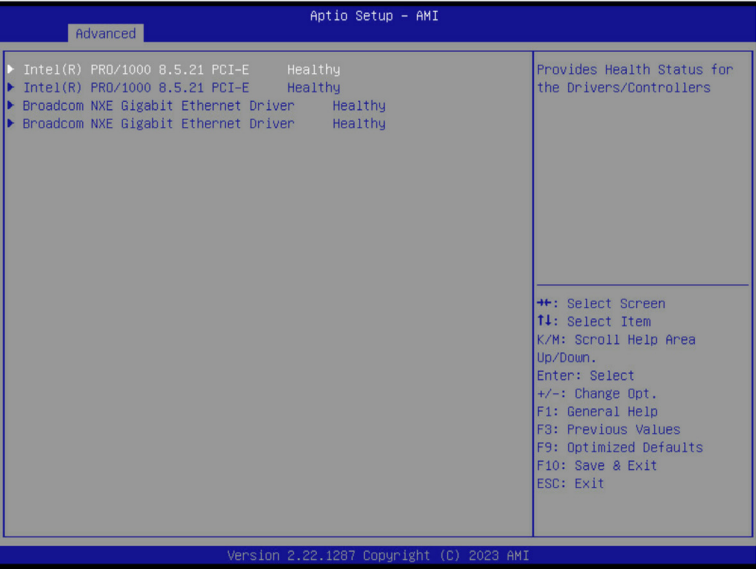

| Parameter     | Description                                                           |
|---------------|-----------------------------------------------------------------------|
| Driver Health | Displays driver health status of the devices/controllers if installed |

## 2-3 Chipset Menu

Chipset Setup menu displays submenu options for configuring the function of Platform Controller Hub(PCH).  
Select a submenu item, then press <Enter> to access the related submenu screen.

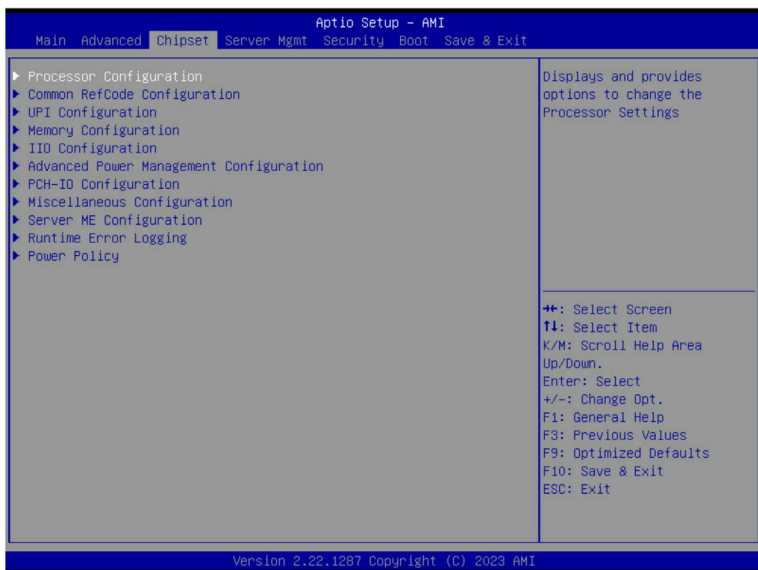

## 2-3-1 Processor Configuration

| Chipset                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |  | Aptio Setup - AMI                                                                                                                                                                                                    |  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Processor Configuration                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |  | Change Per-Socket Settings                                                                                                                                                                                           |  |
| ▶ Per-Socket Configuration<br>Processor Socket                      Socket 0<br>Processor ID                          000806F6*<br>Processor Die Type                    XDC<br>Processor Frequency                  1.900GHz<br>Processor Max Ratio                  13H<br>Processor Min Ratio                  08H<br>Microcode Revision                  2B000190<br>L1 Cache RAM(Per Core)              80KB<br>L2 Cache RAM(Per Core)              2048KB<br>L3 Cache RAM(Per Package)          115200KB<br>Processor 0 Version                  Intel(R) Xeon(R) Platin<br>um 8490H<br><br>Enable LP [Global]                    [ALL LPs]<br>Hardware Prefetcher                  [Enable]<br>L2 RFO Prefetch Disable              [Disable]<br>Adjacent Cache Prefetch              [Enable]<br>DCU Streamer Prefetcher              [Enable]<br>DCU IP Prefetcher                    [Enable]<br>Extended APIC                        [Enable]<br>Enable Intel(R) TXT                  [Disable]<br>Enable Intel(R) TXT                  [Enable]<br>VMX                                    [Enable] |  | ++: Select Screen<br>T1: Select Item<br>K/M: Scroll Help Area<br>Up/Down.<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |  |
| Version 2.22.1287 Copyright (C) 2023 AMI                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |  |                                                                                                                                                                                                                      |  |


| Chipset                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |  | Aptio Setup - AMI                                                                                                                                                                                                    |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| L2 Cache RAM(Per Core)              2048KB<br>L3 Cache RAM(Per Package)          115200KB<br>Processor 0 Version                  Intel(R) Xeon(R) Platin<br>um 8490H<br><br>Enable LP [Global]                    [ALL LPs]<br>Hardware Prefetcher                  [Enable]<br>L2 RFO Prefetch Disable              [Disable]<br>Adjacent Cache Prefetch              [Enable]<br>DCU Streamer Prefetcher              [Enable]<br>DCU IP Prefetcher                    [Enable]<br>Extended APIC                        [Enable]<br>Enable Intel(R) TXT                  [Disable]<br>VMX                                    [Enable]<br>Enable SMX                            [Disable]<br>AES-NI                                [Enable]<br>Debug Consent                        [Disable] |  | Displays and provides<br>option to change the<br>Processor CFR Settings                                                                                                                                              |  |
| TME, TME-MT, TDX<br><br>Memory Encryption (TME)            [Disabled]<br>SGX setup configuration preconditions for enabling were NOT<br>met. Please check TME, MirrorMode or Extended APIC settings.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |  | ++: Select Screen<br>T1: Select Item<br>K/M: Scroll Help Area<br>Up/Down.<br>Enter: Select<br>+/-: Change Opt.<br>F1: General Help<br>F3: Previous Values<br>F9: Optimized Defaults<br>F10: Save & Exit<br>ESC: Exit |  |
| ▶ Processor CFR Configuration                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |  |                                                                                                                                                                                                                      |  |
| Version 2.22.1287 Copyright (C) 2023 AMI                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |  |                                                                                                                                                                                                                      |  |

| Parameter                                                                                                                                                                                                                                       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Processor Configuration                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Pre-Socket Configuration                                                                                                                                                                                                                        | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>♦ CPU Socket 0 Configuration <ul style="list-style-type: none"> <li>– Core Disable Bitmap(Hex) <ul style="list-style-type: none"> <li>• Number of Cores to enable. 0 means all cores. FFFFFFFF means to disable all cores. The maximum value depends on the number of CPUs available. Press the numeric keys to adjust desired values.</li> </ul> </li> </ul> </li> </ul> |
| Processor Socket / Processor ID / Processor Die Type / Processor Frequency / Processor Max Ratio / Processor Min Ratio / Microcode Revision / L1 Cache RAM(Per Core) / L2 Cache RAM(Per Core) / L3 Cache RAM(Per Package) / Processor # Version | Displays the technical specifications for the installed processor(s).                                                                                                                                                                                                                                                                                                                                                                                              |
| Enable LP [Global]                                                                                                                                                                                                                              | <p>Enables Logical processor (Software Method to Enable/Disable Logical Processor threads).</p> <p>Options available: ALL LPs, Single LP. Default setting is <b>ALL LPs</b>.</p>                                                                                                                                                                                                                                                                                   |
| Hardware Prefetcher                                                                                                                                                                                                                             | <p>Select whether to enable the speculative prefetch unit of the processor.</p> <p>Options available: Enable, Disable. Default setting is <b>Enable</b>.</p>                                                                                                                                                                                                                                                                                                       |
| L2 RF0 Prefetch Disable                                                                                                                                                                                                                         | Options available: Enable, Disable. Default setting is <b>Disable</b> .                                                                                                                                                                                                                                                                                                                                                                                            |
| Adjacent Cache Prefetch                                                                                                                                                                                                                         | <p>When enabled, cache lines are fetched in pairs. When disabled, only the required cache line is fetched.</p> <p>Options available: Enable, Disable. Default setting is <b>Enable</b>.</p>                                                                                                                                                                                                                                                                        |
| DCU Streamer Prefetcher                                                                                                                                                                                                                         | <p>Enable/Disable DCU streamer prefetcher.</p> <p>Options available: Enable, Disable. Default setting is <b>Enable</b>.</p>                                                                                                                                                                                                                                                                                                                                        |
| DCU IP Prefetcher                                                                                                                                                                                                                               | <p>Enable/Disable DCU IP Prefetcher.</p> <p>Options available: Enable, Disable. Default setting is <b>Enable</b>.</p>                                                                                                                                                                                                                                                                                                                                              |
| Extended APIC                                                                                                                                                                                                                                   | <p>Enable/Disable extended APIC support. Note: The VT-d will be enabled automatically when x2APIC is enabled.</p> <p>Options available: Enable, Disable. Default setting is <b>Enable</b>.</p>                                                                                                                                                                                                                                                                     |
| Enable Intel(R) TXT                                                                                                                                                                                                                             | <p>Enable/Disable the Intel Trusted Execution Technology support function.</p> <p>Options available: Enable, Disable. Default setting is <b>Disable</b>.</p>                                                                                                                                                                                                                                                                                                       |
| VMX                                                                                                                                                                                                                                             | <p>Enable/Disable the Vanderpool Technology. This will take effect after rebooting the system.</p> <p>Options available: Enable, Disable. Default setting is <b>Enable</b>.</p>                                                                                                                                                                                                                                                                                    |
| Enable SMX                                                                                                                                                                                                                                      | <p>Enable/Disable the Safer Mode Extensions (SMX) support function.</p> <p>Options available: Enable, Disable. Default setting is <b>Disable</b>.</p>                                                                                                                                                                                                                                                                                                              |
| AES-NI                                                                                                                                                                                                                                          | <p>Enable/Disable the AES-NI support.</p> <p>Options available: Enable, Disable. Default setting is <b>Enable</b>.</p>                                                                                                                                                                                                                                                                                                                                             |
| Debug Consent                                                                                                                                                                                                                                   | Options available: Enable, Disable. Default setting is <b>Disable</b> .                                                                                                                                                                                                                                                                                                                                                                                            |

| Parameter                                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Memory Encryption (TME) <sup>(Note)</sup>     | Enable/Disable memory encryption (TME).<br>Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Total Memory Encryption Multi-Tenant (TME-MT) | Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Processor CFR Configuration                   | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ Provision S3M CFR <ul style="list-style-type: none"> <li>– Options available: Disable, Enable. Default setting is <b>Enable</b>.</li> </ul> </li> <li>◆ Manual Commit S3M FW CFR <ul style="list-style-type: none"> <li>– Options available: Disable, Enable, Auto. Default setting is <b>Auto</b>.</li> </ul> </li> <li>◆ Provision PUcode CFR <ul style="list-style-type: none"> <li>– Options available: Disable, Enable. Default setting is <b>Enable</b>.</li> </ul> </li> <li>◆ Manual Commit PUcode CFR <ul style="list-style-type: none"> <li>– Options available: Enable, Disable, Auto. Default setting is <b>Auto</b>.</li> </ul> </li> <li>◆ Socket0 CFR Revision Info <ul style="list-style-type: none"> <li>– Displays CFR Revision information of the socket.</li> </ul> </li> </ul> |



(Note) Advanced items prompt when this item is defined.

2-3-2 Common RefCode Configuration

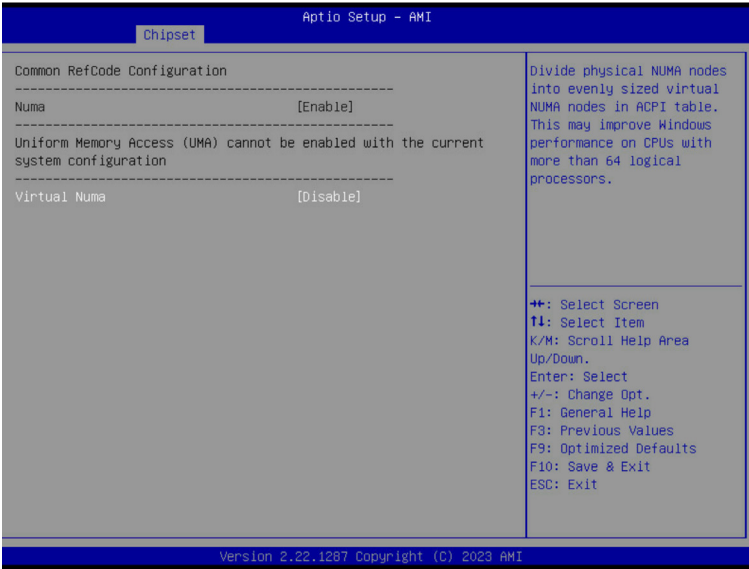


| Parameter                    | Description                                                                                                                                                                                                                                  |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Common RefCode Configuration |                                                                                                                                                                                                                                              |
| Virtual Numa                 | Divide physical NUMA nodes into evenly sized virtual NUMA nodes in ACPI table. This may improve Windows performance on CPUs with more than 64 logical processors.<br>Options available: Enable, Disable. Default setting is <b>Disable</b> . |

2-3-3 UPI Configuration

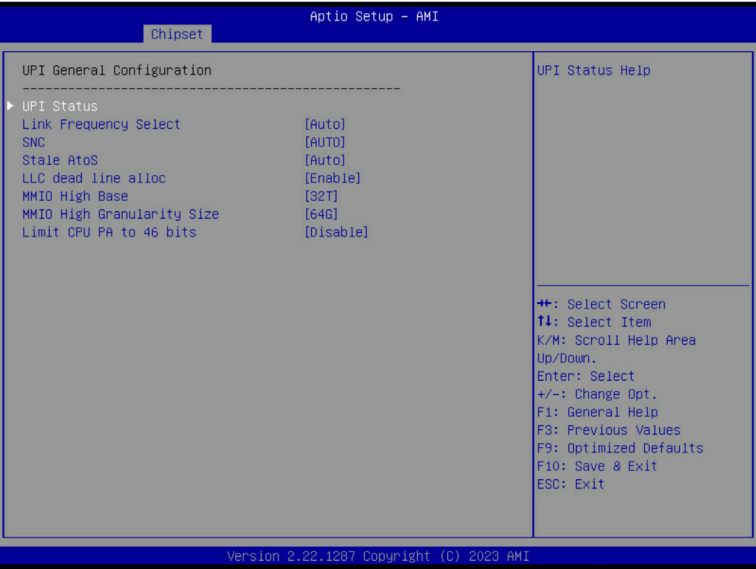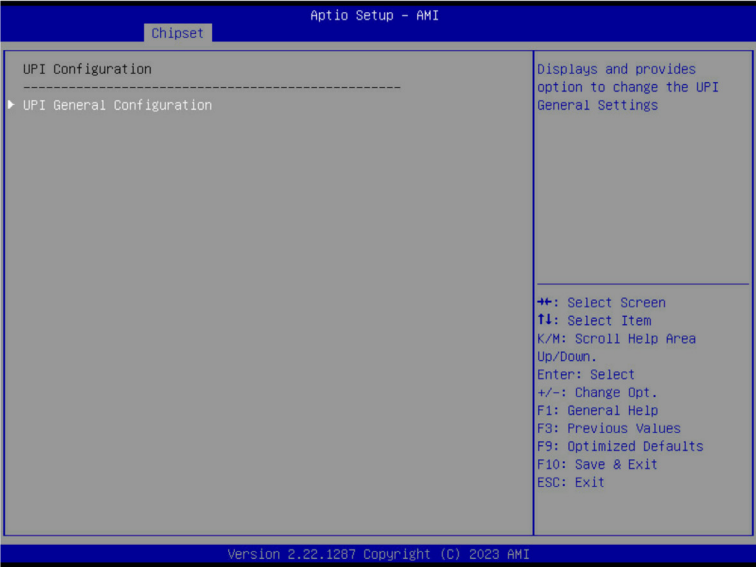

| Parameter                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| UPI General Configuration | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ UPI Status <ul style="list-style-type: none"> <li>– Press [Enter] to view the Uncore status.</li> </ul> </li> <li>◆ Link Frequency Select <ul style="list-style-type: none"> <li>– Selects the UPI link frequency.</li> <li>– Options available: 12.8GT/s, 14.4GT/s, 16.0GT/s, Auto, Use Per Link Setting. Default setting is <b>Auto</b>.</li> </ul> </li> <li>◆ SNC <ul style="list-style-type: none"> <li>– Enable/Disable Sub NUMA Cluster function.</li> <li>– Options available: Auto, Disable, Enable SNC2 (2-clusters), Enable SNC4 (4-clusters). Default setting is <b>Auto</b>.</li> </ul> </li> <li>◆ Stale AtoS <ul style="list-style-type: none"> <li>– Enable/Disable Stale A to S directory optimization.</li> <li>– Options available: Disable, Enable, Auto. Default setting is <b>Auto</b>.</li> </ul> </li> <li>◆ LLC dead line alloc <ul style="list-style-type: none"> <li>– Enable/Disable fill dead lines in LLC.</li> <li>– Options available: Disable, Enable, Auto. Default setting is <b>Enable</b>.</li> </ul> </li> <li>◆ MMIO High Base <ul style="list-style-type: none"> <li>– Options available: 56T, 40T, 32T, 24T, 16T, 4T, 2T, 1T, 512G, 3584T. Default setting is <b>32T</b>.</li> </ul> </li> <li>◆ MMIO High Granularity Size <ul style="list-style-type: none"> <li>– Selects the allocation size used to assign mmioh resources.</li> <li>– Options available: 1G, 4G, 16G, 64G, 256G, 1024G. Default setting is <b>64G</b>.</li> </ul> </li> <li>◆ Limit CPU PA to 46 bits <ul style="list-style-type: none"> <li>– Limit CPU physical address to 46 bits to support older Hyper-V. If enabled, automatically disables TME-MT.</li> <li>– Options available: Disable, Enable. Default setting is <b>Disable</b>.</li> </ul> </li> </ul> |

## 2-3-4 Memory Configuration

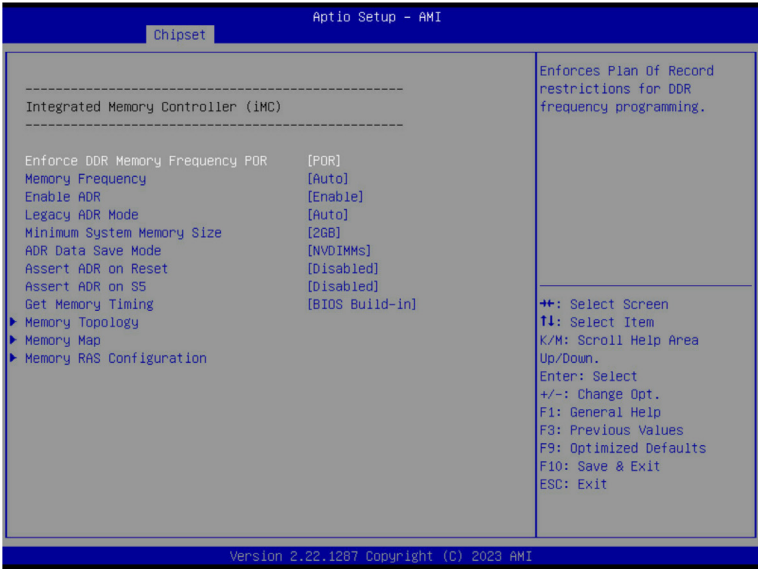

| Parameter                          | Description                                                                                                                                                                                                     |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Integrated Memory Controller (iMC) |                                                                                                                                                                                                                 |
| Enforce DDR Memory Frequency POR   | When set to Enable, the system enforces Plan Of Record restrictions for DDR frequency programming.<br>Options available: POR, Disable. Default setting is <b>POR</b> .                                          |
| Memory Frequency                   | Configures the maximum memory frequency. If Enforce POR is disabled, user will be able to run at higher frequencies than the memory support (limited by processor support).<br>Default setting is <b>Auto</b> . |
| Enable ADR                         | Enables the detecting and enabling of ADR (Asynchronous DRAM Refresh) function.<br>Options available: Enable, Disable. Default setting is <b>Enable</b> .                                                       |
| Legacy ADR Mode                    | Enable/Disable the Legacy ADR Mode.<br>Options available: Enable, Disable, Auto. Default setting is <b>Auto</b> .                                                                                               |
| Minimum System Memory Size         | Configures the minimum memory size.<br>Options available: 2GB, 4GB, 6GB, 8GB. Default setting is <b>2GB</b> .                                                                                                   |
| ADR Data Save Mode                 | Specifies the Data Save Mode for ADR. Batterybacked or Type 01 NVDIMM.<br>Options available: Disable, Batterybacked DIMMs, NVDIMMs, Copy to Flash. Default setting is <b>NVDIMMs</b> .                          |
| Assert ADR on Reset                | Enable/Disable Assert ADR on Reset.<br>Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                                                                                               |

| Parameter                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Assert ADR on S5              | Enable/Disable Assert ADR on S5.<br>Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Get Memory Timing             | Auto is the detected SPD value and use it, otherwise use BIOS Build-in.<br>Options available: Auto, BIOS Build-in. Default setting is <b>BIOS Build-in</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Memory Topology               | Press [Enter] to view memory topology with DIMM population information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Memory Map <sup>(Note1)</sup> | Press [Enter] to configure advanced items. <ul style="list-style-type: none"> <li>♦ Volatile Memory Mode <ul style="list-style-type: none"> <li>– Selects 1LM or 2LM mode for volatile memory.</li> <li>– Options available: 1LM, 2LM. Default setting is <b>2LM</b>.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Memory RAS Configuration      | Press [Enter] to configure advanced items. <ul style="list-style-type: none"> <li>♦ Mirror Mode<sup>(Note2)</sup> <ul style="list-style-type: none"> <li>– Mirror Mode will set entire 1LM memory in system to be mirrored, consequently reducing the memory capacity by half. Enables the Mirror Mode will disable the XPT Prefetch.</li> <li>– Options available: Disabled, Full Mirror Mode, Partial Mirror Mode. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>♦ Partial Mirror 1 Size (GB) <ul style="list-style-type: none"> <li>– Selects multiplier of 1GB for the size of the SAD to be created.</li> </ul> </li> <li>♦ Correctable Error Threshold <ul style="list-style-type: none"> <li>– Correctable Error Threshold (0x01-0x7fff) used for sparing, and leaky bucket.</li> <li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li> </ul> </li> <li>♦ Trigger SW Error Threshold<sup>(Note2)</sup> <ul style="list-style-type: none"> <li>– Enable/Disable Sparing trigger SW Error Match Threshold.</li> <li>– Options available: Disabled, Enabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>♦ SW Per Bank Threshold <ul style="list-style-type: none"> <li>– SW Per Bank Threshold (1-0x7FFF) used for DDR bank level error.</li> <li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li> </ul> </li> <li>♦ SW Correctable Error Time Window <ul style="list-style-type: none"> <li>– SW Correctable Error time window based interface in hour (0-24).</li> <li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li> </ul> </li> <li>♦ Leaky bucket time window based interface<sup>(Note2)</sup> <ul style="list-style-type: none"> <li>– Enable/Disable leaky bucket time window based interface.</li> <li>– Options available: Disabled, Enabled. Default setting is <b>Disabled</b>.</li> </ul> </li> </ul> |


(Note1) Advanced items prompt when HBM CPU is installed.

(Note2) Advanced items prompt when this item is defined.

| Parameter                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Memory RAS Configuration<br>(continued) | <ul style="list-style-type: none"> <li>♦ Leaky bucket time window based interface Hour <ul style="list-style-type: none"> <li>– Leaky bucket time window based interface hour used for DDR (0-24).</li> <li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li> </ul> </li> <li>♦ Leaky bucket time window based interface Minute <ul style="list-style-type: none"> <li>– Leaky bucket time window based interface minute used for DDR (0-60).</li> <li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li> </ul> </li> <li>♦ Leaky bucket low bit <ul style="list-style-type: none"> <li>– Configures leaky bucket low bit (0x1 - 0x29).</li> <li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li> </ul> </li> <li>♦ Leaky bucket high bit <ul style="list-style-type: none"> <li>– Configures leaky bucket high bit (0x1 - 0x29).</li> <li>– Press the &lt;+&gt; / &lt;-&gt; keys to increase or decrease the desired values.</li> </ul> </li> <li>♦ ADDDC Sparing<sup>(Note)</sup> <ul style="list-style-type: none"> <li>– Enable/Disable ADDDC Sparing.</li> <li>– Options available: Disabled, Enabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>♦ Enable ADDDC Error Injection <ul style="list-style-type: none"> <li>– Options available: Disabled, Enabled. Default setting is <b>Enabled</b>.</li> </ul> </li> <li>♦ Patrol Scrub <ul style="list-style-type: none"> <li>– Options available: Disabled, Enable at End of POST. Default setting is <b>Enable at End of POST</b>.</li> </ul> </li> <li>♦ Patrol Scrub Interval <ul style="list-style-type: none"> <li>– Selects the number of hours (1-24) required to complete full scrub. A value of zero means auto.</li> </ul> </li> <li>♦ DDR5 ECS <ul style="list-style-type: none"> <li>– Options available: Disabled, Enabled, Enable ECS with Result Collection. Default setting is <b>Enabled</b>.</li> </ul> </li> </ul> |

(Note) Advanced items prompt when this item is defined.

### 2-3-5 IIO Configuration

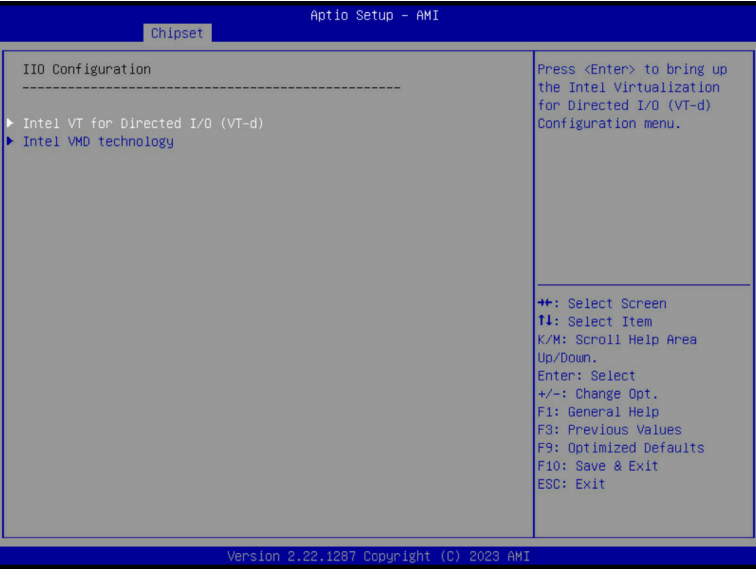


| Parameter         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IIO Configuration |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                   | Press [Enter] to configure advanced items.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|                   | <ul style="list-style-type: none"><li>◆ Intel® VT for Directed I/O<ul style="list-style-type: none"><li>– Enable/Disable the Intel VT for Directed I/O (VT-d) support function by reporting the I/O device assignment to VMM through DMAR ACPI Tables.</li><li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li></ul></li><li>◆ ACS Control<ul style="list-style-type: none"><li>– Enable: Programs ACS only to Chipset PCIe Root Ports Bridges.</li><li>– Disable: Programs ACS to all PCIe bridges.</li><li>– Default setting is <b>Enable</b>.</li></ul></li><li>◆ Intel® VT for Directed I/O (VT-d)</li><li>◆ Cache Allocation<ul style="list-style-type: none"><li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li></ul></li><li>◆ Opt-Out Illegal MSI Mitigation<ul style="list-style-type: none"><li>– Enable/Disable Opt-Out Illegal 0xFEE Platform Mitigation.</li><li>– Options available: Disable, Enable. Default setting is <b>Disable</b>.</li></ul></li><li>◆ DMA Control Opt-In Flag<ul style="list-style-type: none"><li>– Enable/Disable DMA_CTRL_PLATFORM_OPT_IN_FLAG in DMAR table in ACPI. Not compatible with Direct Device Assignment (DDA).</li><li>– Options available: Enable, Disable. Default setting is <b>Disable</b>.</li></ul></li></ul> |

| Parameter             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       | <ul style="list-style-type: none"> <li>◆ Interrupt Remapping <ul style="list-style-type: none"> <li>– Enable/Disable the interrupt remapping support function.</li> <li>– Options available: Auto, Enable, Disable. Default setting is <b>Auto</b></li> </ul> </li> <li>◆ x2APIC Opt Out <ul style="list-style-type: none"> <li>– Options available: Enable, Disable. Default setting is <b>Disable</b>.</li> </ul> </li> <li>◆ Pre-boot DMA Protection <ul style="list-style-type: none"> <li>– Options available: Enable, Disable. Default setting is <b>Disable</b>.</li> </ul> </li> </ul> |
| Intel® VMD technology | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ Intel® VMD Configuration <ul style="list-style-type: none"> <li>– Enable/Disable Intel® VMD technology.</li> <li>– Options available: Enable, Disable. Default setting is <b>Disable</b>.</li> </ul> </li> <li>◆ Intel® VMD for Non-Hotplug NVMe<sup>(Note)</sup> <ul style="list-style-type: none"> <li>– Enable/Disable Intel® VMD for Non-Hotplug NVMe.</li> <li>– Options available: Enable, Disable. Default setting is <b>Disable</b>.</li> </ul> </li> </ul>                                 |

(Note) This item appears when **Intel® VMD Configuration** is set to **Enable**.

### 2-3-6 Advanced Power Management Configuration

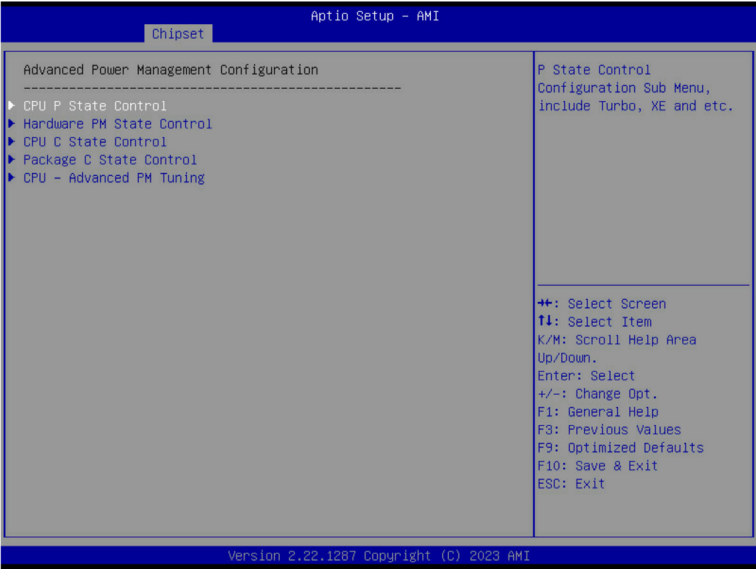


| Parameter                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CPU P State Control       | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"><li>◆ SpeedStep (Pstates)<ul style="list-style-type: none"><li>– Conventional Intel SpeedStep Technology switches both voltage and frequency in tandem between high and low levels in response to processor load.</li><li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li></ul></li><li>◆ Turbo Mode<ul style="list-style-type: none"><li>– When this item is enabled, the processor will automatically ramp up the clock speed of 1-2 of its processing cores to improve its performance. When this item is disabled, the processor will not overclock any of its core.</li><li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li></ul></li></ul> |
| Hardware PM State Control | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"><li>◆ Hardware P-States<ul style="list-style-type: none"><li>– When this item is disabled, the processor hardware chooses a P-state based on OS Request (Legacy P-States).</li><li>– In Native mode, the processor hardware chooses a P-state based on OS guidance.</li><li>– In Out of Band mode, the processor hardware autonomously chooses a P-state (with no OS guidance).</li><li>– Options available: Disable, Native Mode, Out of Band Mode, Native Mode with No Legacy Support. Default setting is <b>Native Mode</b>.</li></ul></li></ul>                                                                                                                                                      |

| Parameter                | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CPU C State Control      | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ Enable Monitor MWAIT <ul style="list-style-type: none"> <li>– Allows Monitor and MWAIT instructions.</li> <li>– Options available: Disable, Enable, Auto. Default setting is <b>Auto</b>.</li> </ul> </li> <li>◆ CPU C6 Report <ul style="list-style-type: none"> <li>– Enable/Disable CPU C6(ACPI C3) report to OS.</li> <li>– Options available: Disable, Enable, Auto. Default setting is <b>Auto</b>.</li> </ul> </li> <li>◆ Enhanced Halt State (C1E) <ul style="list-style-type: none"> <li>– Core C1E auto promotion control. Takes effect after reboot.</li> <li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li> </ul> </li> </ul> |
| Package C State Control  | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ Package C State <ul style="list-style-type: none"> <li>– Configures the state for the C-State package limit.</li> <li>– Options available: C0/C1 state, C2 state, C6(non Retention) state, C6(Retention) state, No Limit, Auto. Default setting is <b>Auto</b>.</li> </ul> </li> </ul>                                                                                                                                                                                                                                                                                                                                                                                  |
| CPU - Advanced PM Tuning | <p>Press [Enter] to configure advanced items.</p> <ul style="list-style-type: none"> <li>◆ Energy Perf BIAS <ul style="list-style-type: none"> <li>– Press [Enter] to configure advanced items. <ul style="list-style-type: none"> <li>» Power Performance Tuning <ul style="list-style-type: none"> <li>• Options available: OS Controls EPB, BIOS Controls EPB, PECI Controls EPB. Default setting is <b>OS Controls EPB</b>.</li> </ul> </li> <li>» Energy_PERF_BIAS_CFG mode<sup>(Note)</sup> <ul style="list-style-type: none"> <li>• Options available: Performance, Balanced Performance, Balanced Power, Power. Default setting is <b>Balanced Performance</b>.</li> </ul> </li> </ul> </li> </ul> </li> </ul>                                             |

(Note) This item is configurable when **Power Performance Tuning** is set to **BIOS Controls EPB**.

### 2-3-7 PCH Configuration

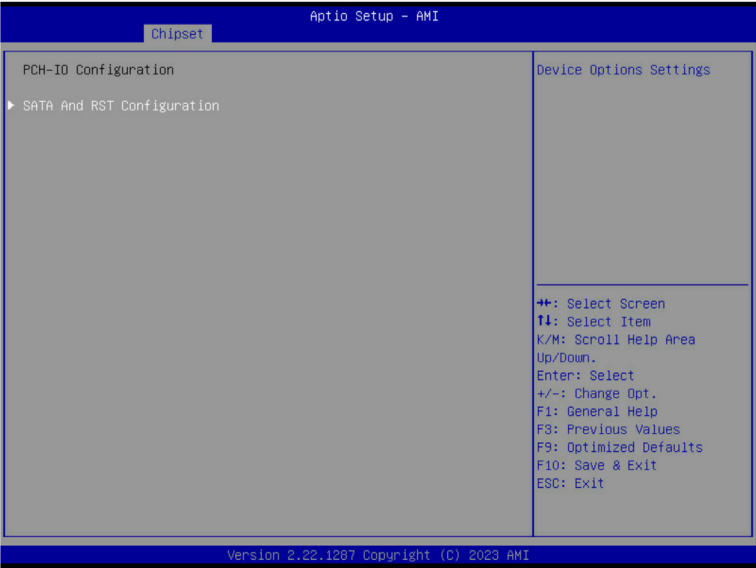


| Parameter                                                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PCH-IO Configuration                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                                                                         | Press [Enter] to configure advanced items.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                                         | <ul style="list-style-type: none"><li>◆ SATA Configuration<ul style="list-style-type: none"><li>– Enable/Disable SATA controller.</li><li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li></ul></li><li>◆ SATA Mode Selection<ul style="list-style-type: none"><li>– Configures on chip SATA type.</li><li>– AHCI Mode: When set to AHCI, the SATA controller enables its AHCI functionality. Then the RAID function is disabled and cannot be access the RAID setup utility at boot time.</li><li>– RAID Mode: When set to RAID, the SATA controller enables both its RAID and AHCI functions. You will be allowed to access the RAID setup utility at boot time.</li><li>– Options available: AHCI, RAID. Default setting is <b>AHCI</b>.</li></ul></li><li>◆ RAID Device ID<sup>(Note)</sup><ul style="list-style-type: none"><li>– Choose RAID Device ID.</li><li>– Options available: Client, Alternate, Server. Default setting is <b>Server</b>.</li></ul></li><li>◆ SATA Port 0/1/2/3/4/5<ul style="list-style-type: none"><li>– The category identifies SATA hard drives that are installed in the computer. System will automatically detect HDD type.</li></ul></li></ul> |
| SATA And RST Configuration/<br>SATA Controller And RST<br>Configuration |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

(Note) Only appears when HDD sets to **RAID Mode**.

| Parameter                                                                              | Description                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SATA And RST<br>Configuration/<br>SATA Controller And RST<br>Configuration (continued) | <ul style="list-style-type: none"> <li>◆ SATA Port 0/1/2/3/4/5 <ul style="list-style-type: none"> <li>– Enable/Disable Port 0/1/2/3/4/5 device.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> </ul>         |
|                                                                                        | <ul style="list-style-type: none"> <li>◆ Hot Plug (for Port 0/1/2/3/4/5) <ul style="list-style-type: none"> <li>– Enable/Disable HDD Hot-Plug function.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> </ul> |
|                                                                                        | <ul style="list-style-type: none"> <li>◆ Spin Up Device (for Port 0/1/2/3/4/5) <ul style="list-style-type: none"> <li>– On an edge detect from 0 to 1, the PCH starts a COM reset initialization to the device.</li> </ul> </li> </ul>                             |
|                                                                                        | <ul style="list-style-type: none"> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul>                                                                                                                                      |


(Note) Only appears when HDD sets to **RAID** Mode.

### 2-3-8 Miscellaneous Configuration

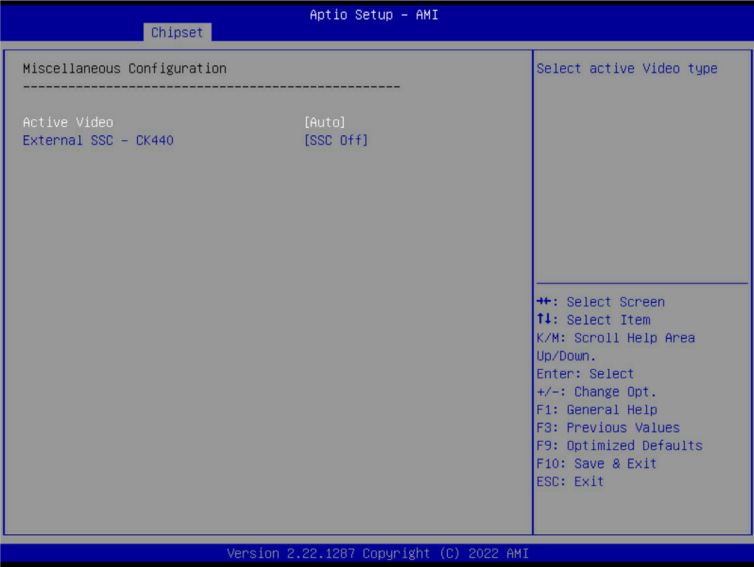


| Parameter                   | Description                                                                                                                                                                |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Miscellaneous Configuration |                                                                                                                                                                            |
| Active Video                | Selects the active video type.<br>Options available: Auto, Onboard Device, PCIE Device, Specific PCIE Device. Default setting is <b>Auto</b> .                             |
| External SSC - CK440        | Enables Spread spectrum - only affects external clock generator.<br>Options available: SSC Off, SSC = -0.3%, SSC = -0.5%, Hardware.<br>Default setting is <b>SSC Off</b> . |

## 2-3-9 Server ME Configuration

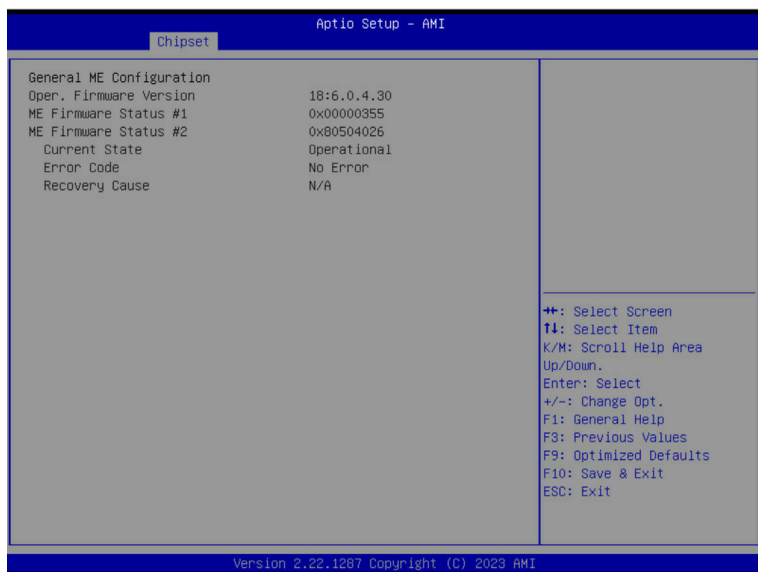

| Parameter                | Description                                      |
|--------------------------|--------------------------------------------------|
| General ME Configuration |                                                  |
| Oper. Firmware Version   | Displays the operational firmware version.       |
| ME Firmware Status #1/#2 | Displays ME Firmware status information.         |
| Current State            | Displays ME Firmware current status information. |
| Error Code               | Displays ME Firmware status error code.          |
| Recovery Cause           | Displays ME Firmware recovery cause.             |

## 2-3-10 Runtime Error Logging Settings

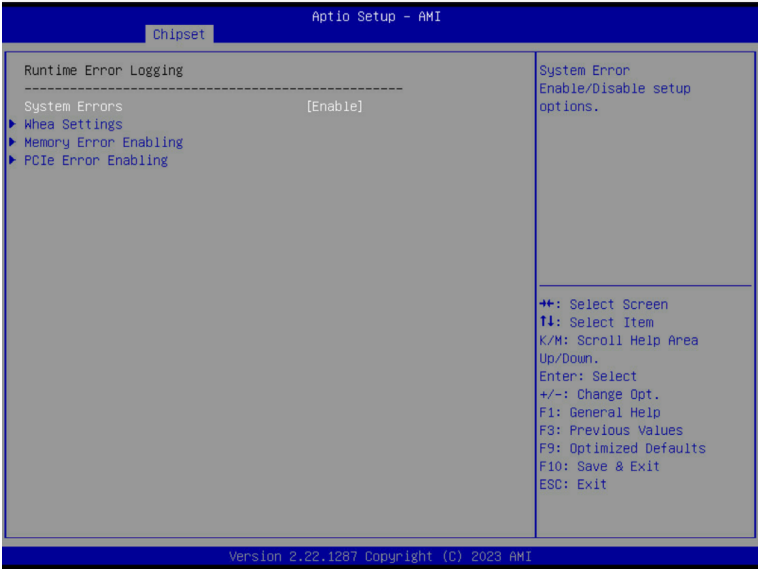


| Parameter             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Runtime Error Logging |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| System Errors         | Enable/Disable system error logging function.<br>Options available: Enable, Disable. Default setting is <b>Enable</b> .                                                                                                                                                                                                                                                                                                                                                                                                             |
| Whea Settings         | Press [Enter] to configure advanced items. <ul style="list-style-type: none"><li>◆ WHEA (Windows Hardware Error Architecture) Support<ul style="list-style-type: none"><li>– Enable/Disable WHEA Support.</li><li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li></ul></li></ul>                                                                                                                                                                                                                       |
| Memory Error Enabling | Press [Enter] to configure advanced items. <ul style="list-style-type: none"><li>◆ Memory Corrected Error<ul style="list-style-type: none"><li>– Enable/Disable Memory Corrected Error.</li><li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li></ul></li><li>◆ Uncorrected Error disable Memory<ul style="list-style-type: none"><li>– Enable/Disable the Memory that triggers Uncorrected Error.</li><li>– Options available: Enable, Disable. Default setting is <b>Disable</b>.</li></ul></li></ul> |
| PCIe Error Enabling   | Press [Enter] to configure advanced items. <ul style="list-style-type: none"><li>◆ PCIe Error<ul style="list-style-type: none"><li>– Enable/Disable PCIe error.</li><li>– Options available: Enable, Disable. Default setting is <b>Disable</b>.</li></ul></li></ul>                                                                                                                                                                                                                                                                |

| Parameter                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PCIe Error Enabling<br>(continued) | <ul style="list-style-type: none"> <li>♦ Uncorrected Error<sup>(Note)</sup> <ul style="list-style-type: none"> <li>– Enables and escalates Uncorrectable/Recoverable Errors to error pins.</li> <li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li> </ul> </li> <li>♦ Fatal Error Enable<sup>(Note)</sup> <ul style="list-style-type: none"> <li>– Enables and escalates Fatal Errors to error pins.</li> <li>– Options available: Enable, Disable. Default setting is <b>Enable</b>.</li> </ul> </li> <li>♦ Assert NMI on SERR<sup>(Note)</sup> <ul style="list-style-type: none"> <li>– Enable/Disable BIOS generates a non-maskable interrupt (NMI) and logs an error when a system error (SERR) occurs.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> <li>♦ Assert NMI on PERR<sup>(Note)</sup> <ul style="list-style-type: none"> <li>– Enable/Disable BIOS generates a non-maskable interrupt (NMI) and logs an error when a processor bus parity error (PERR) occurs.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Enabled</b>.</li> </ul> </li> </ul> |

(Note) This item appears when **PCIE Error** is set to **Enable**.


## 2-3-11 Power Policy

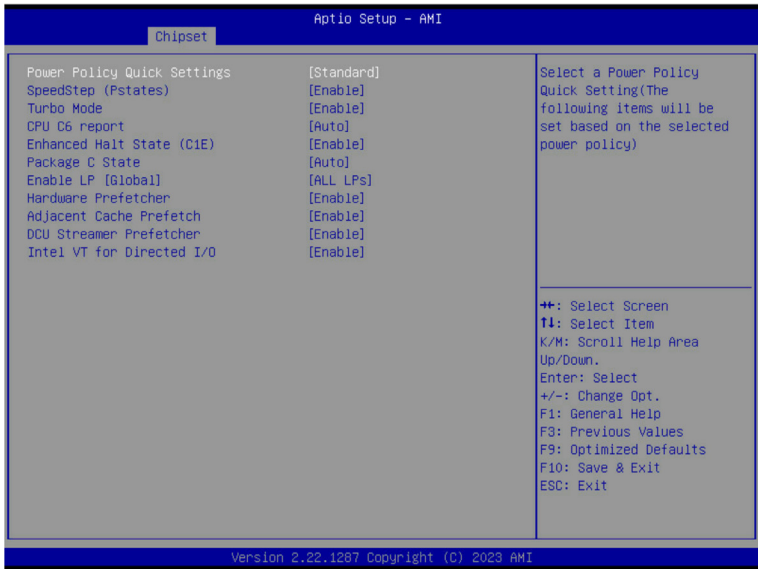

| Parameter                   | Description                                                                                                                                                                                                                                                                                               |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power Policy Quick Settings | Selects a Power Policy Quick Setting.<br>Options available: Standard, Best Performance, Energy Efficient. Default setting is <b>Standard</b> .                                                                                                                                                            |
| SpeedStep (Pstates)         | Conventional Intel SpeedStep Technology switches both voltage and frequency in tandem between high and low levels in response to processor load.<br>Options available: Enable, Disable. Default setting is <b>Enable</b> .                                                                                |
| Turbo Mode                  | When this item is enabled, the processor will automatically ramp up the clock speed of 1-2 of its processing cores to improve its performance.<br>When this item is disabled, the processor will not overclock any of its core.<br>Options available: Enable, Disable. Default setting is <b>Enable</b> . |
| CPU C6 report               | Enable/Disable the BIOS to enable the report from the CPU C6 state (ACPI C3) to the OS.<br>Options available: Disable, Enable, Auto. Default setting is <b>Auto</b> .                                                                                                                                     |
| Enhanced Halt State (C1E)   | Enable/Disable the C1E support for lower power consumption. Takes effect after reboot.<br>Options available: Enable, Disable. Default setting is <b>Enable</b> .                                                                                                                                          |
| Package C State             | Configures the C-State package limit.<br>Options available: C0/C1 state, C2 state, C6(non Retention) state, C6(Retention) state, No Limit, Auto. Default setting is <b>Auto</b> .                                                                                                                         |

| Parameter                  | Description                                                                                                                                                                                                            |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enable LP [Global]         | Enables Logical processor (Software Method to Enable/Disable Logical Processor threads).<br>Options available: ALL LPs, Single LP. Default setting is <b>ALL LPs</b> .                                                 |
| Hardware Prefetcher        | Options available: Enable, Disable. Default setting is <b>Enable</b> .                                                                                                                                                 |
| Adjacent Cache Prefetch    | Options available: Enable, Disable. Default setting is <b>Enable</b> .                                                                                                                                                 |
| DCU Streamer Prefetcher    | Options available: Enable, Disable. Default setting is <b>Enable</b> .                                                                                                                                                 |
| Intel® VT for Directed I/O | Enable/Disable the Intel VT for Directed I/O (VT-d) support function by reporting the I/O device assignment to VMM through DMAR ACPI Tables.<br>Options available: Enable, Disable. Default setting is <b>Enable</b> . |

## 2-4 Server Management Menu

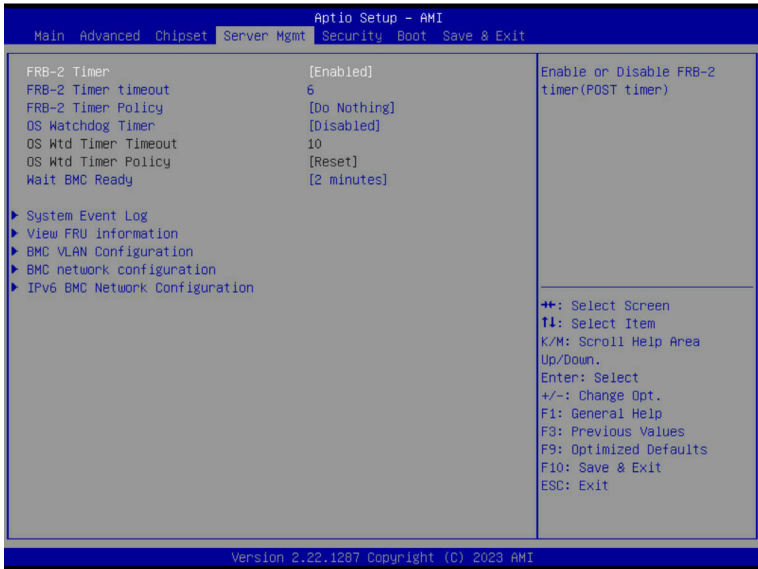


| Parameter                               | Description                                                                                                                                      |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| FRB-2 Timer                             | Enable/Disable FRB-2 timer (POST timer).<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                            |
| FRB-2 Timer <sup>(Note1)</sup> timeout  | Configures the FRB2 Timer timeout. The value is between 1 to 30 minutes.<br>Default setting is <b>6 minutes</b> .                                |
| FRB-2 Timer Policy <sup>(Note1)</sup>   | Configures the FRB2 Timer policy.<br>Options available: Do Nothing, Reset, Power Down, Power Cycle.<br>Default setting is <b>Do Nothing</b> .    |
| OS Watchdog Timer                       | Enable/Disable OS Watchdog Timer function.<br>Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                         |
| OS Wtd Timer Timeout <sup>(Note2)</sup> | Configures OS Watchdog Timer. The value is between 1 to 30 minutes.<br>Default setting is <b>10 minutes</b> .                                    |
| OS Wtd Timer Policy <sup>(Note2)</sup>  | Configure OS Watchdog Timer Policy.<br>Options available: Reset, Do Nothing, Power Down, Power Cycle.<br>Default setting is <b>Reset</b> .       |
| Wait BMC Ready                          | POST wait BMC ready and reboot system.<br>Options available: Disabled, 2 minutes, 4 minutes, 6 minutes.<br>Default setting is <b>2 minutes</b> . |

(Note1) This item is configurable when **FRB-2 Timer** is set to **Enabled**.

(Note2) This item is configurable when **OS Watchdog Timer** is set to **Enabled**.

| Parameter                      | Description                                |
|--------------------------------|--------------------------------------------|
| System Event Log               | Press [Enter] to configure advanced items. |
| View FRU Information           | Press [Enter] to view the FRU information. |
| BMC VLAN Configuration         | Press [Enter] to configure advanced items. |
| BMC network Configuration      | Press [Enter] to configure advanced items. |
| IPv6 BMC Network Configuration | Press [Enter] to configure advanced items. |


## 2-4-1 System Event Log

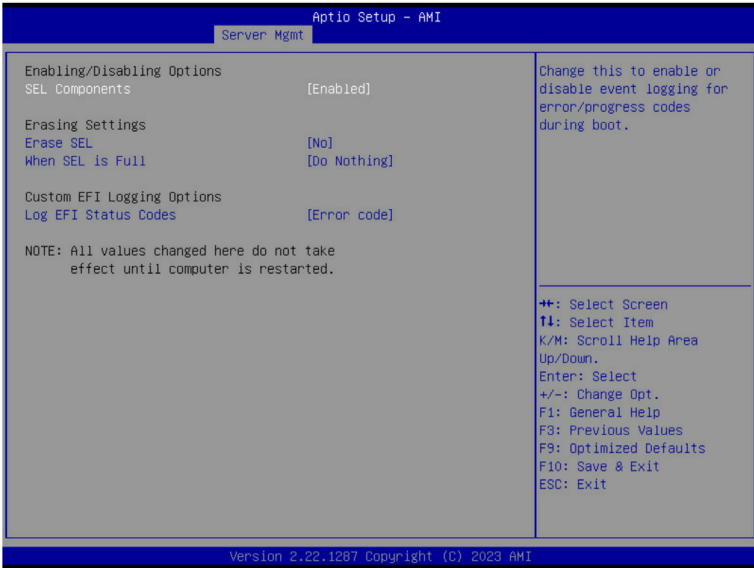

| Parameter                    | Description                                                                                                                                                                                  |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enabling / Disabling Options |                                                                                                                                                                                              |
| SEL Components               | Change this item to enable or disable all features of System Event Logging during boot.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                         |
| Erasing Settings             |                                                                                                                                                                                              |
| Erase SEL                    | Choose options for erasing SEL.<br>Options available: No,<br>Yes, On next reset,<br>Yes, On every reset.<br>Default setting is <b>No</b> .                                                   |
| When SEL is Full             | Choose options for reactions to a full SEL.<br>Options available: Do Nothing, Erase Immediately, Delete Oldest Record.<br>Default setting is <b>Do Nothing</b> .                             |
| Custom EFI Logging Options   |                                                                                                                                                                                              |
| Log EFI Status Codes         | Enable/Disable the logging of EFI Status Codes (if not already converted to legacy).<br>Options available: Disabled, Both, Error code, Progress code. Default setting is <b>Error code</b> . |


## 2-4-2 View FRU Information

The FRU page is a simple display page for basic system ID information, as well as System product information. Items on this window are non-configurable.

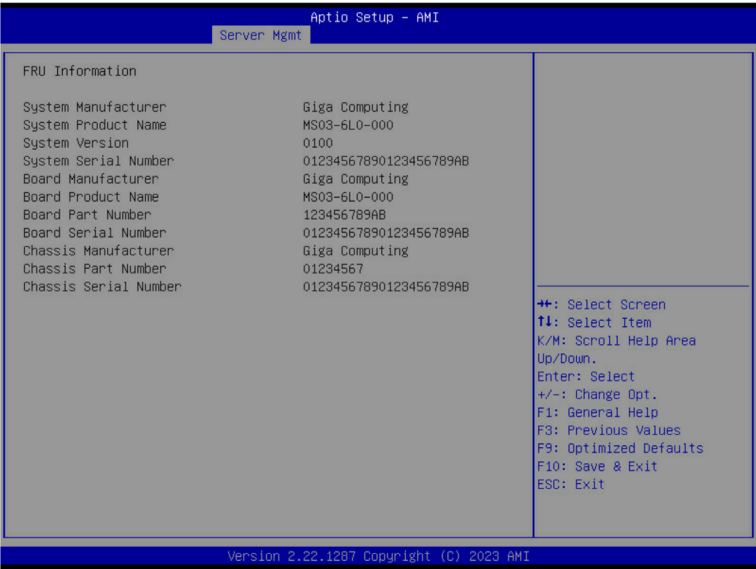


(Note) The model name will vary depends on the product you purchased

### 2-4-3 BMC VLAN Configuration

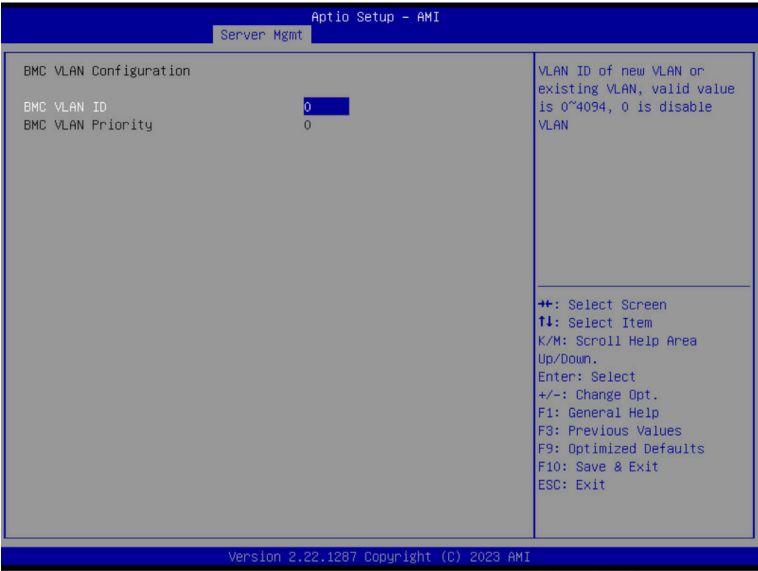


| Parameter              | Description                                                                                                                                  |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| BMC VLAN Configuration |                                                                                                                                              |
| BMC VLAN ID            | Select to configure BMC VLAN ID. The valid range is from 0 to 4094. When set to 0, BMC VLAN ID will be disabled.                             |
| BMC VLAN Priority      | Select to configure BMC VLAN Priority. The valid range is from 0 to 7. When BMC VLAN ID is set to 0, BMC VLAN Priority will not be selected. |

## 2-4-4 BMC Network Configuration

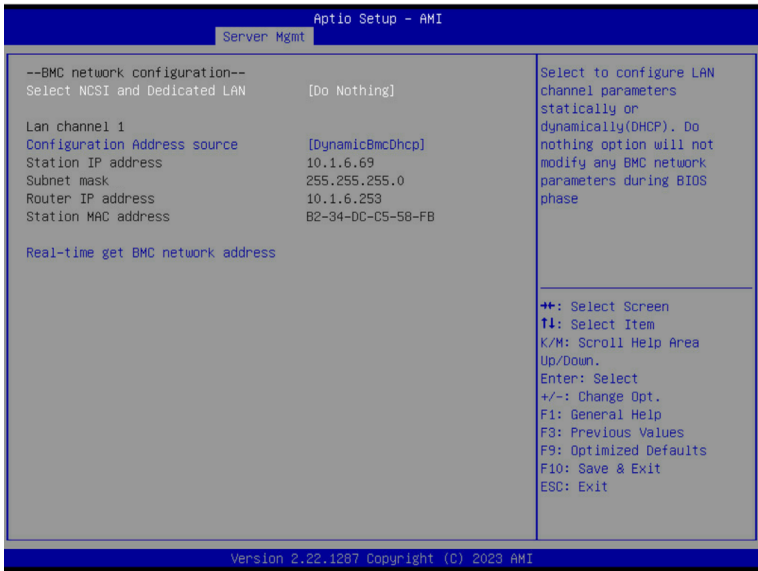

| Parameter                         | Description                                                                                                                                                                         |
|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| BMC network configuration         |                                                                                                                                                                                     |
| Select NCSI and Dedicated LAN     | Options available: Do Nothing, Model1(Dedicated), Model2(NCSI), Mode3(Failover). Default setting is <b>Do Nothing</b> .                                                             |
| Lan Channel 1                     |                                                                                                                                                                                     |
| Configuration Address source      | Selects to configure LAN channel parameters statically or dynamically (DHCP).<br>Options available: Unspecified, Static, DynamicBmcDhcp. Default setting is <b>DynamicBmcDhcp</b> . |
| Station IP address                | Displays IP Address information.                                                                                                                                                    |
| Subnet mask                       | Displays Subnet Mask information.<br>Please note that the IP address must be in three digitals, for example, 192.168.000.001.                                                       |
| Router IP address                 | Displays the Router IP Address information.                                                                                                                                         |
| Station MAC address               | Displays the MAC Address information.                                                                                                                                               |
| Real-time get BMC network address | Press [Enter] will set LAN mode and Address source and then get IP, Subnet, Gateway and MAC address.                                                                                |


## 2-4-5 IPv6 BMC Network Configuration

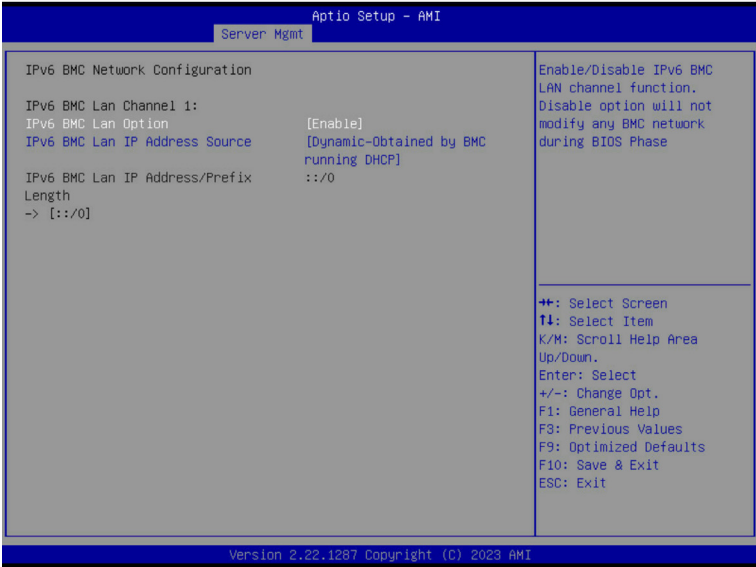

| Parameter                             | Description                                                                                                                                                                                                                               |
|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IPv6 BMC network configuration        |                                                                                                                                                                                                                                           |
| IPv6 BMC Lan Channel 1                |                                                                                                                                                                                                                                           |
| IPv6 BMC Lan Option                   | Enable/Disable IPv6 BMC LAN channel function. When this item is disabled, the system will not modify any BMC network during BIOS phase.<br>Options available: Unspecified, Disable, Enable. Default setting is <b>Enable</b> .            |
| IPv6 BMC Lan IP Address Source        | Selects to configure LAN channel parameters statically or dynamically (by BIOS or BMC).<br>Options available: Unspecified, Static, Dynamic-Obtained by BMC running DHCP. Default setting is <b>Dynamic-Obtained by BMC running DHCP</b> . |
| IPv6 BMC Lan IP Address/Prefix Length | Check if the IPv6 BMC LAN IP address matches those displayed on the screen.                                                                                                                                                               |

## 2-5 Security Menu

The Security menu allows you to safeguard and protect the system from unauthorized use by setting up access passwords.

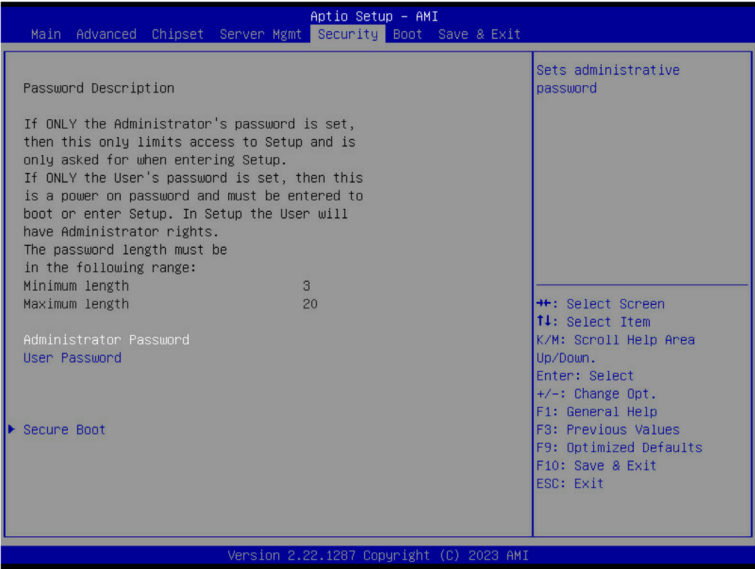

There are two types of passwords that you can set:

- **Administrator Password**  
Entering this password will allow the user to access and change all settings in the Setup Utility.
- **User Password**  
Entering this password will restrict a user's access to the Setup menus. To enable or disable this field, a Administrator Password must first be set. A user can only access and modify the System Time, System Date, and Set User Password fields.

| Parameter              | Description                                            |
|------------------------|--------------------------------------------------------|
| Administrator Password | Press [Enter] to configure the administrator password. |
| User Password          | Press [Enter] to configure the user password.          |
| Secure Boot            | Press [Enter] to configure advanced items.             |

## 2-5-1 Secure Boot

The Secure Boot feature is applicable if supported by your Operating System. If your Operating System is not supporting Secure Boot, the system will hang when starting the Operating System.



| Parameter                          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| System Mode                        | Displays if the system is in User mode or Setup mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Secure Boot                        | Enable/ Disable the Secure Boot function.<br>Options available: Enabled, Disabled. Default setting is <b>Disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Secure Boot Mode <sup>(Note)</sup> | Secure Boot requires all the applications that are running during the booting process to be pre-signed with valid digital certificates. This way, the system knows all files being loaded before the Operating System loads to the login screen have not been tampered with.<br>When set to Standard, it will automatically load the Secure Boot keys from the BIOS databases.<br>When set to Custom, you can customize the Secure Boot settings and manually load its keys from the BIOS database.<br>Options available: Standard, Custom. Default setting is <b>Custom</b> . |
| Restore Factory Keys               | Forces the system to user mode and installs factory default Secure Boot key database.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Reset To Setup Mode                | Reset the system to Setup Mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |


(Note) Advanced items prompt when this item is set to **Custom**.

| Parameter      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Key Management | <p>Press [Enter] to configure advanced items.</p> <p><b>Please note that this item is configurable when Secure Boot Mode is set to Custom.</b></p> <ul style="list-style-type: none"> <li>◆ Factory Key Provision <ul style="list-style-type: none"> <li>– Allows to provision factory default Secure Boot keys when system is in Setup Mode.</li> <li>– Options available: Enabled, Disabled. Default setting is <b>Disabled</b>.</li> </ul> </li> <li>◆ Restore Factory Keys <ul style="list-style-type: none"> <li>– Installs all factory default keys. It will force the system in User Mode.</li> <li>– Options available: Yes, No.</li> </ul> </li> <li>◆ Reset To Setup Mode <ul style="list-style-type: none"> <li>– Reset the system to Setup Mode.</li> <li>– Options available: Yes, No.</li> </ul> </li> <li>◆ Enroll Efi Image <ul style="list-style-type: none"> <li>– Press [Enter] to enroll SHA256 hash of the binary into Authorized Signature Database (db).</li> </ul> </li> <li>◆ Export Secure Boot variables <ul style="list-style-type: none"> <li>– Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device.</li> </ul> </li> <li>◆ Secure Boot variable <ul style="list-style-type: none"> <li>– Displays the current status of the variables used for secure boot.</li> </ul> </li> <li>◆ Platform Key (PK) <ul style="list-style-type: none"> <li>– Displays the current status of the Platform Key (PK).</li> <li>– Press [Enter] to configure a new PK.</li> <li>– Options available: Update.</li> </ul> </li> <li>◆ Key Exchange Keys (KEK) <ul style="list-style-type: none"> <li>– Displays the current status of the Key Exchange Key Database (KEK).</li> <li>– Press [Enter] to configure a new KEK or load additional KEK from storage devices.</li> <li>– Options available: Update, Append.</li> </ul> </li> <li>◆ Authorized Signatures (DB) <ul style="list-style-type: none"> <li>– Displays the current status of the Authorized Signature Database.</li> <li>– Press [Enter] to configure a new DB or load additional DB from storage devices.</li> <li>– Options available: Update, Append.</li> </ul> </li> <li>◆ Forbidden Signatures (DBX) <ul style="list-style-type: none"> <li>– Displays the current status of the Forbidden Signature Database.</li> <li>– Press [Enter] to configure a new dbx or load additional dbx from storage devices.</li> <li>– Options available: Update, Append.</li> </ul> </li> </ul> |

| Parameter                     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Key Management<br>(continued) | <ul style="list-style-type: none"> <li>♦ Authorized TimeStamps (DBT) <ul style="list-style-type: none"> <li>– Displays the current status of the Authorized TimeStamps Database.</li> <li>– Press [Enter] to configure a new DBT or load additional DBT from storage devices.</li> <li>– Options available: Update, Append.</li> </ul> </li> <li>♦ OsRecovery Signatures <ul style="list-style-type: none"> <li>– Displays the current status of the OsRecovery Signature Database.</li> <li>– Press [Enter] to configure a new OsRecovery Signature or load additional OsRecovery Signature from storage devices.</li> <li>– Options available: Update, Append.</li> </ul> </li> </ul> |

## 2-6 Boot Menu

The Boot menu allows you to set the drive priority during system boot-up. BIOS setup will display an error message if the legacy drive(s) specified is not bootable.

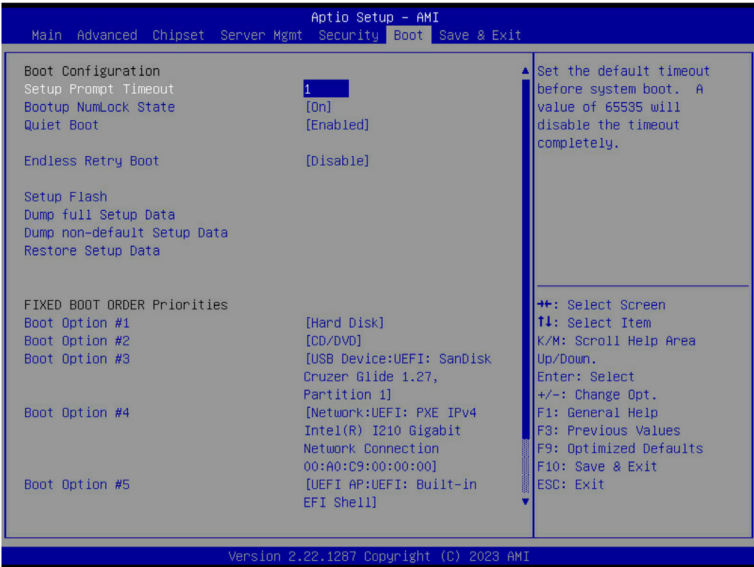


| Parameter                   | Description                                                                                                                                         |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| Boot Configuration          |                                                                                                                                                     |
| Setup Prompt Timeout        | Number of seconds to wait for setup activation key. 65535 (0xFFFF) means indefinite waiting.<br>Press the numeric keys to input the desired values. |
| Bootup NumLock State        | Enable/Disable the Bootup NumLock function.<br>Options available: On, Off. Default setting is <b>On</b> .                                           |
| Quiet Boot                  | Enable/Disable showing the logo during POST.<br>Options available: Enabled, Disabled. Default setting is <b>Enabled</b> .                           |
| Endless Retry Boot          | Options available: Disable, Enable. Default setting is <b>Disable</b> .                                                                             |
| Setup Flash                 | Press [Enter] to run setup flash.                                                                                                                   |
| Dump full Setup Data        | Press [Enter] to dump full setup data to file.                                                                                                      |
| Dump non-default Setup Data | Press [Enter] to dump non-default setup data to file.                                                                                               |
| Restore Setup Data          | Press [Enter] to restore setup data from file.                                                                                                      |

| Parameter                          | Description                                                                                                                                                                                                                                                                                              |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FIXED BOOT ORDER Priorities        |                                                                                                                                                                                                                                                                                                          |
| Boot Option #1 / #2 / #3 / #4 / #5 | <p>Press [Enter] to configure the boot order priority.<br/>By default, the server searches for boot devices in the following sequence:</p> <ol style="list-style-type: none"> <li>1. Hard drive.</li> <li>2. CD-COM/DVD drive.</li> <li>3. USB device.</li> <li>4. Network.</li> <li>5. UEFI.</li> </ol> |
| UEFI Network Drive BBS Priorities  | Press [Enter] to configure the boot priority.                                                                                                                                                                                                                                                            |
| UEFI Application Boot Priorities   | Press [Enter] to configure the boot priority.                                                                                                                                                                                                                                                            |

## 2-7 Save & Exit Menu

The Save & Exit menu displays the various options to quit from the BIOS setup. Highlight any of the exit options then press <Enter>.

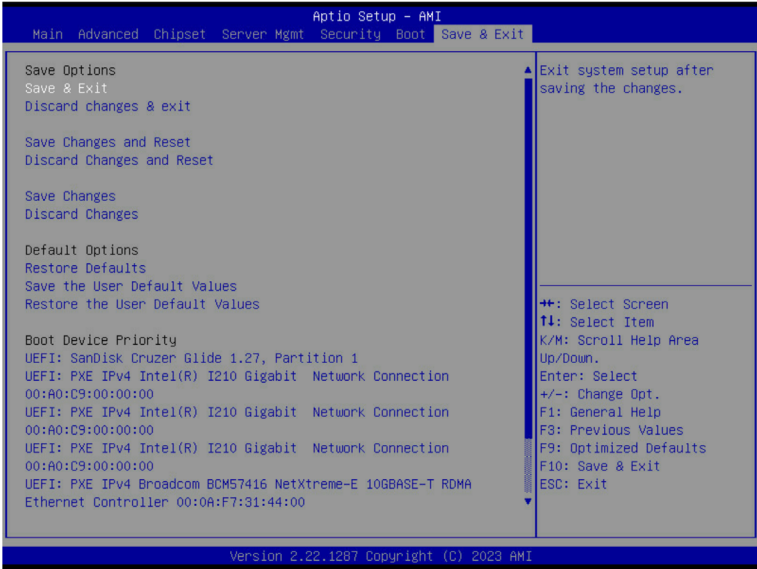

| Parameter                 | Description                                                                           |
|---------------------------|---------------------------------------------------------------------------------------|
| Save Options              |                                                                                       |
| Save and Exit             | Saves changes made and closes the BIOS setup.<br>Options available: Yes, No.          |
| Discard changes and exit  | Discards changes made and exits the BIOS setup.<br>Options available: Yes, No.        |
| Save Changes and Reset    | Restarts the system after saving the changes made.<br>Options available: Yes, No.     |
| Discard Changes and Reset | Restarts the system without saving any changes.<br>Options available: Yes, No.        |
| Save Changes              | Saves changes done so far to any of the setup options.<br>Options available: Yes, No. |
| Discard Changes           | Discards changes made and closes the BIOS setup.<br>Options available: Yes, No.       |
| Default Options           |                                                                                       |

| Parameter                       | Description                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Restore Defaults                | <p>Loads the default settings for all BIOS setup parameters. Setup Defaults are quite demanding in terms of resources consumption. If you are using low-speed memory chips or other kinds of low-performance components and you choose to load these settings, the system might not function properly.</p> <p>Options available: Yes, No.</p> |
| Save the User Default Values    | <p>Saves the changes made as the user default settings.</p> <p>Options available: Yes, No.</p>                                                                                                                                                                                                                                                |
| Restore the User Default Values | <p>Loads the user default settings for all BIOS setup parameters.</p> <p>Options available: Yes, No.</p>                                                                                                                                                                                                                                      |
| Boot Device Priority            | Press [Enter] to configure the device as the boot-up drive.                                                                                                                                                                                                                                                                                   |
| Launch EFI Shell                | Attempts to Launch EFI Shell application (Shell.efi) from one of the available file system devices.                                                                                                                                                                                                                                           |

# 2-8 BIOS Recovery

The system has an embedded recovery technique. In the event that the BIOS becomes corrupt the boot block can be used to restore the BIOS to a working state. To restore your BIOS, please follow the instructions listed below:

Recovery Instruction:

1. Copy the XXX.rom to USB diskette.
2. Setting BIOS Recovery jump to enabled status.
3. Boot into BIOS recovery.
4. Run Proceed with flash update.
5. BIOS updated.



## 2-9 BIOS POST Beep code (AMI standard)

### 2-9-1 PEI Beep Codes

| # of Beeps | Description                                                                    |
|------------|--------------------------------------------------------------------------------|
| 1          | Memory not Installed.                                                          |
| 1          | Memory was installed twice (InstallPeiMemory routine in PEI Core called twice) |
| 2          | Recovery started                                                               |
| 3          | DXE IPL was not found                                                          |
| 3          | DXE Core Firmware Volume was not found                                         |
| 4          | Recovery failed                                                                |
| 4          | S3 Resume failed                                                               |
| 7          | Reset PPI is not available                                                     |

### 2-9-2 DXE Beep Codes

| # of Beeps | Description                                           |
|------------|-------------------------------------------------------|
| 1          | Invalid password                                      |
| 4          | Some of the Architectural Protocols are not available |
| 5          | No Console Output Devices are found                   |
| 5          | No Console Input Devices are found                    |
| 6          | Flash update is failed                                |
| 7          | Reset protocol is not available                       |
| 8          | Platform PCI resource requirements cannot be met      |