

## USM-500 Exterior




Front View


Back View



Top View

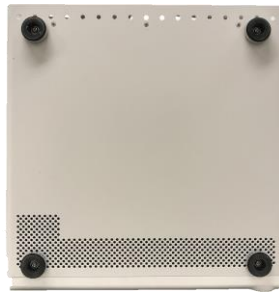

Bottom View

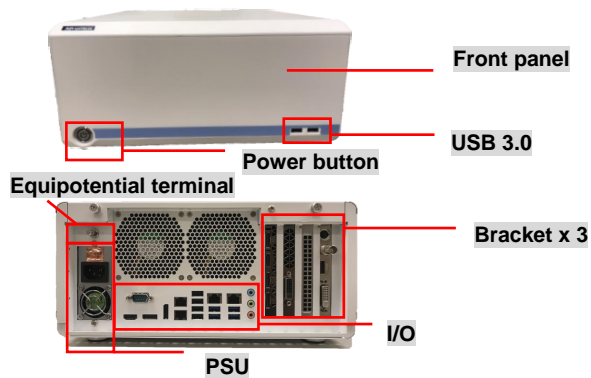

## Packing List


- (1) USM-500 x 1
- (2) Accessory box x 1
  - ✓ Quick installation guide x 1

## (1) Function Key



- (1) Power button On/Off
- (2) 2 x USB 3.0

## (2) I/O

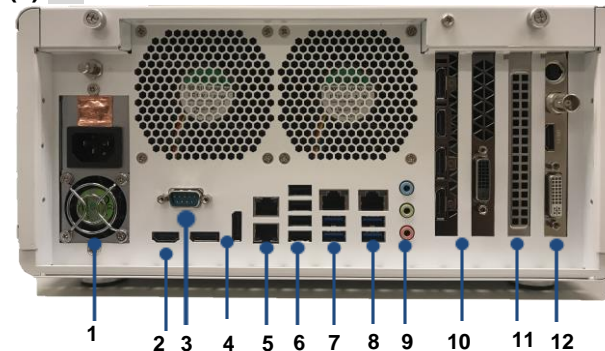

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12

- (1) PSU
- (2) HDMI
- (3) RS-232
- (4) 2 x DP
- (5) 2 x RJ-45
- (6) 4 x USB 2.0
- (7) 1 x RJ-45, 2 x USB 3.0
- (8) 1 x RJ-45, 2 x USB 3.0
- (9) AV
- (10) PCIe(x16) slot (Bracket 1, 2)
- (11) PCIe(x4) slot (Bracket 3)
- (12) PCIe(x8) slot (Bracket 4)

## (3) Quick Setting

### Power On:

- 1) Make sure that the "Equipotential Terminal" is connected to the hospital's equipotential ground.
- 2) Connect the adapter to the "DC Input Jack". Please note that using a non-genuine adapter may pose a potential risk to the system.
- 3) Press "Power On/Off". The button will turn green.

\*Please use the "original genuine operating system" to install this automatic installer; otherwise an unexpected error may occur.

### Note:

- PCIe connections must match the specifications. There is no guarantee that each PCIe card will be compatible. Please contact Advantech Regional Service Center before use.