



APC-3XX9A

Panel PC User Manual

Release Date

Revision

Nov. 2014

V1.1

©2014

All Rights Reserved.

Published in Taiwan

Aplex Technology, Inc.

15F-1, No.186, Jian Yi Road, Zhonghe District, New Taipei City 235, Taiwan

Tel: 886-2-82262881 Fax: 886-2-82262883 E-mail: aplex@aplex.com.tw URL: www.aplex.com.tw

APC-3XX9A User Manual

Warning!

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

Packing List

Accessories (as ticked) included in this package are:
<input type="checkbox"/> AC power cable
<input type="checkbox"/> Driver & manual CD disc
<input type="checkbox"/> Other. _____ (please specify)

Safety Precautions

Follow the messages below to prevent your systems from damage:

- ◆ Avoid your system from static electricity on all occasions.
- ◆ Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
- ◆ Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

Table of Contents

Warning!	2
Disclaimer	2
Packing List	3
Safety Precautions	3

Chapter 1

Getting Started

1.1 Features	6
1.2 Specifications	6
1.3 Dimensions	8
1.4 Installation of HDD	10
1.5 Installation of PCIe Add-on &CF	12
1.6 Brief Description of APC-3XX9A	14

Chapter 2

Hardware

2.1 Mainboard Specifications	16
2.2 Jumpers and Headers Setting Guide	18
2.3 I/O Panel	27
2.4 Installation	28
2.5 Driver Installation Guide	31

Chapter 3

BIOS Setup

3.1 Introduction	32
3.2 Main Screen	33
3.3 Advanced Screen	34
3.4 Hardware Health Event Monitoring Screen	48
3.5 Boot Screen	49
3.6 Security Screen	51
3.7 Exit Screen	52

Chapter 4

Installation of Drivers

4.1 Intel Chipset Driver	54
4.2 Intel Graphics Media Accelerator Driver	57
4.3 Intel(R) Network Adapter	60
4.4 Realtek ALC662 Audio Codec Driver Installation	63
4.5 Intel(R) USB 3.0 DRIVER	65
4.6 Intel(R) Smart Connect Technology Driver	68
4.7 Intel(R) iAMT Driver	72

5.1 Windows7/8 Universal Driver Installation for PenMount 6000 Series.....75

5.2 Installing Software.....75

5.3 Software Functions.....78

Figures

Figure 1.1: Dimensions of APC-3229A.....8

Figure 1.2: Dimensions of APC-3249A.....9

Figure 1.3: Front View of APC-3229A.....14

Figure 1.4: Rear View of APC-3229A.....14

Figure 1.5: Front View of APC-3249A.....15

Figure 1.6: Rear View of APC-3249A.....15

1.1 Features

- Intel 4th Gen Core i5-4402E 1.6GHz processor (Haswell)
- Intel QM87
- 2 x DDR3 1600MHz SO-DIMM, up to 16GB system memory
- Fanless Design
- Support 1 x PCIe x16 slot
- DC 11~32V Power input
- Front Panel IP65

1.2 Specifications

	APC-3229A	APC-3249A
System		
CPU	Intel 4th Gen Core i5-4402E 1.6GHz processor (Haswell) TPD 25W	
System Memory	2 x 204 Pin DDR3 SO-DIMM, default 4GB (one slot), up to 8GB 1066/1333MHz	
System Chipset	Intel QM87	
I/O port	<ul style="list-style-type: none"> ● 2 x DB9 RS-232/422/485 default RS-232 (COM1/COM2) ● 1 x DB9 RS-232 (COM3 for Option) ● 1 x VGA ● 1 x HDMI with Cover ● 2 x DisplayPort ● 2 x RJ45 GbE LAN ● 4 x USB 3.0 ● 1 x Mic-in, Line-Out ● 1 x 8 pin 3in/out/VCC/GND terminal block connector (for option) ● 1 x 3pin DC power connector ● 1 x Rocker switch for power on/off (for option) ● 2 x LED light for power and HDD indication 	
Storage	2 x 2.5" SATA HDD space (Easily Accessible storage design) Support RAID 0/1	
CD/DVD-R Device	1 x Slim DVDRW device for option	

	1 x External CF slot by TB-503 for option.	
OS Support	Windows XP embedded, Windows embedded standard 7, Windows 7 Pro for embedded, Windows 8	
LCD		
LCD Size/ Brand	21.5” AUO	24” AUO
Max. Resolution	1920x1080	1920x1080
Max. Color	16.7M	16.7M
Luminance (cd/m ²)	250	300
Contrast Ratio	3000 : 1	3000 : 1
View Angle	H178 / V178	H178/V178
Backlight Lifetime	30,000 hrs	50,000hrs
Touch Screen (Optional) - Resistive Type		
Interface	Default USB Optional RS-232	
Projected Capacitive Touch		
Interface	Default USB	
TS control Board	On board touch tail	
Power Supply		
Power Input	11~32V DC on board	
Mechanical		
Front Bezel	Panel mount Steel black/VESA mount 100x100	
Rear Panel	Steel black	
Environmental		
Operating Temperature	0~50 ° C	
Storage Temperature	-20~60 ° C	
Storage Humidity	10~90% @40℃ non-condensing	
Vibration	1G / 5 ~ 500Hz (Random) / Operation	
Shock	19G peak acceleration(11 msec. duration)/operation	
Certificate	Meet CE/FCC Class A	
Waterproof / Dustproof	Panel IP65	

APC-3XX9A User Manual



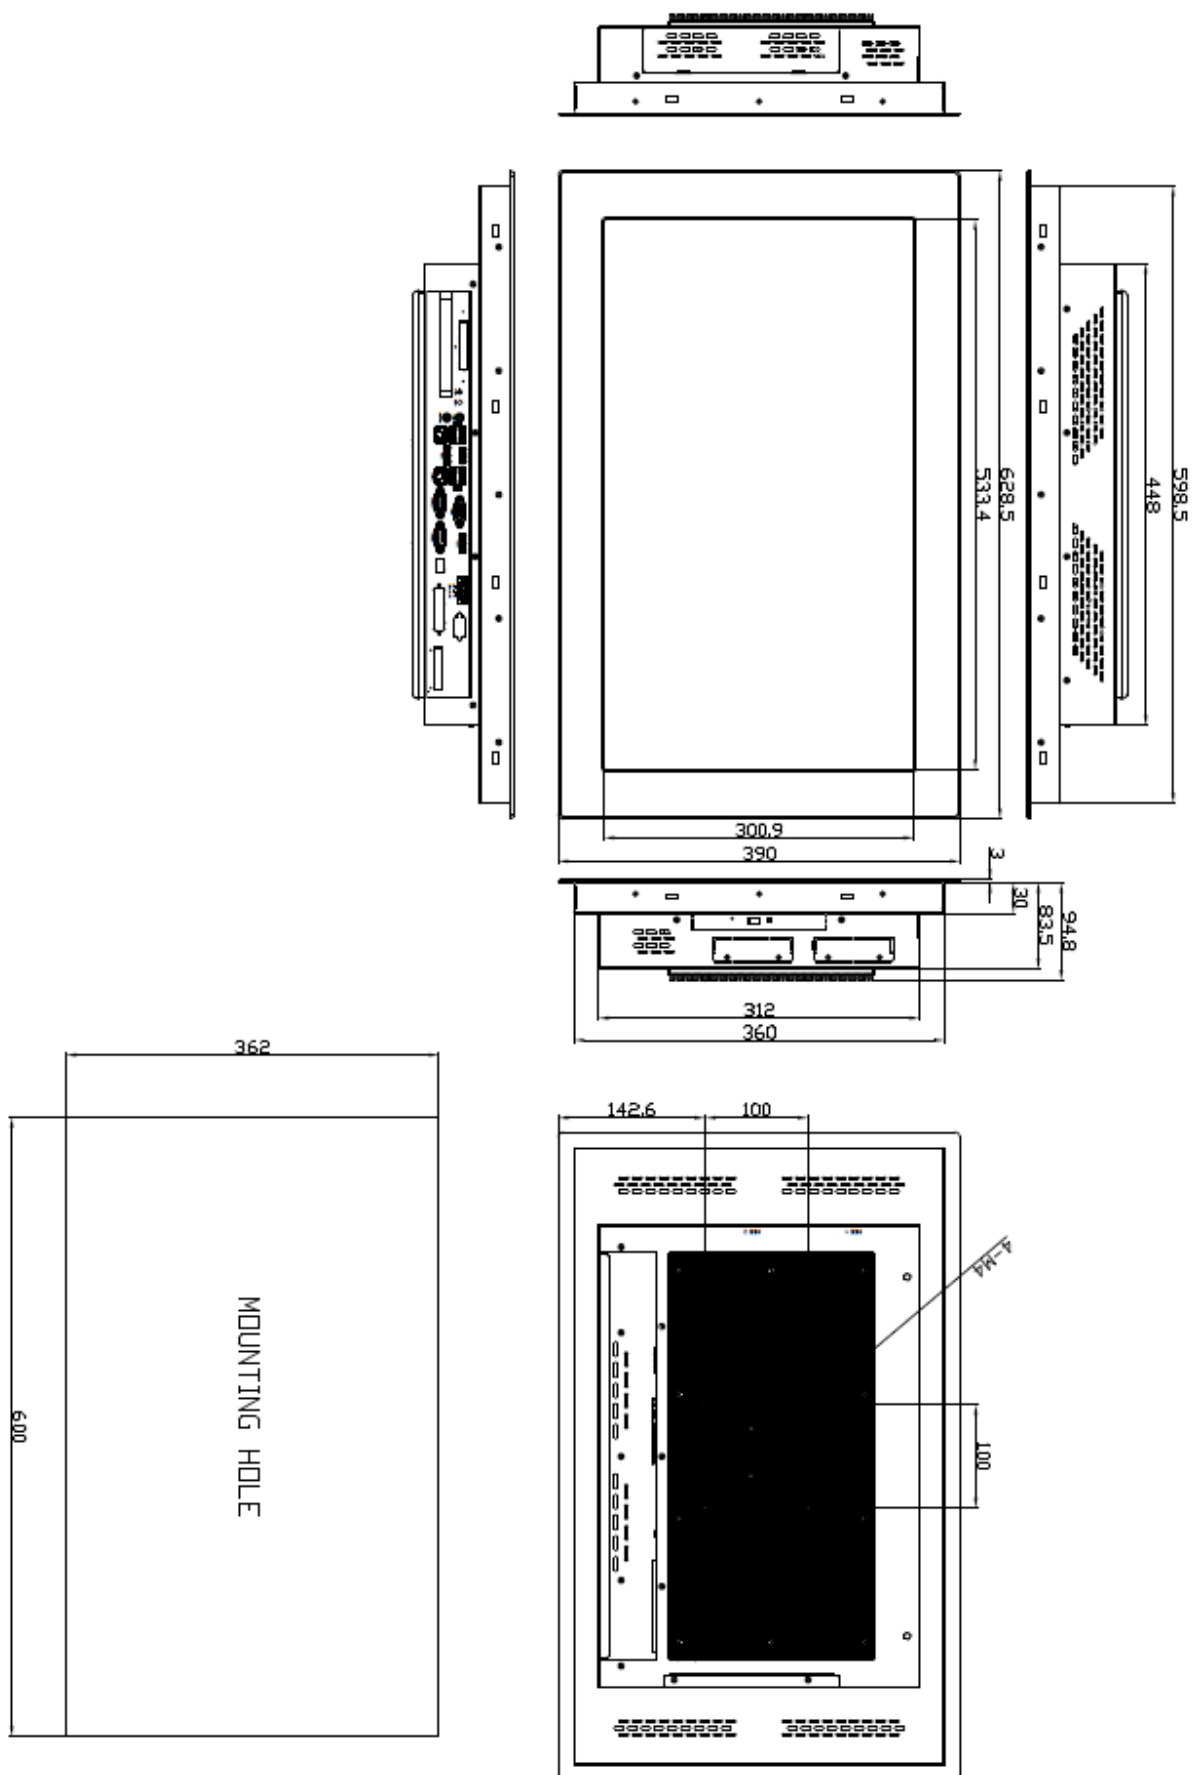


Figure 1.2: Dimensions of the APC-3249A

1.4 Installation of HDD


Step 1

There are 2 screws to deal with when Installing of HDD.



Step 2

Loosen screw and draw the HDD bracket out as shown in the picture.

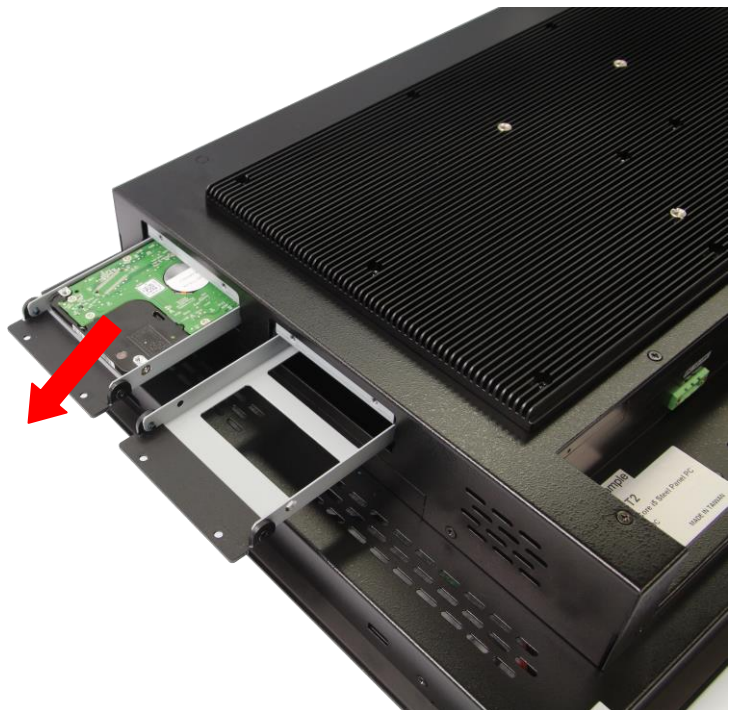

Step 3

Tighten four screws as shown in the picture



Step 4

Push into the HDD bracket as shown in the picture.



Step 5

Tighten the 2 screws as shown in the picture.



1.5 Installation of PCIe Add-on & CF

Step 1

There are 2 screws to deal with when enclosing or removing the chassis.




Step 2

Remove the storage cover.



Step 3

The PCIe slot is inside.

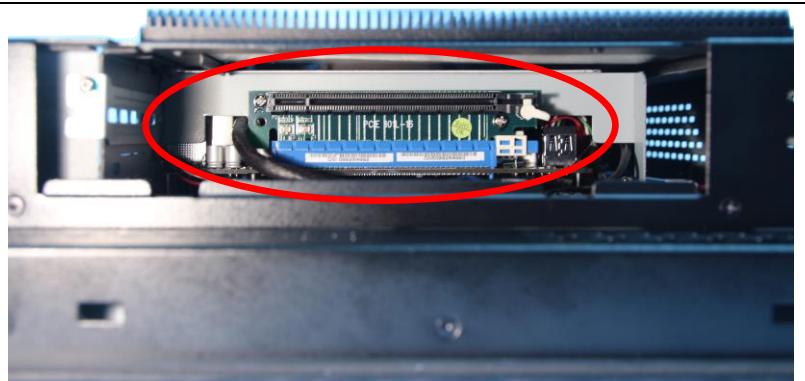


Step 4

Now slide the addon into the PCIe slot, making sure the golden part faces the slot. When the part that is interfaced together come into the right contact, slightly push the addon into the rail of the slot.



Step 5

After sliding the addon into the PCIe expansion slot, get the one screw as circled tightened to finish the connection.

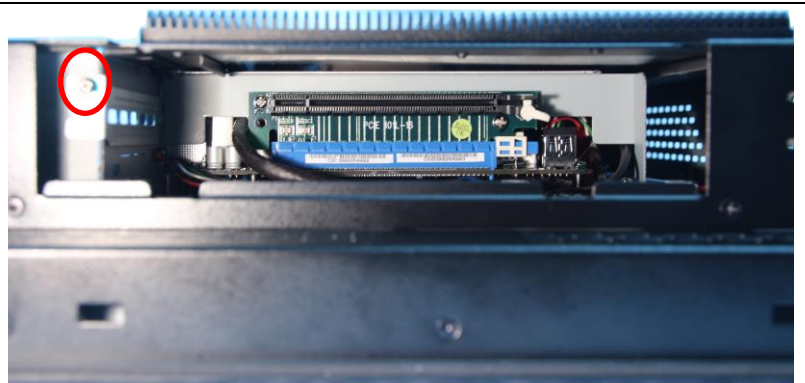

Step 6

To finish the job, just fasten the 2 screws as shown in the picture.



1.6 Brief Description of the APC-3XX9A

APC-3XX9A is a fanless and high-performance panel-mount industrial panel PC with 21.5"/24" TFT LCD. It is powered by an Intel 4th Gen Core i5-4402E 1.6GHz processor. The panel PC has a rich variety of functions and peripherals. It comes with two 2.5" SATA HDD space and one optional External CF slot by TB-503 for data storage, support 2 x 204-pin DDR3 SO-DIMM 1066/1333MHz, up to 8GB, support rich I/O, and also provide 1 x PCIe x 16 slot, it can ensure simplified connectivity to a variety of external peripheral devices. The OS supports Windows XP Embedded, Windows Embedded Standard 7, Windows 7 Pro for Embedded, Windows 8.



Figure 1.3: Front View of APC-3229A



Figure 1.4: Rear View of APC-3229A



Figure 1.5: Front View of APC-3249A




Figure 1.6: Rear View of APC-3249A

2.1 Mainboard Specifications

Form Factor	Dimensions	Mini-ITX (6.7-in x 6.7-in)
Processor System	CPU	Socket BGA 1364 for Intel® Core i7/i5/i3/mobile processor (Haswell)
	Core Number	(By CPU, Max 4)
	MAX Speed	(By CPU)
	L3 Cache	(By CPU)
	Chipset	QM87
	BIOS	UEFI
Expansion Slot	PCI	0
	Mini-PCIe	1 (Full size)
	mSATA 1 (Full size)	1 (Full size)
	PCIe	1 (x16) with Riser card extend to x8+x8 or x8+x4+x4
	CFast Card Socket	0
Memory	Technology	Dual Channel DDR3 1066/1333/1600 MHz SDRAM
	Max.	16GB
	Socket	2 x SO-DIMM
Graphics	Controller	Intel® HD Graphics (By CPU)
	VRAM	Shared Memory
	VGA	Supports max resolution 1920x1200
	LVDS	1
	HDMI	Supports HDMI 1.4a, max resolution 4096x2304
	DVI	No
	Display Port	Supports max resolution 3840x2160
	Multi Display	Yes (Three Display)
Ethernet	Ethernet	10/100/1000 Mbps
	Controller	GbE LAN1: Intel® I210, LAN2: Intel® I217LM (with v-Pro support)

	Connector	2 x RJ-45
SATA	Max Data Transfer Rate	SATA2 (3.0Gb/S), SATA3 (6.0Gb/S), Supports RAID 0/1/5/10
Rear I/O	VGA	1
	DVI	0
	HDMI	1
	Display Port	2
	Ethernet	2
	USB	4 x USB 3.0 compliant
	Audio	2 (Mic-In, Line-Out)
	Serial	2 (RS-232/422/485)
	PS/2	0
Internal Connector	USB	- 8 (4 x USB Header 2.54mm pitch) - 1 Vertical Type A USB Connector
	LVDS/ Inverter	24 bit dual channel LVDS
	VGA	0
	Serial	4 (RS-232)
	SATA	4 x SATA3 (6.0Gb/s), Support RAID 0/1/5/10
	mPCIe	1
	Parallel	1
	mSATA	1
	IrDA	0
	GPIO 8-bit	4 x GPI + 4 x GPO
	SATA PWR Output Con	1
	Speaker Header	0
Watchdog Timer	Output	Output from super I/O to drag RESETCON#
	Interval	256 Segments, 0,1,2...255 Sec/Min
Power Requireme	Input PWR	DC-in 11V~32V
	Power On	AT/ATX Supported -AT : Directly PWR on as power input ready -ATX : Press button to PWR on after power input ready
Environment	Temperature	0°C – 60°C


2.2 Jumpers and Headers Setting Guide

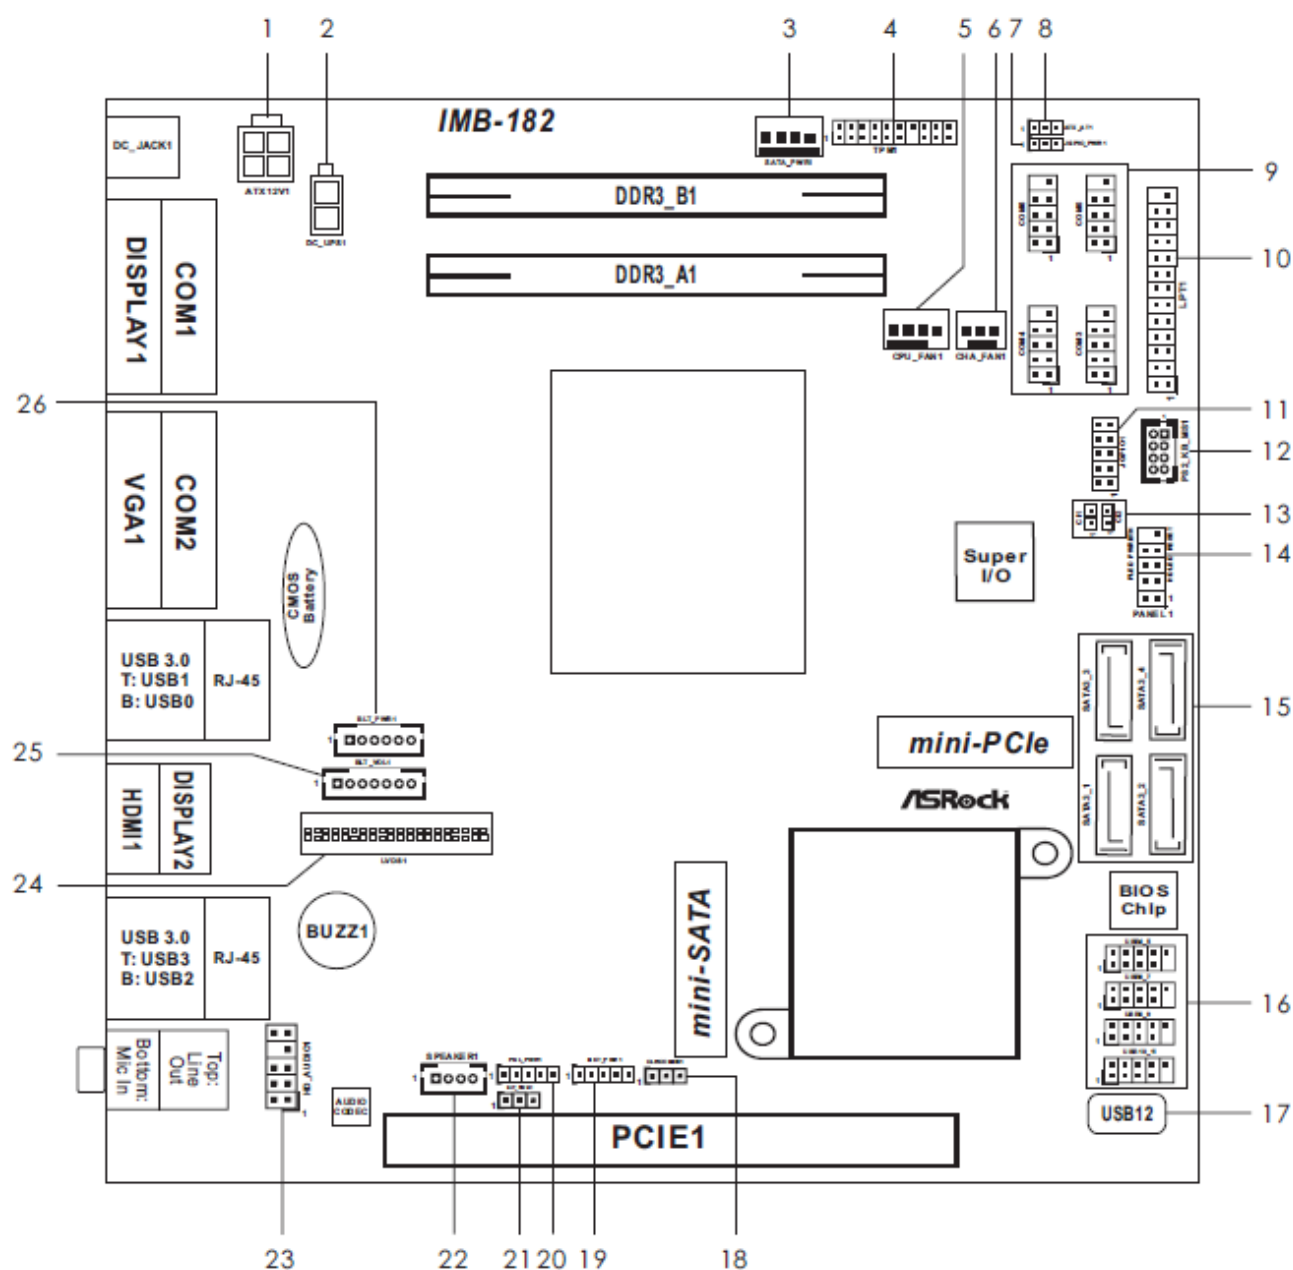

- | | | |
|--|--|--------------------------------|
| 1 : ATX Power Connector | 11 : Digital Input / Output Pin Header | 21 : BLT_PWM1 Header |
| 2 : 2-pin UPS Module Power Input Connector | 12 : PS2_KB_MS1 Header | 22 : 3W Audio AMP Output Wafer |
| 3 : SATA Power Output Connector | 13 : Chassis Intrusion Headers | 23 : Front Panel Audio Header |
| 4 : TPM Header | 14 : System Panel Header | 24 : LVDS Panel Connector |
| 5 : 4-Pin CPU FAN Connector | 15 : SATA3 Connectors | 25 : Backlight Volume Control |
| 6 : 3-Pin Chassis FAN Connector | 16 : USB2.0 Connectors | 26 : Backlight Power Connector |
| 7 : Digital Input / Output Power Select | 17 : USB2.0 Port (USB12) | |
| 8 : ATX/AT Mode Jumper | 18 : Clear CMOS Header | |
| 9 : COM3, 4, 5, 6 Headers (RS232) | 19 : BKT_PWR1 Header | |
| 10 : Printer Port Header | 20 : PNL_PWR1 Header | |

Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "Short". If no jumper cap is placed on pins, the jumper is "Open". The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when jumper cap is placed on these 2 pins.

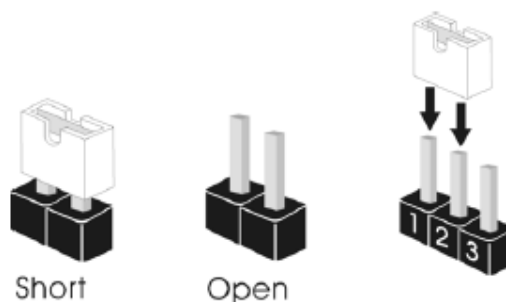

Jumper	Setting	Description
Clear CMOS Jumper (3-pin CLRCMOS1) No. 18	<div> <div>1_2</div> <div>Default</div> </div> <div> <div>2_3</div> <div>Clear CMOS</div> </div>	

Note: CLRCMOS1 allows you to clear the data in CMOS. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRCMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action. Please be noted that the password, date, time, user default profile and MAC address will be cleared only if the CMOS battery is removed.

Panel Power Selection

(5-pin PNL_PWR1)

No. 20



1-2 : LVDD: +3V

2-3 : LVDD: +5V

4-5 : LVDD: +12V

Backlight Power Selection

(5-pin BKT_PWR1)

No. 19



1-2: LCD_BLT_VCC: +5V


2-3: LCD_BLT_VCC: +12V

4-5: LCD_BLT_VCC: DC_IN

ATX/AT Mode Selection

(3-pin PWR_JP1)

No. 8




1-2 : AT Mode

2-3 : ATX Mode

BLT_PWM1

(3-pin BLT_PWM1)

No. 21




1-2 : +3V Level

2-3 : +5V Level

Digital Input / Output Power select

(3-pin JGPIO_PWR1)

No. 7



1-2 : +12V

2-3 : +5V

Onboard Headers and Connectors




Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

LVDS Panel Connector

(40-pin LVDS1)

No. 24

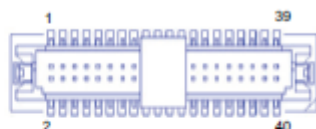


PIN	Signal Name	PIN	Signal Name
1	LVDD	2	LVDD
3	+3V	4	N/A
5	N/A	6	LVDS_A_DATA0#
7	LVDS_A_DATA0	8	GND1
9	LVDS_A_DATA1#	10	LVDS_A_DATA1
11	GND6	12	LVDS_A_DATA2#
13	LVDS_A_DATA2	14	GND2
15	LVDS_A_DATA3#	16	LVDS_A_DATA3
17	GND7	18	LVDS_A_CLK#
19	LVDS_A_CLK	20	GND3
21	LVDS_B_DATA0#	22	LVDS_B_DATA0
23	GND8	24	LVDS_B_DATA1#
25	LVDS_B_DATA1	26	GND4
27	LVDS_B_DATA2#	28	LVDS_B_DATA2
29	DPLVDD_EN	30	LVDS_B_DATA3#
31	LVDS_B_DATA3	32	GND5
33	LVDS_B_CLK#	34	LVDS_B_CLK
35	GND9	36	CON_LBKLT_EN_R
37	CON_LBKLT_CTR_R	38	LCD_BLT_VCC
39	LCD_BLT_VCC	40	LCD_BLT_VCC

Backlight Power Connector

(6-pin BLT_PWR1)

No. 26



PIN	Signal Name
1	GND
2	GND
3	BL CTL
4	BL EN
5	LCD_BLT_VCC
6	LCD_BLT_VCC

Backlight Volume Control

(7-pin BLT_VOL1)

No. 25




PIN	Signal Name
1	GPIO_VOL_UP
2	GPIO_VOL_DW
3	PWRDN
4	LVDS1 BLUP
5	LVDS1 BLDW
6	GND
7	GND

CPU Fan Connector

(4-pin CPU_FAN1)

No. 5

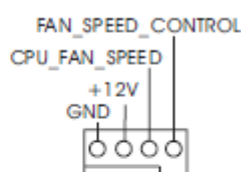

Please connect the CPU fan cable to the connector and match the black wire to the ground pin.



Though this motherboard provides 4-Pin CPU fan (Quiet Fan) support, the 3-Pin CPU fan still can work successfully even without the fan speed control function. If you plan to connect the 3-Pin CPU fan to the CPU fan connector on this motherboard, please connect it to Pin 1-3.

Pin 1-3 Connected


3-Pin Fan Installation



Chassis Fan Connector

(3-pin CHA_FAN1)

No. 6

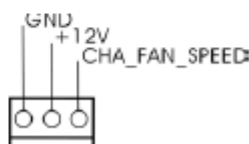


Please connect the fan cable to the fan connector and match the black wire to the ground pin.

COM3, 4, 5, 6 Headers (RS232)

9-pin COM3/COM4/COM5/COM6:

No. 9

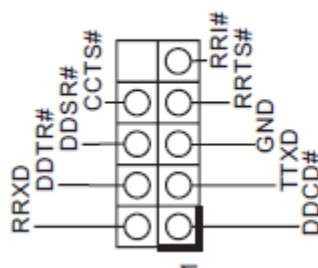

UPS Module Power Input Connector

(2-pin DC_UPS1)


No. 2



SATA Power Output Connector

(4-pin SATA_PWR1)


No. 3

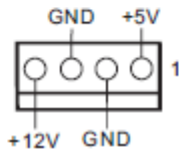

Digital Input / Output Pin Header

(10-pin JGPIO1)

No. 11

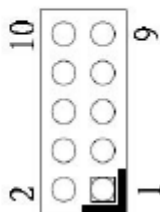


PIN	Signal Name	PIN	Signal Name
10	GND	9	JGPIO_PWR1
8	SIO_GP23	7	SIO_GP27
6	SIO_GP22	5	SIO_GP26
4	SIO_GP21	3	SIO_GP25
2	SIO_GP20	1	SIO_GP24

System Panel Header

(9-pin PANEL1)

No. 14

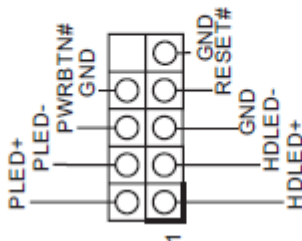

This header accommodates several system front panel functions.



Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):

Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED keeps blinking when the system is in S1/S3 sleep state. The LED is off when the system is in S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

SATA3 Connectors

SATA3_1/SATA3_2/SATA3_3/SATA3_4:

No. 15




These four Serial ATA3 (SATA3) connectors support SATA data cables for internal storage devices. The current SATA3 interface allows up to 6.0 Gb/s data transfer rate.

USB 2.0 Headers

9-pin USB4_5/USB6_7/USB8_9/USB10_11

No. 16

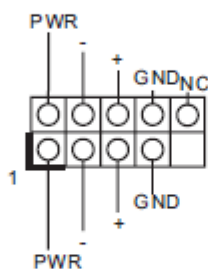


(USB12: No. 17)



There are four USB 2.0 headers and one port on this motherboard. Each USB 2.0 header can support two USB 2.0 ports.

Chassis Intrusion Headers

(2-pin CI1/CI2: No. 13)



This motherboard supports CASE OPEN detection feature that detects if the chassis cover has been removed. This feature requires a chassis with chassis intrusion detection design.

CI1:

Close: Active case open

Open: Normal

CI2:


Close: Normal

Open: Active case open

Front Panel Audio Header

(9-pin HD_AUDIO1)

No. 23

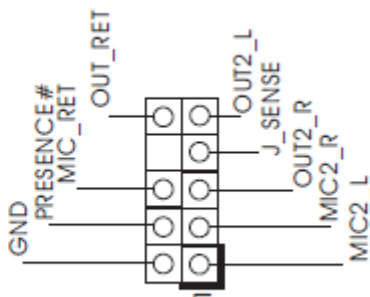

This is an interface for front panel audio cable that allows convenient connection and control of audio devices.

3W Audio Amp Output Wafer

(4-pin SPEAKER1)

No. 22



PIN	Signal Name
1	SPK R-
2	SPK R+
3	SPK L+
4	SPK L-

ATX Power Connector (Input 9V-19V)

(4-pin ATX12V1)

No. 1



Please connect an ATX 12V power supply to this connector.


1-2: GND

3-4: DC Input

TPM Header

(19-pin TPM1)

No. 4

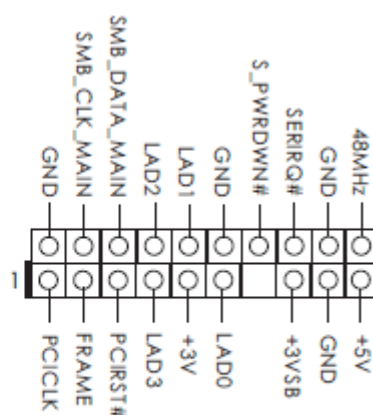

This connector supports a Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

PS2_KB_MS1

(8-pin PS2_KB_MS1)

No. 12




PIN	Signal Name
1	KBCLK
2	+5V
3	KBDATA
4	+5V
5	MSDATA
6	GND
7	MSCLK
8	GND

Print Port Header


(25-pin LPT1)

No. 10

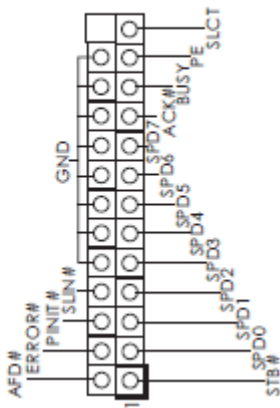

This is an interface for print port cable that allows convenient connection of printer devices.

2.3 I/O Panel

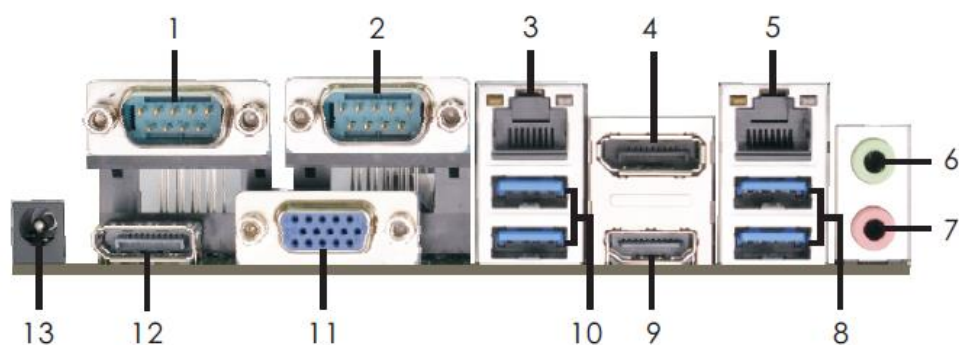

- | | | | |
|-----|-----------------------|----|------------------------|
| 1 | COM Port (COM1) | 8 | USB 3.0 Ports (USB_23) |
| 2 | COM Port (COM2) | 9 | HDMI Port (HDMI1) |
| * 3 | LAN RJ-45 Port (LAN1) | 10 | USB 3.0 Ports (USB_01) |
| 4 | DisplayPort (DP2) | 11 | VGA Port (VGA1) |
| * 5 | LAN RJ-45 Port (LAN2) | 12 | DisplayPort (DP1) |
| 6 | Line out (Lime) | 13 | DC Jack (DC_JACK1) |
| 7 | Microphone (Pink) | | |

* There are two LED next to the LAN port. Please refer to the table below for the LAN port LED indications.


LAN Port LED Indications

Activity/Link LED

Status	Description
Off	No Link
Blinking	Data Activity
On	Link

SPEED LED

Status	Description
Off	10Mbps connection
Orange	100Mbps connection
Green	1Gbps connection

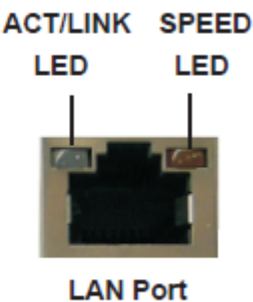

2.4 Installation

This is a Mini-ITX form factor (6.7" x 6.7", 17.0 x 17.0 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.4.1 Screw Holes

Place screws into the holes to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.4.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.4.3 Installation of Memory Modules (SO-DIMM)

This motherboard provides two 204-pin DDR3 (Double Data Rate 3) SO-DIMM slots.



It is not allowed to install a DDR or DDR2 memory module into DDR3 slot; otherwise, this motherboard and SO-DIMM may be damaged.


2.4.4 Installing a SO-DIMM



Please make sure to disconnect power supply before adding or removing SO-DIMMs or the system components.

Step 1. Unlock a SO-DIMM slot by pressing the retaining clips outward.

Step 2. Align a SO-DIMM on the slot such that the notch on the SO-DIMM matches the break on the slot.

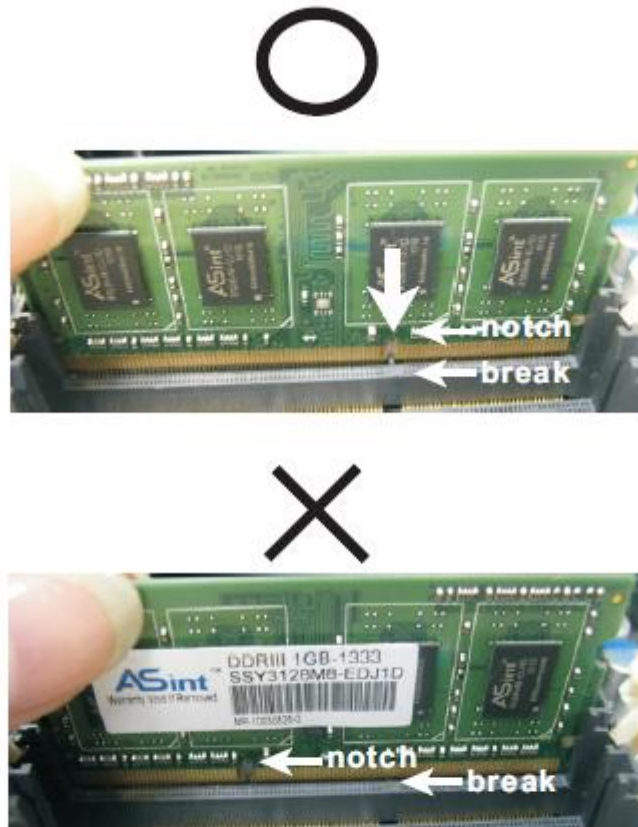

The SO-DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the SO-DIMM if you force the SO-DIMM into the slot at incorrect orientation.

Step 3. Firmly insert the SO-DIMM into the slot until the retaining clips at both ends fully snap back in place and the SO-DIMM is properly seated.

2.4.5 Expansion Slots (PCI Express, mini-PCIe and mini-SATA Slots)

There is 1 PCI Express slot, 1 mini-PCIe slot and 1 mini-SATA slot on this motherboard.

PCIE slot: PCIE1 (PCIE x16 slot; Blue) is used for PCI Express x16 lane width graphics cards.

A1

A82



B1

B82

Pin	Side B	Side A	Pin	Side B	Side A
1	+12V	PRSNT#	42	HSOP6	Ground
2	+12V	+12V	43	Ground	HSIP6
3	+12V	+12V	44	Ground	HSIP6
4	Ground	Ground	45	HSOP7	Ground
5	SMCLK	PCH_ECLK_X8	46	HSOP7	Ground
6	SMDAT	PCH_ECLK_X8#	47	Ground	HSIP7
7	Ground	PCH_ECLK_X4	48	PRSNT#3	HSIP7
8	+3.3V	PCH_ECLK_X4#	49	Ground	Ground
9	Reserved	+3.3V	50	HSOP8	Reserved
10	+3VSB	+3.3V	51	HSOP8	Ground
11	WAKE#	PCIE_RESET#	52	Ground	HSIP8
12	X8_PRSNT#	Ground	53	Ground	HSIP8
13	Ground	PCH_ECLK_X16	54	HSOP9	Ground
14	HSOP0	PCH_ECLK_X16#	55	HSOP9	Ground
15	HSOP0	Ground	56	Ground	HSIP9
16	Ground	HSIP0	57	Ground	HSIP9
17	PRSNT#1	HSIP0	58	HSOP10	Ground
18	Ground	Ground	59	HSOP10	Ground
19	HSOP1	Reserved	60	Ground	HSIP10
20	HSOP1	Ground	61	Ground	HSIP10
21	Ground	HSIP1	62	HSOP11	Ground
22	Ground	HSIP1	63	HSOP11	Ground
23	HSOP2	Ground	64	Ground	HSIP11
24	HSOP2	Ground	65	Ground	HSIP11
25	Ground	HSIP2	66	HSOP12	Ground
26	Ground	HSIP2	67	HSOP12	Ground
27	HSOP3	Ground	68	Ground	HSIP12
28	HSOP3	Ground	69	Ground	HSIP12
29	Ground	HSIP3	70	HSOP13	Ground
30	X4_PRSNT#	HSIP3	71	HSOP13	Ground
31	PRSNT#2	Ground	72	Ground	HSIP13
32	Ground	Reserved	73	Ground	HSIP13
33	HSOP4	Reserved	74	HSOP14	Ground
34	HSOP4	Ground	75	HSOP14	Ground
35	Ground	HSIP4	76	Ground	HSIP14
36	Ground	HSIP4	77	Ground	HSIP14
37	HSOP5	Ground	78	HSOP15	Ground
38	HSOP5	Ground	79	HSOP15	Ground
39	Ground	HSIP5	80	Ground	HSIP15
40	Ground	HSIP5	81	PRSNT#4	HSIP15
41	HSOP6	Ground	82	Reserved	Ground

mini-PCle slot:

MINI_PCIE1 (mini-PCle slot) is used for PCI Express mini cards.

mini-SATA slot:

MSATA1 (mini-SATA slot) is used for mSATA cards.

2.4.6 Installing an Expansion Card

Step 1. Before installing the expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.

Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).

Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.

Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.

Step 5. Fasten the card to the chassis with screws.

Step 6. Replace the system cover.

2.5 Driver Installation Guide

To install the drivers to your system, please insert the support CD to your optical drive first. Then, the drivers compatible to your system can be auto-detected and listed on the support CD driver page. Please follow the order from top to bottom to install those required drivers. Therefore, the drivers you install can work properly.

3.1 Introduction

This section explains how to use the UEFI Setup Utility to configure your system. The UEFI chip on the motherboard stores the UEFI Setup Utility. You may run the UEFI Setup Utility when you start up the computer. Please press <F2> or during the Power-On-Self-Test (POST) to enter the UEFI Setup Utility, otherwise, POST will continue with its test routines. If you wish to enter the UEFI Setup Utility after POST, restart the system by pressing <Ctrl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Main	To set up the system time/date information
Advanced	To set up the advanced UEFI features
H/W Monitor	To display current hardware status
Boot	To set up the default system device to locate and load the Operating System
Security	To set up the security features
Exit	To exit the current screen or the UEFI Setup Utility

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen. You can also use the mouse to click your required item.


3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Enter>	To bring up the selected screen
<F1>	To display the General Help Screen
<F7>	Discard changes
<F9>	To load optimal default values for all the settings
<F10>	To save changes and exit the UEFI SETUP UTILITY
<F12>	Print screen
<ESC>	To jump to the Exit Screen or exit the current screen


3.2 Main Screen

When you enter the UEFI Setup Utility, the Main screen will appear and display the system overview.

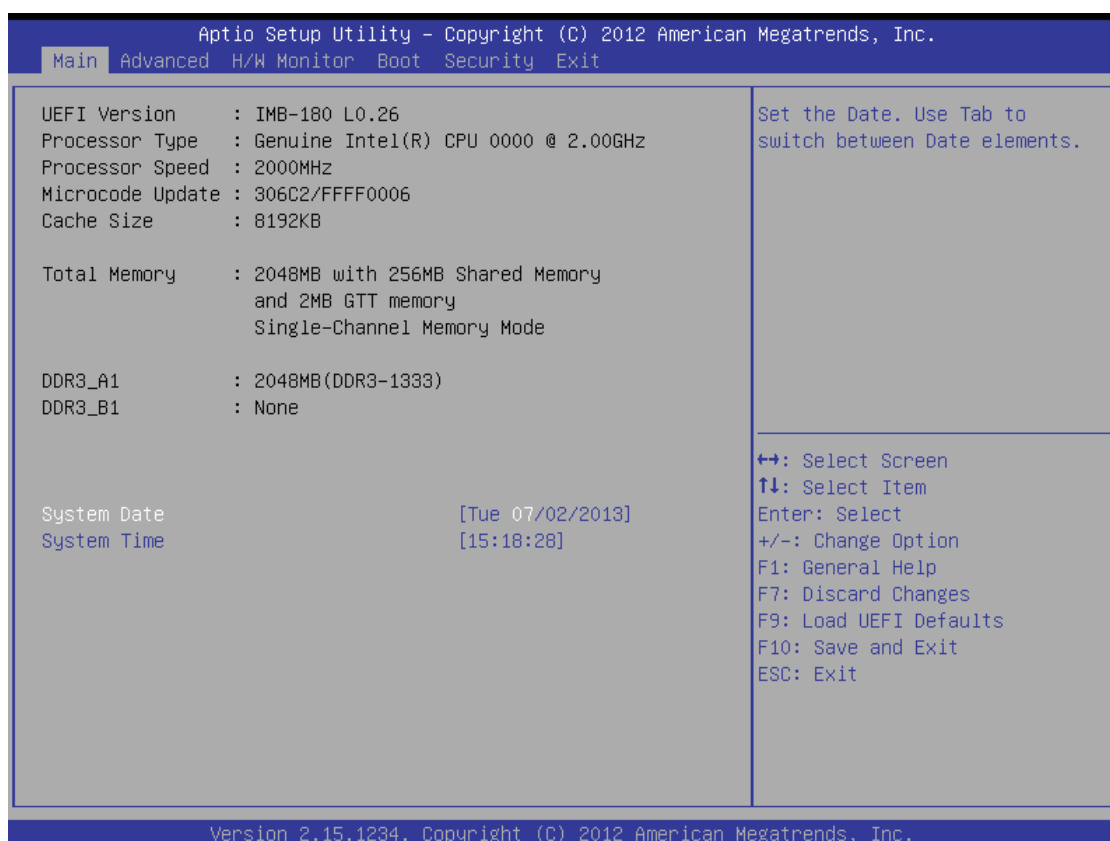

3.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, Storage Configuration, Intel(R) Rapid Start Technology, Intel(R) Smart Connect Technology, AMT Configuration, Super IO Configuration, ACPI Configuration, USB Configuration and Voltage Configuration.

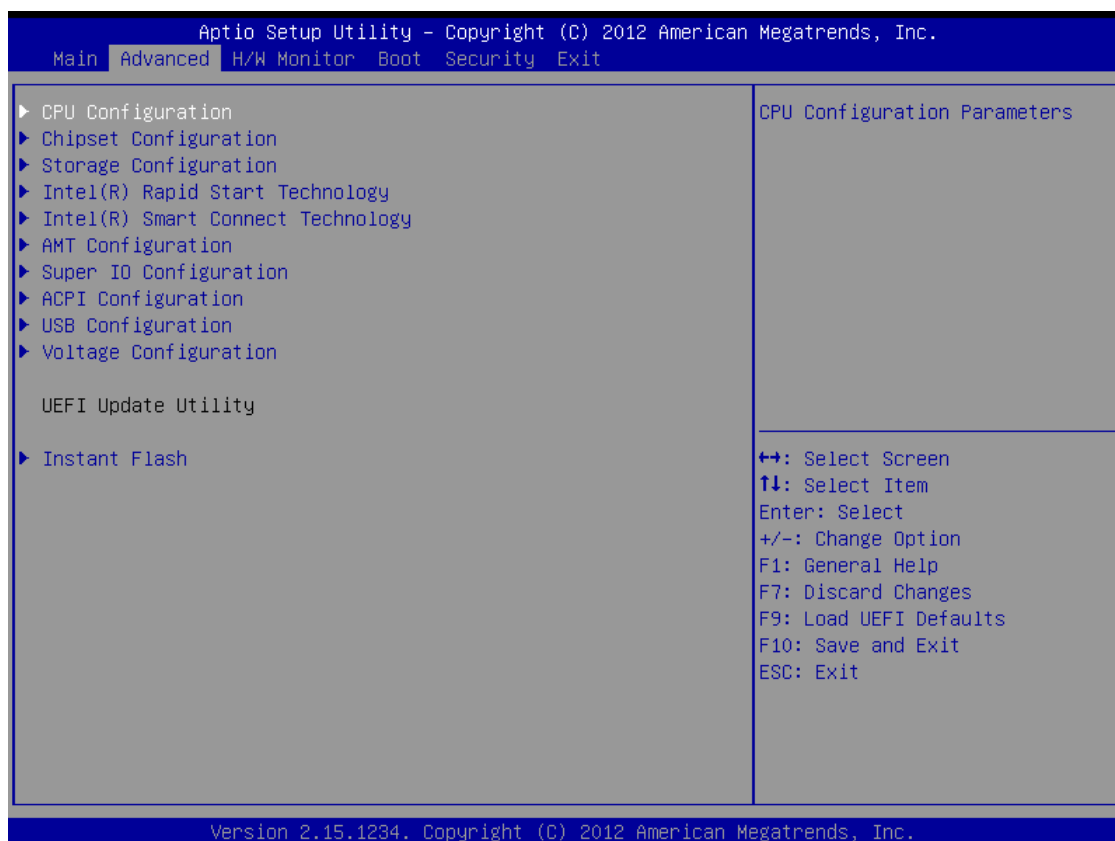


Setting wrong values in this section may cause the system to malfunction.

Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like MS-DOS or Windows®. Just launch this tool and save the new UEFI file to your USB flash drive, floppy disk or hard drive, then you can update your UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after UEFI update process completes.

3.3.1 CPU Configuration

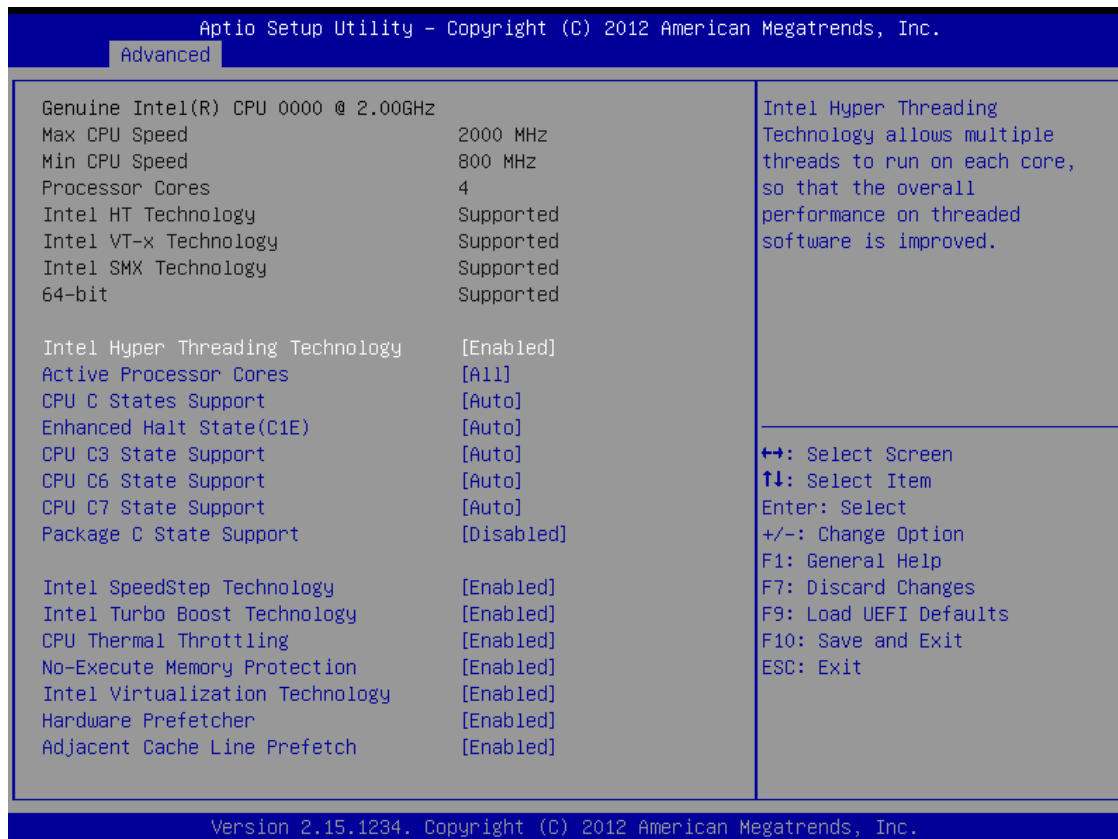

Intel Hyper Threading Technology

Intel Hyper Threading Technology allows multiple threads to run on each core, so that the overall performance on threaded software is improved.

Active Processor Cores

Select the number of cores to enable in each processor package.

CPU C States Support

Enable CPU C States Support for power saving. It is recommended to keep C3, C6 and C7 all enabled for better power saving.

Enhanced Halt State (C1E)

Enable Enhanced Halt State (C1E) for lower power consumption.

CPU C3 State Support

Enable C3 sleep state for lower power consumption.

CPU C6 State Support

Enable C6 deep sleep state for lower power consumption.

CPU C7 State Support

Enable C7 deep sleep state for lower power consumption.

Package C State Support

Enable CPU, PCIe, Memory, Graphics C State Support for power saving.

Intel SpeedStep Technology

Intel SpeedStep technology is Intel's new power saving technology. Processors can switch between multiple frequencies and voltage points to enable power saving. The default value is [Enabled]. Configuration options: [Enabled] and [Disabled]. If you install Windows® 7 / 8 and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel SpeedStep technology.



Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.

Intel Turbo Boost Technology

Use this item to enable or disable Intel Turbo Boost Mode Technology. Turbo Boost Mode allows processor cores to run faster than marked frequency in specific conditions. The default value is [Enabled].

CPU Thermal Throttling

You may select [Enabled] to enable CPU internal thermal control mechanism to keep the CPU from overheating.

No-Execute Memory Protection

No-Execution (NX) Memory Protection Technology is an enhancement to the IA-32 Intel Architecture. An IA-32 processor with “No Execute (NX) Memory Protection” can prevent data pages from being used by malicious software to execute codes. This option will be hidden if the current CPU does not support No-Excute Memory Protection.

Intel Virtualization Technology

When this option is set to [Enabled], a VMM (Virtual Machine Architecture) can utilize the additional hardware capabilities provided by Vanderpool Technology. This option will be hidden if the installed CPU does not support Intel Virtualization Technology.


Hardware Prefetcher

Use this item to turn on/off the MLC streamer prefetcher.

Adjacent Cache Line Prefetch

Use this item to turn on/off prefetching of adjacent cache lines.

3.3.2 Chipset Configuration

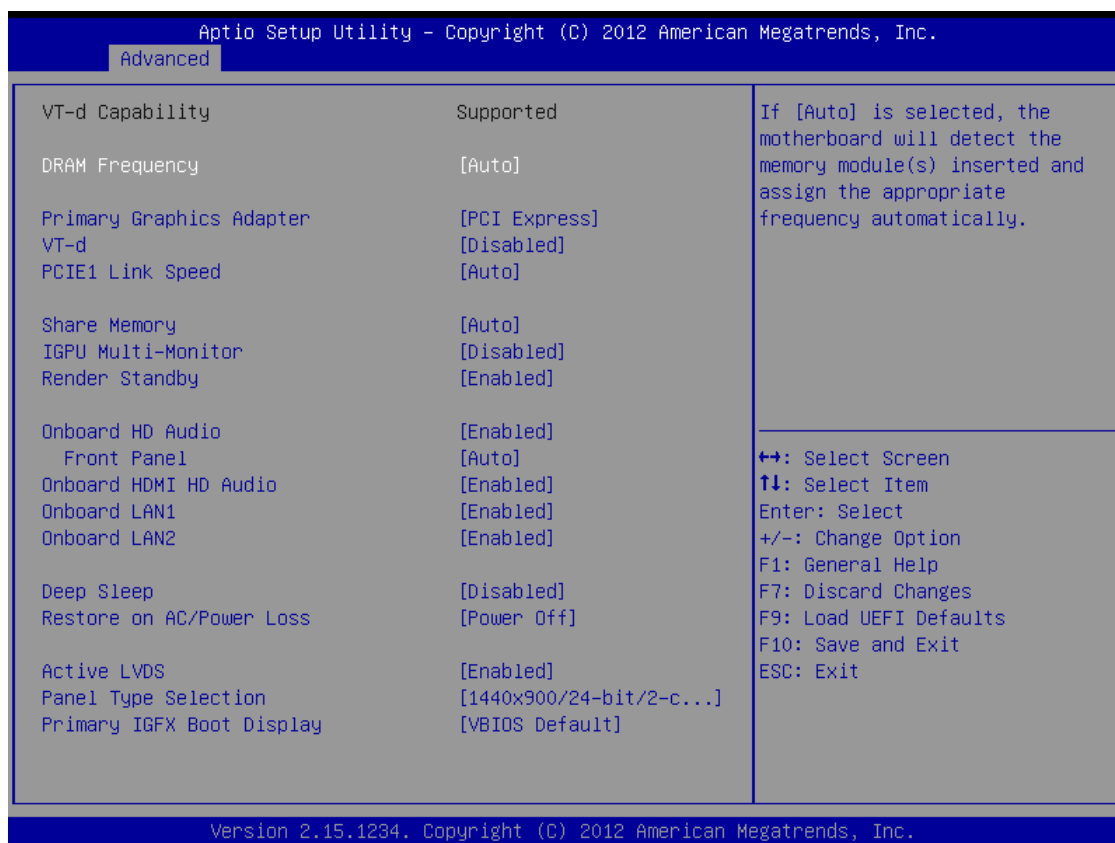

DRAM Frequency

If [Auto] is selected, the motherboard will detect the memory module(s) inserted and assign the appropriate frequency automatically.

Primary Graphics Adapter

This allows you to select [Onboard] or [PCI Express] as the boot graphic adapter priority. The default value is [PCI Express].

VT-d

Use this to enable or disable Intel® VT-d technology (Intel® Virtualization Technology for Directed I/O). The default value of this feature is [Disabled].

PCIe1 Link Speed

Select the link speed for PCIe1.

Share Memory

Configure the size of memory that is allocated to the integrated graphics processor when the system boots up.

IGPU Multi-Monitor

Select disable to disable the integrated graphics when an external graphics card is installed.
Select enable to keep the integrated graphics enabled at all times.

Render Standby

Use this to enable or disable Render Standby by Internal Graphics Device. The default value is [Enabled].

Onboard HD Audio

Select [Auto], [Enabled] or [Disabled] for the onboard HD Audio feature. If you select [Auto], the onboard HD Audio will be disabled when PCIe Sound Card is plugged.

Front Panel

Select [Auto] or [Disabled] for the onboard HD Audio Front Panel.

Onboard HDMI HD Audio

This allows you to enable or disable the Onboard HDMI HD Audio feature.

Onboard LAN1

This allows you to enable or disable the Onboard LAN1 feature.

Onboard LAN2

This allows you to enable or disable the Onboard LAN2 feature.

Deep Sleep

Mobile platforms support Deep S4/S5 in DC only and desktop platforms support Deep S4/S5 in AC only. The default value is [Disabled].

Restore on AC/Power Loss

This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers.

Active LVDS

Use this to enable or disable the LVDS. The default value is [Enabled].


Panel Type Selection

Use this to select panel type.

Primary IGFX Boot Display

Select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display. Configuration options: [VBIOS Default], [CRT], [DVI], [HDMI] and [LVDS]. The default value is [VBIOS Default].

3.3.3 Storage Configuration

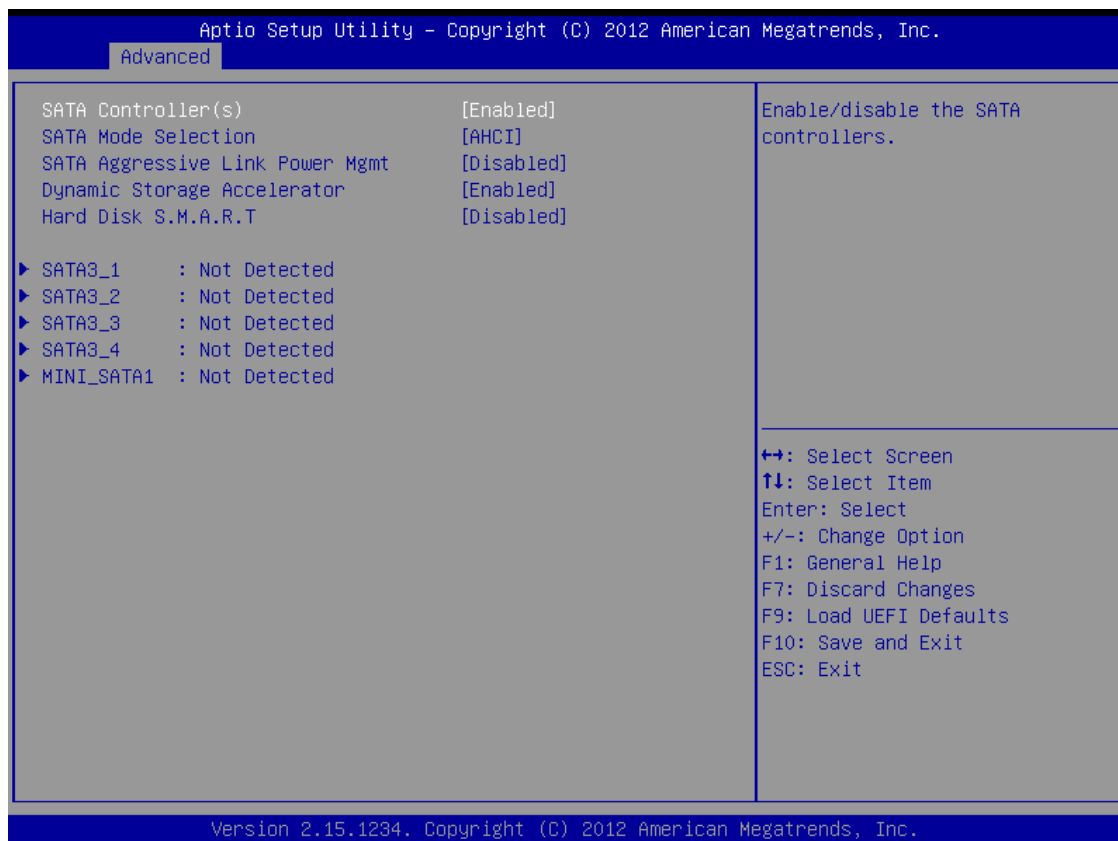

SATA Controller(s)

Use this item to enable or disable the SATA Controller feature.

SATA Mode Selection

Use this to select SATA mode. Configuration options: [IDE Mode], [AHCI Mode] and [RAID Mode]. The default value is [AHCI Mode].



AHCI (Advanced Host Controller Interface) supports NCQ and other new features that will improve SATA disk performance but IDE mode does not have these advantages.

SATA Aggressive Link Power Management

Use this item to configure SATA Aggressive Link Power Management.

Dynamic Storage Accelerator

Keep this option enabled for higher HDD and SSD I/O performance, lower latency and increased system responsiveness.

Hard Disk S.M.A.R.T.

Use this item to enable or disable the S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) feature. Configuration options: [Disabled] and [Enabled].


3.3.4 Intel(R) Rapid Start Technology



Intel(R) Rapid Start Technology

Use this item to enable or disable Intel(R) Rapid Start Technology. Intel(R) Rapid Start Technology is a new zero power hibernation mode which allows users to resume in just 5-6 seconds. The default is [Disabled].


3.3.5 Intel(R) Smart Connect Technology

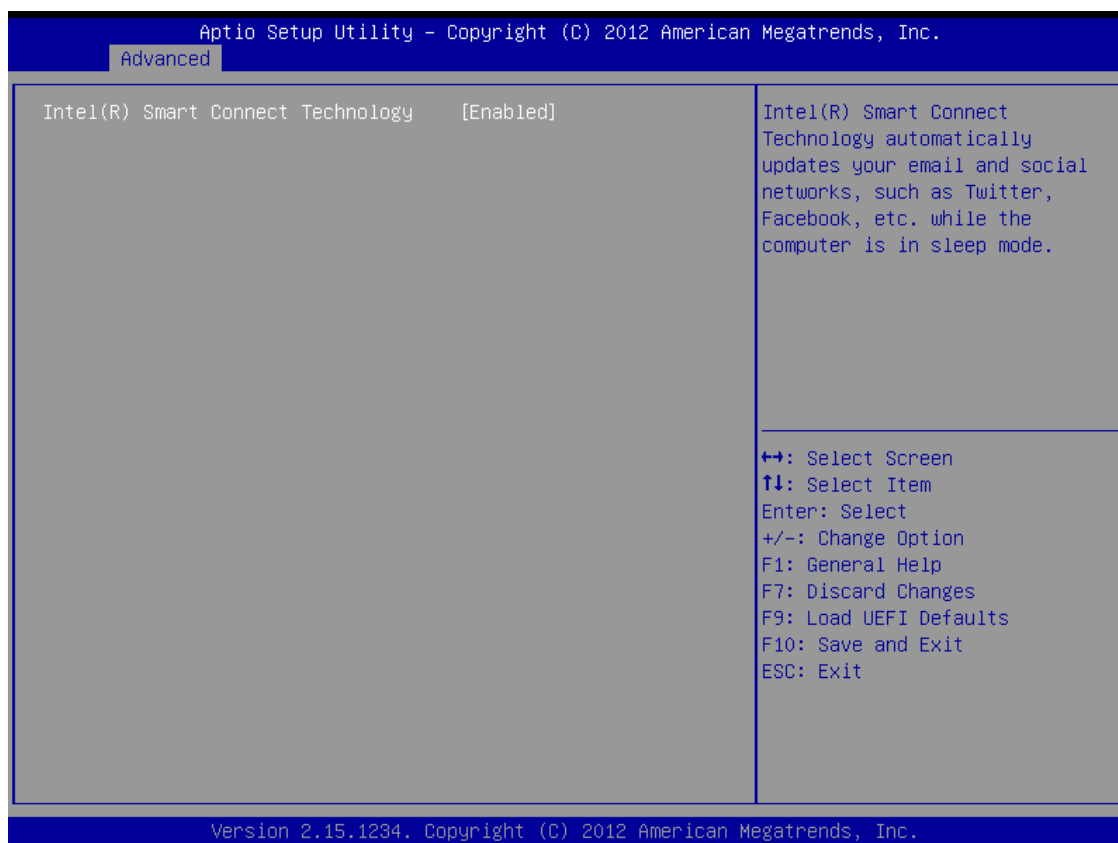

Intel(R) Smart Connect Technology

Use this item to enable or disable Intel(R) Smart Connect Technology. Intel(R) Smart Connect Technology keeps your e-mail and social networks, such as Twitter, Facebook, etc. updated automatically while the computer is in sleep mode. The default is [Enabled].

3.3.6 AMT Technology

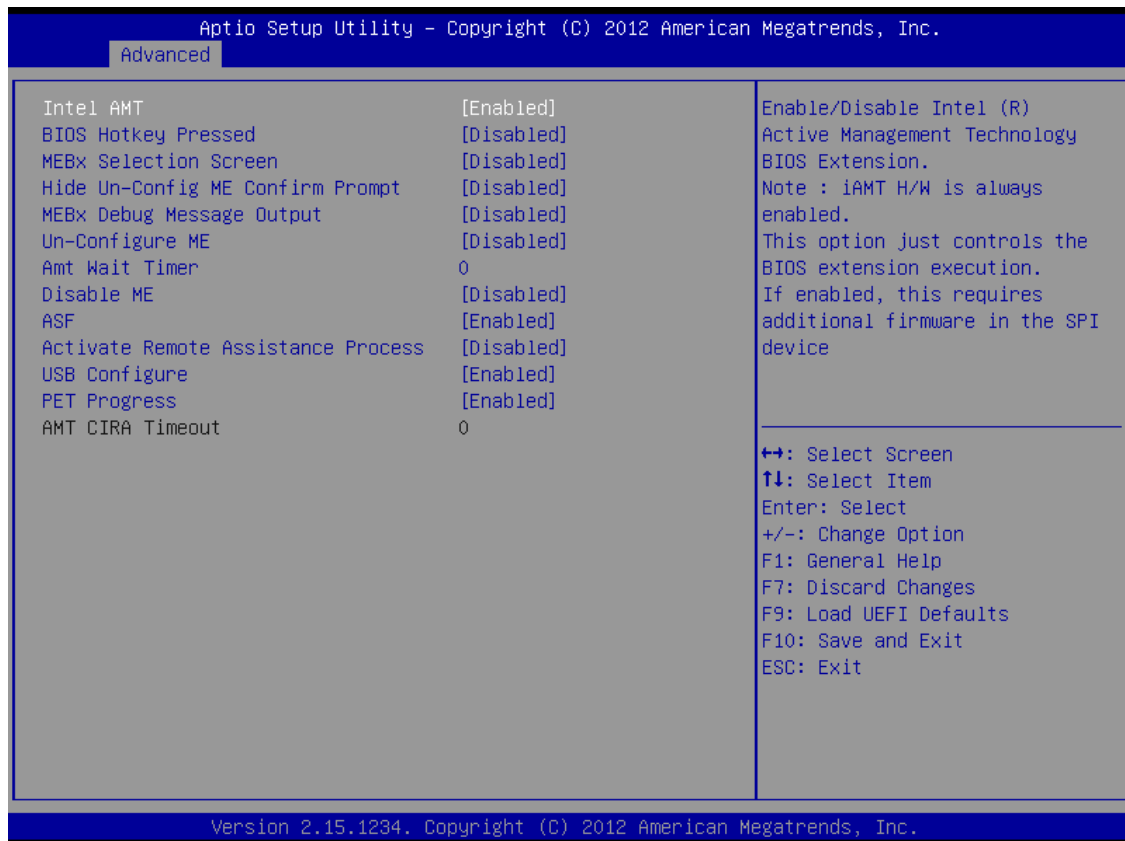

Intel AMT

Use this to enable or disable Intel(R) Active Management Technology BIOS Extension. The default is [Enabled].

BIOS Hotkey Pressed

Use this to enable or disable BIOS hotkey press. The default is [Disabled].

MEBx Selection Screen

Use this to enable or disable MEBx Selection Screen. The default is [Disabled].

Hide Un-Configure ME Confirmation

Hide Un-Configure ME without password confirmation prompt. The default is [Disabled].

MEBx Debug Message Output

Use this to enable or disable MEBx Debug Message Output. The default is [Disabled].

Un-Configure ME

Un-Configure ME without password. The default is [Disabled].

Amt Wait Timer

Set timer to wait before sending ASF_GET_BOOT_OPTIONS.

Disable ME

Set ME to Soft Temporary Disabled. The default is [Disabled].

ASF

Use this to enable or disable Alert Specification Format. The default is [Enabled].

Activate Remote Assistance Process

Trigger CIRA boot. The default is [Disabled].


USB Configure

Use this to enable or disable USB Configure function. The default is [Enabled].

PET Progress

User can enable or disable PET Events progress to receive PET events or not. The default is [Enabled].

3.3.7 Super IO Configuration

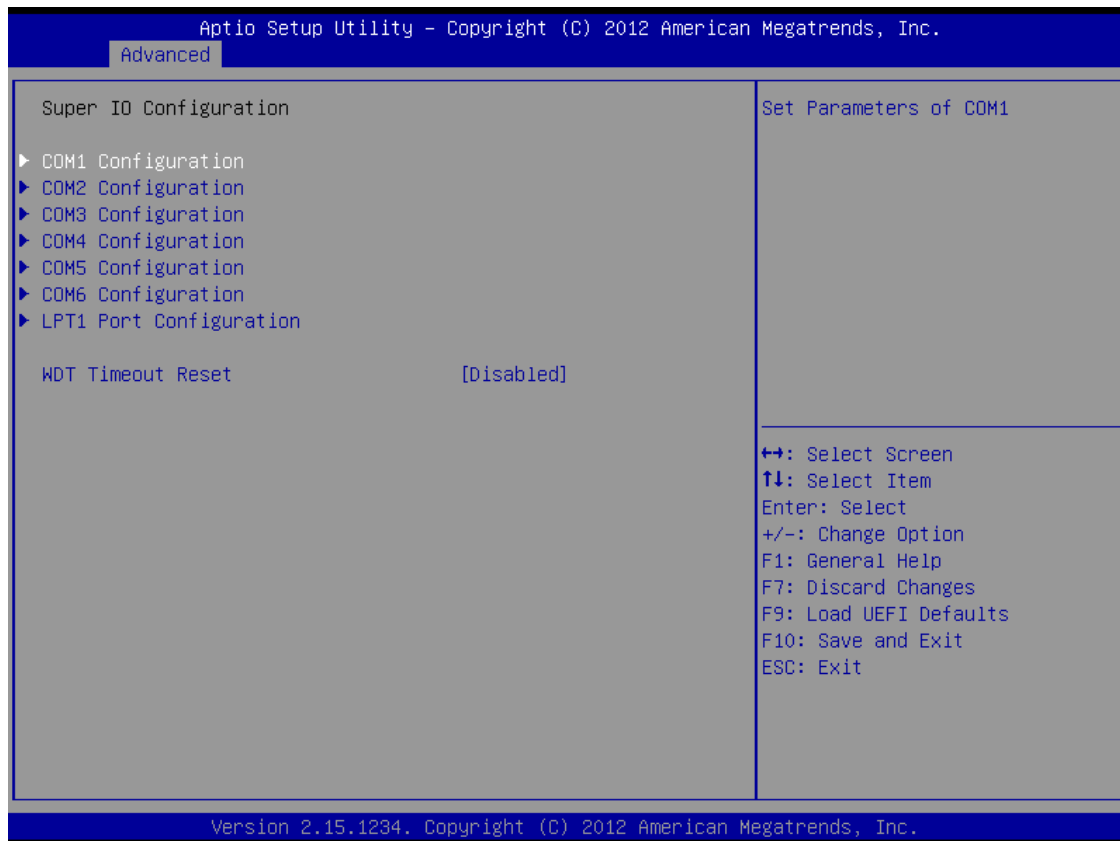

COM1 Configuration

Use this to set parameters of COM1.

COM2 Configuration

Use this to set parameters of COM2.

COM3 Configuration

Use this to set parameters of COM3.

COM4 Configuration

Use this to set parameters of COM4.

COM5 Configuration

Use this to set parameters of COM5.

COM6 Configuration

Use this to set parameters of COM6.


LPT1 Port Configuration

Use this set parameters of the onboard parallel port.

WDT Timeout Reset

This allows users to enable/disable the Watch Dog Timer timeout to reset system. The default value is [Disabled].

3.3.8 ACPI Configuration

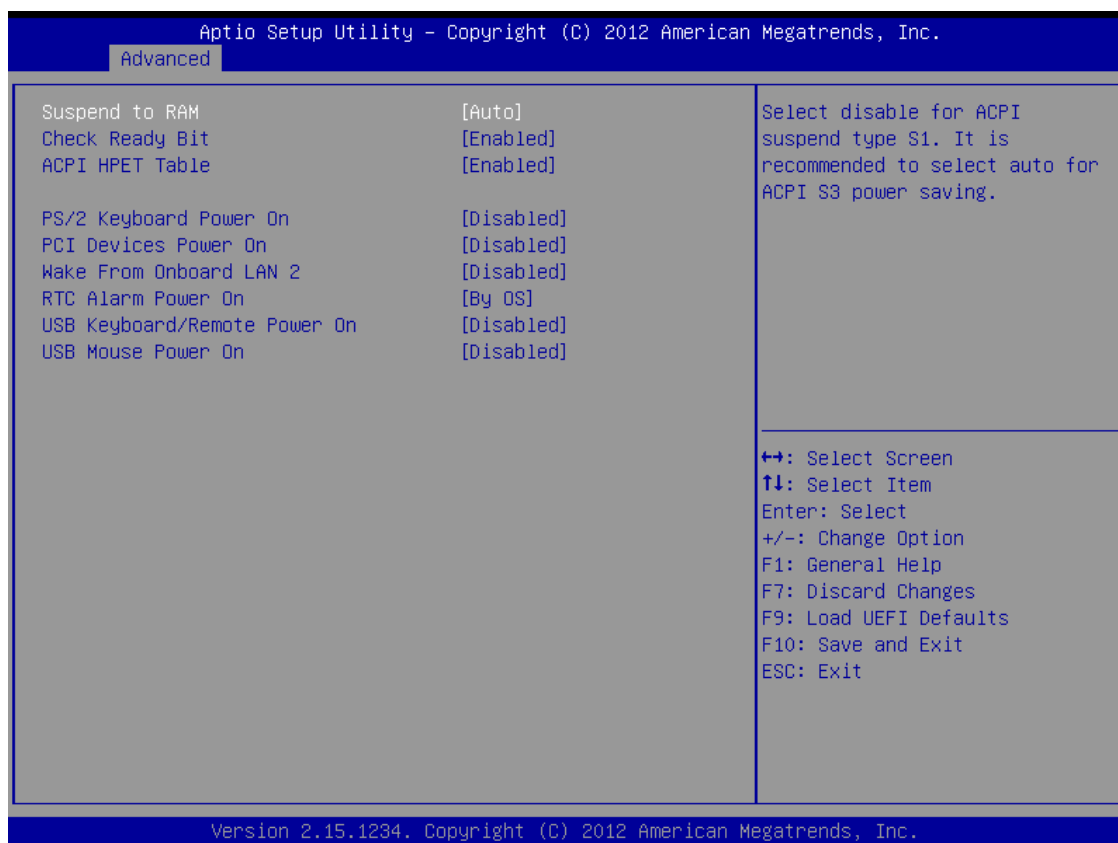

Suspend to RAM

Use this item to select whether to auto-detect or disable the Suspend-to-RAM feature. Select [Auto] will enable this feature if the OS supports it.

Check Ready Bit

Use this item to enable or disable the feature Check Ready Bit.

ACPI HPET Table

Use this item to enable or disable ACPI HPET Table. The default value is [Enabled]. Please set this option to [Enabled] if you plan to use this motherboard to submit Windows® certification.

PS/2 Keyboard Power On

Use this item to enable or disable PS/2 keyboard to turn on the system from the power-soft-off mode.

PCIe Devices Power On

Use this item to enable or disable PCIe devices to turn on the system from the power-soft-off mode.

Wake From Onboard LAN 2

Use this item to enable or disable the Wake From Onboard LAN 2 feature.

RTC Alarm Power On

Use this item to enable or disable RTC (Real Time Clock) to power on the system.

USB Keyboard/Remote Power On

Use this item to enable or disable USB Keyboard/Remote to power on the system.

USB Mouse Power On

Use this item to enable or disable USB Mouse to power on the system.

3.3.9 USB Configuration



USB Controller

Use this item to enable or disable the use of USB controller.

Intel USB 3.0 Mode

Use this item to enable or disable the use of Intel USB 3.0 mode.

Legacy USB Support

Use this option to select legacy support for USB devices. There are four configuration options: [Enabled], [Auto], [Disabled] and [UEFI Setup Only]. The default value is [Enabled]. Please refer to below descriptions for the details of these four options:

[Enabled] - Enables support for legacy USB.

[Auto] - Enables legacy support if USB devices are connected.


[Disabled] - USB devices are not allowed to use under legacy OS and UEFI setup when [Disabled] is selected. If you have USB compatibility issues, it is recommended to select [Disabled] to enter OS.

[UEFI Setup Only] - USB devices are allowed to use only under UEFI setup and Windows / Linux OS.

Legacy USB 3.0 Support

Use this option to enable or disable legacy support for USB 3.0 devices. The default value is [Enabled].

3.3.10 Voltage Configuration

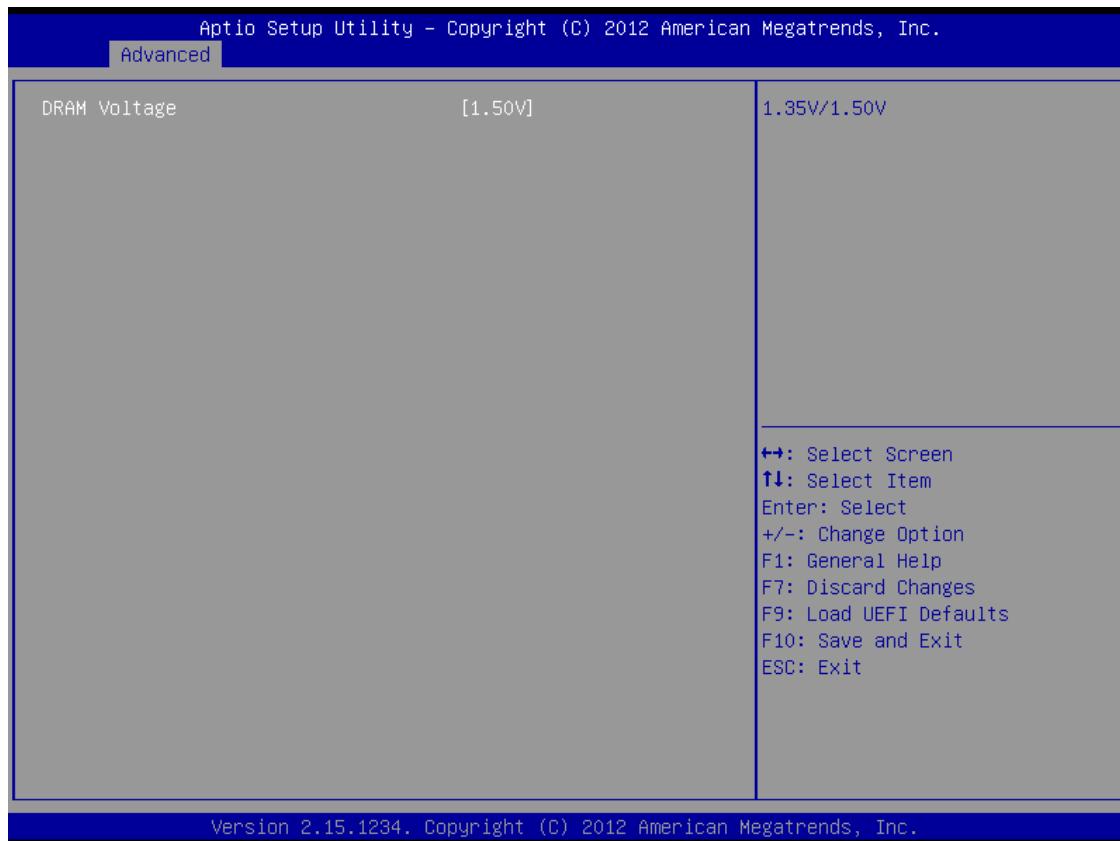


DRAM Voltage

Use this to select DRAM Voltage. The default value is [Auto].

3.4 Hardware Health Event Monitoring Screen

In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

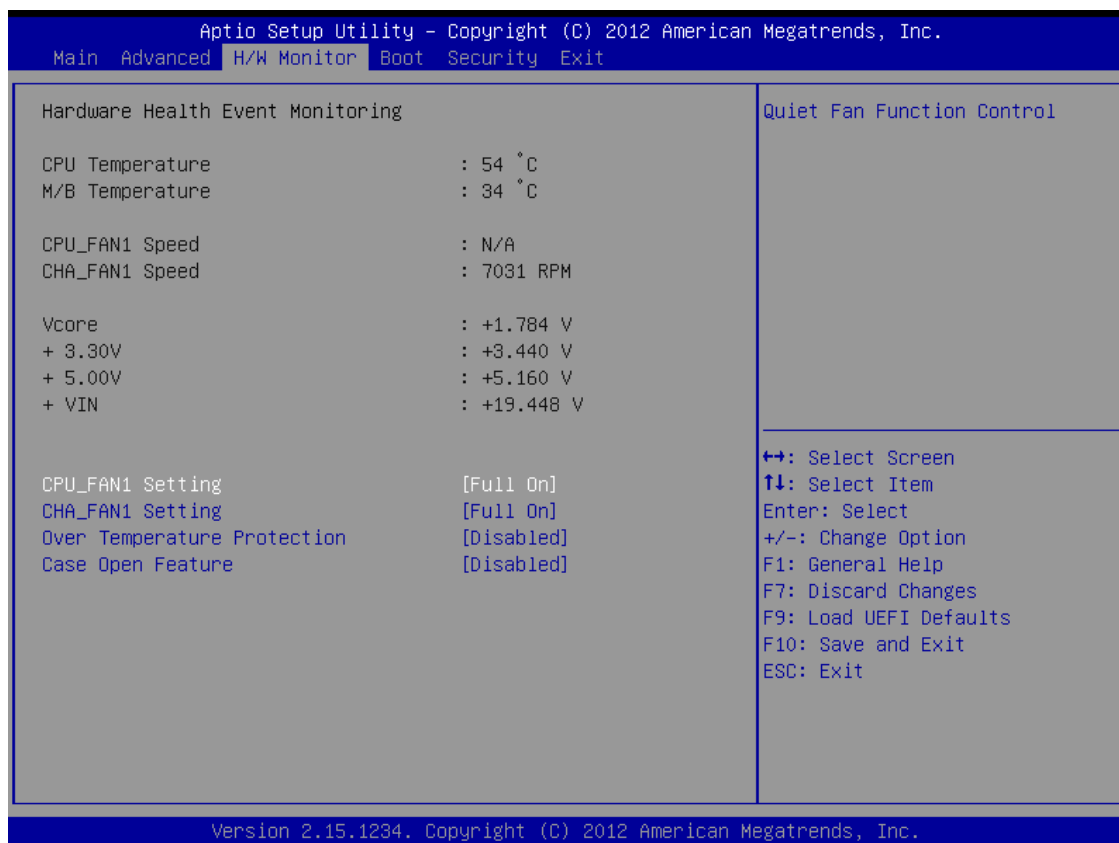

CPU_FAN1 Setting

This allows you to set CPU fan 1's speed. Configuration options: [Full On] and [Automatic Mode]. The default value is [Full On].

CHA_FAN1 Setting

This allows you to set chassis fan 1's speed. Configuration options: [Full On] and [Automatic Mode]. The default value is [Full On].

Over Temperature Protection

Use this to enable or disable Over Temperature Protection. The default value is [Enabled].

Case Open Feature


This allows you to enable or disable case open detection feature. The default is value [Disabled].

Clear Status

This option appears only when the case open has been detected. Use this option to keep or clear the record of previous chassis intrusion status.

3.5 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.

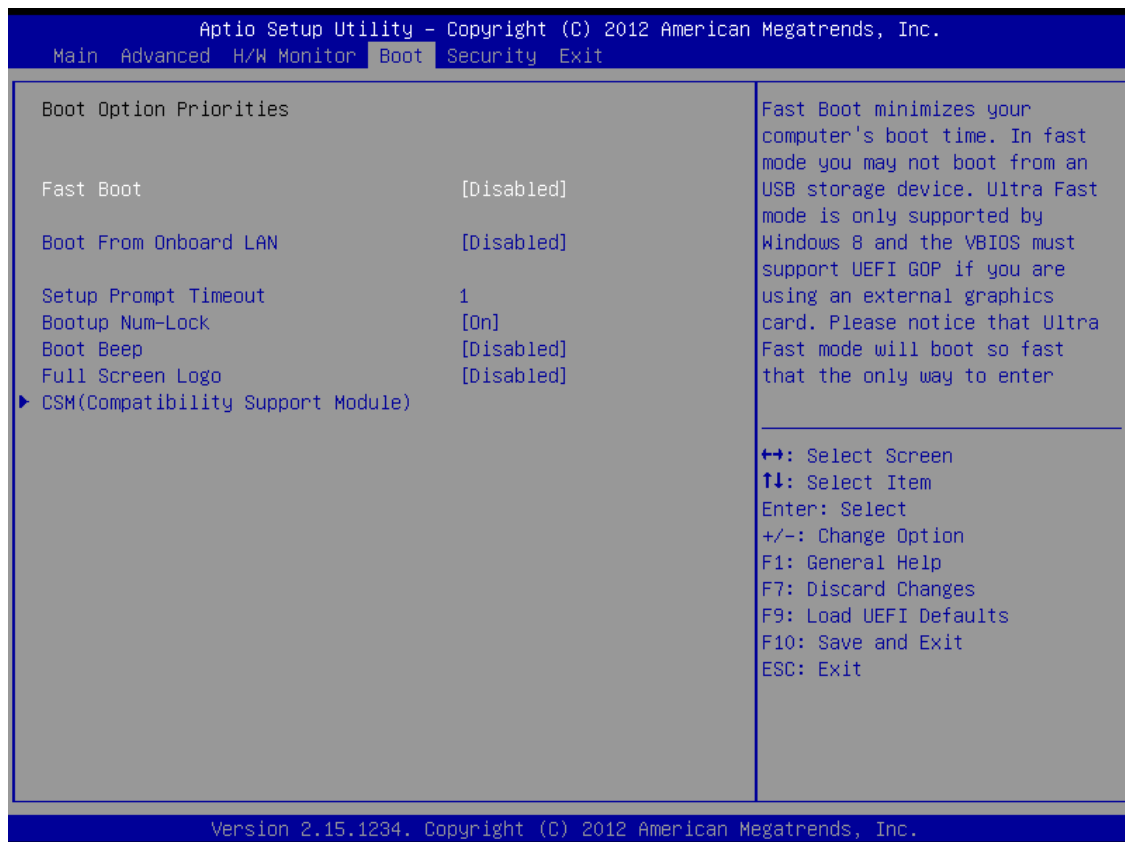

Fast Boot

Fast Boot minimizes your computer's boot time. There are three configuration options: [Disabled], [Fast] and [Ultra Fast]. The default value is [Disabled]. Please refer to below descriptions for the details of these three options:

[Disabled] - Disable Fast Boot.

[Fast] - The only restriction is you may not boot by using an USB flash drive.

[Ultra Fast] - There are a few restrictions.

1. Only supports Windows® 8 UEFI operating system.
2. You will not be able to enter BIOS Setup (Clear CMOS or run utility in Widows® to enter BIOS Setup).
3. If you are using an external graphics card, the VBIOS must support UEFI GOP in order to boot.

Boot From Onboard LAN

Use this item to enable or disable the Boot From Onboard LAN feature.

Setup Prompt Timeout

This shows the number of seconds to wait for setup activation key. 65535(0XFFFF) means indefinite waiting.

Bootup Num-Lock

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

Boot Beep

Select whether the Boot Beep should be turned on or off when the system boots up. Please note that a buzzer is needed.

Full Screen Logo


Use this item to enable or disable OEM Logo. The default value is [Enabled].

AddOn ROM Display

Use this option to adjust AddOn ROM Display. If you enable the option “Full Screen Logo”, but you want to see the AddOn ROM information when the system boots, then please select [Enabled]. Configuration options: [Enabled] and [Disabled]. The default value is [Enabled].


CSM

Please disable CSM when you enable Fast Boot option. The default value is [Enabled].

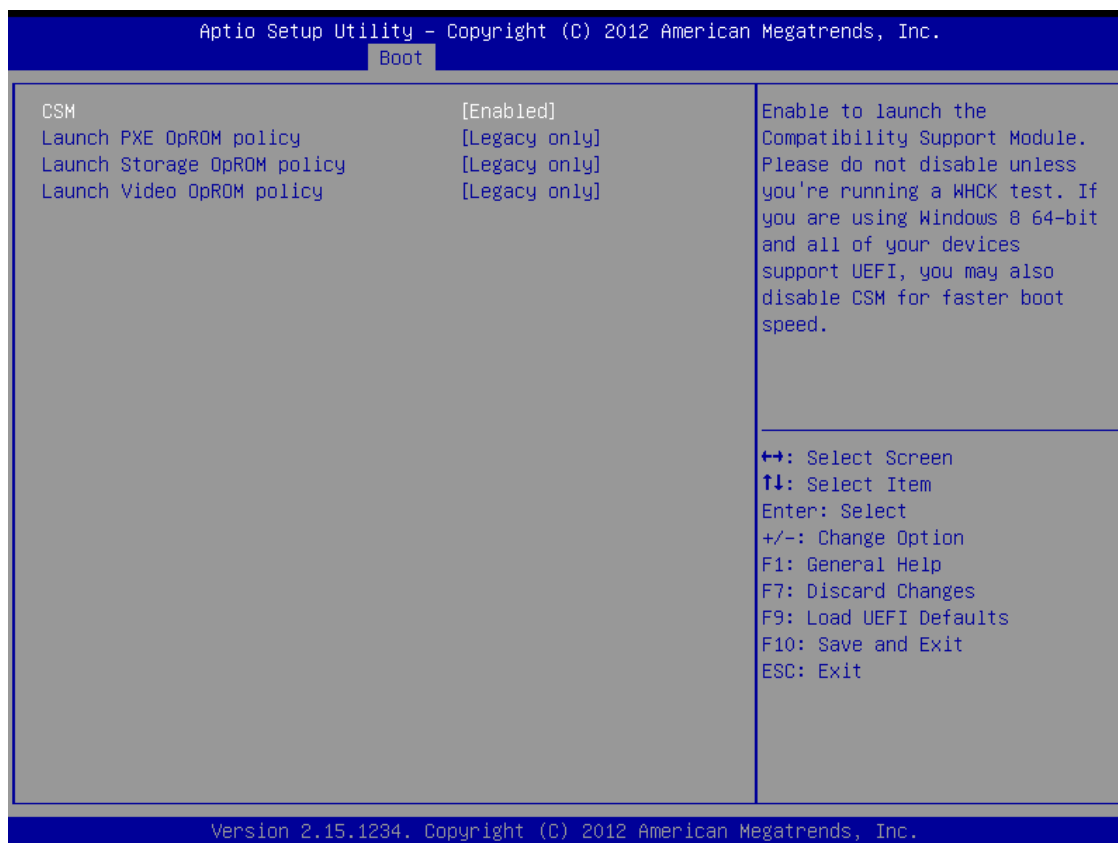

3.6 Security Screen

In this section, you may set, change or clear the supervisor/user password for the system.

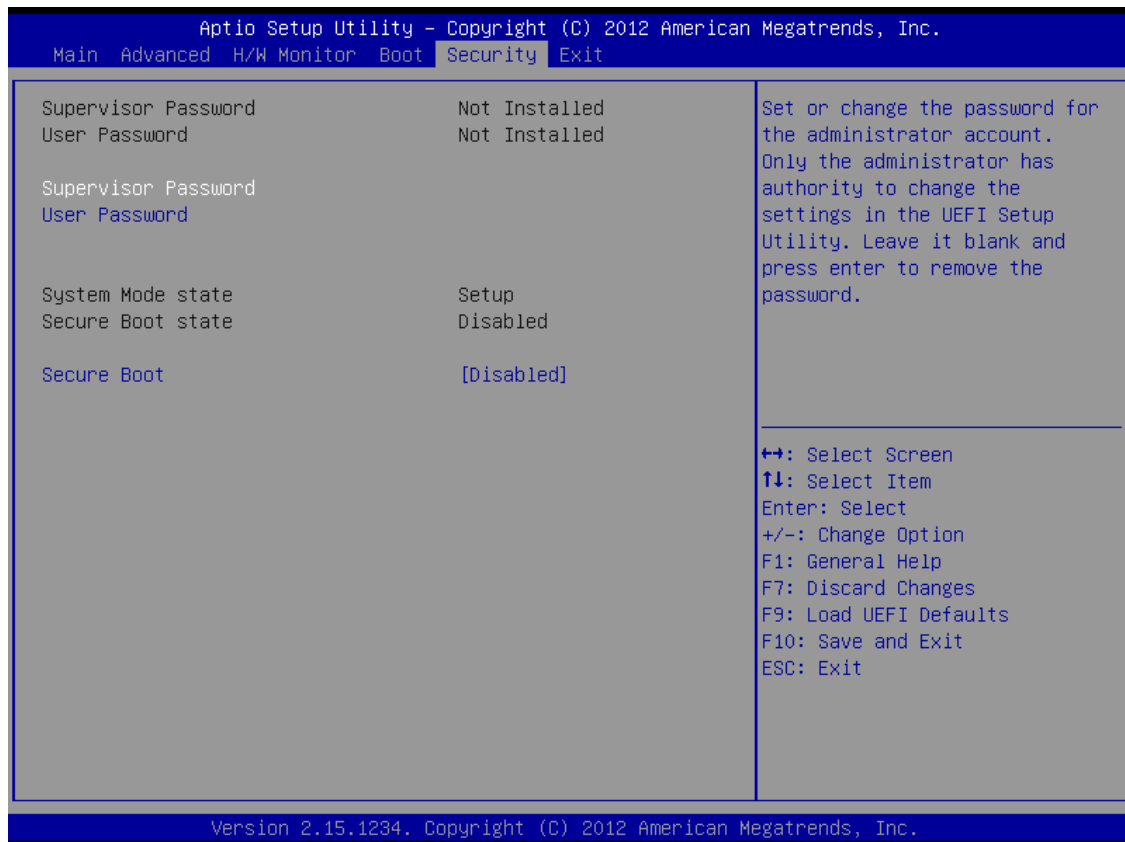

Secure Boot

Use this to enable or disable Secure Boot. The default value is [Disabled].

3.7 Exit Screen



Save Changes and Exit

When you select this option, it will pop-out the following message, “Save configuration changes and exit setup?” Select [OK] to save the changes and exit the UEFI Setup Utility.

Discard Changes and Exit

When you select this option, it will pop-out the following message, “Discard changes and exit setup?” Select [OK] to exit the UEFI Setup Utility without saving any changes.

Discard Changes

When you select this option, it will pop-out the following message, “Discard changes?” Select [OK] to discard all changes.

Load UEFI Defaults

Load UEFI default values for all the setup questions. F9 key can be used for this operation.

Launch EFI Shell from filesystem device

Attempts to Launch EFI Shell application (Shell64.efi) from one of the available filesystem devices.

Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows 7 and Windows 8. The software and drivers are included with the motherboard. The contents include **Intel Chipset Driver, VGA Drivers, LAN Driver, Audio Driver, USB 3.0 Driver, Smart Connect Technology Driver, and iAMT Driver.** Installation instructions are given below.

Important Note:

After installing your Windows operating system (Windows 7/8), you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.



4.1 Intel Chipset Driver

To install the Intel Chipset Driver, please follow the steps below.

Step 1. Select **Intel (R) Chipset QM87 Driver** from the list




Step 2. Click **Next** to setup program.




Step 3. Read the license agreement. Click **Yes** to accept all of the terms of the license agreement.



Step 4. Click **Next** to continue.

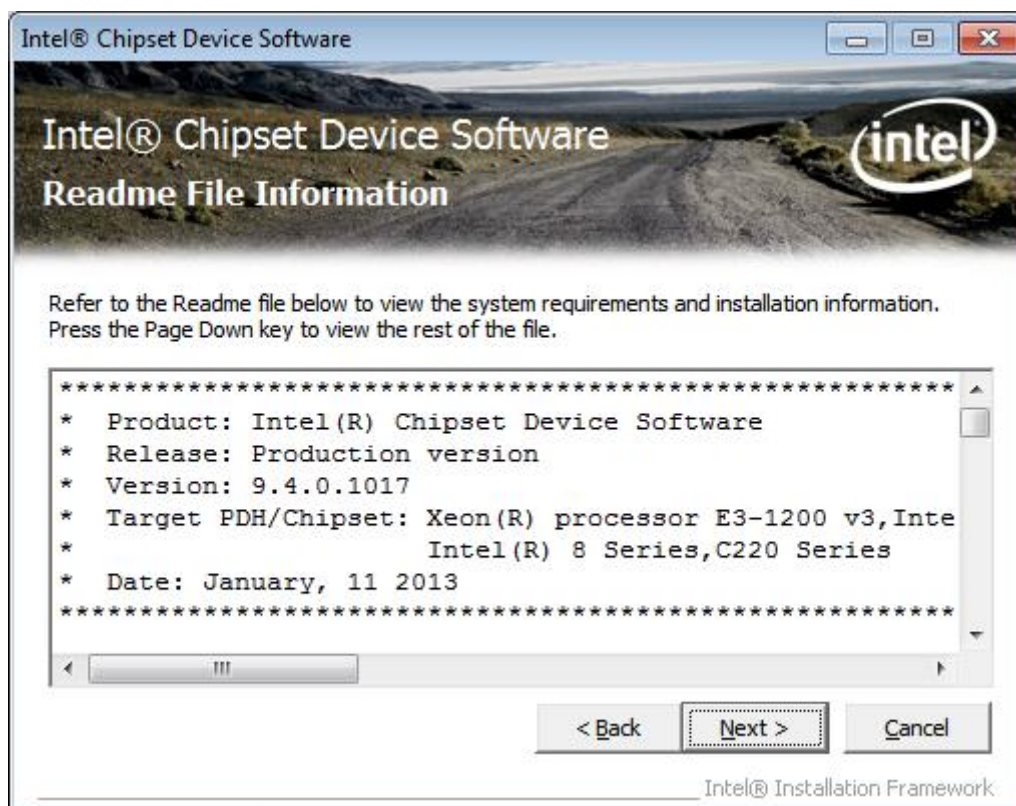

Step 5. Click Next.

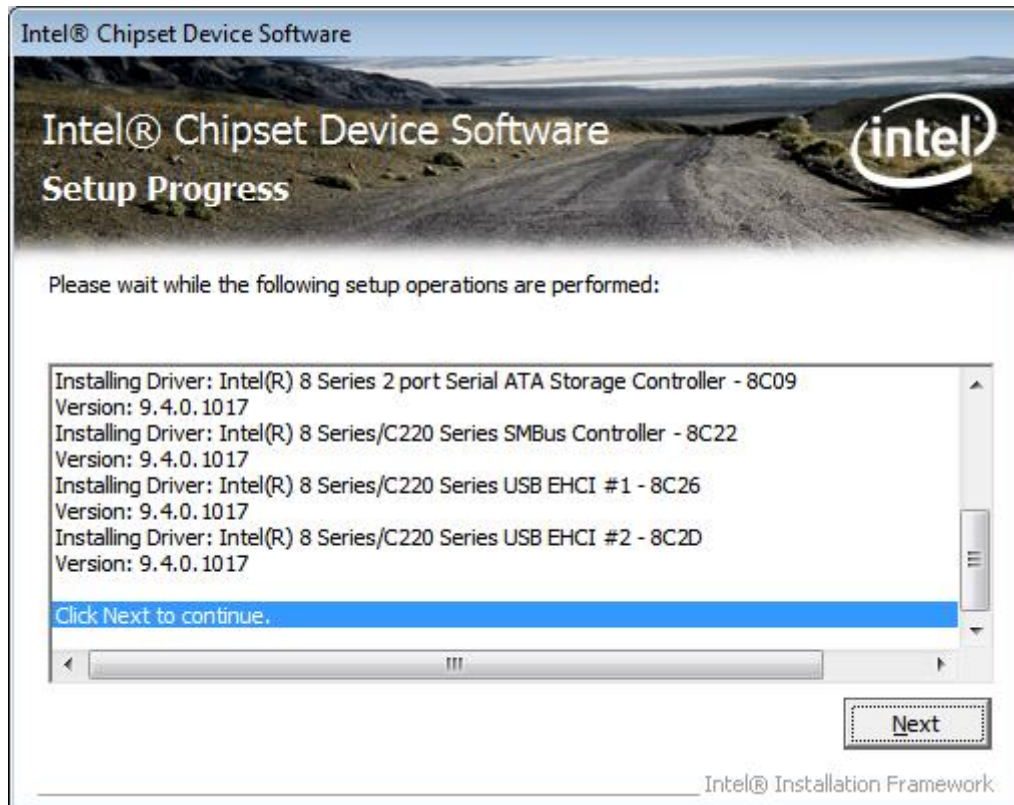

Step 6. Select Yes, I want to restart this computer now. Click Finish, then remove any installation media from the drives.




4.2 Intel Graphics Media Accelerator Driver

To install the VGA drivers, follow the steps below to proceed with the installation.


Step 1. Select **Intel(R) HD Graphics Driver**.




Step 2. Tick Automatically run WinSAT and enable the Windows Aero desktop theme(if supported).
Click **Next**.

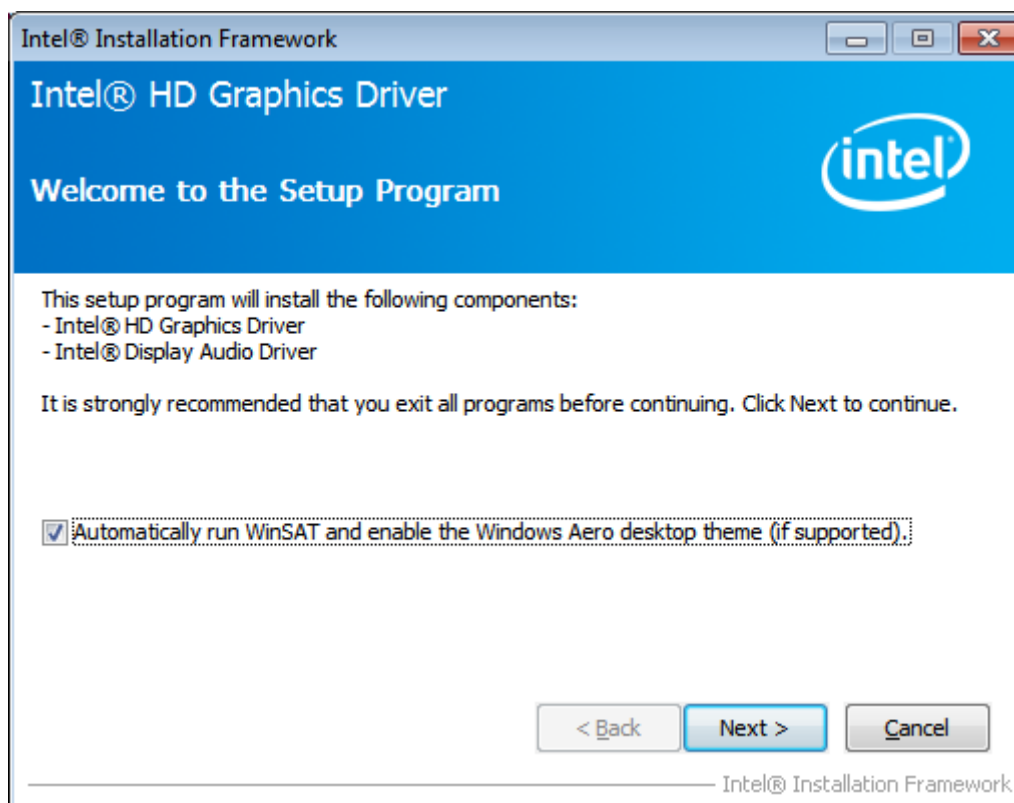


Step 3. Read license agreement. Click **Yes**.

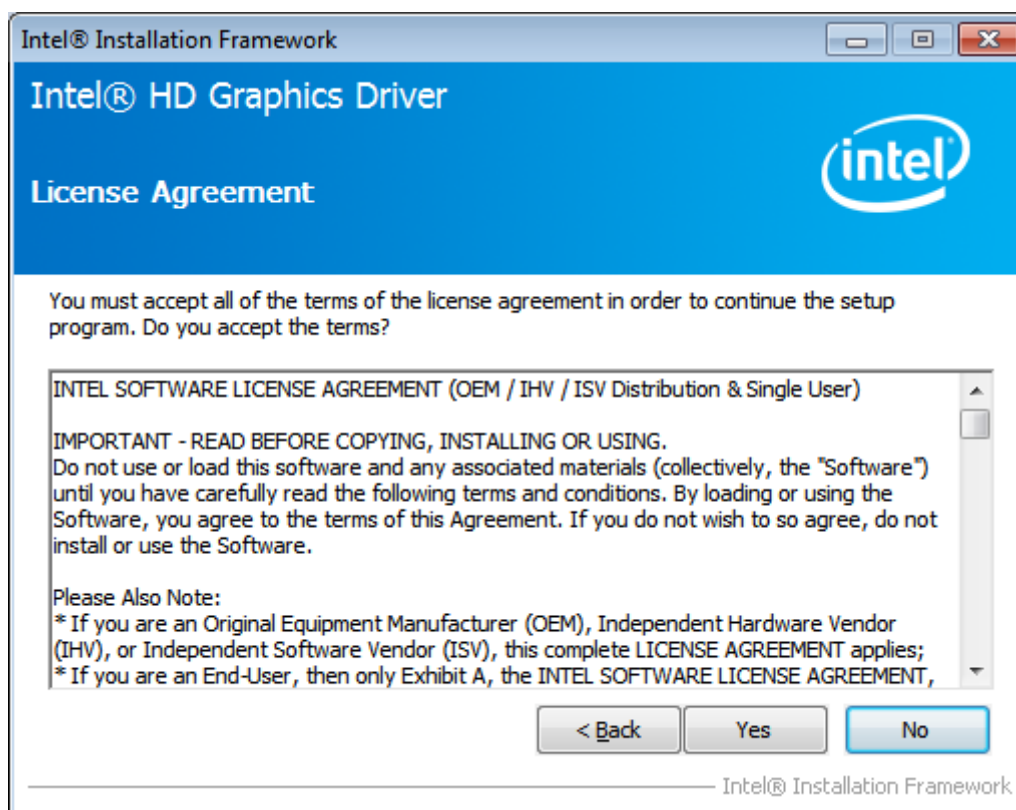


Step 4. Click **Next**.

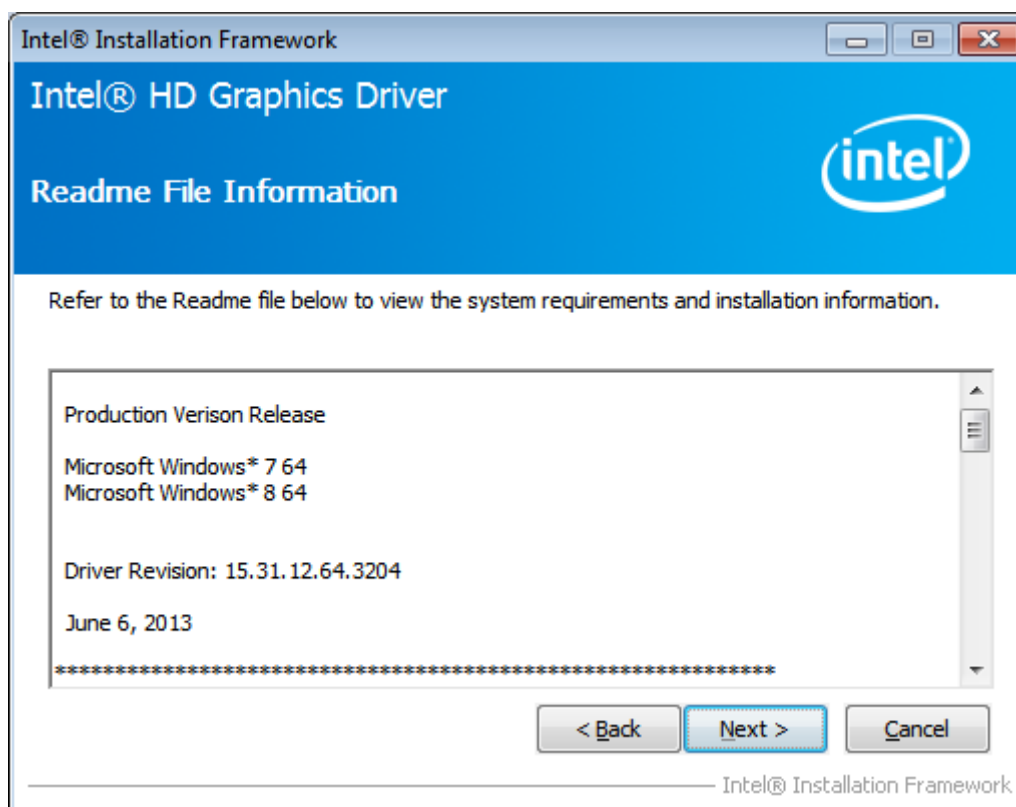

Step 5. Click Next.

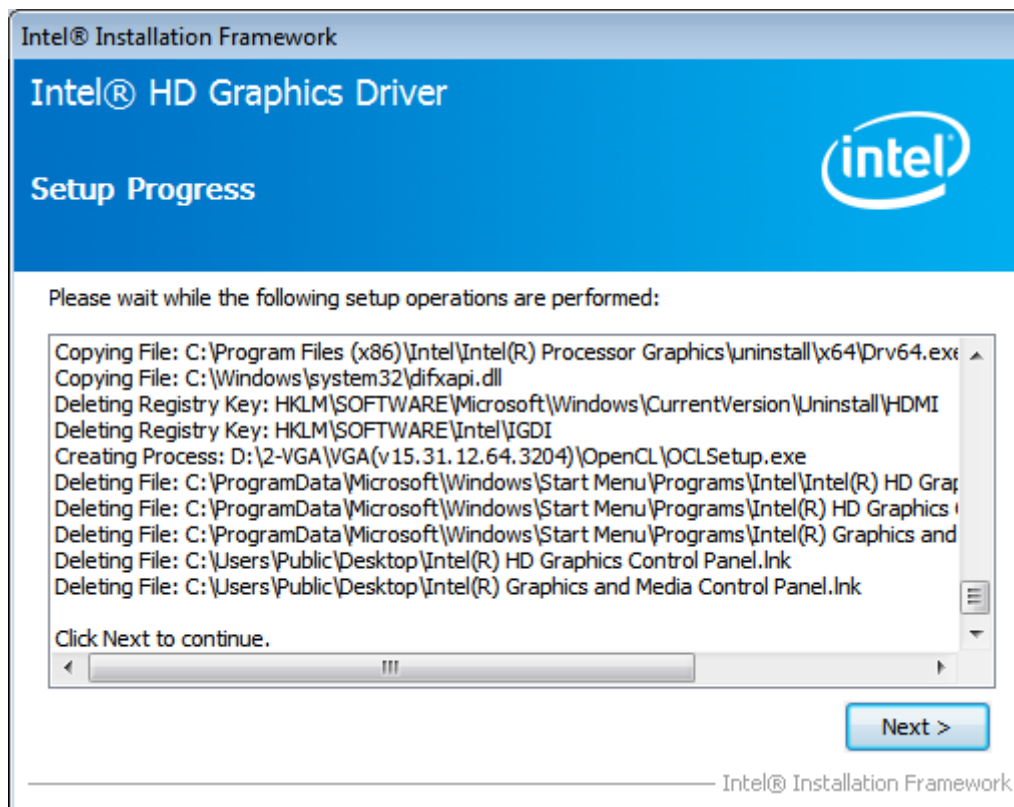

Step 6. Select Yes, I want to restart this computer now. Click Finish.

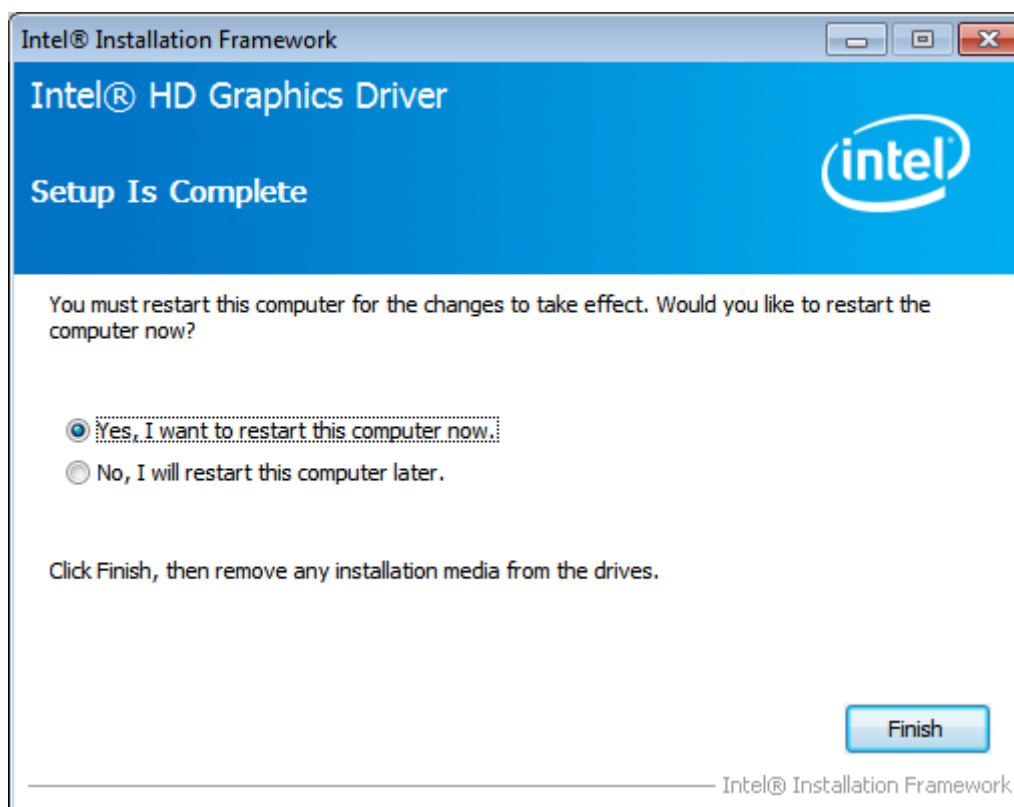


4.3 Intel (R) Network Adapter

To install the Intel (R) Network Adapter Device Driver, please follow the steps below.


Step 1. Select **Intel (R) Network Adapter Realtek**.




Step 2. Click **Next** to continue.

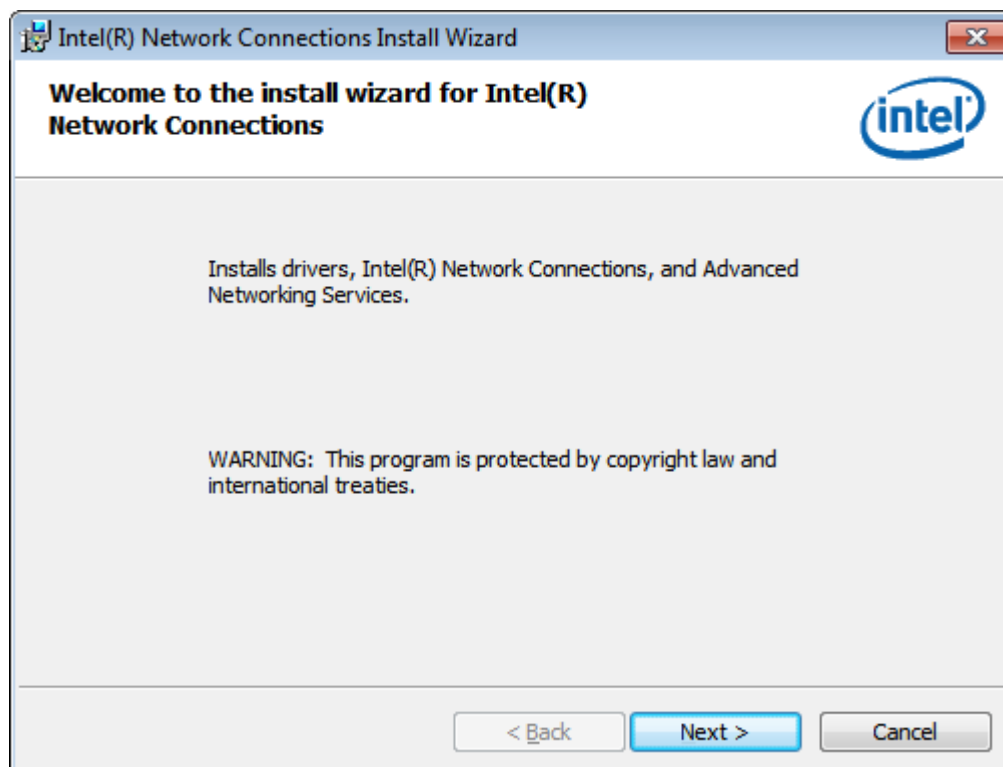


Step 3. Read license agreement. Click **I accept the terms in the license agreement.**
Click **Next**

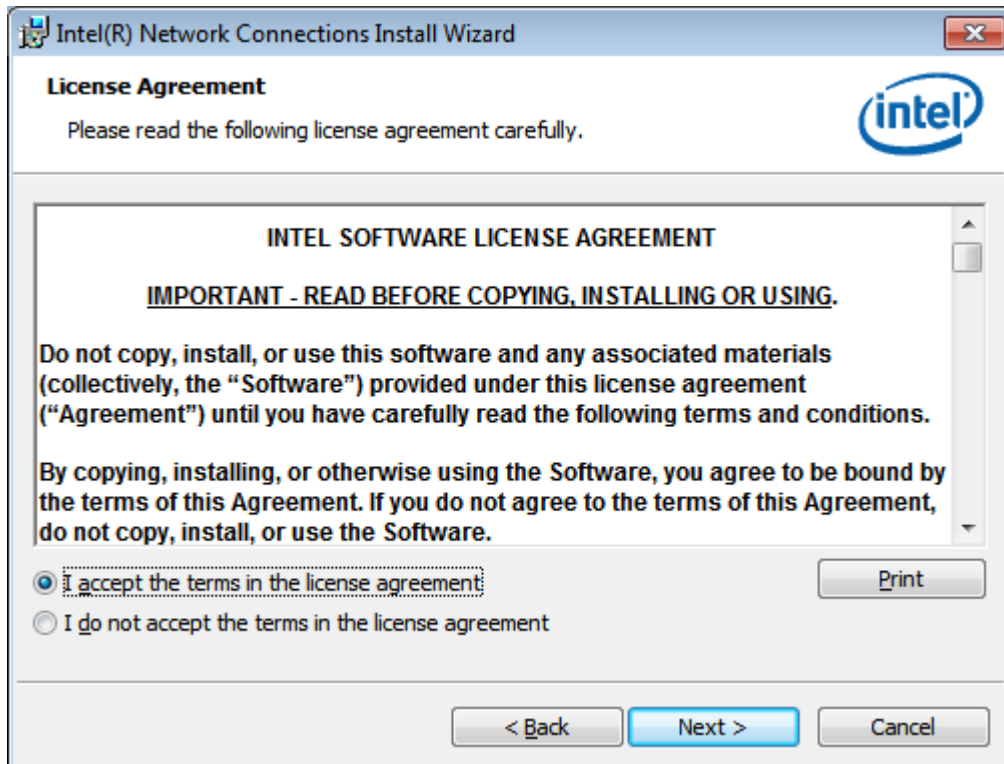


Step 4. Click **Advanced Network Services.** Click **Next**

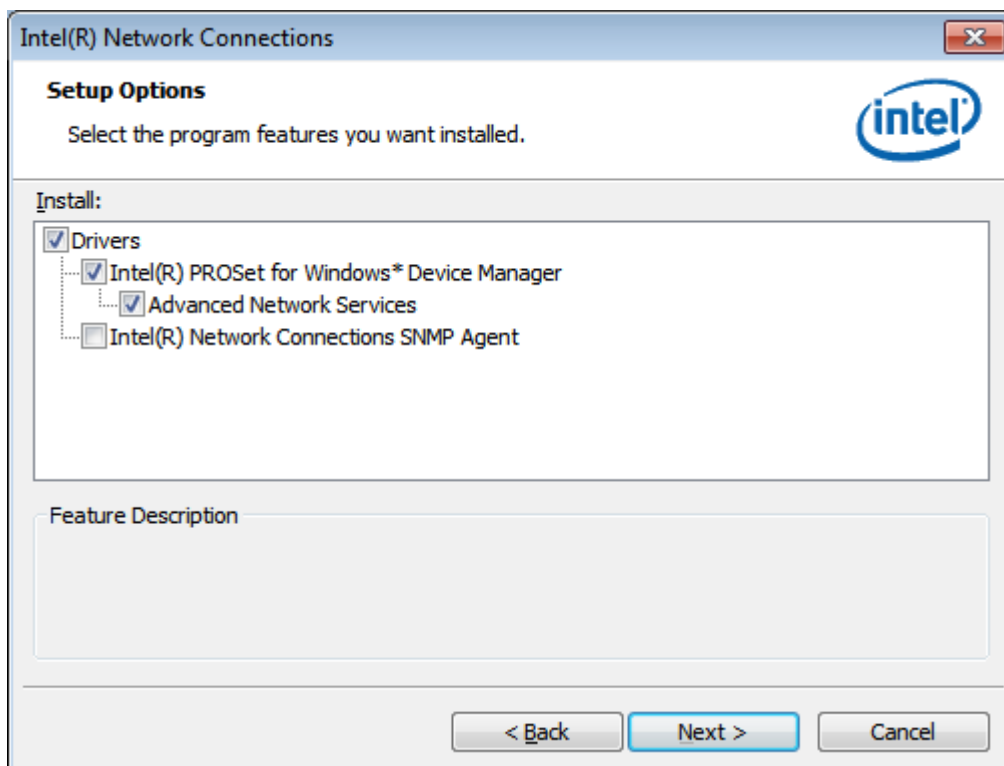

Step 5. Click **Install** to begin the installation.

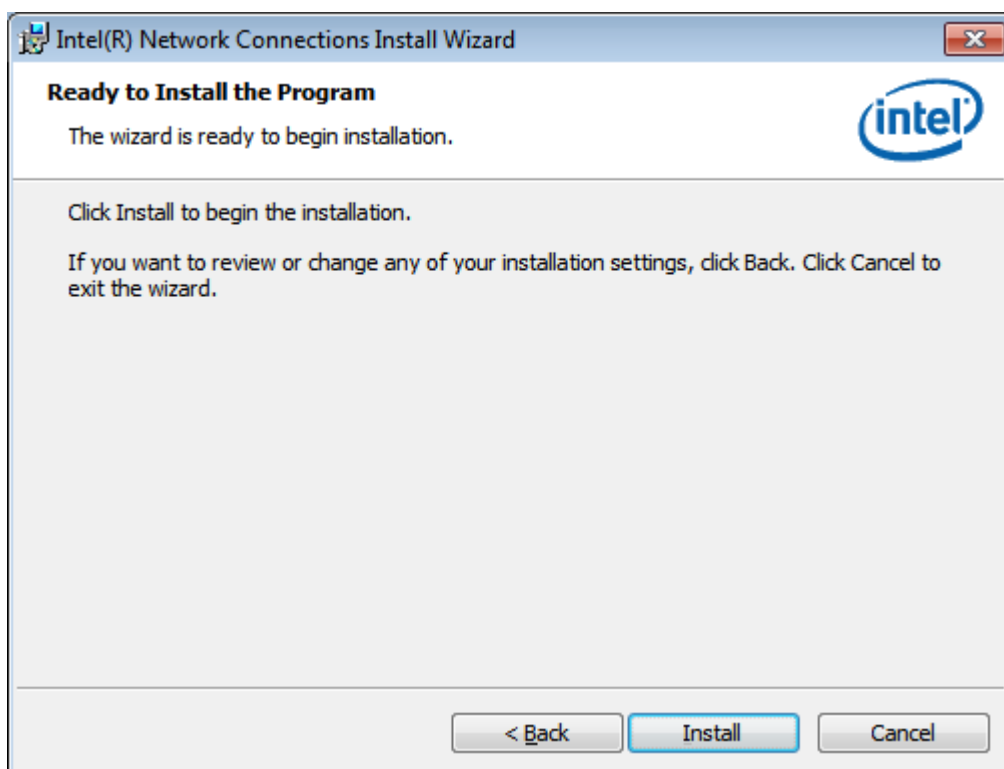

Step 6. Click **Finish** to exist the wizard.

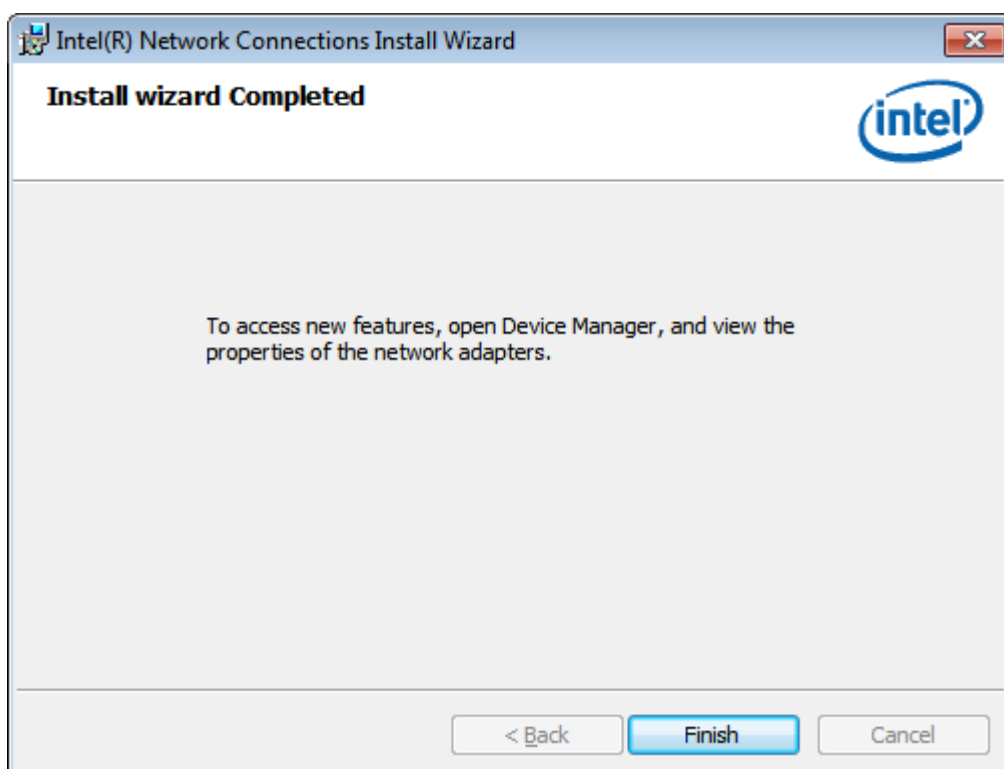


4.4 Realtek ALC662 Audio Codec Driver Installation

To install the Realtek ALC662 HD Audio Codec Driver, please follow the steps below.


Step 1. Select **Realtek ALC662 Audio Codec Driver** from the list



Step 2. Click **Next** to continue.

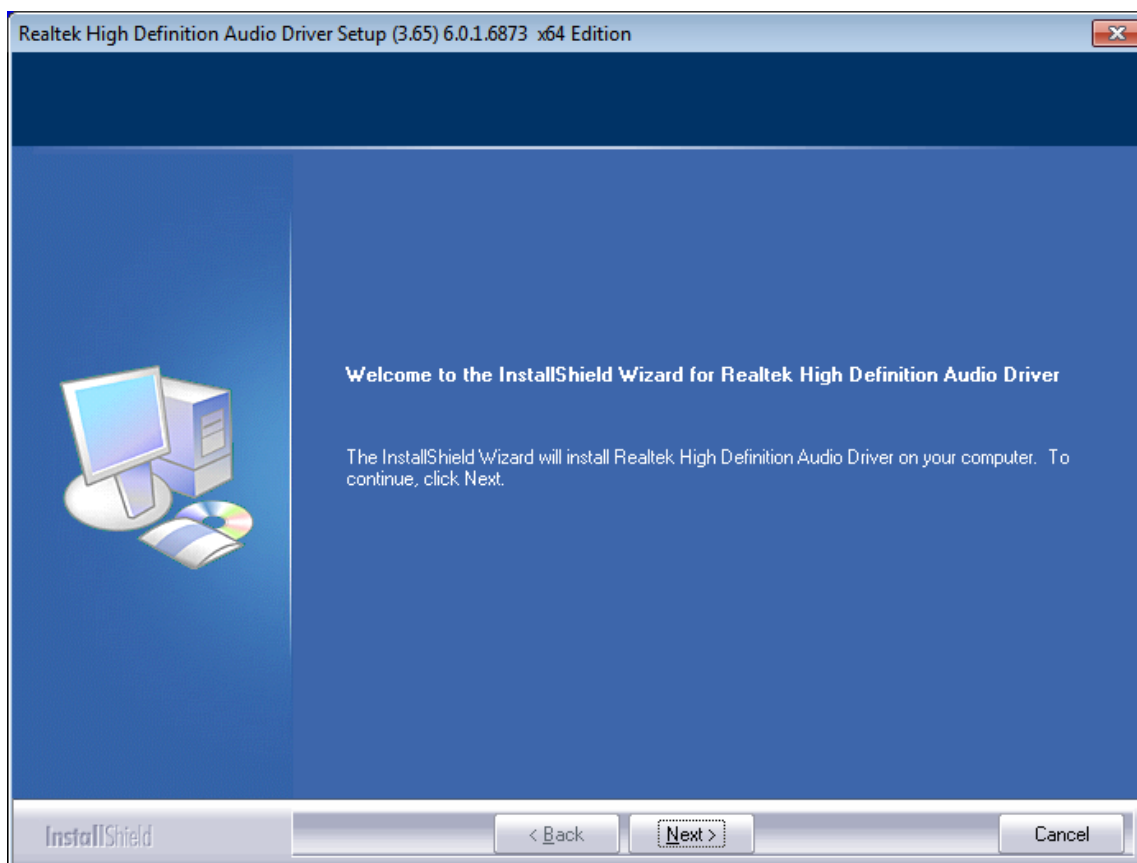

Step 3. Click **Yes, I want to restart my computer now.** Click **Finish** to complete the installation.

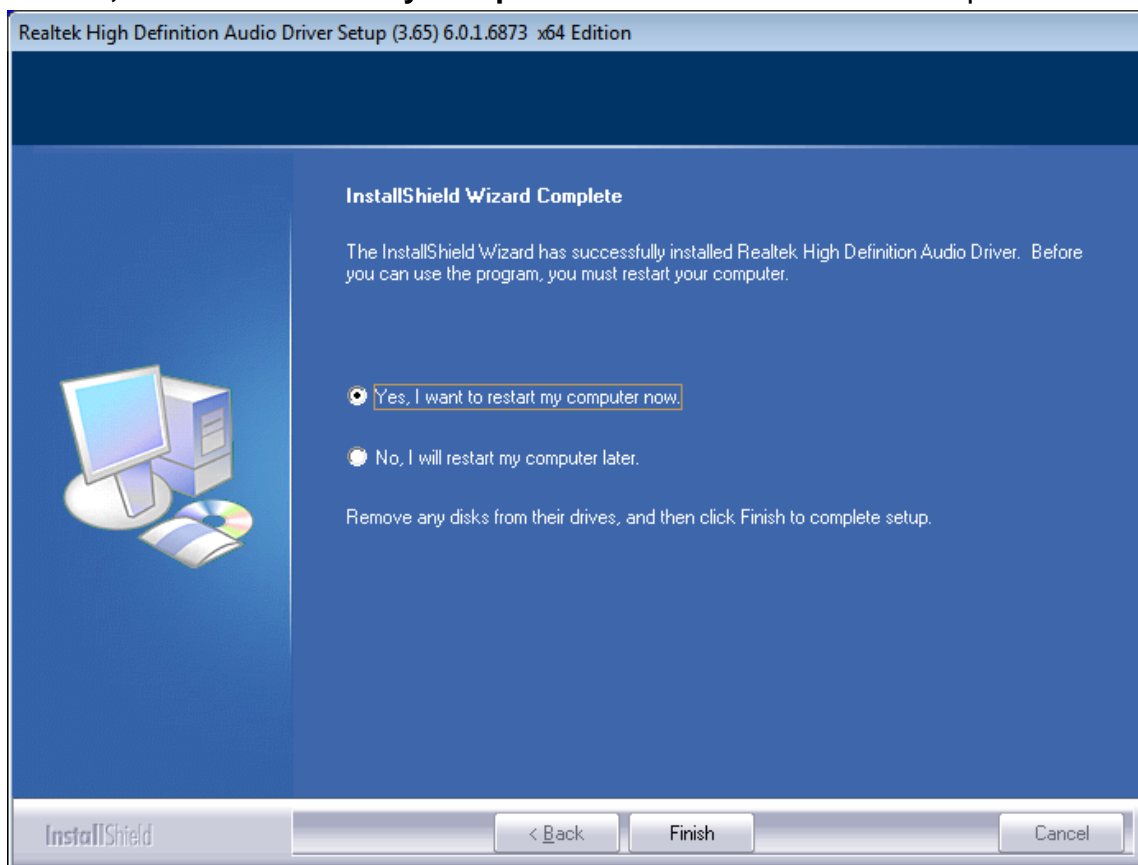


4.5 Intel (R) USB 3.0 Driver

To install the Intel (R) USB 3.0 Driver, please follow the steps below.


Step 1. Select Intel (R) USB 3.0 Driver.




Step 2. Click Next.

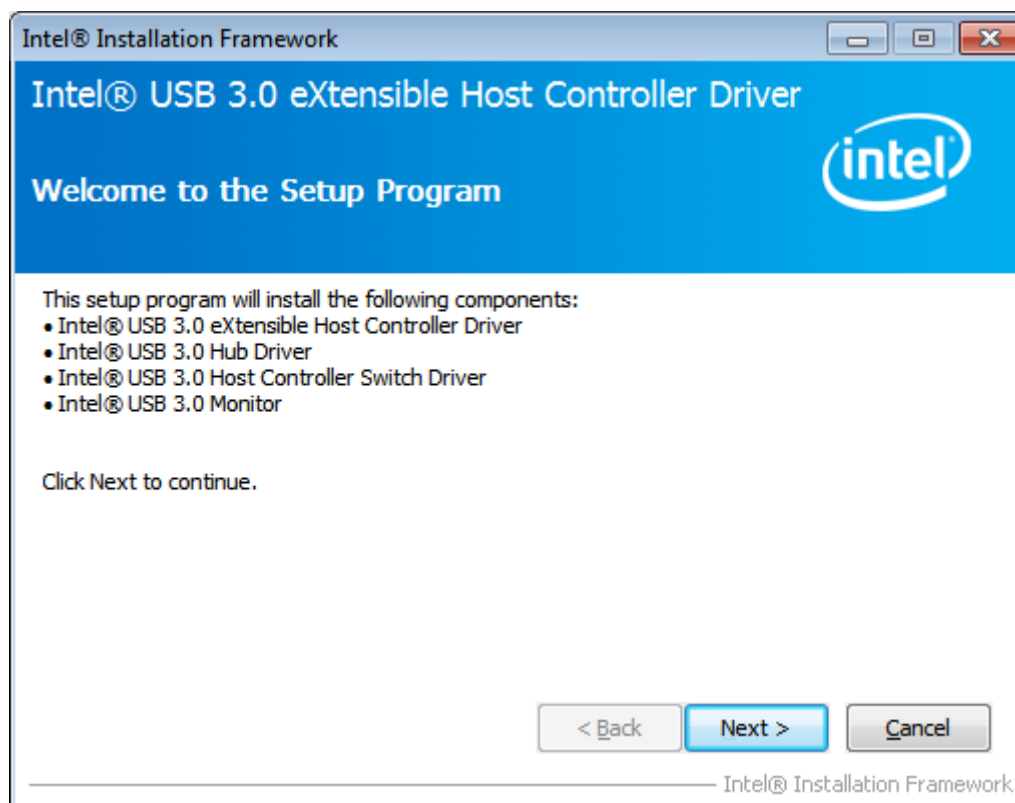


Step 3. Read license agreement. Click **Yes**

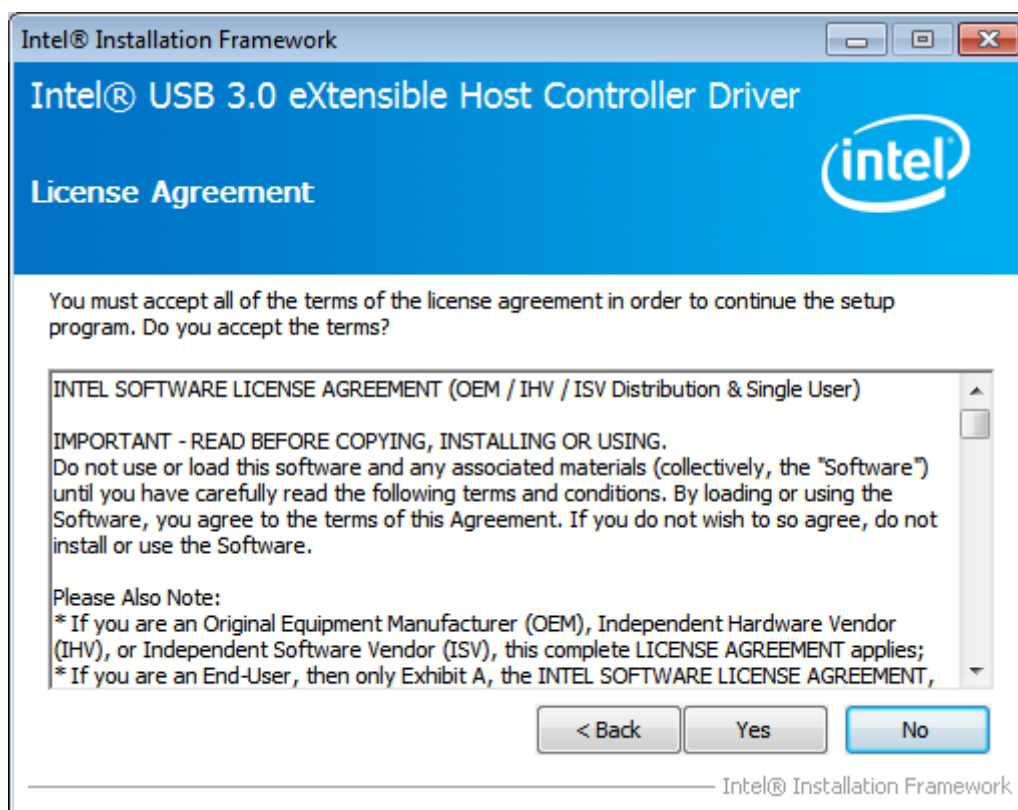


Step 4. Click **Next**

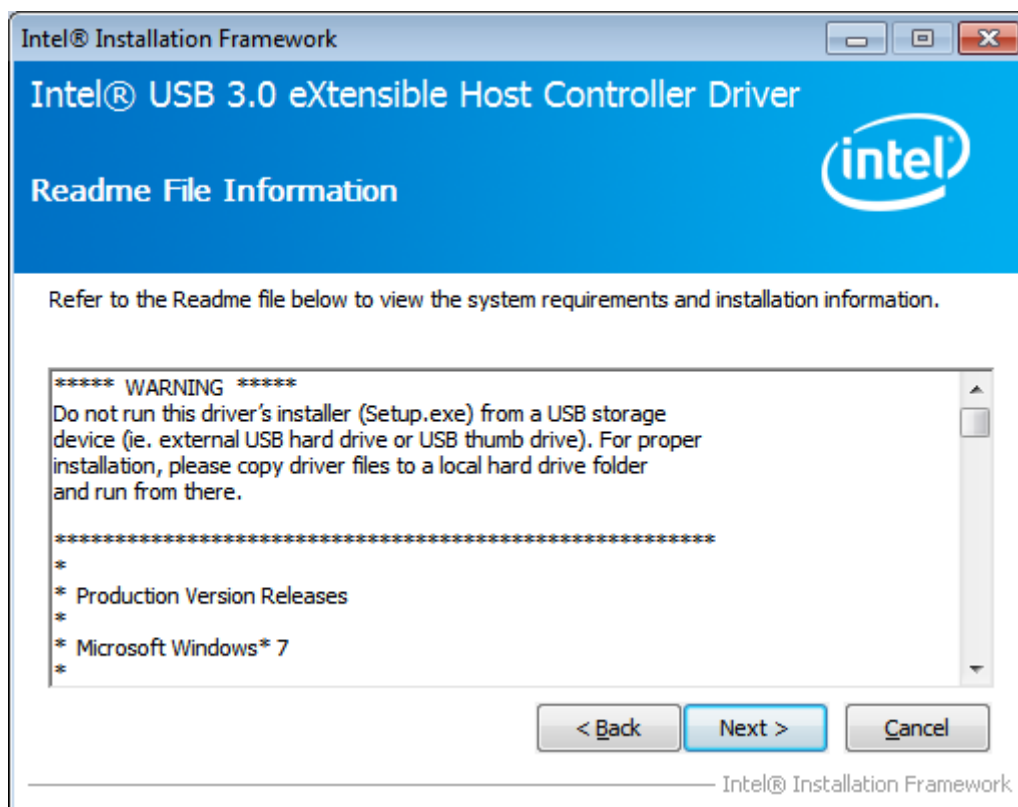

Step 5. Click Next

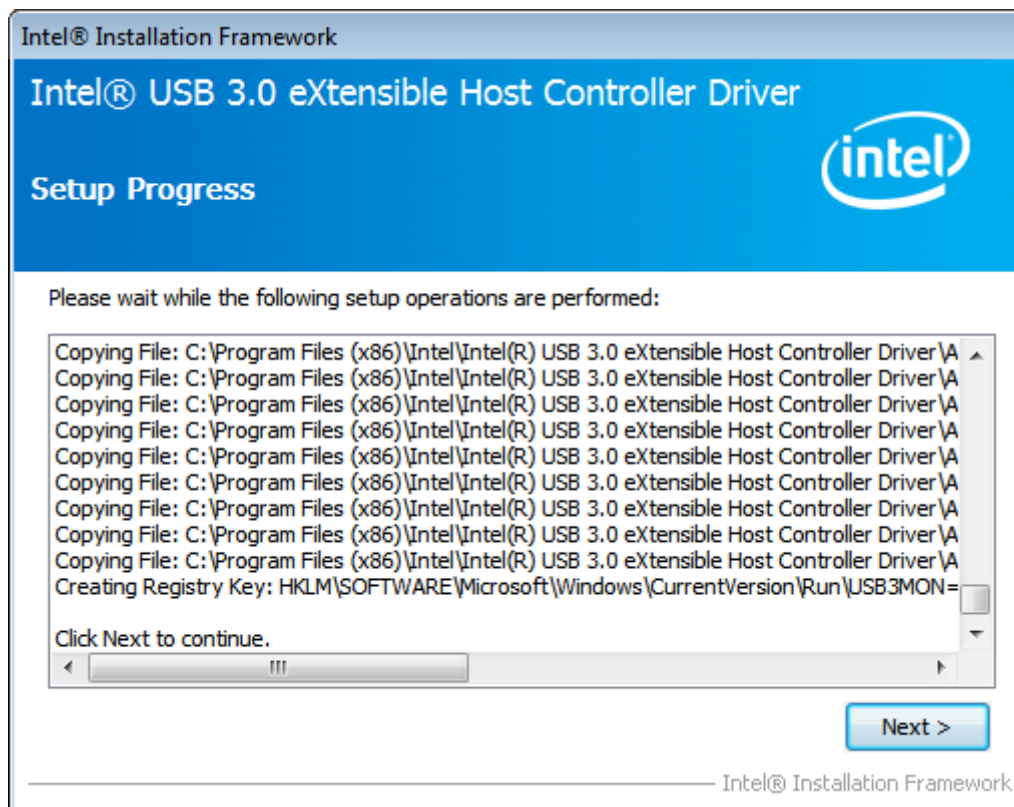

Step 6. Click Yes, I want to restart this computer now. Click Finish to complete the installation.

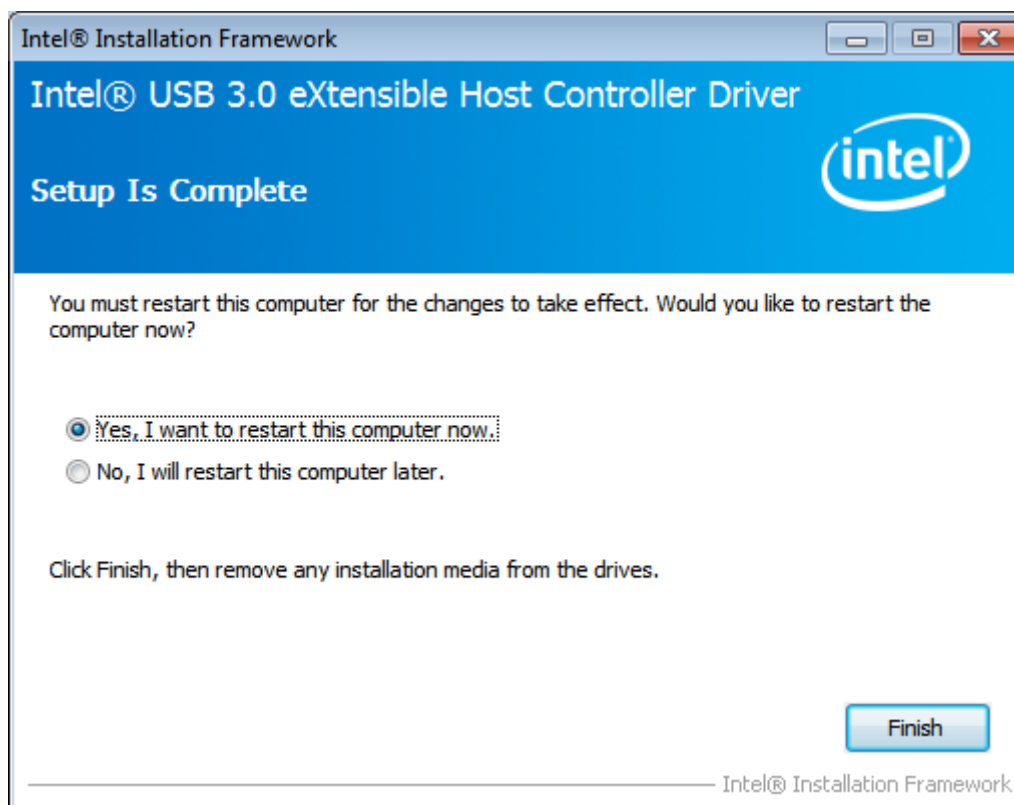


4.6 Intel (R) Smart Connect Technology Driver

To install the Intel (R) Smart Connect Technology Driver, please follow the steps below.


Step 1. Select Intel (R) Smart Connect Technology Driver.




Step 2. Click Next

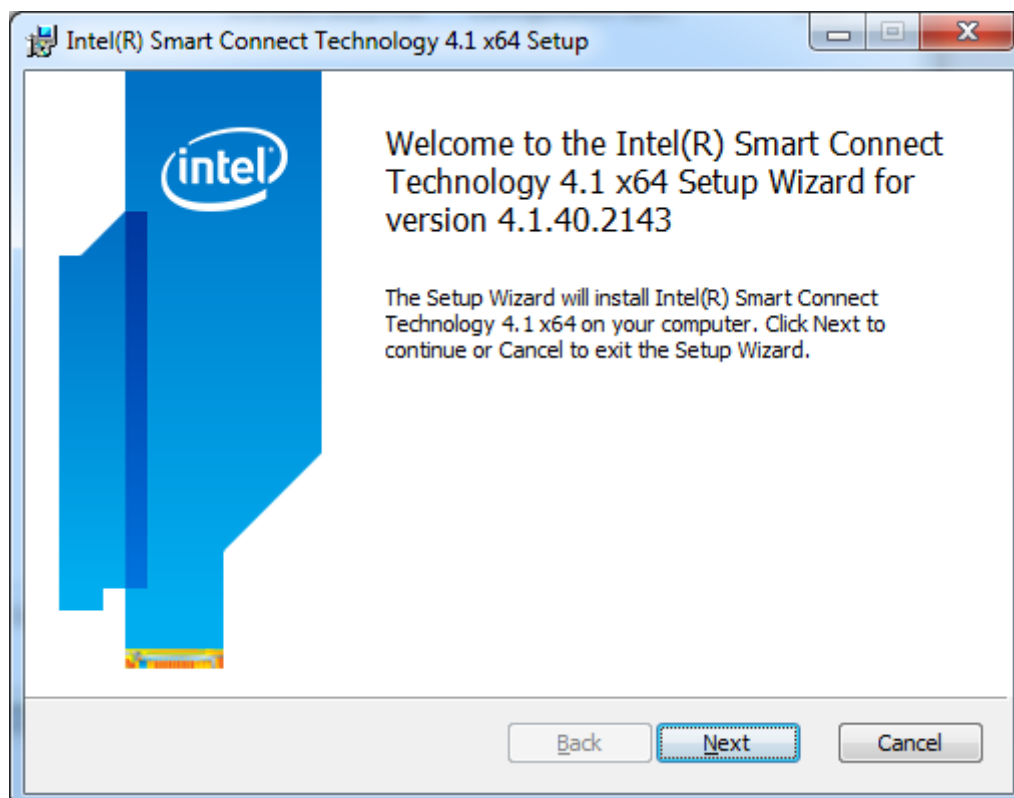


Step 3. Read license agreement. Click **I accept the terms in the License Agreement**.
Click **Next**.

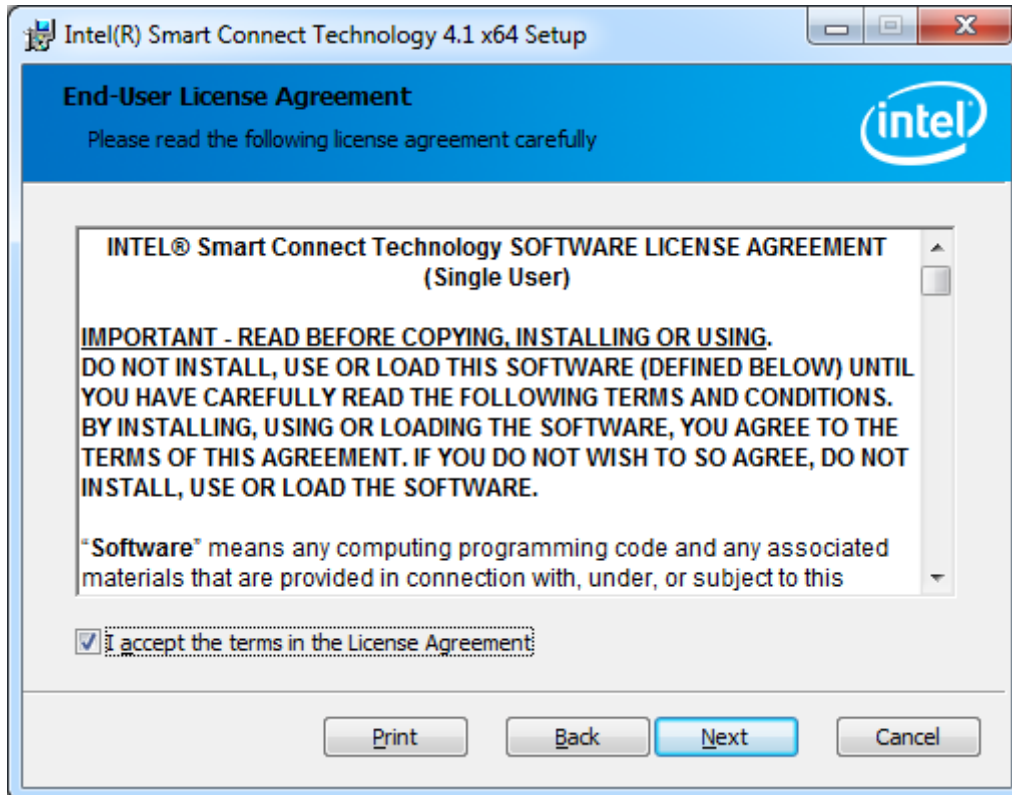


Step 4. Select the icons in the tree below to change the way features will be installed.
Click **Next**.

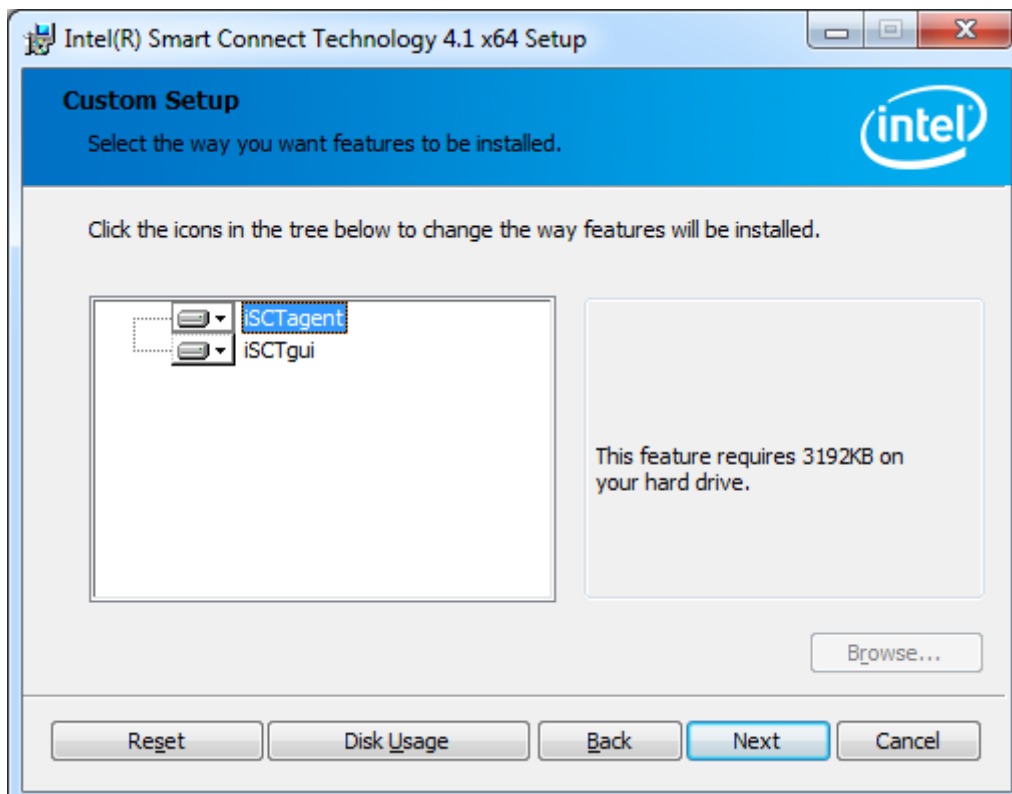


Step 5. Click **Install** to begin the installation.

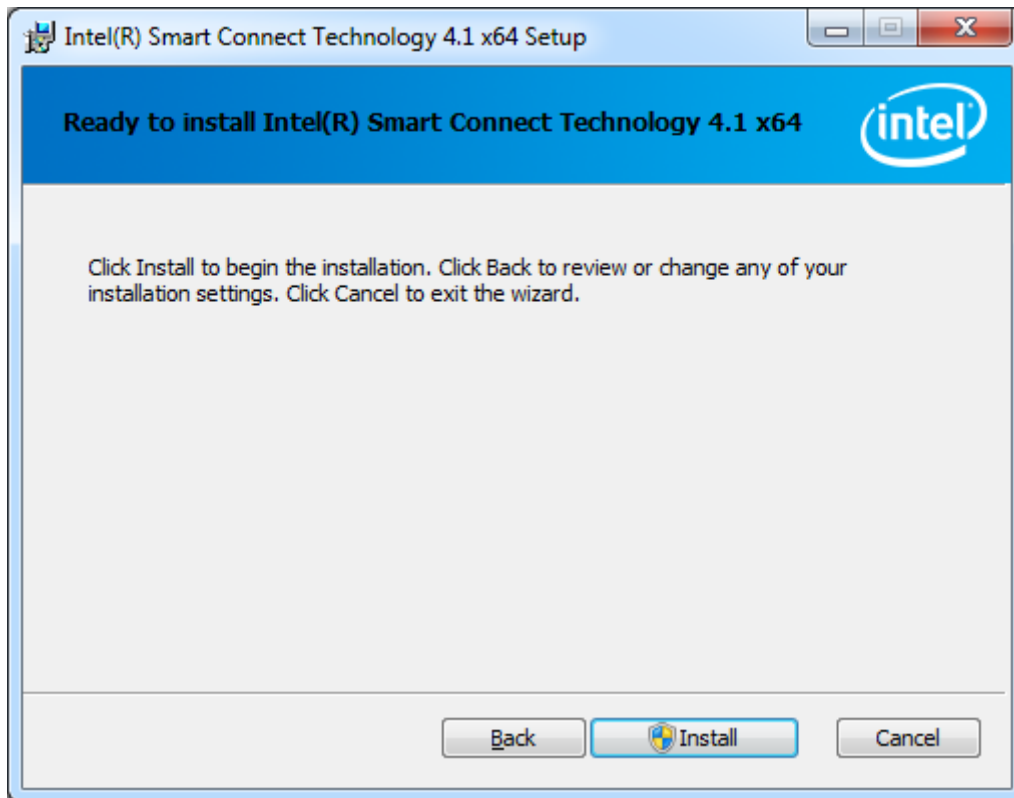

Step 6. Click **Finish** to exist the wizard.

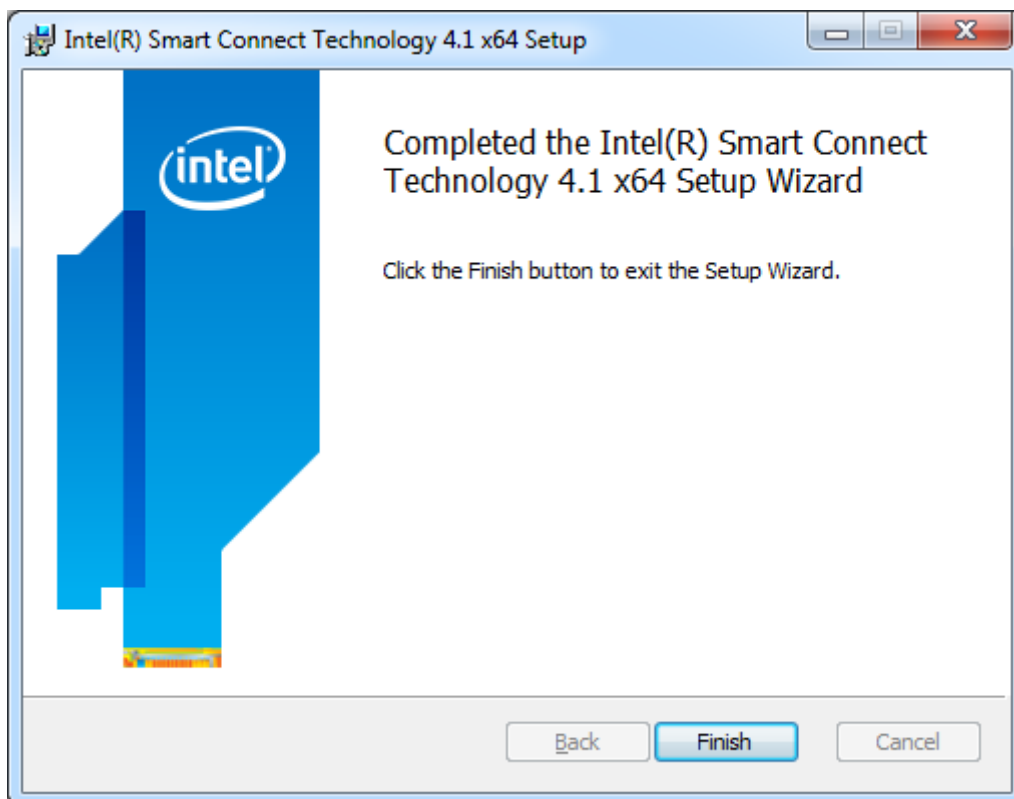

Step 7. Click **Yes** to restart your system for the configuration changes made to Intel(R) Smart Connect Technology Driver.

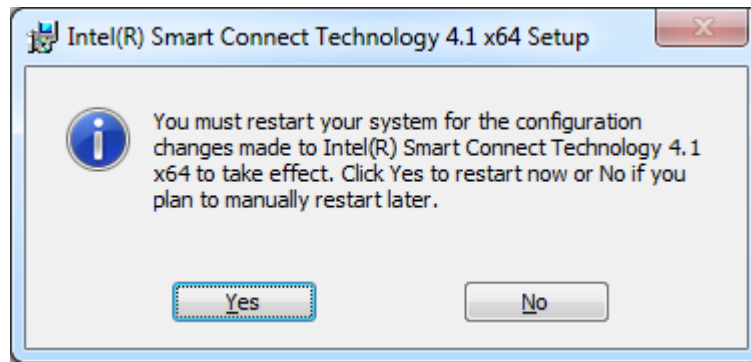


4.7 Intel (R) iAMT Driver

To install the Intel (R) iAMT Driver, please follow the steps below.


Step 1. Select Intel (R) iAMT Driver.




Step 2. Click Next.

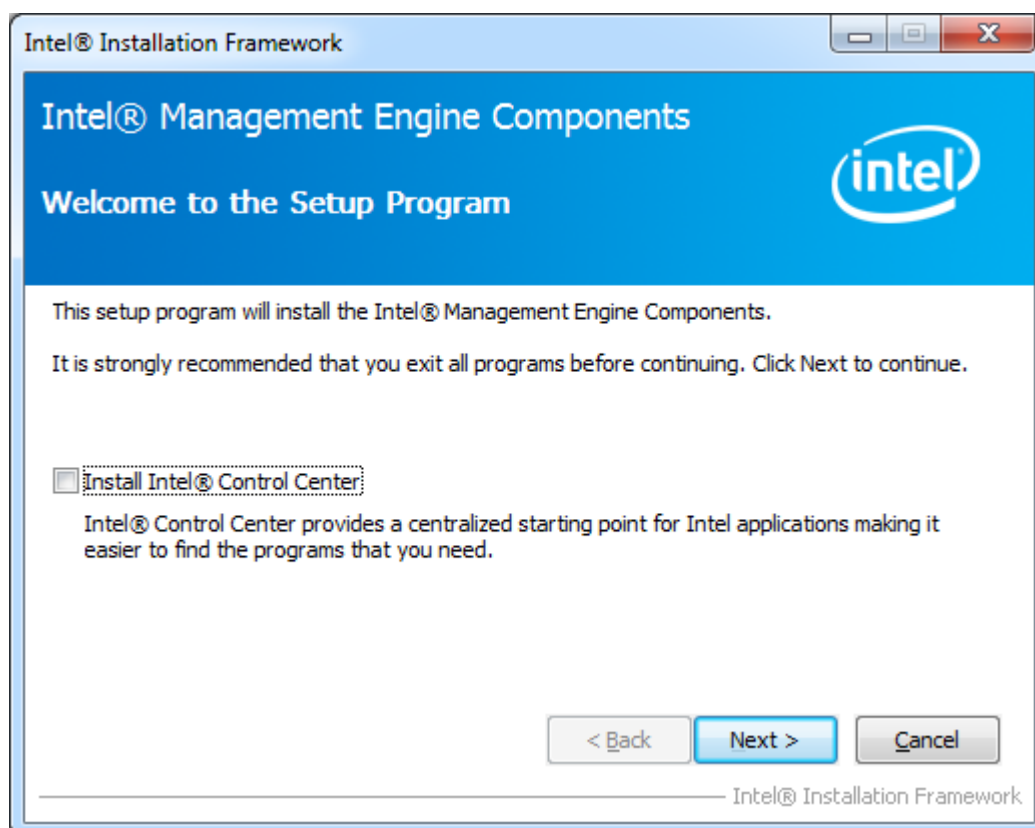


Step 3. Read license agreement. Click **Yes**

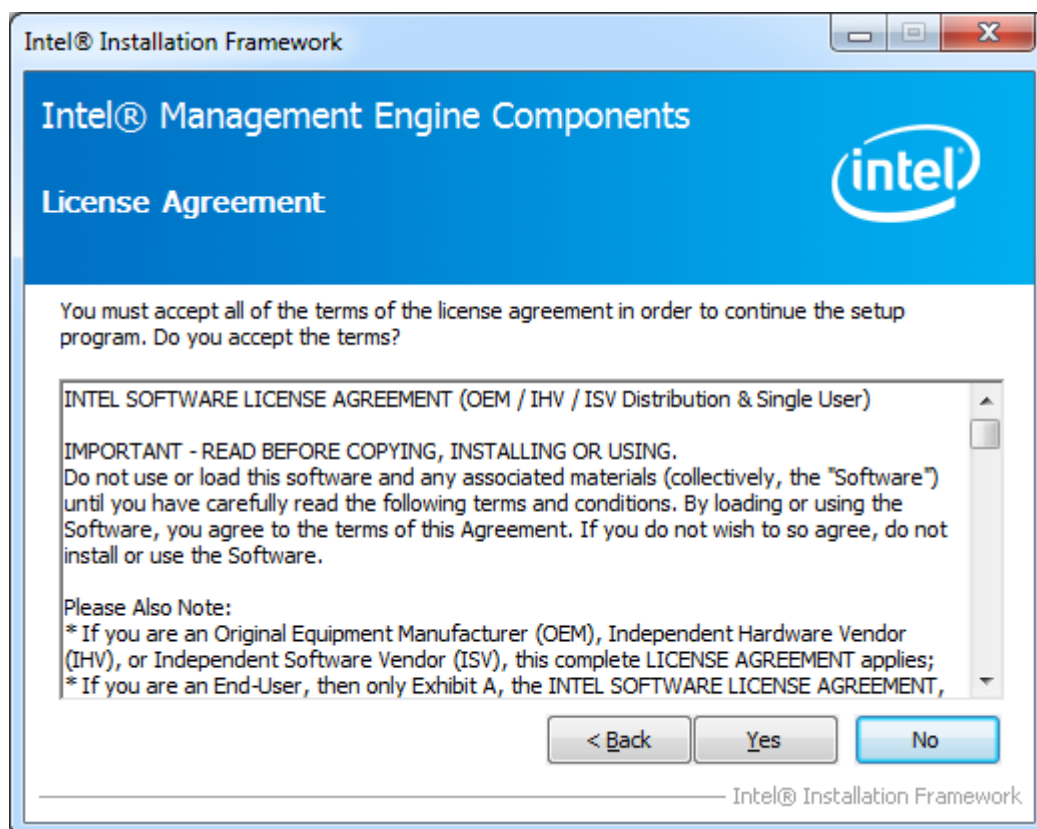

Step 4. Click **Yes**

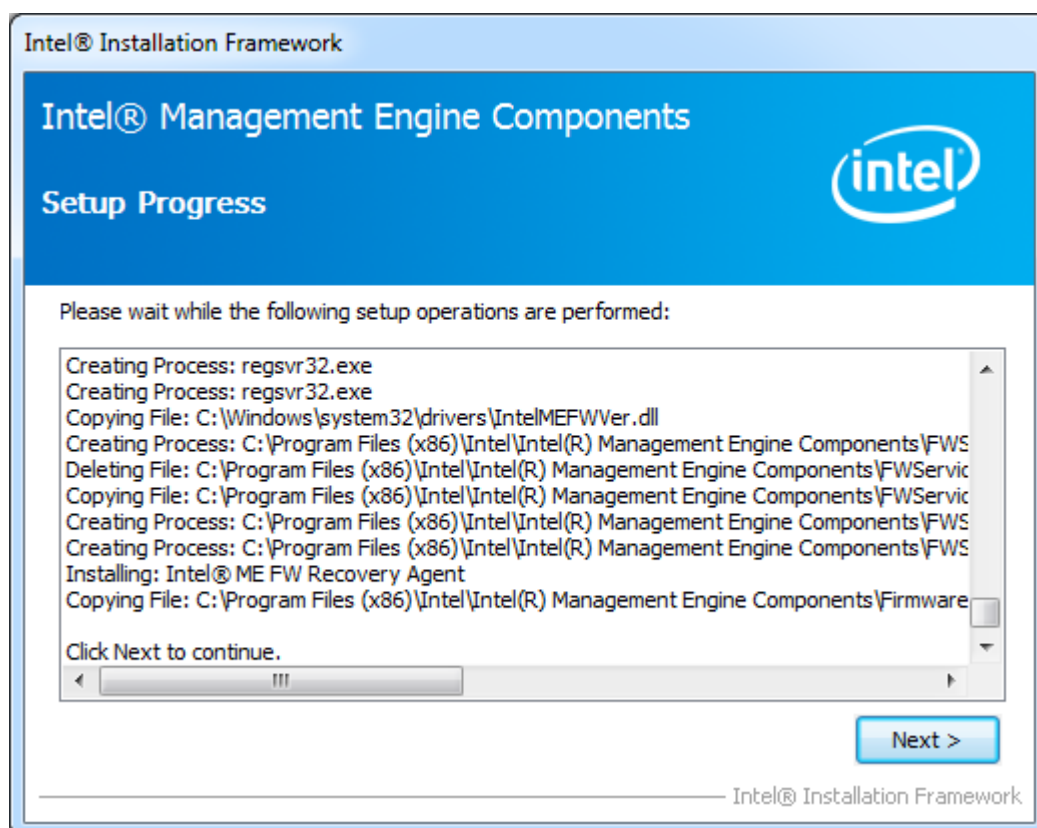

Step 5. Click **Yes, I want to restart this computer now.** Click **Finish** to complete the installation.

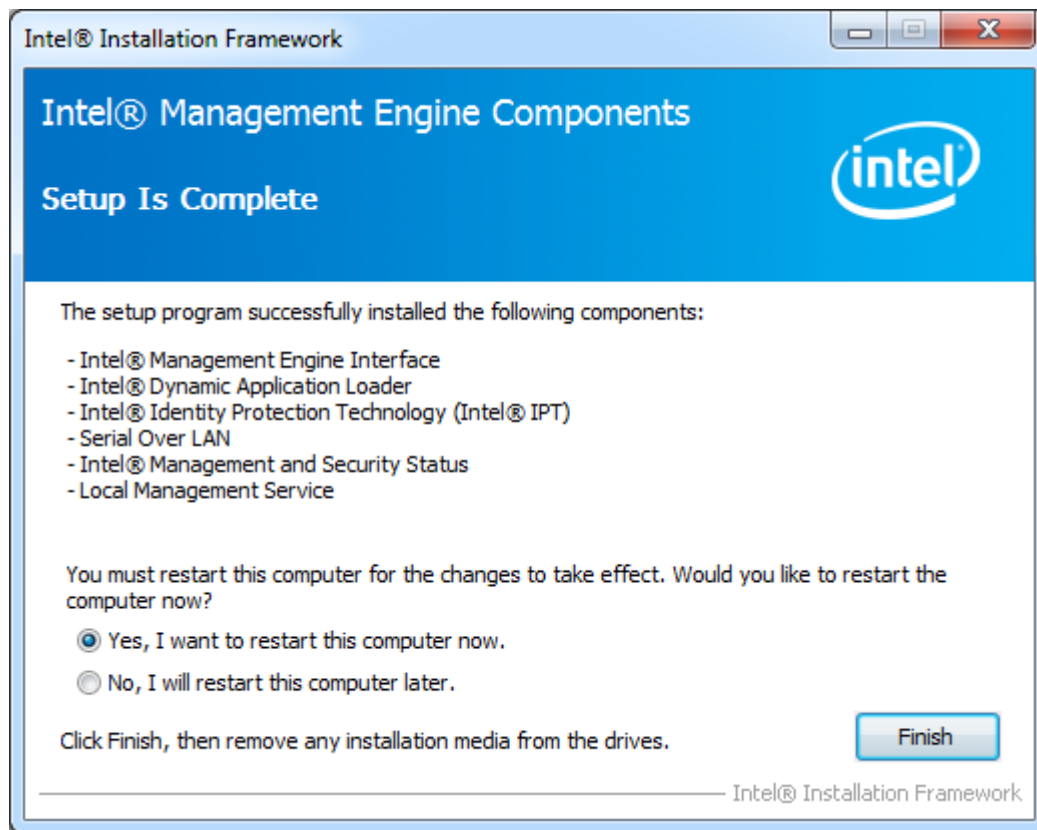

Chapter 5 Touch Screen Installation

This chapter describes how to install drivers and other software that will allow your touch screen work with different operating systems.

5.1 Windows 7/8 Universal Driver Installation for PenMount

6000 Series

Before installing the Windows 7/8 driver software, you must have the Windows 7/8 system installed and running on your computer. You must also have one of the following PenMount 6000 series controller or control boards installed: PM6500, PM6300.


5.2 Installing Software

Follow the steps below to install the PenMount DMC6000 Windows 7/8 driver.


Step 1. Insert the product CD, the screen below would appear. Click **Touch Panel Driver**.




Step 2. Click **Next** to continue.

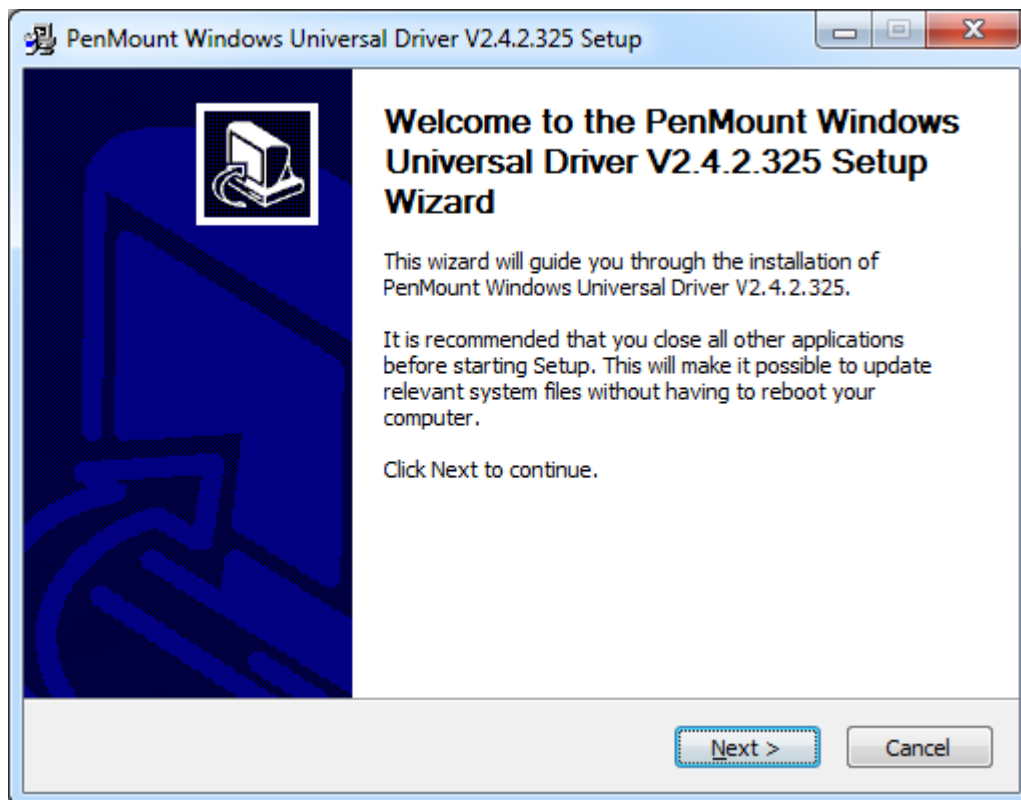


Step 3. Read the license agreement. Click **I Agree** to agree the license agreement.

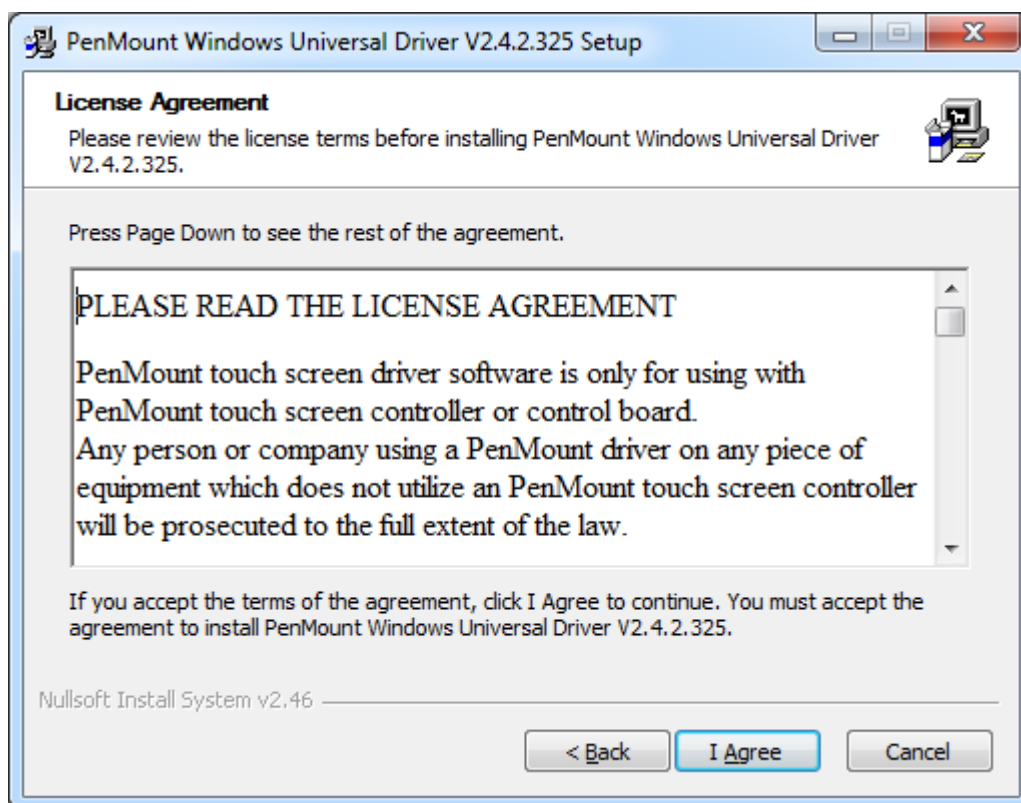


Step 4. Choose the folder in which to install PenMount Windows Universal Driver. Click **Install** to start the installation.

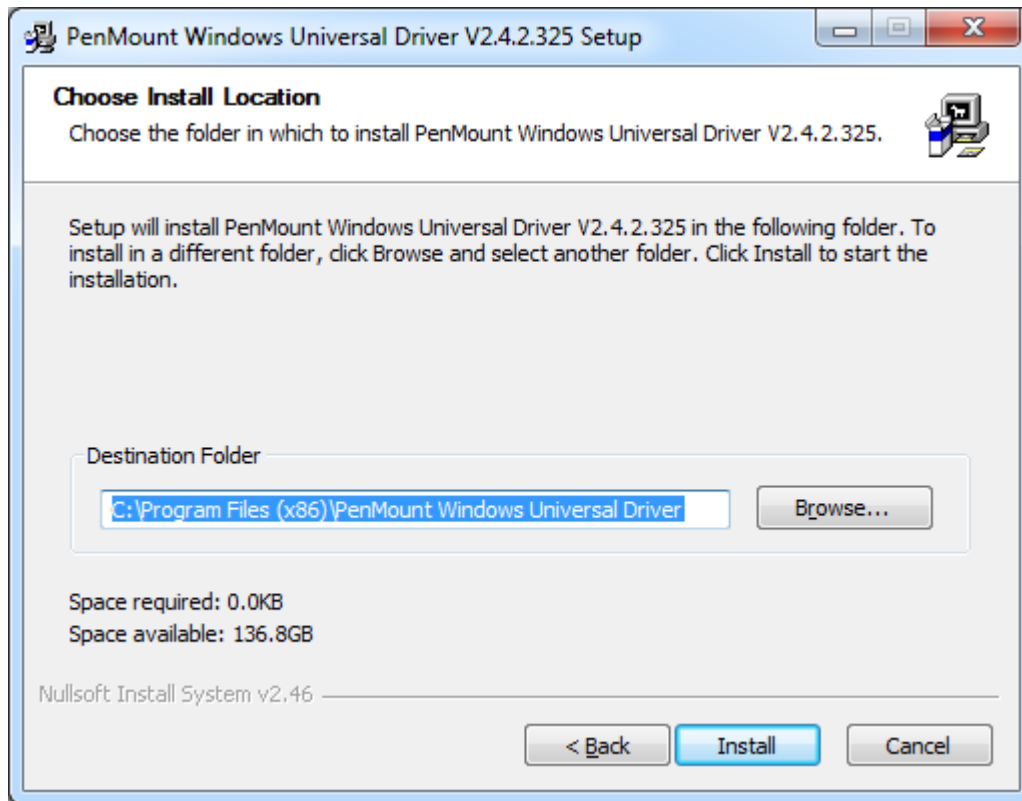

Step 5. Click **Yes**

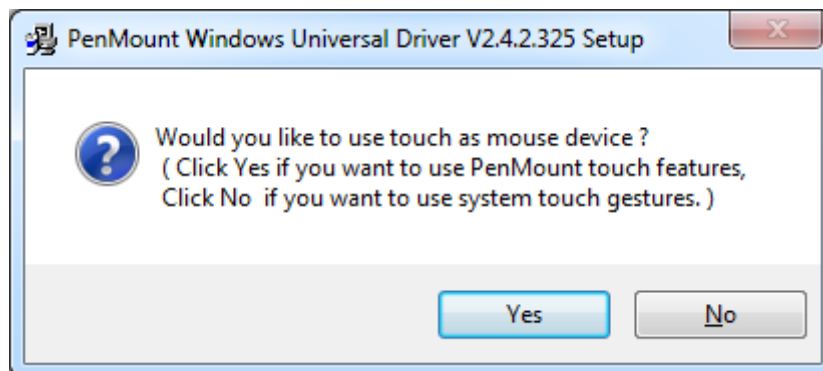

Step 6. Click **Finish** to complete installation

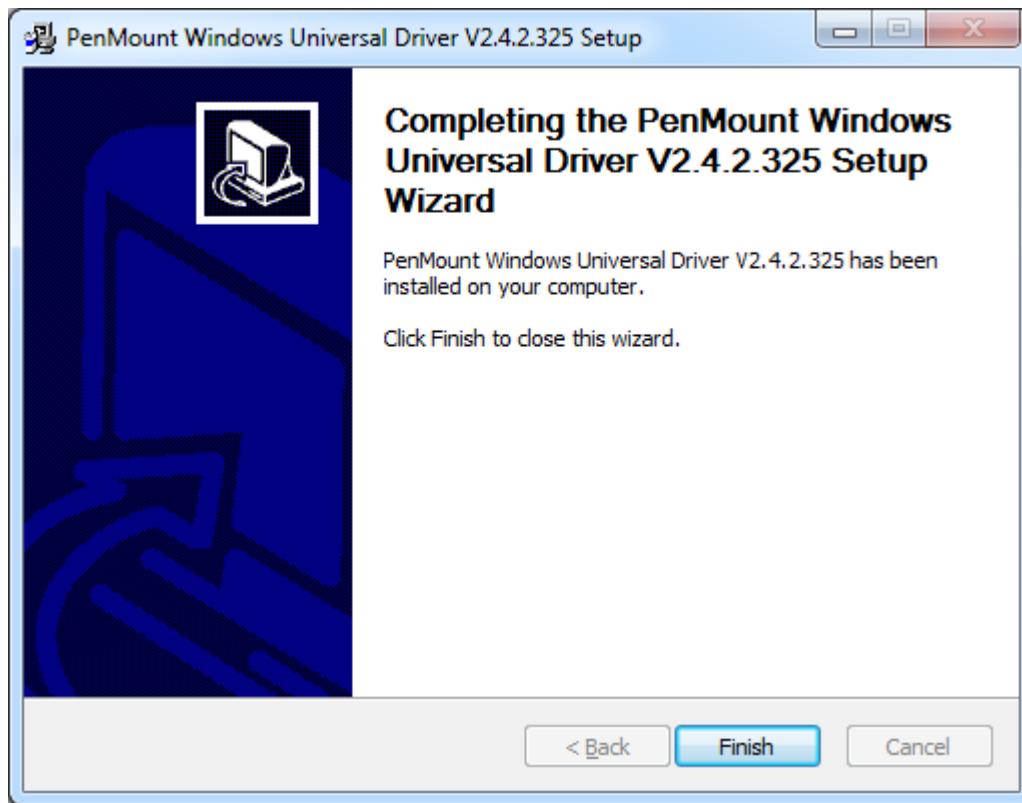

5.3 Software Functions

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.


1. After installation, click the PenMount Monitor icon "PM" in the menu bar.
2. When the PenMount Control Panel appears, select a device to "Calibrate."

PenMount Control Panel

The functions of the PenMount Control Panel are **Device**, **Multiple Monitors**, **Tools** and **About**, which are explained in the following sections.

Device

In this window, you can find out that how many devices be detected on your system.

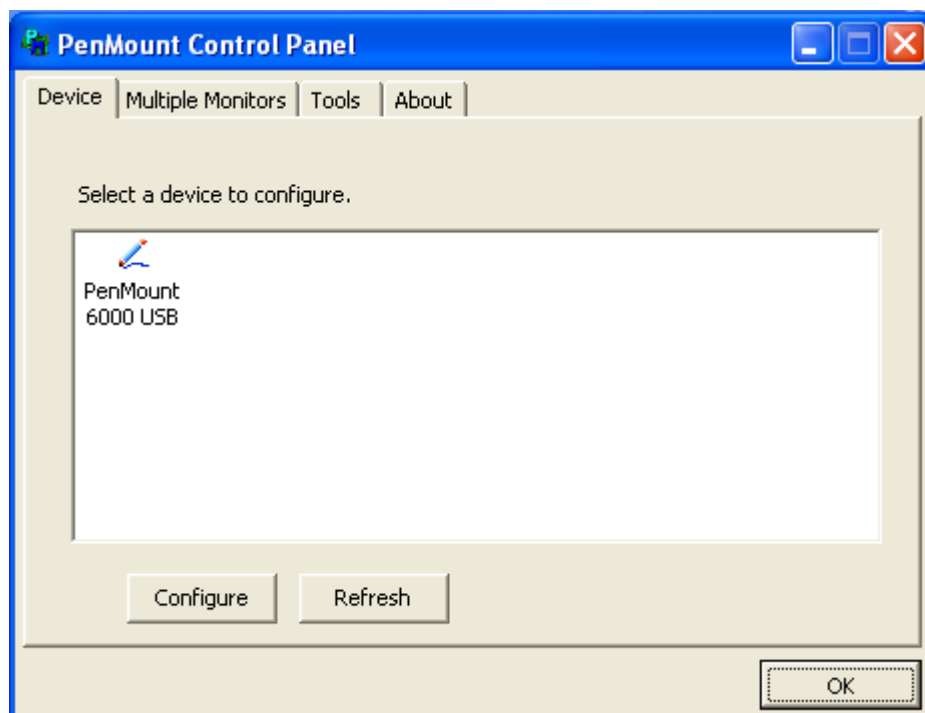


Calibrate

This function offers two ways to calibrate your touch screen. 'Standard Calibration' adjusts most touch screens. 'Advanced Calibration' adjusts aging touch screens.


Standard Calibration	Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press 'ESC'.
Advanced Calibration	Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC'.
Command Calibration	Command call calibration function. Use command mode call calibration function, this can uses Standard, 4, 9, 16 or 25 points to calibrate E.g. Please run ms-dos prompt or command prompt c:\Program Files\PenMount Universa Driver\Dmcctrl.exe -calibration 0 (Standard Calibration) Dmcctrl.exe - calibration (\$) 0= Standard Calibration 4=Advanced Calibration 4 9=Advanced Calibration 9 16=Advanced Calibration 16 25=Advanced Calibration 25

Step 1. Please select a device then click “Configure”. You can also double click the device too.

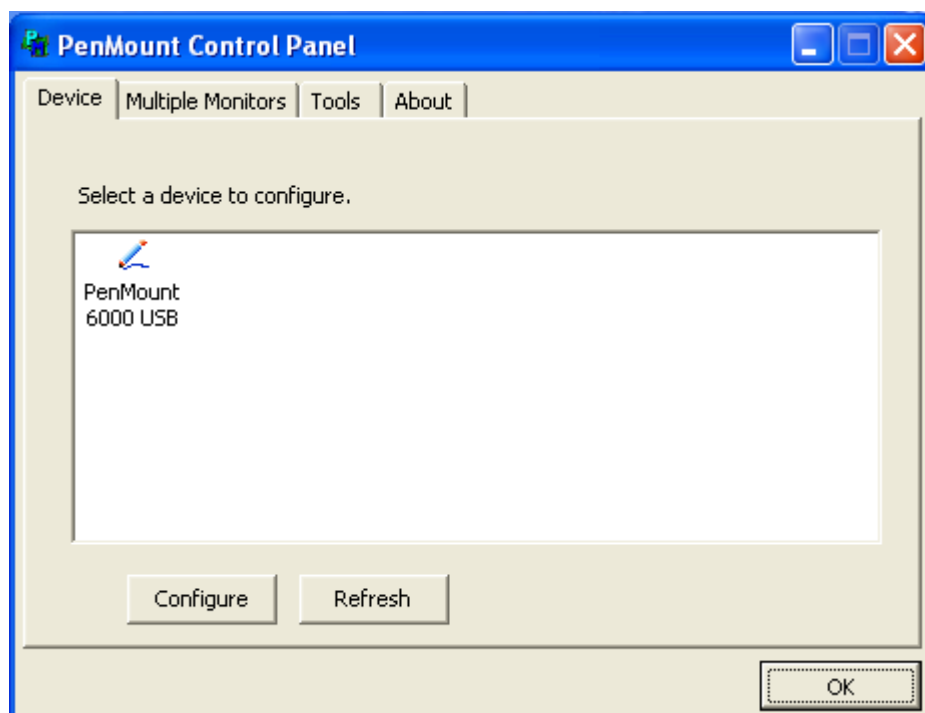


Step 2. Click “Standard Calibration” to start calibration procedure



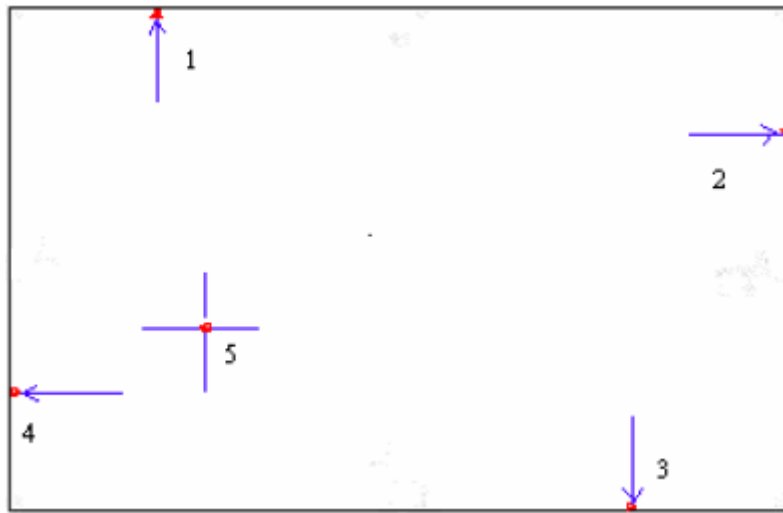


NOTE: The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:

Step 3. Come back to “PenMount Control Panel” and select **Tools** then click **Advanced Calibration**.

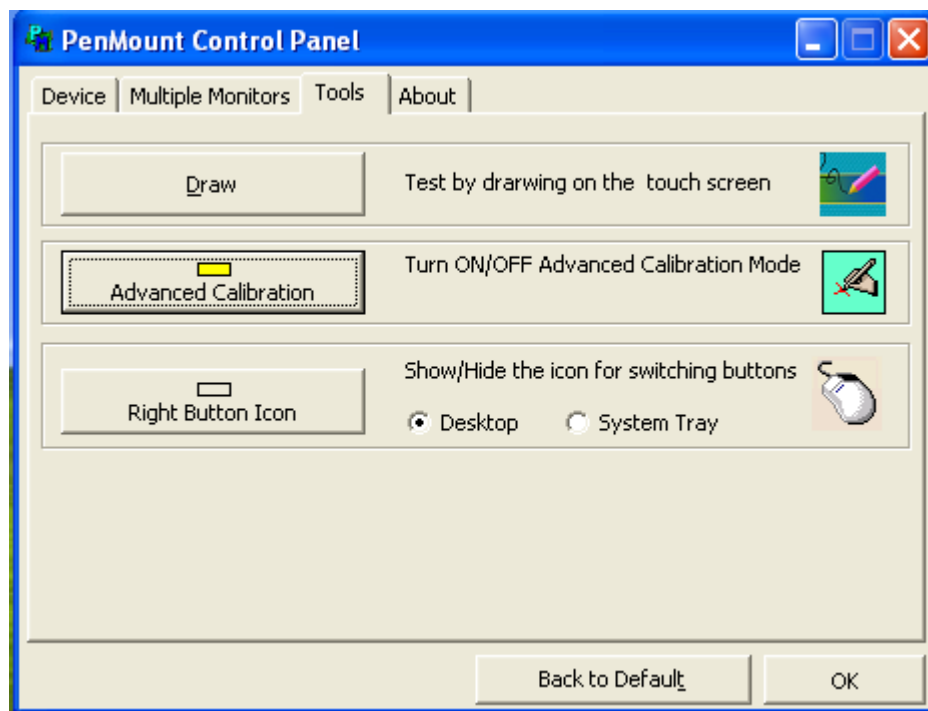

Step 4. Select **Device** to calibrate, then you can start to do **Advanced Calibration**.

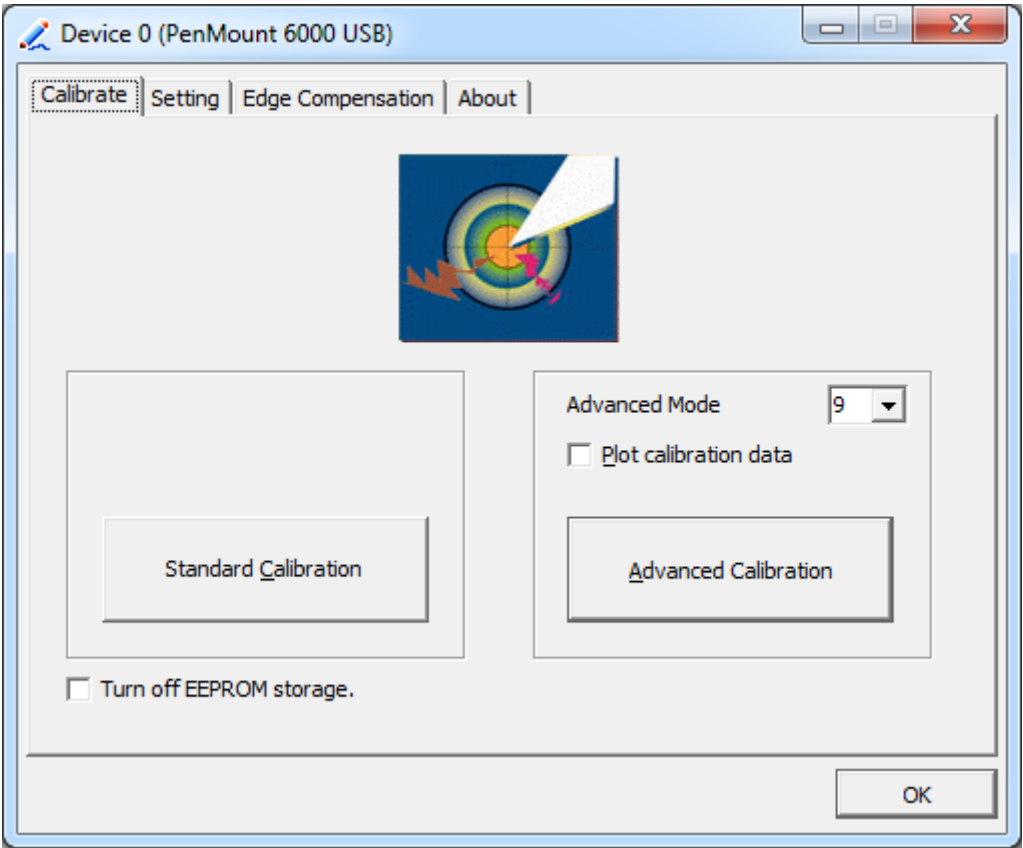


NOTE: Recommend to use a stylus during Advanced Calibration for greater accuracy.



Plot Calibration Data	Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration.
Turn off EEPROM storage	The function disable for calibration data to write in Controller. The default setting is Enable.


Setting

Touch Mode	<p>This mode enables and disables the mouse's ability to drag on-screen icons – useful for configuring POS terminals.</p> <p>Mouse Emulation – Select this mode and the mouse functions as normal and allows dragging of icons.</p> <p>Click on Touch – Select this mode and the mouse only provides a click function, and dragging is disabled.</p>
Beep Sound	<p>Enable Beep Sound – turns beep function on and off</p> <p>Beep on Pen Down – beep occurs when pen comes down</p> <p>Beep on Pen Up – beep occurs when pen is lifted up</p> <p>Beep on both – beep occurs when comes down and lifted up</p> <p>Beep Frequency – modifies sound frequency</p> <p>Beep Duration – modifies sound duration</p>
Cursor Stabilizer	Enable the function support to prevent cursor shake.
Use press and hold as right click	You can set the time out and area for you need.

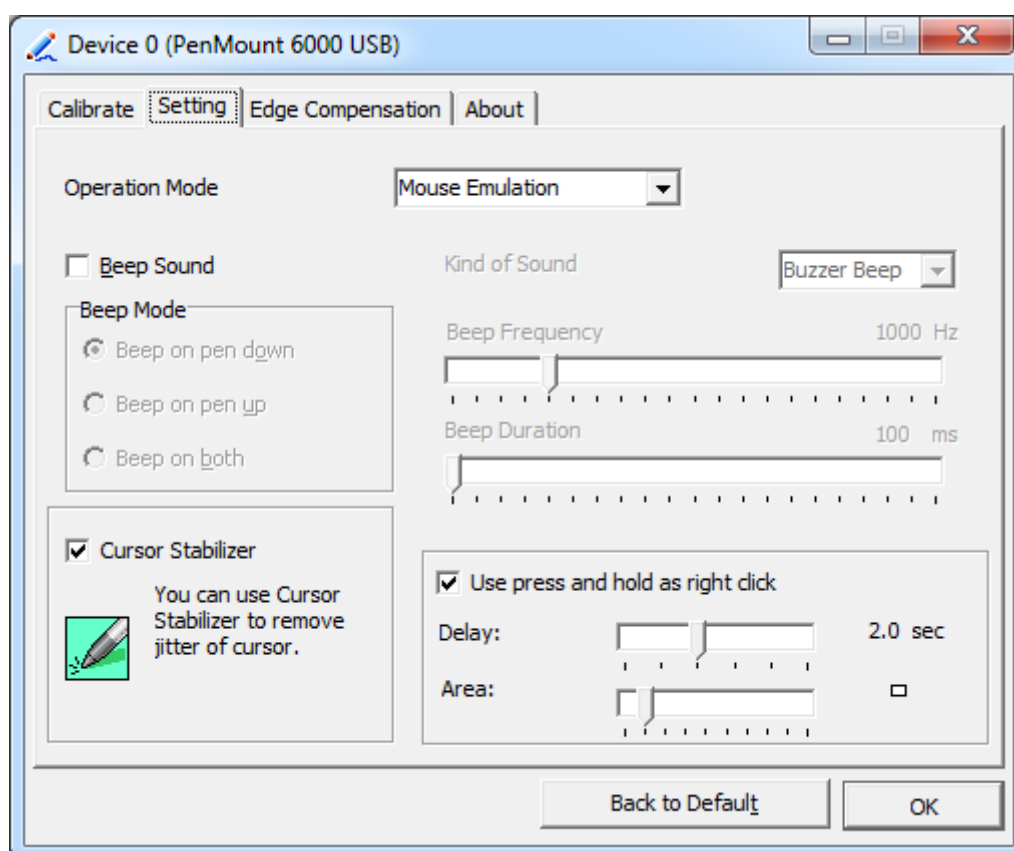


Edge Compensation

You can use Edge Compensation to calibrate more subtly.

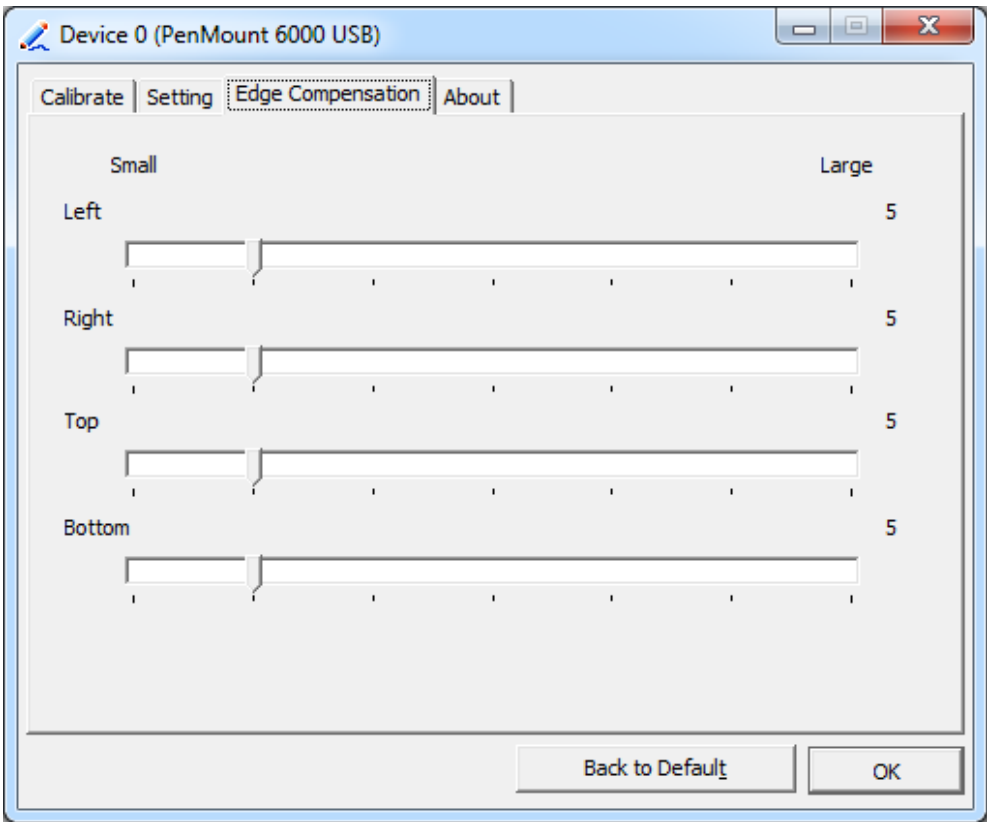

About

This panel displays information about the PenMount controller and driver version.

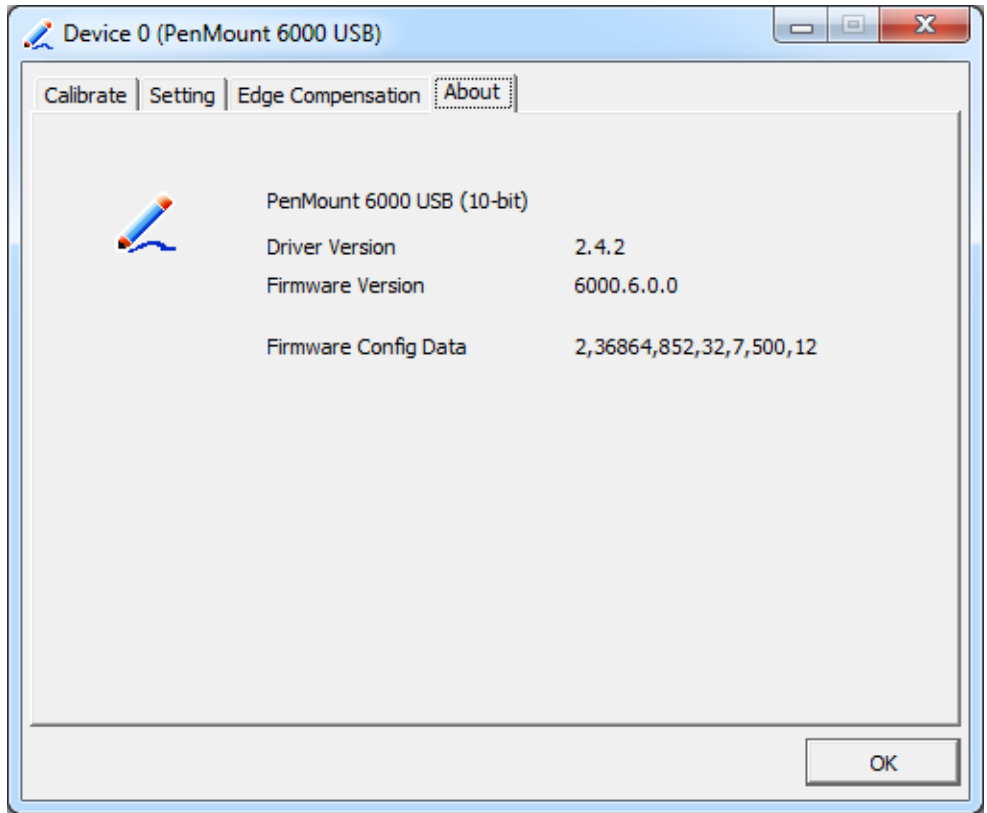

Multiple Monitors

Multiple Monitors support from two to six touch screen displays for one system.

The PenMount drivers for Windows 7/8 support Multiple Monitors. This function supports from two to six touch screen displays for one system. Each monitor requires its own PenMount touch screen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the RS-232 interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors support the following modes:

Windows Extends Monitor Function


Matrox DualHead Multi-Screen Function

nVidia nView Function


NOTE: The Multiple Monitor function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the rotating function is disabled.

Enable the multiple display function as follows:

1. Check the **Enable Multiple Monitor Support** box; then click **Map Touch Screens** to assign touch controllers to displays.

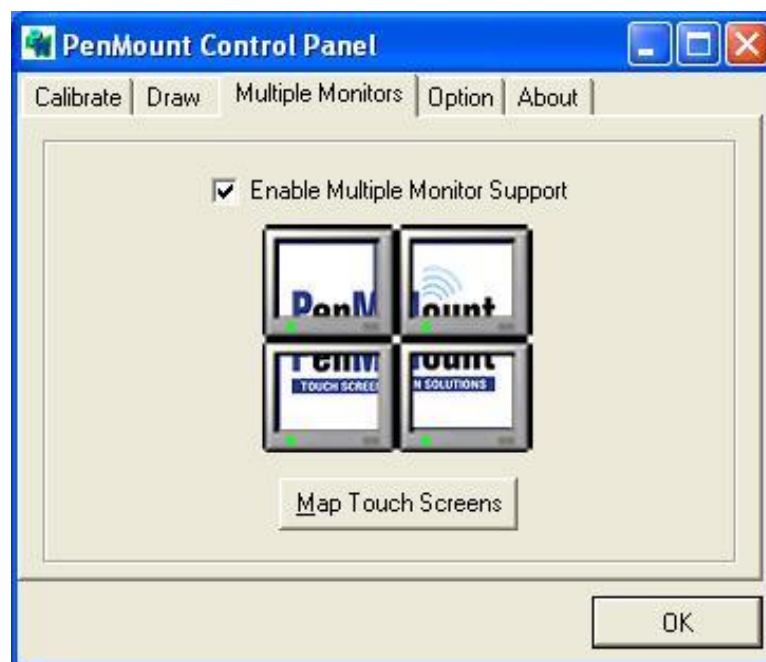

2. When the mapping screen message appears, click **OK**.

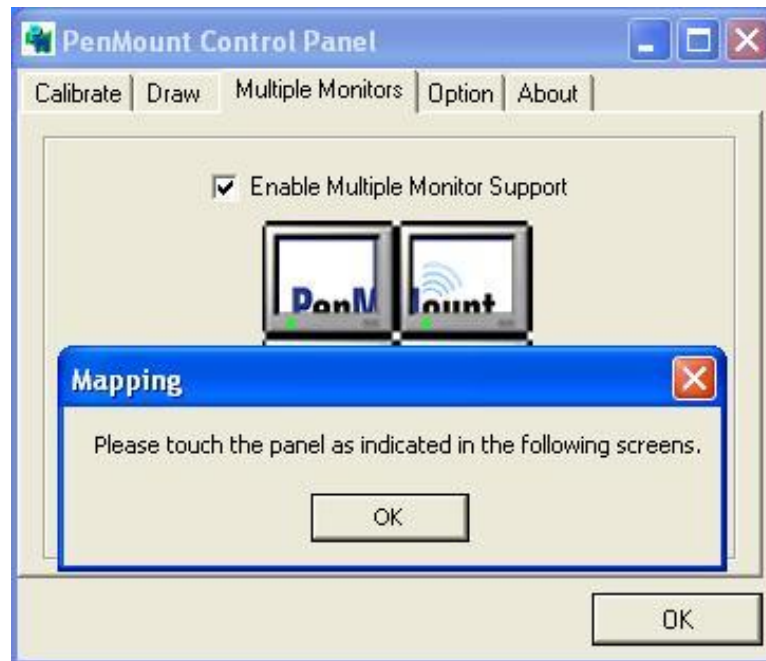

3. Touch each screen as it displays "Please touch this monitor". Following this sequence and touching each screen is called **mapping the touch screens**.



4. Touching all screens completes the mapping and the desktop reappears on the monitors.
5. Select a display and execute the "Calibration" function. A message to start calibration appears. Click OK.



6. "Touch this screen to start its calibration" appears on one of the screens. Touch the screen.
7. "Touch the red square" messages appear. Touch the red squares in sequence.
8. Continue calibration for each monitor by clicking **Standard Calibration** and touching the red squares.


NOTES: 1. If you use a single VGA output for multiple monitors, please do not use the **Multiple Monitor** function. Just follow the regular procedure for calibration on each of your desktop monitors.

2. The Rotating function is disabled if you use the Multiple Monitor function.

3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens**, so the system understands where the displays are.


About

This panel displays information about the PenMount controller and this driver version.

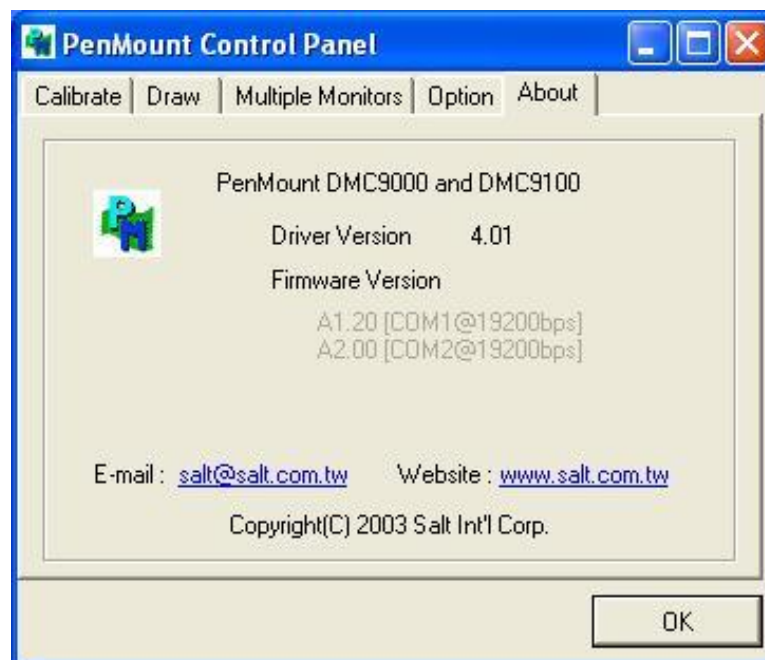

PenMount Monitor Menu Icon

The PenMount monitor icon (PM) appears in the menu bar of Windows 7/8 system when you turn on PenMount Monitor in PenMount Utilities.



PenMount Monitor has the following function



Control Panel	Open Control Panel Windows
Beep	Setting Beep function for each device
Right Button	When you select this function, a mouse icon appears in the right-bottom of the screen. Click this icon to switch between Right and Left Button functions.
Exit	Exits the PenMount Monitor function.


PenMount Rotating Functions

The PenMount driver for Windows 7/8 supports several display rotating software packages. Windows Me/2000/XP support display rotating software packages such as:

- Portrait’s Pivot Screen Rotation Software
- ATI Display Driver Rotate Function
- nVidia Display Driver Rotate Function
- SMI Display Driver Rotate Function
- Intel 845G/GE Display Driver Rotate Function

Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

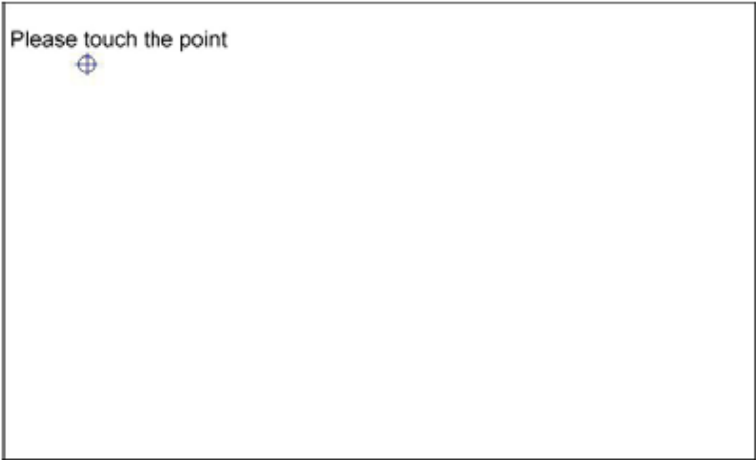

NOTE: The Rotate function is disabled if you use Monitor Mapping