

SI-58 Series

User Manual



Revision	Release Date
V0.1	2012/06/15
V0.2	2014/09/23
V0.3	2015/01/14
V0.4	2016/7/18
V0.5	2016/10/5

Copyright © 2012 IBASE Technology INC. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of IBASE Technology INC. ("IBASE").

Products and corporate names mentioned in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used for identification purposes only. All trademarks are the property of their respective owners.

Every effort has been made to ensure that the contents of this manual are correct and up to date. However, the manufacturer makes no guarantee regarding the accuracy of its contents, and reserves the right to make changes without prior notice.

Table of Contents

<i>Safety Information</i>	6
Setting up your system	6
Care during use	7
Acknowledgments	8
<i>Accessories</i>	9
<i>Components</i>	10
I/O View	10
<i>Specification</i>	12
<i>Mounting SI-58 to the Wall</i>	12
Wall mounting requirements	13
Selecting the location	13
<i>SI-58 Mounting Bracket Solution</i>	15
<i>SI-58 Optional HDMI Bracket Kit Solution</i>	16
<i>Exploded View of the SI-58 assembly</i>	17
Parts description	17
<i>Installation</i>	18
Installing CPU	18
Installing the memory	18
<i>Setting Jumper</i>	19
Jumper Locations	20
<i>BIOS Setup</i>	28
<i>Drivers Installation</i>	54
Intel Chipset Software Installation Utility	54
VGA Drivers Installation	57
Realtek HD Audio Driver Installation	61
LAN Drivers Installation	63
Intel® Management Engine Interface	67

Intel® USB 3.0 Drivers.....	70
<i>Appendix</i>	73
A. AMD Eyefinity Multiple Display	73
B. I/O Port Address Map	81

Safety Information

Your SI-58 is designed and tested to meet the latest standards of safety for information technology equipment. However, to ensure your safety, it is important that you read the following safety instructions.

Setting up your system

- Read and follow all instructions in the documentation before you operate your system.
- Do not use this product near water.
- Set up the system on a stable surface. Do not secure the system on any unstable plane.
- Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- Slots and openings on the chassis are for ventilation. Do not block or cover these openings. Make sure you leave plenty of space around the system for ventilation. ***Never insert objects of any kind into the ventilation openings.***
- This system should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Use this product in environments with ambient temperatures between 0°C and 45°C.
- If you use an extension cord, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed its ampere rating.
- DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 80° C (176° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.

Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill water or any other liquids on your system.
- When the system is turned off, a small amount of electrical current still flows. Always unplug all power, and network cables from the power outlets before cleaning the system.
- If you encounter the following technical problems with the product, unplug the power cord and contact a qualified service technician or your retailer.
 - The power cord or plug is damaged.
 - Liquid has been spilled into the system.
 - The system does not function properly even if you follow the operating instructions.
 - The system was dropped or the cabinet is damaged.

Lithium-Ion Battery Warning

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

NO DISASSEMBLY

The warranty does not apply to the products that have been disassembled by users

WARNING



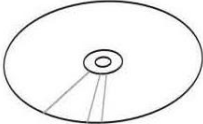
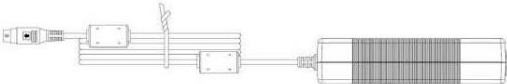
HAZARDOUS MOVING PARTS

KEEP FINGERS AND OTHER BODY PARTS AWAY

Acknowledgments

- AMI is a registered trademark of AMI Software International, Inc.
- AMD and ATI are registered trademarks of AMD Corporation.
- Microsoft Windows is a registered trademark of Microsoft Corporation.
- FINTEK is a registered trademark of FINTEK Electronics Corporation.
- REALTEK is a registered trademark of REALTEK Electronics Corporation.
- All other product names or trademarks are properties of their respective owners.

Accessories

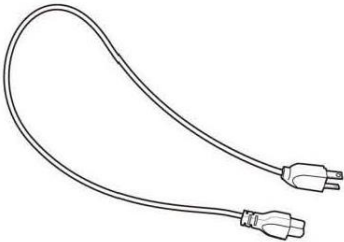	
a. Power Cord x 1	b. System Manual x 1
	
c. Driver CD x 1	d. Power Brick x 1

Components

I/O View

Refer to the diagram below to identify the components on this side of the system.



Power Bottom

The power switch allows powering ON and OFF the system.

HDD

The hard disk LED blinks when data is being written into or read from the hard disk

HDD

The power LED illuminated when system been power on.

HDMI 1/2/3/4/5/6

The HDMI (High Definition Multimedia Interface) (connector 6 exclusive) interface to transmitting uncompressed digital data come from E6760 (discrete graphic chip).

LAN 1/ LAN2

The eight-pin RJ-45 LAN port supports a standard Ethernet cable for connection to a local network.

COM 1/ COM 2

Communication or serial port is compatible with RJ 45 interface without RI (ring indicator) signal.

USB

The USB (Universal Serial Bus) port is compatible with USB devices such as keyboards, mouse devices, cameras, and hard disk drives. USB allows many devices to run simultaneously on a single computer, with some peripheral acting as additional plug-in sites or hubs.

AUDIO

The stereo audio jack (3.5mm) is used to connect the system's audio out signal to amplified speakers or headphones.

DC-IN 12 V


The supplied power adapter converts AC power to DC power for use with this jack. Power supplied through this jack supplies power to the system. To prevent damage to the system, always use the supplied power adapter.

Specification

System Mainboard	IB958-58
Construction	SGCC 1.0t
Chassis Color	Black / White
Storage	2.5" 160GB SATA HDD x 1
Mounting	Wall mount
Power Supply	150W DC adapter
Operating Temperature	0°C ~ 45°C (32°F ~ 113°F)
Storage Temperature	-20°C ~ 80°C
Relative Humidity	5~90% @45°C (non-condensing)
Vibration	HDD: 0.25 Grms/5~500Hz random operation
Shock	HDD: 15 Grms peak acceleration (11 msec duration)
RoHS	Available

·This specification is subject to change without prior notice.

Mounting SI-58 to the Wall

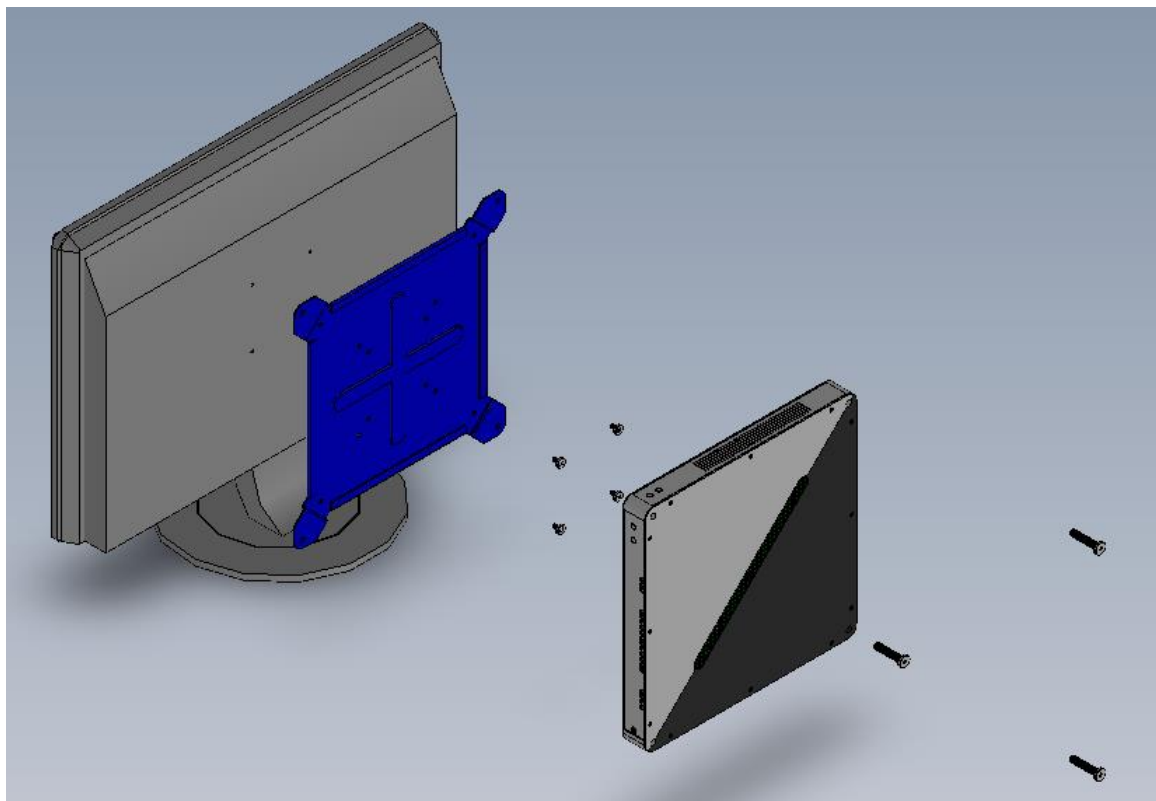

You can install SI-58 on plastic (LCD monitor), wood, drywall surface over studs, or a solid concrete or metal plane directly. Ensure the installer uses at least four M3 length 6mm screws to secure the system on wall. ***Six M3 length 6mm screws are recommended to secure the system on wall.***

Fasteners are not included with the unit, and must be supplied by the installer. The types of fasteners required are dependent on the type of wall construction. Choose fasteners that are rated either "Medium Duty" or "Heavy Duty." To assure proper fastener selection and installation, follow the fastener manufacturer's recommendations.

Wall mounting requirements

Note: Before mounting the system on wall, ensure that you are following all applicable building and electric codes.

When mounting, ensure that you have enough room for power and signal cable routing. And have good ventilation for power adapter. The method of mounting must be able to support weight of the SI-58 plus the suspend weight of all the cables to be attached to the system. Use the following methods for mounting your system:

Mounting to hollow walls

- **Method 1: Wood surface** – A minimum wood thickness – 38mm (1.5in.) by 25.4 cm (10in.) – of high, construction – grade wood is recommended.
Note: This method provides the most reliable attachment of the unit with little risk that the unit will come loose or require ongoing maintenance.
- **Method 2: Drywall walls** - Drywall over wood studs is acceptable.

Mounting to a solid concrete or brick wall - Mounts on a flat smooth surface.

Selecting the location



Plan the mounting location thoroughly. Locations such as walkway areas, hallways, and crowded areas are not recommended. Mount the unit to a flat, sturdy, structurally sound column or wall surface.

The best mounting surface is a standard countertop, cabinet, table, or other structure that is minimally the width and length of the unit. This recommendation reduces the risk that someone may accidentally walk into and damage the device. Local laws governing the safety of individuals might require this type of consideration.


SI-58 Mounting Bracket Solution

SI-58 mounting bracket (IBASE) part number: SC2SI58----0A1100P

Please install SI-58 to the mounting bracket using 4 screws, as shown in the picture.

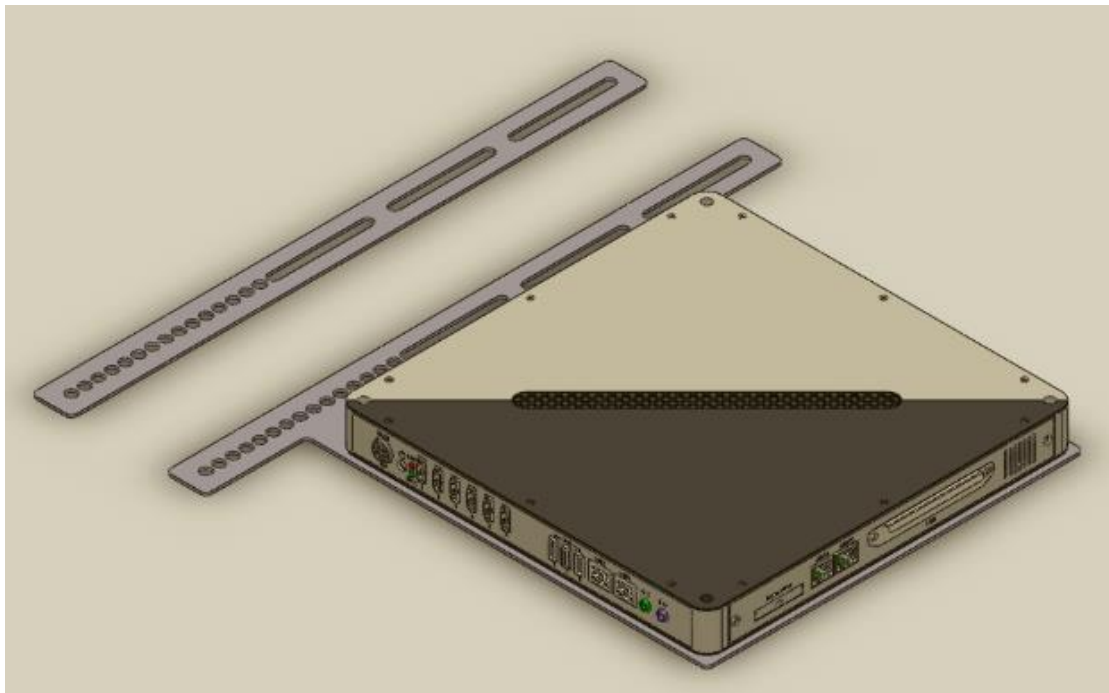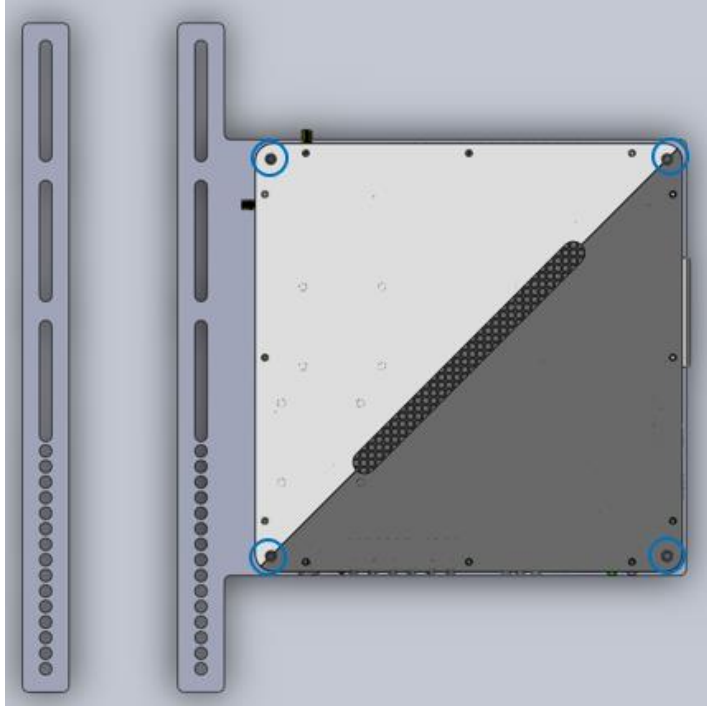


SI-58 Optional HDMI Bracket Kit Solution

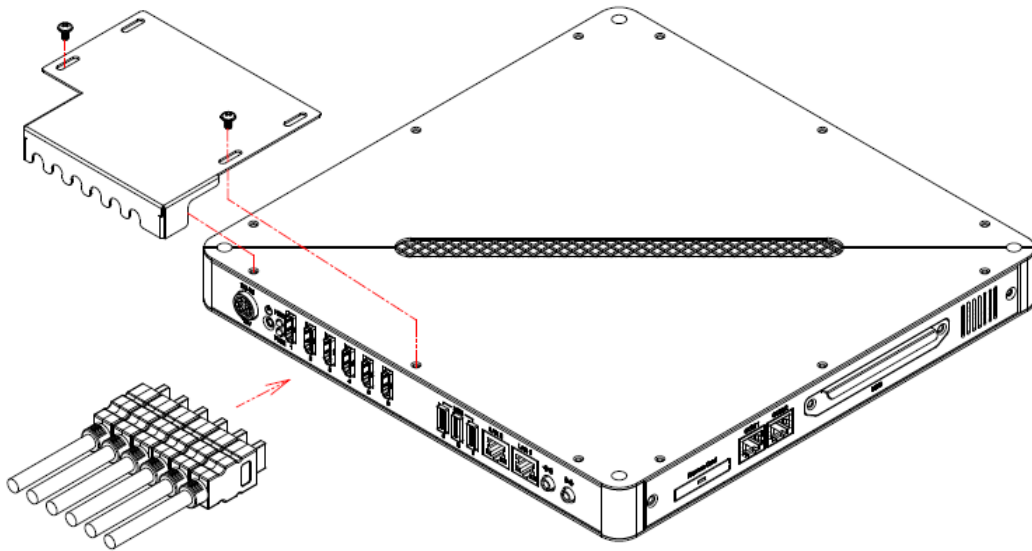

Step 1. Make sure the HDMI cables are connected to the corresponding port.

Step 2. Put the HDMI bracket and tighten with the 2 exclusive screws as shown.

Exploded View of the SI-58 assembly

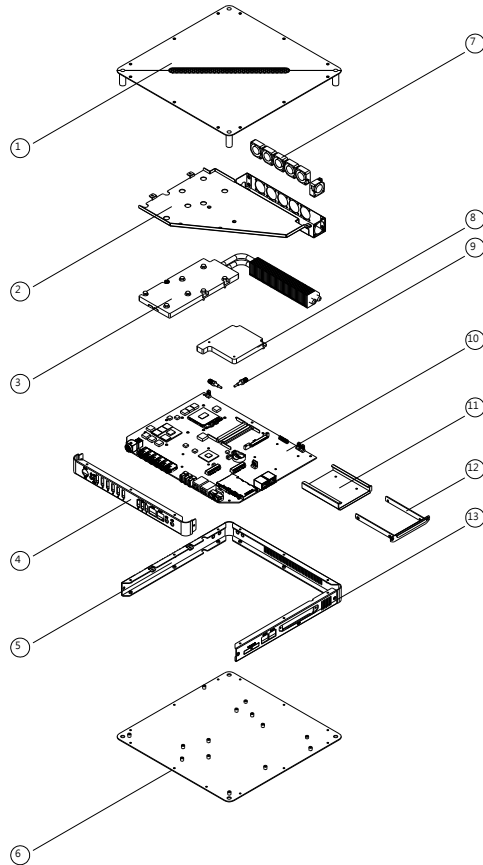

Parts description


Part No.	Description	Part No.	Description
1	Top cover	2	Fan Bracket
3	Heatsink-1	4	Front Panel
5	Panel-1	6	Base
7	Fan set	8	Heatsink-2
9	Antenna screw	10	IB958-58 MB
11	HDD Bracket	12	HDD Tray
13	Panel-2		

Installation

Installing CPU

The SI-58 (IB958 board) supports rPGA988B socket for Intel® Sandy Bridge Dual Core mobile processors.

The processor socket comes with a screw to secure the processor. As shown in the left picture below, loosen the screw first before inserting the processor. Place the processor into the socket by making sure the notch on the corner of the CPU corresponds with the notch on the inside of the socket. Once the processor has slide into the socket, fasten the screw. Refer to the figures below.

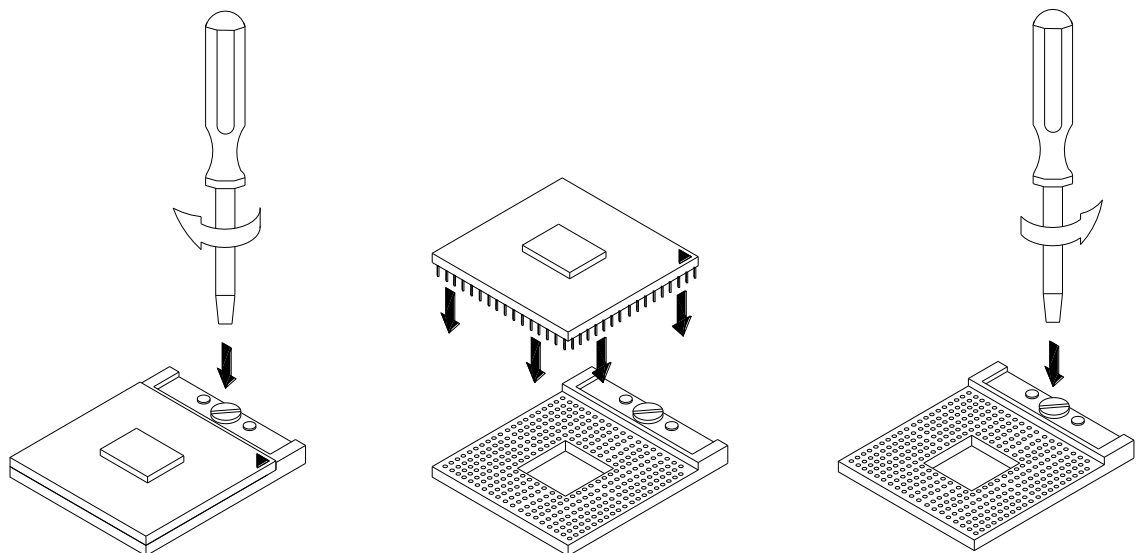

Installing the memory


The IB958 board supports two DDR3 memory socket for a maximum total memory of 8GB in DDR3 SO-DIMM memory type.

Installing and Removing Memory Modules

To install the DDR3 modules, locate the memory slot on the board and perform the following steps:

1. Hold the DDR3 module so that the key of the DDR3 module aligns with that on the memory slot. Insert the module into the socket at a slight angle (approximately 30 degrees). Note that the socket and module are both keyed, which means that the module can be installed only in one direction.

2. To seat the memory module into the socket, apply firm and even pressure to each end of the module until you feel it slip down into the socket.
3. With the module properly seated in the socket, rotate the module downward. Continue pressing downward until the clips at each end lock into position.
4. To remove the DDR3 module, press the clips with both hands.

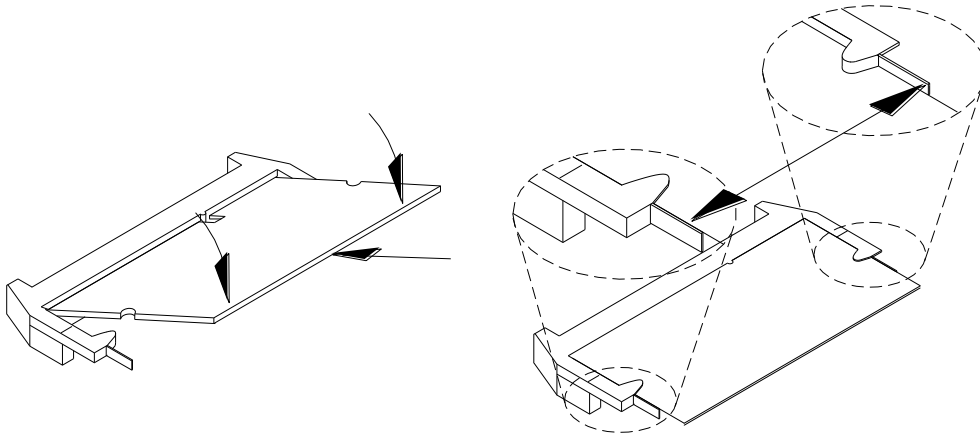


Setting Jumper



Jumpers are used on IB958 to select various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your needs. The following lists the connectors on IB958 and their respective functions.

Jumper Locations on IB958	Page 15
JP1: Clear CMOS Contents	Page 15
JP2: Clear ME Contents	Page 16
J8: Flash Descriptor Security Override (Factory use only)	Page 16



Jumper Locations

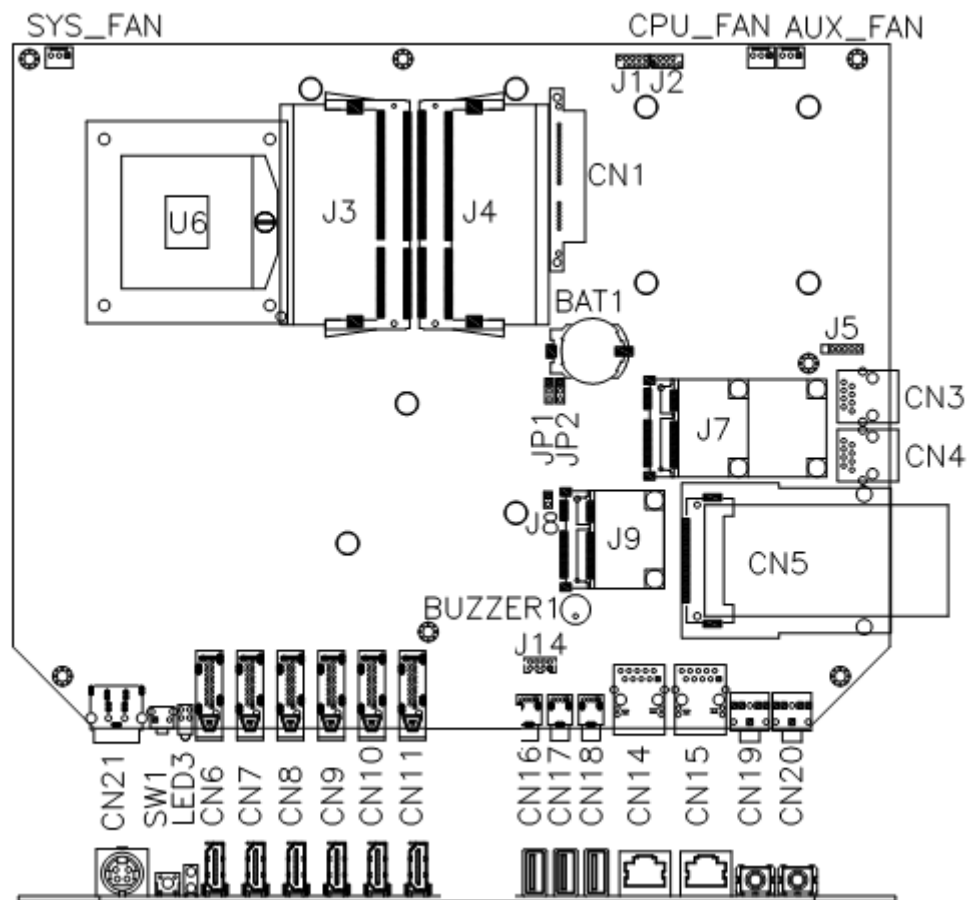

JP1: Clear CMOS Setting

JP1	Setting	Function
 1 2 3	Pin 1-2 Short/Closed	Normal
 1 2 3	Pin 2-3 Short/Closed	Clear CMOS


JP2: Clear ME Setting


JP2	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear ME

JP8: Flash Descriptor Security Override (Factory use only)

J8	Flash Descriptor Security Override
Open	Disabled (Default)
Close	Enabled

Connector Locations on IB958

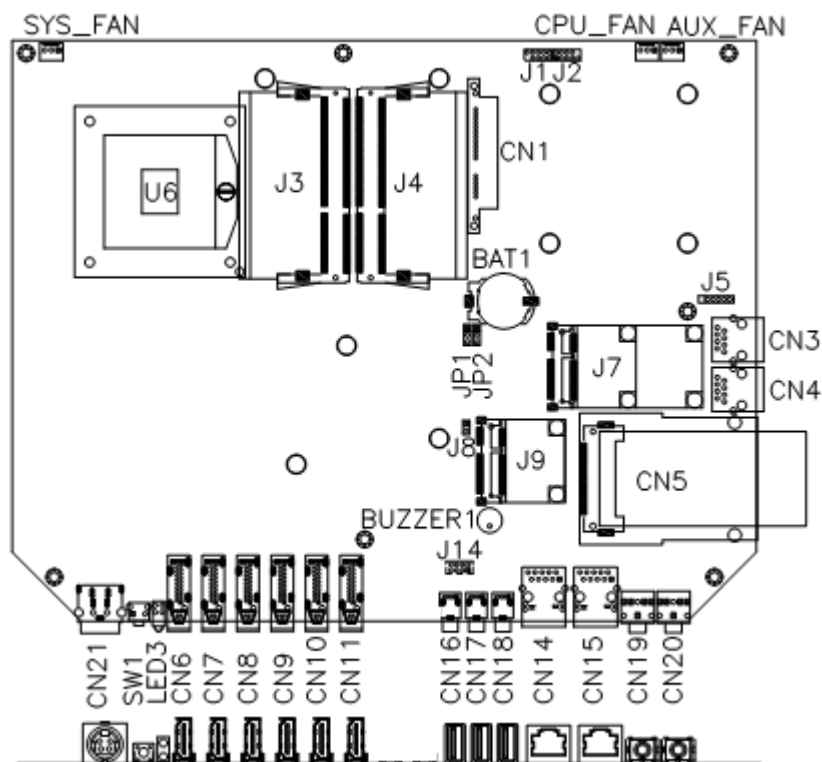

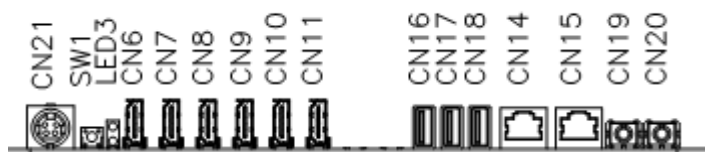


CN1: SATA HDD Dock

The SATA HDD dock combines a SATA power connector and a SATA interface connector

Signal Name	Pin #	Pin #	Signal Name
GND	S1	P1	V3.3
A+	S2	P2	V3.3
A-	S3	P3	V3.3
GND	S4	P4	GND
B+	S5	P5	GND
B-	S6	P6	GND
GND	S7	P7	GND
		P8	V5
		P9	V5
		P10	V5
		P11	Reserve
		P12	GND


CN3, CN 4: Console Port (CN3 COM2, CN4 COM1)

The console port is an RJ45 RS-232 serial port.



Pin #	Signal Name
1	RTS
2	DTR
3	TXD
4	GND
5	DCD
6	RXD
7	DSR
8	CTS

CN5: Express Card

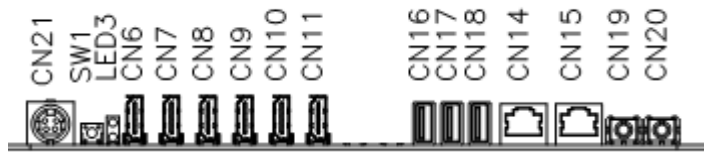

CN6, CN7, CN8, CN9, CN10, CN11: ATI E6760 HDMI Connectors

Signal Name	Pin #	Pin #	Signal Name
DATA 2-	1	2	GND
DATA 2+	3	4	DATA 1+
GND	5	6	DATA 1-
DATA 0+	7	8	GND
DATA 0-	9	10	CLOCK +
GND	11	12	CLOCK -
NC	13	14	NC
DDC CLOCK	15	16	DDC DATA
GND	17	18	+5V
HOT POWER	19	20	N.C.

Remarks: CN6/CN7 supports HDMI.

CN12, CN13: Intel Chipset HDMI Connectors

Signal Name	Pin #	Pin #	Signal Name
DATA 2-	1	2	GND
DATA 2+	3	4	DATA 1+
GND	5	6	DATA 1-
DATA 0+	7	8	GND
DATA 0-	9	10	CLOCK +
GND	11	12	CLOCK -
NC	13	14	NC
DDC CLOCK	15	16	DDC DATA
GND	17	18	+5V
HOT POWER	19	20	N.C.


Remarks: CN12/CN13 supports HDMI.

CN14, CN15: Gigabit LAN RJ45 Ports

CN16, CN17, CN18: USB1/2/3 Ports

CN19, CN20: Audio Line In and Line Out

CN21: DC Power Jack (+12V only)



Pin #	Signal Name
1	+12V
2	+12V
3	GND
4	GND
5	GND

SW1: Power Button

LED3: Power LED and HDD LED

The green LED at the bottom is power LED. The red LED on top is the HDD LED.

J1: SPI Flash Connector (factory use only)

J2: LPC Connector (factory use only)


J3: DDR II DIMM Socket CHA

J4: DDR II DIMM Socket CHB

J5: Msp430F2330 Flash Connector (factory use only)

J7, J9: Mini PCI-E X1 Socket

J14: USB5/USB6 Connector



Signal Name	Pin	Pin	Signal Name
Vcc	1	2	Ground
D0-	3	4	D1+
D0+	5	6	D1-
Ground	7	8	Vcc

CPU_FAN: CPU Fan Power Connector



Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection

SYS_FAN: SYSTEM Fan Power Connector



Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection

AUX_FAN: SYSTEM Fan Power Connector



Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection

BIOS Setup

BIOS Introduction

The BIOS (Basic Input/Output System) installed in your computer system's ROM supports Intel processors. The BIOS provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

```
Press <DEL> or <F2> to Enter Setup
```

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Main BIOS Setup

This setup allows you to record some basic hardware configurations in your computer system and set the system clock.

Aptio Setup Utility – Copyright © 2010 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
BIOS INFORMATION					
System Language		[English]			
System Date		[Tue 01/06/2009]			
System Time		[00:08:21]			
Access Level		Administrator			
<div>→ ← Select Screen</div> <div>↑ ↓ Select Item</div> <div>Enter: Select</div> <div>+– Change Field</div> <div>F1: General Help</div> <div>F2: Previous Values</div> <div>F3: Optimized Default</div> <div>F4: Save & Exit</div> <div>ESC: Exit</div>					

Note: *If the system cannot boot after making and saving system changes with Setup, the AMI BIOS supports an override to the CMOS settings that resets your system to its default.*

Warning: *It is strongly recommended that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could cause the system to become unstable and crash in some cases.*

System Language

Choose the system default language.

System Date

Set the Date. Use Tab to switch between Data elements.

System Time

Set the Time. Use Tab to switch between Data elements.

Advanced Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility	
Main	Advanced Chipset Boot Security Save & Exit
Legacy OpROM Support	
Launch PXE OpROM	[Disabled]
Launch Storage OpROM	[Enabled]
▶ PCI Subsystem Settings	
▶ ACPI Settings	
▶ Wake up event setting	
▶ CPU Configuration	
▶ Shutdown Temperature Configuration	
▶ Auto Power On Schedule	
▶ SATA Configuration	
▶ PCH-FW Configuration	
▶ AMT Configuration	
▶ USB Configuration	
▶ Super IO Configuration	
▶ H/W Monitor	
▶ Serial Port Console Redirection	
▶ Sandybridge PPM Configuration	
→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save & EXIT ESC: Exit	

Launch PXE OpROM

Enable or Disable Boot Option for Legacy Network Devices.

Launch Storage OpROM

Enable or Disable Boot Option for Legacy Mass Storage Devices with Option ROM.

PCI Subsystem Settings

This section allows you to configure the PCI, PCI-X and PCI Express settings.

Aptio Setup Utility	
Main	Advanced Chipset Boot Security Save & Exit
PCI Bus Driver Version	V 2.03.00
PCI ROM Priority	EFI Compatible ROM
PCI Common Settings	
PCI Latency Timer	32 PCI Bus Clocks
VGA Palette Snoop	Disabled
PERR# Generation	Disabled
SERR# Generation	Disabled
PCI Express Device Settings	
Relaxed Ordering	Disabled
Extended Tag	Disabled
No Snoop	Enabled
Maximum Payload	Auto
Maximum Read Request	Auto
PCI Express Link Settings	
ASPM Support	Disabled
WARNING: Enabling ASPM may cause some PCI-E devices to fail	
Extended Synch	Disabled

→ ← Select Screen
 ↑ ↓ Select Item
 Enter: Select
 +- Change Field
 F1: General Help
 F2: Previous Values
 F3: Optimized Default
 F4: Save & Exit
 ESC: Exit

PCI ROM Priority

In case of multiple Option ROMs (Legacy and EFI Compatible), specifies what PCI Option ROM to launch.

PCI Latency Timer

Value to be programmed into PCI Latency Timer Register.

VGA Palette Snoop

Enables or Disables VGA Palette Registers Snooping.

PERR# Generation

Enables or Disables PCI Device to Generate PERR#.

SERR# Generation

Enables or Disables PCI Device to Generate SERR#.

Relaxed Ordering

Enables or Disables PCI Express Device Relaxed Ordering.

Extended Tag

If ENABLED allows Device to use 8-bit Tag field as a requester.

No Snoop

Enables or Disables PCI Express Device No Snoop option.

Maximum Payload

Set Maximum Payload of PCI Express Device or allow System BIOS to select the value.

Maximum Read Request

Set Maximum Read Request Size of PCI Express Device or allow System BIOS to select the value.

ASPM Support

Set the ASPM Level: Force L0- Force all links to L0 Stage:

AUTO – BIOS auto configure:

DISABLE- Disables ASPM.

Extended Synch

If ENABLED allows generation of Extended Synchronization patterns.

ACPI Settings

System ACPI Parameters.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Enable ACPI Auto Configuration			Disabled		→ ← Select Screen
Enable Hibernation			Enabled		↑ ↓ Select Item
ACPI Sleep State			S3 (Suspend to R...)		Enter: Select
Lock Legacy Resources			Disabled		+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save & Exit
					ESC: Exit

Enable ACPI Auto Configuration

Enables or Disables BIOS ACPI Auto Configuration.

Enable Hibernation

Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

ACPI Sleep State

Select the highest ACPI sleep state the system will enter, when the SUSPEND button is pressed.

Lock Legacy Resources

Enables or Disables System Lock of Legacy Resources.

Wake up event settings

Enable/Disable Wake up event.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Wake system with Fixed Time			Disabled		<div>→ ← Select Screen</div> <div>↑ ↓ Select Item</div> <div>Enter: Select</div> <div>+ - Change Field</div> <div>F1: General Help</div> <div>F2: Previous Values</div> <div>F3: Optimized Default</div> <div>F4: Save & Exit</div> <div>ESC: Exit</div>
Wake on Ring			Disabled		
Wake on PCIE Wake Event			Disabled		

Wake system with Fixed Time

Enables or Disables System wake on alarm event. When enabled, System will wake on the hr::min:: sec specified.

Wake on Ring

The options are Disabled and Enabled.

Wake on PCIE Wake Event

The options are Disabled and Enabled.

CPU Configuration

This section shows the CPU configuration parameters.

Aptio Setup Utility				
Main	Advanced	Chipset	Boot	Security
Save & Exit				
CPU Configuration				
Intel® Core™ i7-7210QE CPU @ 2.10GHz				
EMT64	Supported			
Max Processor Speed	2100 MHz			
Min Processor Speed	800 MHz			
Processor Speed	2100 MHz			
Processor Stepping	206a7			
Microcode Revision	D			
Processor Cores	4			
Intel HT Technology	Supported			
Hyper-threading	Enabled			
Active Processor Cores	All			
Limit CPUID Maximum	Disabled			
Execute Disable Bit	Enabled			
Hardware Prefetcher	Enabled			
Adjacent Cache Line Prefetch	Enabled			
Intel Virtualization Technology	Enabled			
Local x2APIC	Disabled			

Hyper-threading

Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled, only one thread per enabled core is enabled.

Active Processor Cores

Number of cores to enable in each processor package.

Limit CPUID Maximum

Disabled for Windows XP.

Execute Disable Bit

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)

Hardware Prefetcher

To turn on/off the MLC streamer prefetcher.

Adjacent Cache Line Prefetch

To turn on/off prefetching of adjacent cache lines.

Intel Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology

Local x2APIC

Enable Local x2APIC. Some OSes do not support this.

Shutdown Temperature Configuration

The default setting is Disabled.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
ACPI Shutdown Temperature				Disabled	[Enable] Provide the Standby Power for devices. [Disable] Shutdown the standby power.

Auto Power On Schedule

Main	Advanced	Chipset	Boot	Security	Save & Exit
Schedule Slot 1				None	[Enable] Provide the Standby Power for devices.
Schedule Slot 2				None	[Disable] Shutdown the standby power.

Schedule Slot 1

Setup the hour/minute for system power on.

Schedule Slot 2

Setup the hour/minute for system power on.

SATA Configuration

SATA Device Options Settings

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
SATA Controllers(s)		Enabled		Enable or disable SATA Device.	
SATA Mode Selection		IDE			
Serial ATA Port 0		Empty			
Software Preserve		Unknown			
Serial ATA Port 1		Empty			
Software Preserve		Unknown			
Serial ATA Port 2		Empty			
Software Preserve		Unknown			
Serial ATA Port 3		Empty			
Software Preserve		Unknown			
Serial ATA Port 4		Empty			
Software Preserve		Unknown			
Serial ATA Port 5		Empty			
Software Preserve		Unknown			

SATA Mode

Determines how SATA controllers(s) operate. The options are IDE, AHCI and RAID.

PCH-FW Configuration

Configure Management Engine Technology Parameters.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
					Configure Management Engine
ME FW Version			7.0.4.1197		Technology Parameters.
ME Firmware Mode					
ME Firmware Type			Full Sku Firmware		
ME Firware SKU			Unidentified		
Firmware Update Configuration					→ ← Select Screen
					↑ ↓ Select Item
					Enter: Select
					+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save & Exit
					ESC: Exit

AMT Configuration

Configure Active Management Technology Parameters.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
	Intel AMT		Enabled		
	Intel AMT Setup Prompt		Enabled		
	BIOS Hotkey Pressed		Disabled		
	MEBx Selection Screen		Disabled		
	Verbose Mebx Output		Enabled		
	Hide Un-Configure ME Confirmation		Disabled		
	MeBx Debug Message Output		Disabled		
	Un-Configure ME		Disabled		→ ← Select Screen
	Intel AMT Password Write Enabled		Enabled		↑ ↓ Select Item
	Amt Wait Timer		0		Enter: Select
	ASF		Enabled		+ - Change Field
	Activate Remote Assistance Process		Disabled		F1: General Help
	USB Configure		Enabled		F2: Previous Values
	PET Progress		Enabled		F3: Optimized Default
	Intel AMT SPI Protected		Disabled		F4: Save
	AMT CIRA Timeout		0		ESC: Exit
	Watchdog		Disabled		
	OS Timer		0		
	BIOS Timer		0		

Intel AMT

Enable/Disable Intel® Active Management Technology BIOS Extension. Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.

Intel AMT Setup Prompt

OEMFLag Bit 0:

Enable/Disable Intel AMT Setup Prompt to wait for hot-key to enter setup.

BIOS Hotkey Pressed

OEMFLag Bit 1:

Enable/Disable BIOS hotkey press.

MeBx Selection Screen

OEMFLag Bit 2:

Enable/Disable MEBx selection screen.

Verbose Mebx Output

OEMFLag Bit 3:

Enable/Disable Verbose Mebx Output.

Hide Un-Configure ME Confirmation

OEMFLag Bit 6:

Hide Un-Configure ME without password Confirmation Prompt.

MeBx Debug Message Output

OEMFLag Bit 14:

Enable MEBx debug message output.

Un-Configure ME

OEMFLag Bit 15:

Un-Configure ME without password.

Intel AMT Password Write Enabled

Enable/Disable Intel AMT Password Write. Password is writeable when set Enable.

Amt Wait Timer

Set timer to wait before sending ASF_GET_BOOT_OPTIONS.

ASF

Enable/Disable Alert Specification Format.

Activate Remote Assistance Process

Trigger CIRA boot.

USB Configuration

USB Configuration Parameters.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					
USB Devices:					
2 Hubs					
Legacy USB Support			Enabled	→ ← Select Screen	
XHCI Hand-off			Enabled	↑ ↓ Select Item	
EHCI Hand-off			Enabled	Enter: Select	
					+ - Change Field
USB hardware delays and time-outs:					F1: General Help
USB transfer time-out			20 sec	F2: Previous Values	
Device reset time-out			20 sec	F3: Optimized Default	
Device power-up delay			Auto	F4: Save ESC: Exit	

Legacy USB Support

Enables Legacy USB support.

AUTO option disables legacy support if no USB devices are connected.

DISABLE option will keep USB devices available only for EFI applications.

XHCI Hand-off

This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

EHCI Hand-off

This is a workaround for OSeS without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

USB transfer time-out

The time-out value for Control, Bulk, and Interrupt transfers.

Device reset time-out

USB mass storage device Start Unit command time-out.

Device power-up delay

Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100 ms, for a hub port the delay is taken from Hub Descriptor.

Super IO Configuration

System Super IO Chip Parameters.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Super IO Configuration					→ ← Select Screen
Super IO Chip					↑ ↓ Select Item
▶ Serial Port 0 Configuration					Enter: Select
▶ Serial Port 1 Configuration					+ - Change Field
Power Failure					F1: General Help
Always off					F2: Previous Values
					F3: Optimized Default
					F4: Save & Exit
					ESC: Exit

Serial Port Configuration

Set Parameters of Serial Ports. User can Enable/Disable the serial port and Select an optimal settings for the Super IO Device.

Power Failure

Options are:

Keep last state

Always on

Always off (default)

H/W Monitor

Monitor hardware status.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
PC Health Status				→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save & Exit ESC: Exit	
► Smart Fan Mode Configuration					
SYSTIN Temperature		+46 C			
CPUTIN Temperature		+45 C			
AUXTIN Temperature		+47 C			
System Fan Speed		5976 RPM			
CPU Fan Speed		5976 RPM			
AUX Fan Speed		5285 RPM			
CPUVcore		+1.088 V			
+12V		+11.721 V			
AVCC		+3.328 V			
3VCC		+3.328 V			
+5V		+5.120 V			

Temperatures/Voltages

These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status.

Smart Fan Mode Configuration

This field enables (55C/60C/65C/70C) or disables the smart fan feature. At a certain temperature, the fan starts turning. Once the temperature drops to a certain level, it stops turning again.

Serial Port Console Redirection

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
COM0 (Disabled)					
Console Redirection			Port is Disabled		
COM4(PCI Dev0, Func0) (Disabled)					
Console Redirection			Port is Disabled		
Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS)					
Console Redirection			Enabled		
Out-of-Band Mgmt Port			COM0 (Disabled)		
Data Bits			8		
Parity			None		
Stop Bits			1		
Terminal Type			VT-UTF8		

→ ← Select Screen

↑ ↓ Select Item

Enter: Select

+ - Change Field

F1: General Help

F2: Previous Values

F3: Optimized Default

F4: Save & Exit

ESC: Exit

Console Redirection

Console Redirection Enable/Disable.


Out-of-Band Mgmt Port

Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.

Terminal Type

VT-UTF8 is the preferred terminal type for out-of-band management. The next best choice is VT100+ and then VT100.

Sandybridge PPM Configuration

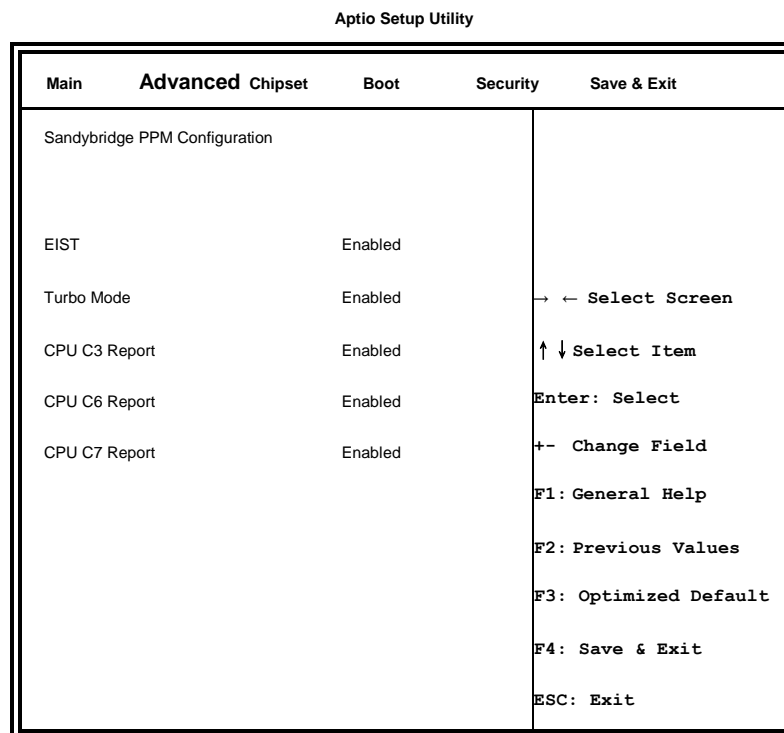

EIST

Enable/Disable Intel SpeedStep.

Turbo Mode

Turbo Mode.

CPU C3 Report

Enable/Disable CPU C3 (ACPI C2) report to OS.

CPU C6 Report

Enable/Disable CPU C6 (ACPI C3) report to OS.

CPU C7 Report

Enable/Disable CPU C7 (ACPI C3) report to OS.

Chipset Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Main	Advanced	Chipset	Boot	Security	Save &
Exit					
▶ System Agent (SA) Configuration					
▶ PCH-IO Configuration					

System Agent (SA) Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save &
Exit					
System Agent RC Version		1.1.0.0			
VT-d Capability		Supported			
VT-d		Enabled			
▶ Intel IGFX Configuration					

→ ← Select Screen

↑ ↓ Select Item

Enter: Select

+ - Change Field

F1: General Help

F2: Previous Values

F3: Optimized Default

F4: Save & Exit

ESC: Exit

VT-d

Check to enable VT-d function on MCH.

Intel IGFX Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save &
Exit					
Intel IGFX Configuration					
IGFX VBIOS Version			2108		
IGFX Frequency			650 MHz		
			→ ← Select Screen		
Primary Display			↑ ↓ Select Item		
Internal Graphics			Enter: Select		
GTT Size			+- Change Field		
Aperture Size			F1: General Help		
DVMT Pre-Allocated			F2: Previous Values		
DVMT Total Gfx Mem			F3: Optimized Default		
Gfx Low Power Mode			F4: Save & Exit		
▶ LCD Control			ESC: Exit		

Primary Display

Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx.

Internal Graphics

Keep IGD enabled based on the setup options.

GTT Size

Select the GTT Size: 1MB, 2MB.

Aperture Size

Select the Aperture Size: 128MB, 256MB, 512MB.

DVMT Pre-Allocated

Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device: 0M~512M.

DVMT Total Gfx Mem

Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device: 128M, 256M, MAX.

Gfx Low Power Mode

This option is applicable for SFF only.

LCD Control

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save &
------	----------	---------	------	----------	--------

Exit

LCD Control

Primary IGFX Boot Display

VBIOS Default

→ ← Select Screen

↑ ↓ Select Item

Enter: Select

+ - Change Field

F1: General Help

F2: Previous Values

F3: Optimized Default

F4: Save & Exit

ESC: Exit

Primary IGFX Boot Display

Select the Video Device that will be activated during PoST. This has no effect if external graphics present.

Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display.

PCH-IO Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save &
Exit					
Intel PCH RC Version			1.1.2.0		
PCH LAN Controller			Enabled		
Wake on Lan			Disabled		
Azalia			Auto		
Azalia PME Enable			Disabled		
Azalia Internal HDMI Codec			Enabled		
High Precision Event Timer Configuration					
High Precision Timer			Enabled		
SLP_S4 Assertion Width			4-5 Seconds		
Set NAND Management Override			Enabled		
► USB Configuration					

→ ← Select Screen

↑ ↓ Select Item

Enter: Select

+ - Change Field

F1: General Help

F2: Previous Values

F3: Optimized Default

F4: Save & Exit

ESC: Exit

Azalia

Control Detection of the Azalia device.

Disabled = Azalia will be unconditionally disabled.

Enabled = Azalia will be unconditionally enabled. Auto = Azalia will be enabled if present, disabled otherwise.

Set NAND Management Override

Option to Override NAND Management to allow driver or 3rd parties software to configure the NAND module after POST.

USB Configuration

Main	Advanced	Chipset	Boot	Security	Save & Exit
EHCI1			Enabled		
EHCI2			Enabled		

EHCI1

Control the USB EHCI (USB2.0) functions.

One EHCI controller must always be enabled.

Boot Settings

This section allows you to configure the boot settings according to your preference.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Boot Configuration					
Setup Prompt Timeout			1		
Bootup NumLock State			On		
Quiet Boot			Disabled	→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save & Exit ESC: Exit	
CM16 Module Version			07.63		
GateA20			Upon Request		
Option ROM Messages			Force BIOS		
Interrupt 19 Capture			Disabled		
Boot Option Priorities					

Setup Prompt Timeout

Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.

GateA20 Active

UPON REQUEST – GA20 can be disabled using BIOS services.

ALWAYS – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.

Option ROM Messages

Set display mode for Option ROM. Options are Force BIOS and Keep Current.

Interrupt 19 Capture

Enable: Allows Option ROMs to trap Int 19.

Boot Option Priorities

Sets the system boot order.

Security Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Password Description					
If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup.				→ ← Select Screen	
If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights				↑ ↓ Select Item	
Administrator Password				Enter: Select	
User Password				+- Change Field	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Default	
				F4: Save & Exit	
				ESC: Exit	


Administrator Password

Set Setup Administrator Password.

User Password

Set User Password.

Save & Exit Settings

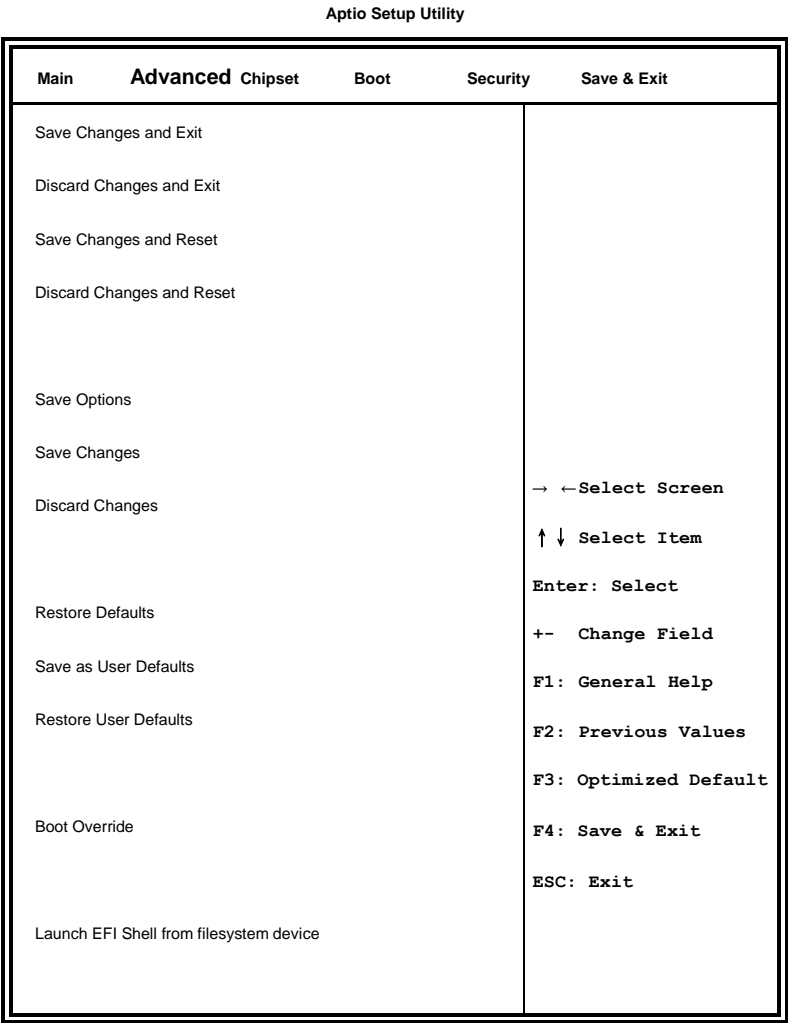

Save Changes and Exit

Exit system setup after saving the changes.

Discard Changes and Exit

Exit system setup without saving any changes.

Save Changes and Reset

Reset the system after saving the changes.

Discard Changes and Reset

Reset system setup without saving any changes.

Save Changes

Save Changes done so far to any of the setup options.

Discard Changes

Discard Changes done so far to any of the setup options.

Restore Defaults

Restore/Load Defaults values for all the setup options.

Save as User Defaults

Save the changes done so far as User Defaults.

Restore User Defaults

Restore the User Defaults to all the setup options.

Boot Override

Pressing ENTER causes the system to enter the OS.

Launch EFI Shell from filesystem device

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

Drivers Installation

This section describes the installation procedures for software and drivers. The software and drivers are included with the motherboard. If you find the items missing, please contact the vendor where you made the purchase.


IMPORTANT NOTE:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.

Intel Chipset Software Installation Utility

The Intel Chipset Drivers should be installed first before the software drivers to enable Plug & Play INF support for Intel chipset components. Follow the instructions below to complete the installation.

1. Insert the CD that comes with the board. Click **SI-58/IB958-58 Drivers**.

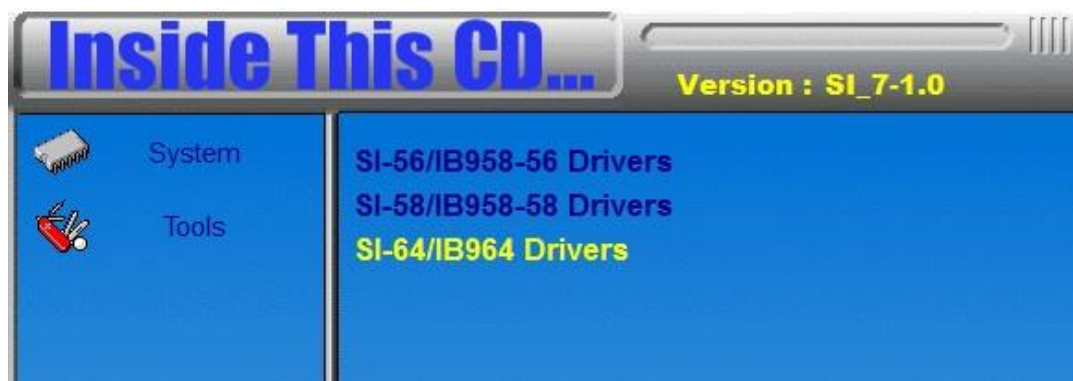

2. Click **Intel(R) Chipset Software Installation Utility**.




3. When the Welcome screen to the Intel® Chipset Device Software appears, click **Next** to continue.



4. Click **Yes** to accept the software license agreement and proceed with the installation process.



5. On the Readme File Information screen, click **Next** to continue the installation.

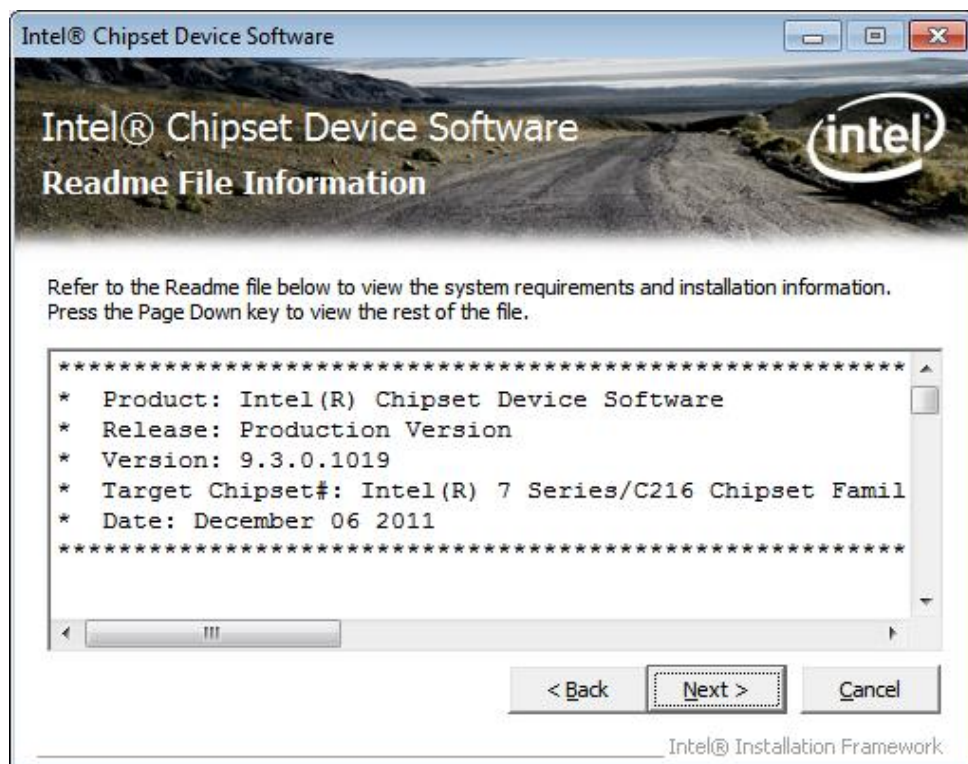


6. The Setup process is now complete. Click **Finish** to restart the computer and for changes to take effect.



VGA Drivers Installation

To install the VGA drivers, follow the steps below.


1. Insert the CD that comes with the board. Click **SI-58/IB958-58 Drivers**.

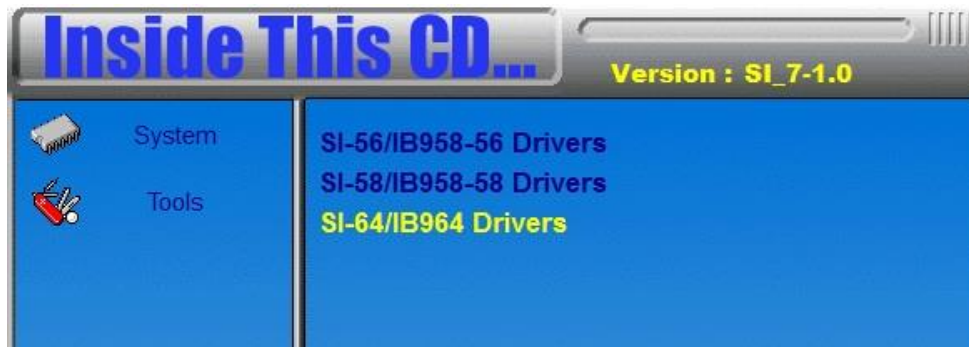


2. Click **AMD Radeon E6760 Graphics Driver**.



3. When the Welcome screen appears, click **Next** to continue.
4. Select the language you would like to be displayed and click **Next**.

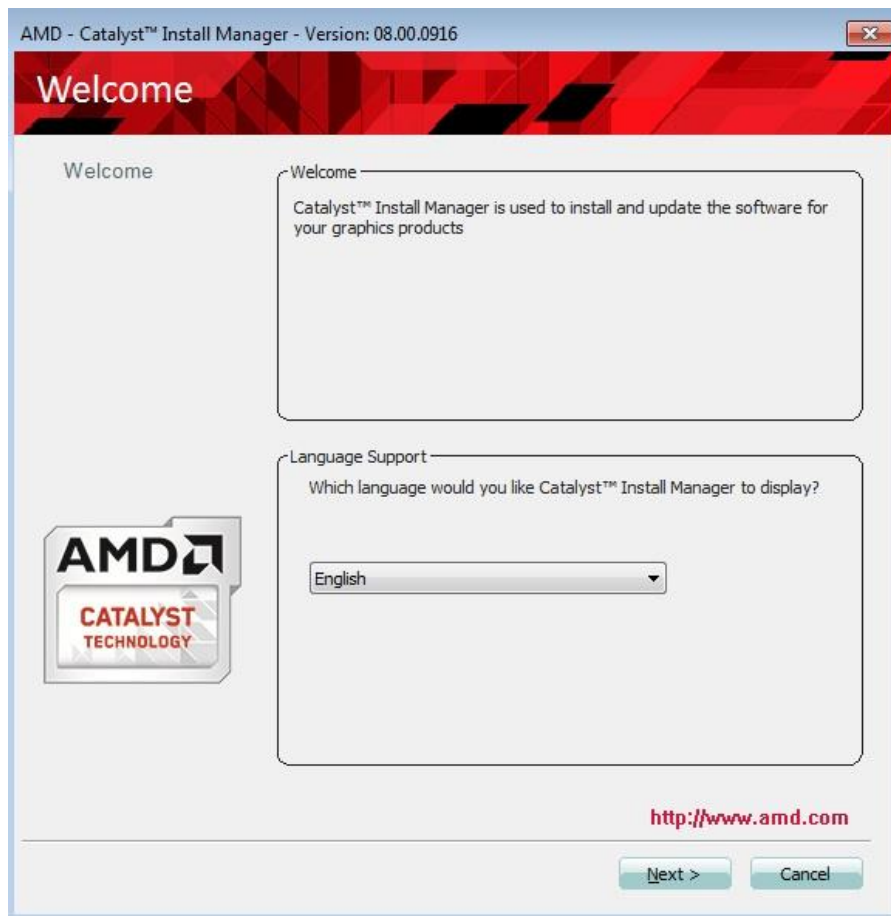

5. Click **Install** to continue the installation process..

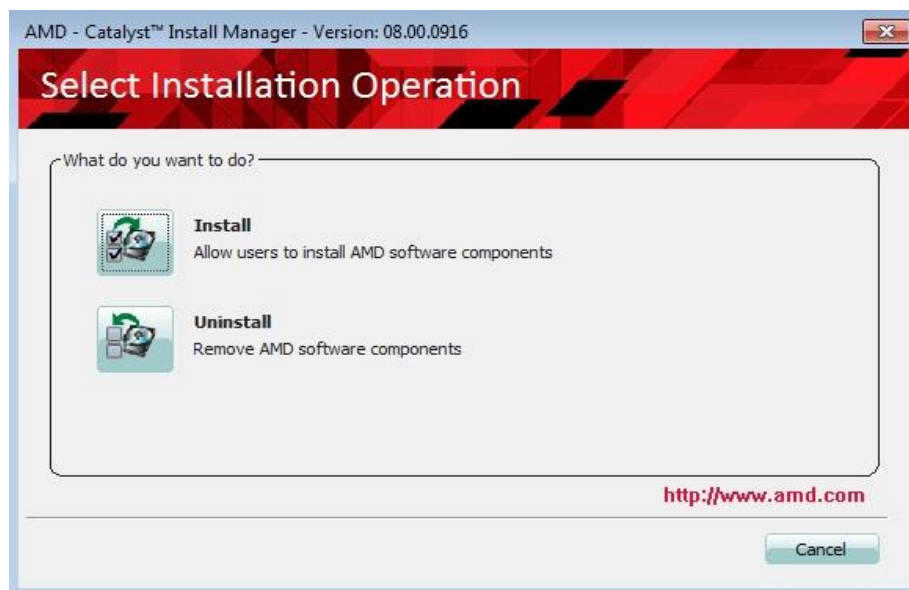


6. Select Express and the installation location and click Next.



7. Click **Accept** to accept the End User License Agreement.



8. To reboot the system, click **Yes**.

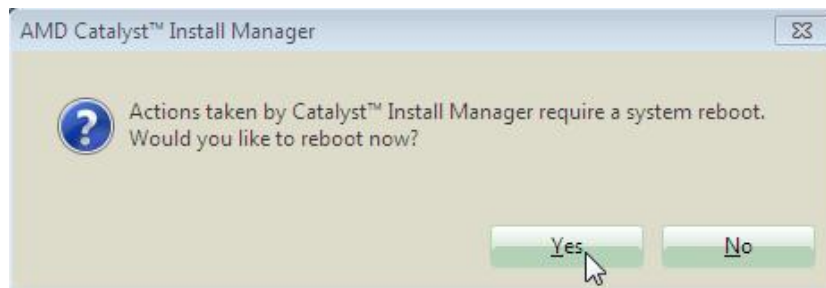

9. Setup complete. Click **Finish** to restart the computer and for changes to take effect.

Realtek HD Audio Driver Installation

Follow the steps below to install the Realtek HD Audio Drivers.


1. Insert the CD that comes with the board. Click **SI-58/IB958-58 Drivers**.




2. Click **Realtek High Definition Audio Driver**.



3. On the Welcome to the InstallShield Wizard screen, click **Next** to proceed with and complete the installation process.

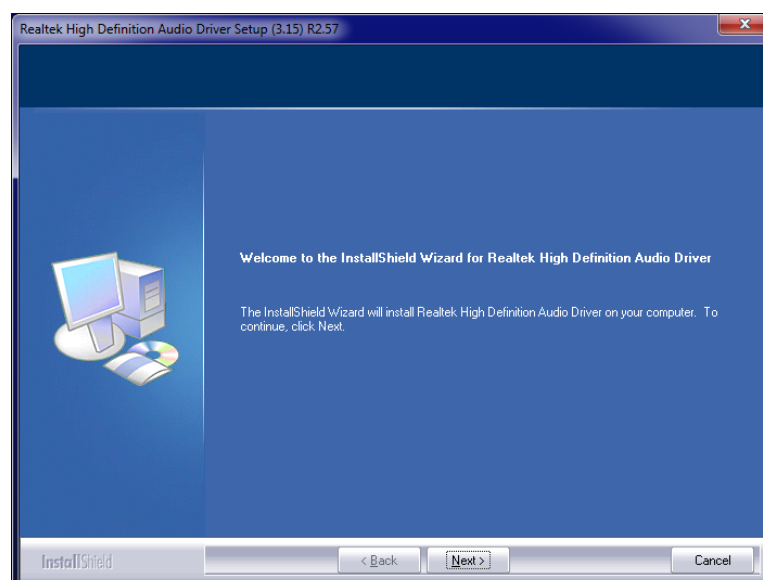

4. The InstallShield Wizard Complete. Click **Finish** to restart the computer and for changes to take effect.

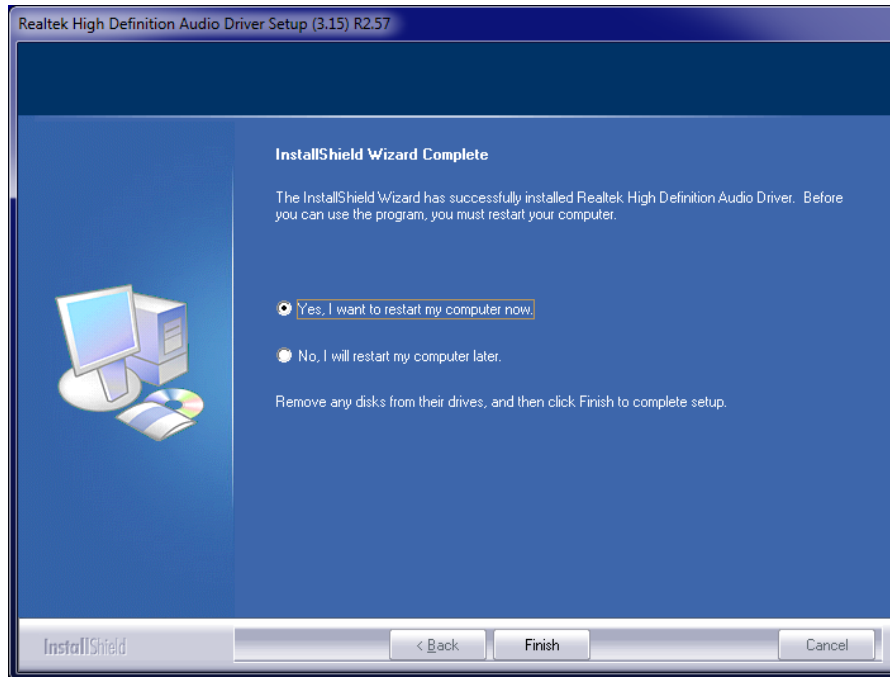

LAN Drivers Installation


1. Insert the CD that comes with the board. Click **SI-58/IB958-58 Drivers**.




2. Click **Intel(R) PRO LAN Network Driver**.



3. Click **Install Drivers and Software**.

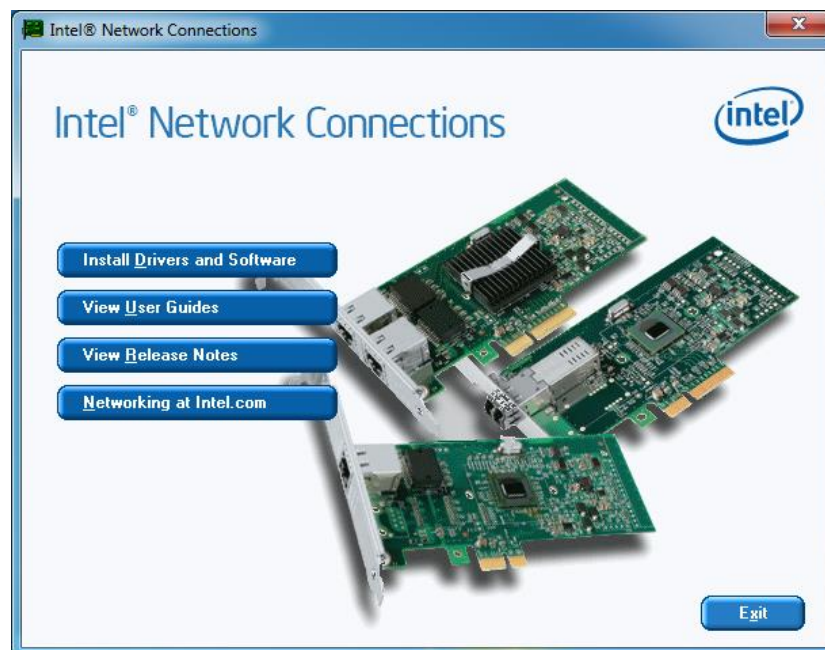


4. When the Welcome screen appears, click **Next**.

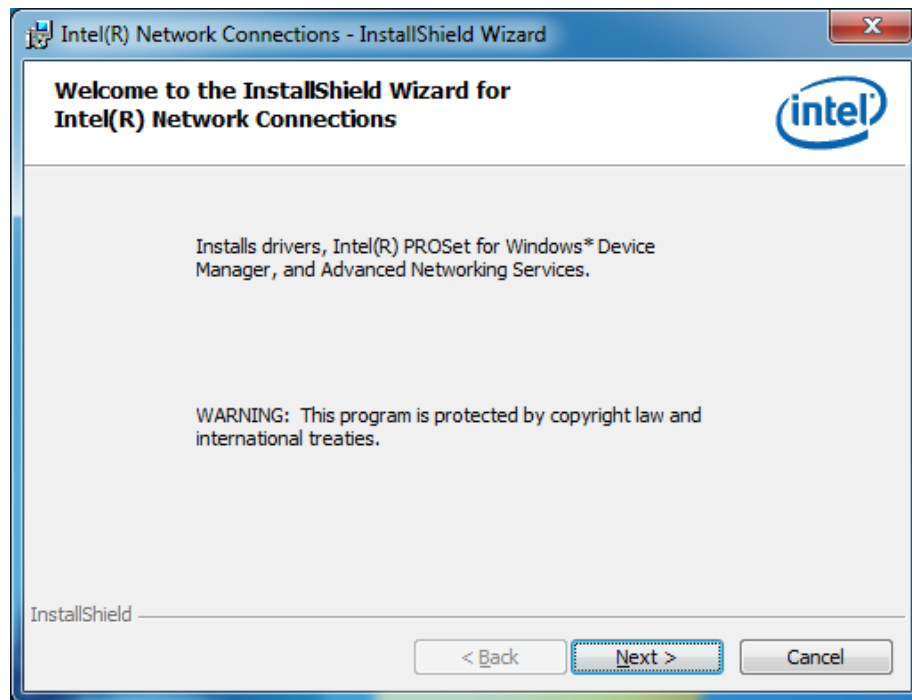


5. Click **Next** to to agree with the license agreement.




6. Click the checkbox for **Drivers** in the Setup Options screen to select it and click **Next** to continue.

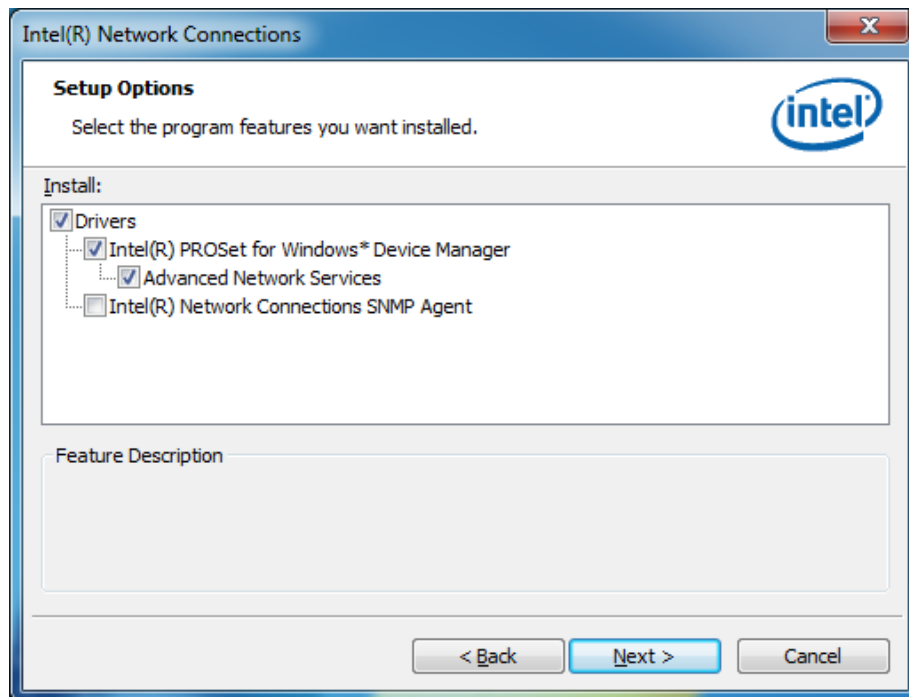

7. The wizard is ready to begin installation. Click **Install** to begin the installation.

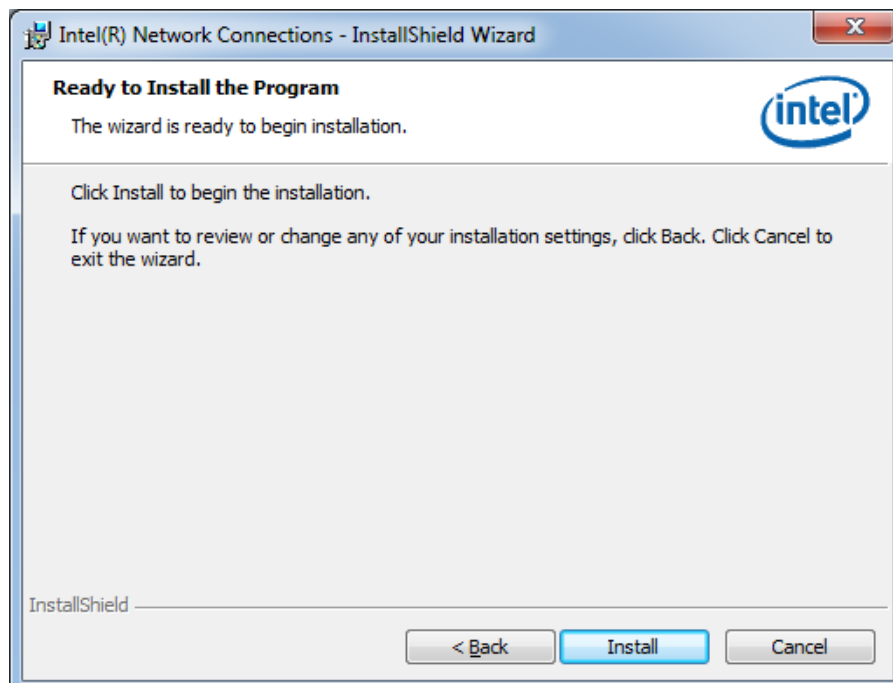

8. When InstallShield Wizard is complete, click **Finish**.

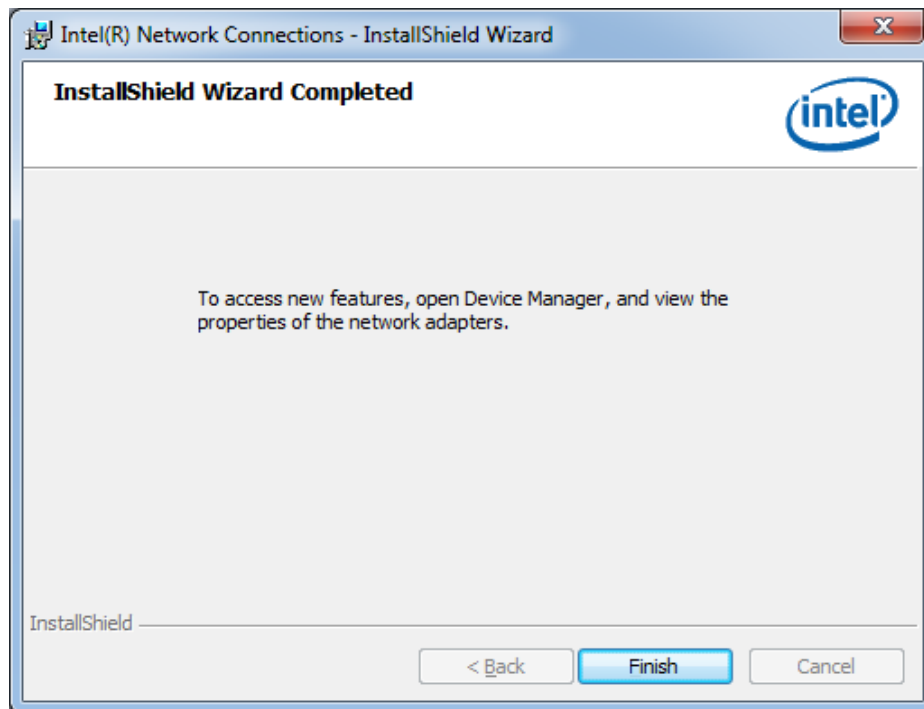

Intel® Management Engine Interface




Follow the steps below to install the Intel Management Engine.


1. Insert the CD that comes with the board. Click **SI-58/IB958-58 Drivers** and then **Intel(R) AMT 8.0 Drivers**.




2. When the Welcome screen for Intel® Management Engine Components, click the checkbox for **Install Intel® Control Center** & click **Next**.

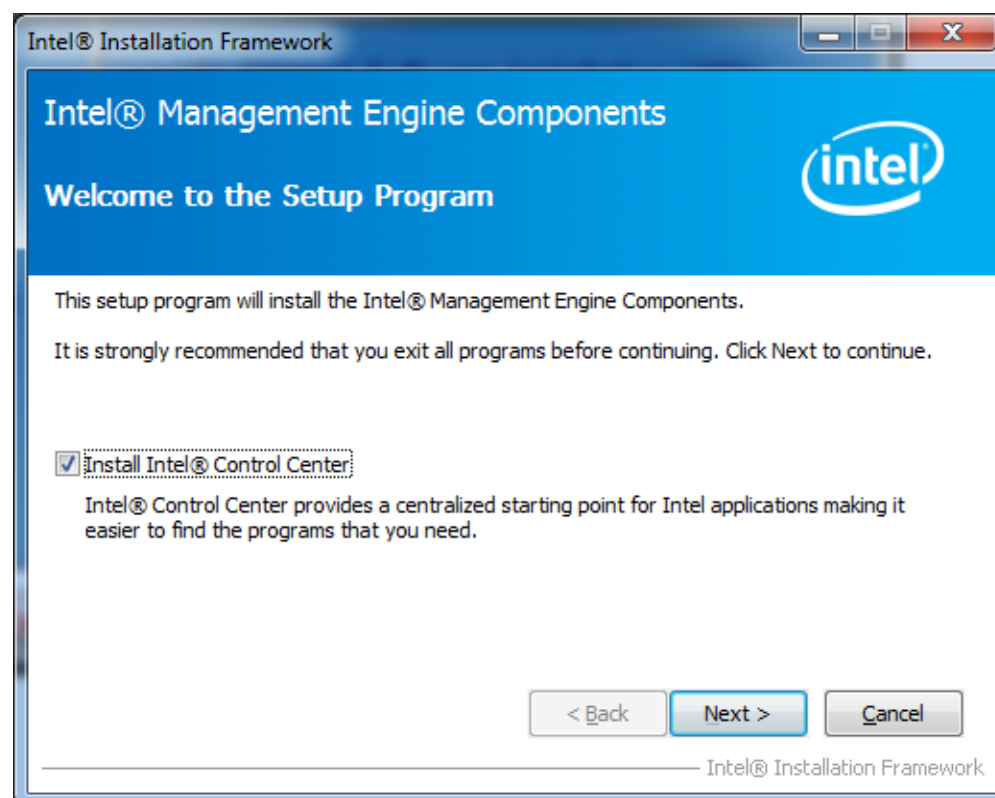


3. Click **Yes** to agree with the license agreement.

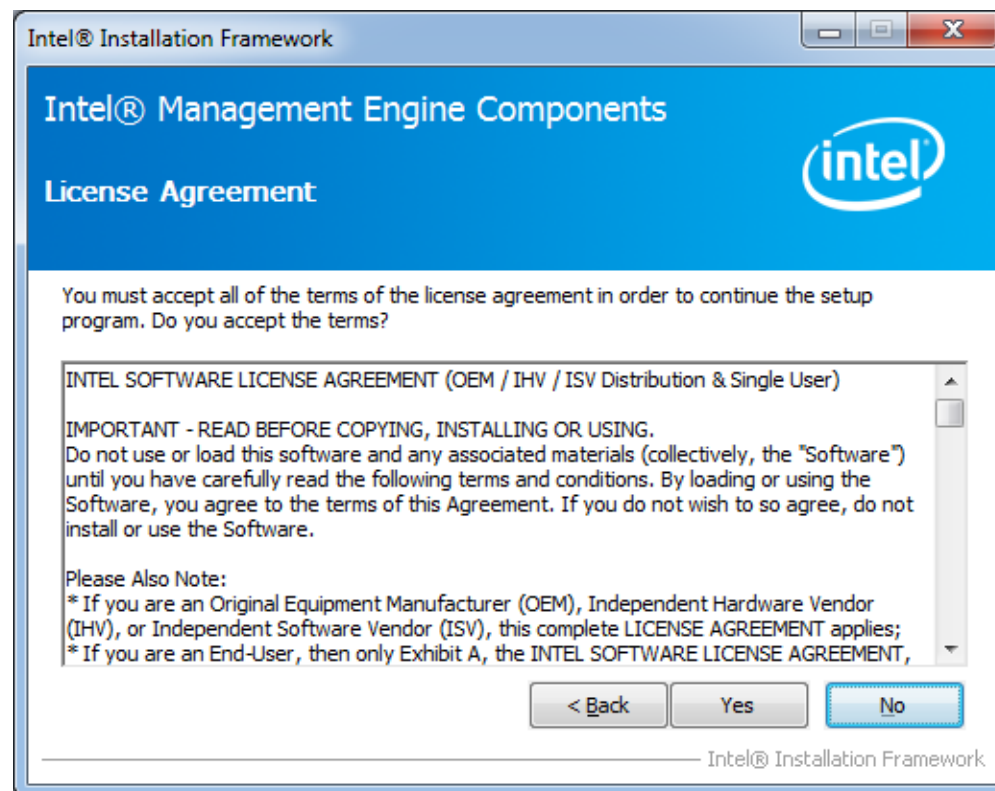


4. When the Setup Progress screen appears, click **Next**. Then, click **Finish** when the setup progress has been successfully installed.

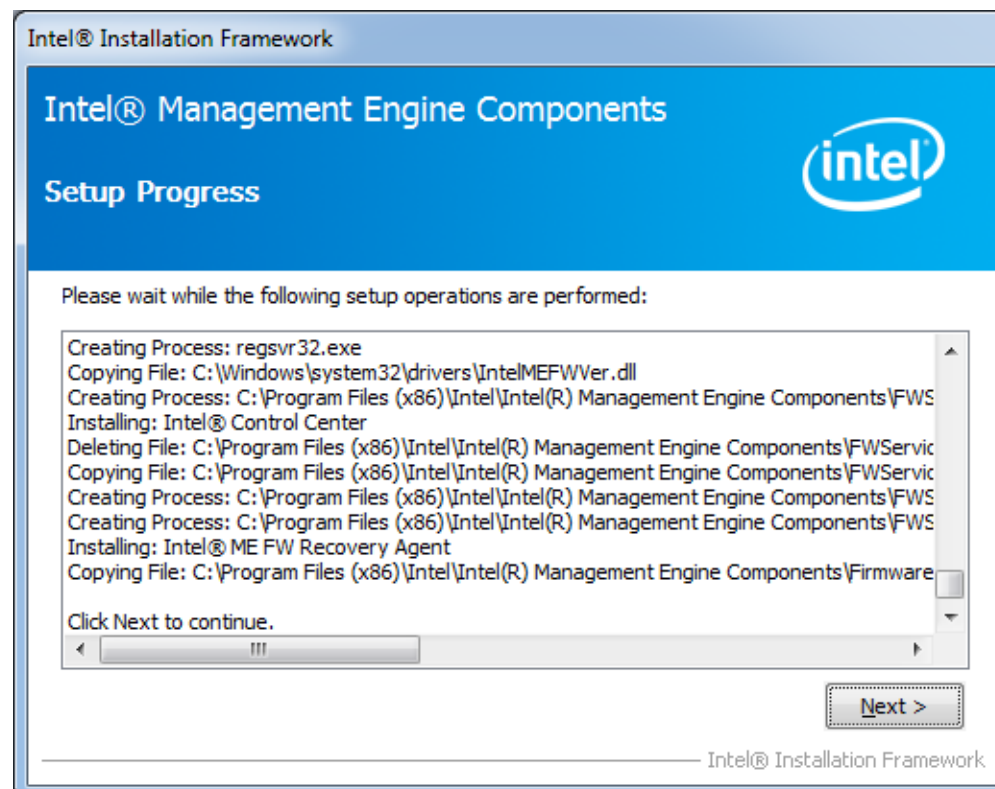

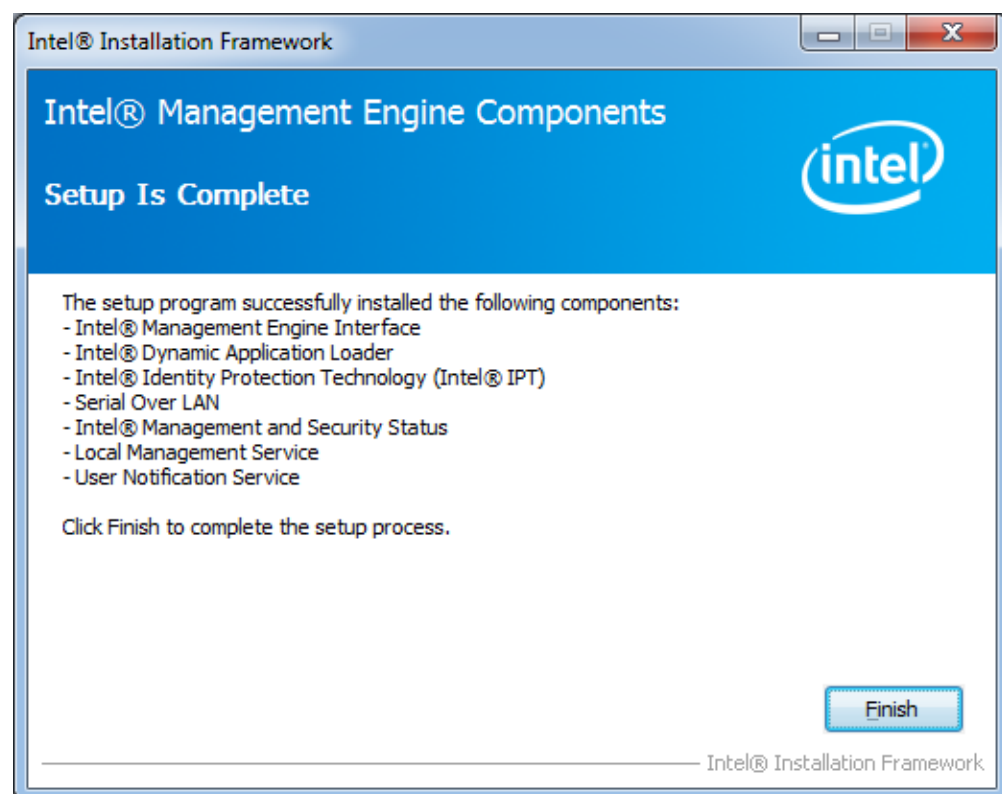

Intel® USB 3.0 Drivers


1. Insert the CD that comes with the board. Click **SI-58/IB958-58 Drivers**.

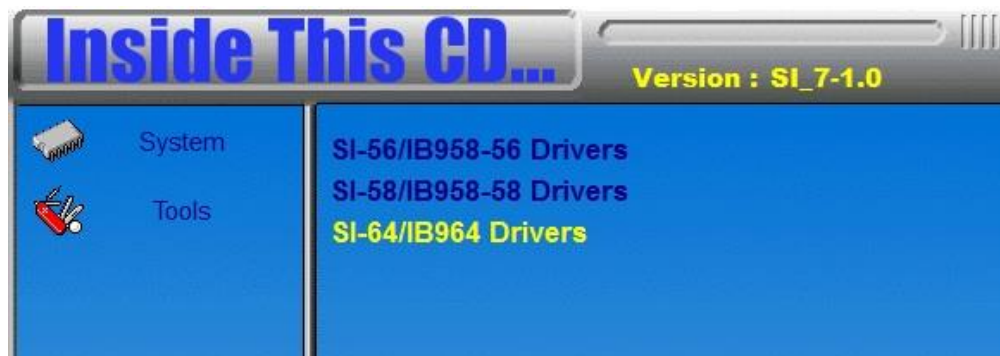

2. Click **Intel(R) USB 3.0 Drivers**.




3. When the Welcome screen to the InstallShield Wizard for Intel® USB 3.0 eXtensible Host Controller Driver, click **Next**.

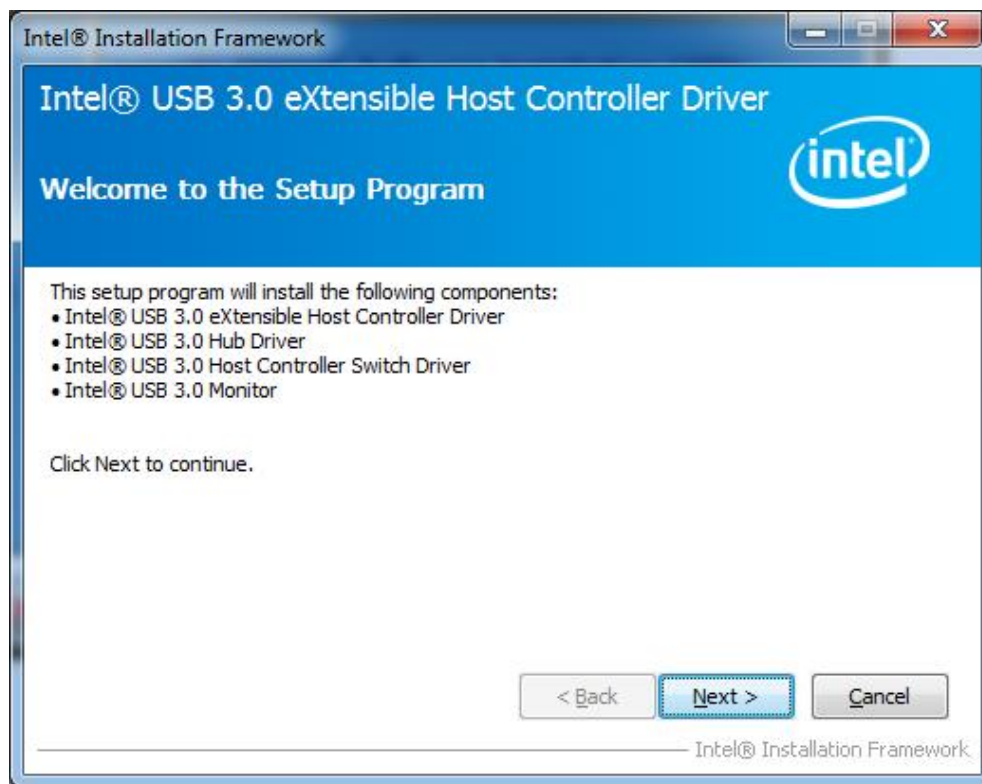


4. Click **Yes** to agree with the license agreement and continue the installation.



5. On the Readme File Information screen, click **Next** to continue the installation of the Intel® USB 3.0 eXtensible Host Controller Driver.

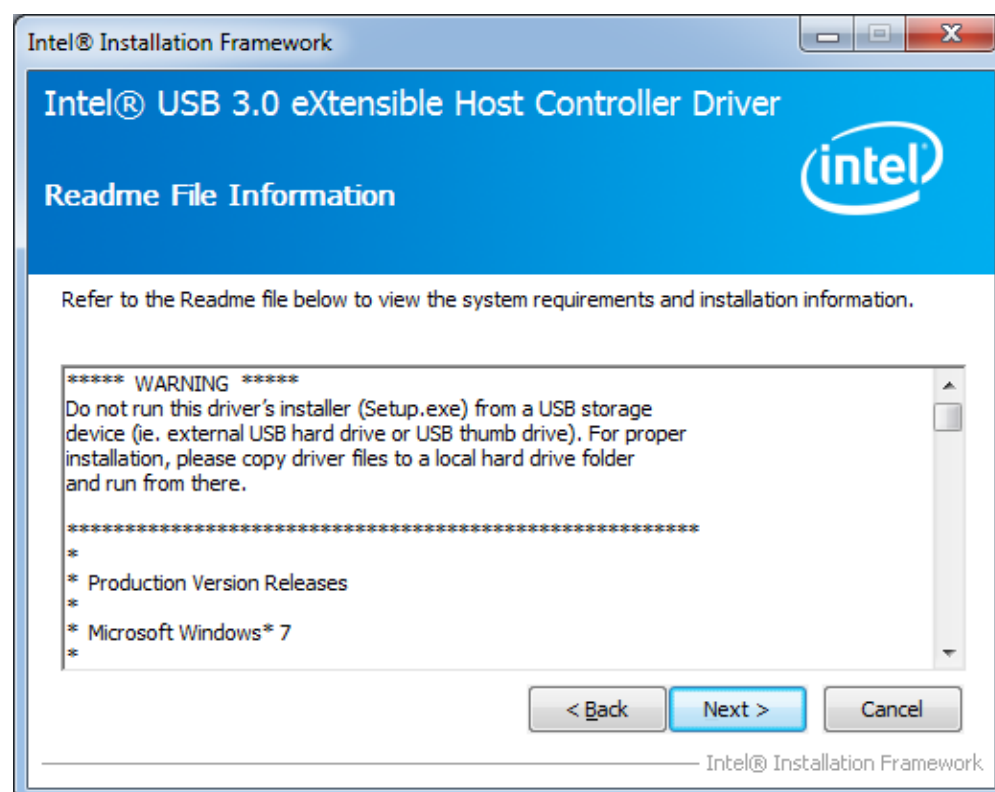

6. Setup complete. Click **Finish** to restart the computer and for changes to take effect.

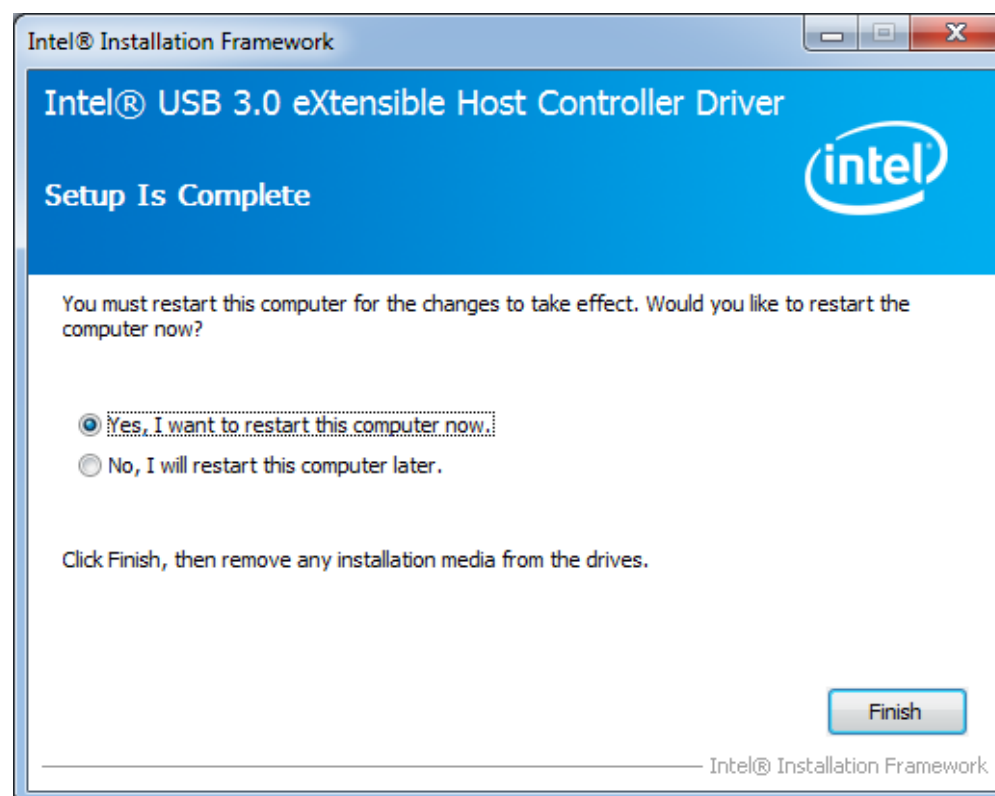

Appendix

A. AMD Eyefinity Multiple Display

1. What is AMD Eyefinity Technology?

AMD Eyefinity Technology provides advanced multiple monitor technology delivering an incredibly immersive graphic and computing experience with innovative display capabilities, supporting massive desktop workspaces and super-high resolution signage applications.

An AMD Eyefinity system” means a computer system employing AMD Eyefinity technology and an “AMD Eyefinity resolution” means a resolution achievable using AMD Eyefinity technology.

2. Software versions for SI-58

SI-58 series	MB Version: (IB958-58 V-1.1)
VGA driver	8.982.17

3. Settings

- **Supported operating systems:**

Windows 7 (32-bit & 64-bit)

- **Driver Installation:**


AMD Eyefinity technology with SI-58 enables a single GPU to support up to 6 independent display outputs simultaneously. Before using the AMD Eyefinity functions on SI-58, you must install both AMD VGA driver and Microsoft .NET Framework 4.0.

AMD Catalyst Driver is now available on the AMD Embedded Developer website: <https://wwwd.amd.com/amd/devsite.nsf/edg/e6760.htm>. The driver supports up to 6 displays with various AMD Eyefinity SLS grid configurations. Refer to the following table for the supported AMD Eyefinity modes.


Number of Displays (pipelines)	Grid Configuration	Supported
6	6 x 1 Landscape	No
6	6 x 1 Portrait	No
6	1 x 6 Landscape	No
6	1 x 6 Portrait	No
5	5 x 1 Landscape	Yes
5	5 x 1 Portrait	Yes
5	1 x 5 Landscape	Yes
5	1 x 5 Portrait	Yes
4	4 x 1 Landscape	Yes
4	4 x 1 Portrait	No
4	1 x 4 Landscape	No
4	1 x 4 Portrait	Yes
6	2 x 3 Landscape	No
6	2 x 3 Portrait	Yes
6	3 x 2 Landscape	Yes
6	3 x 2 Portrait	No
4	2 x 2 Landscape	Yes
4	2 x 2 Portrait	Yes
3	3 x 1 Landscape	Yes
3	3 x 1 Portrait	Yes
3	1 x 3 Landscape	Yes
3	1 x 3 Portrait	Yes
2	2 x 1 Landscape	Yes
2	2 x 1 Portrait	Yes
2	1 x 2 Landscape	Yes
2	1 x 2 Portrait	Yes

4. AMD Eyefinity Configuration

Step 1: Click **AMD Eyefinity Multi-Display** for Video wall display configuration setting.

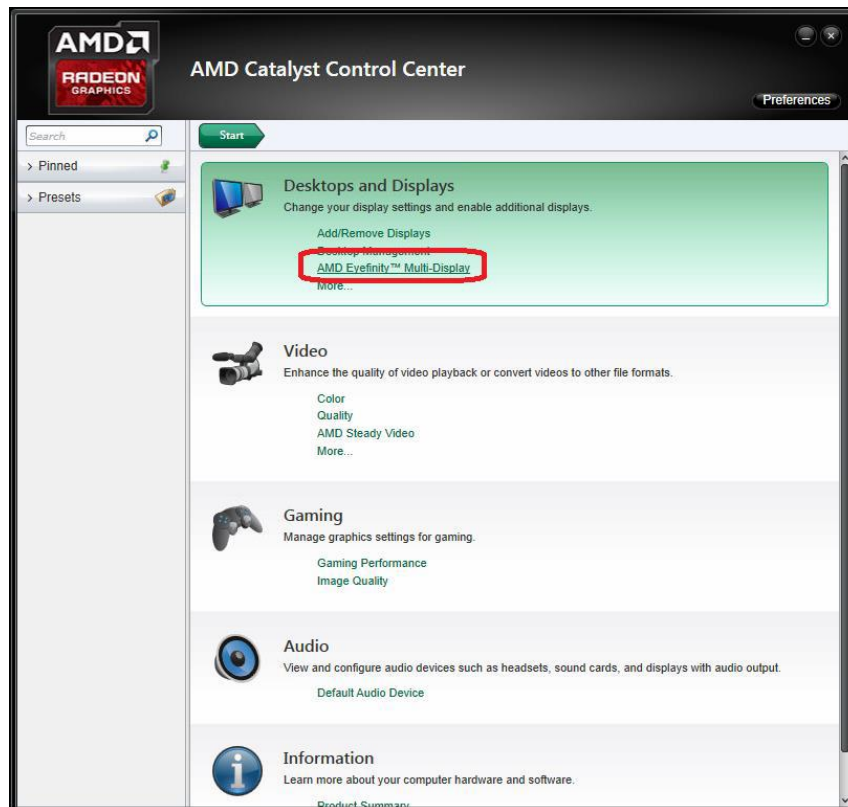


Step 2: Click **Create Eyefinity Display Group**.

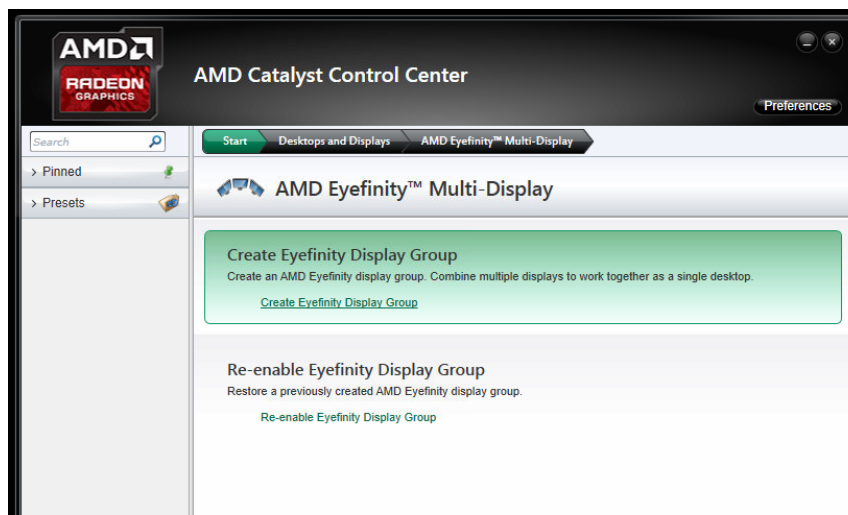


Step 3: Select a layout for the display group from the dropdown list and click **Continued.**


3 displays:

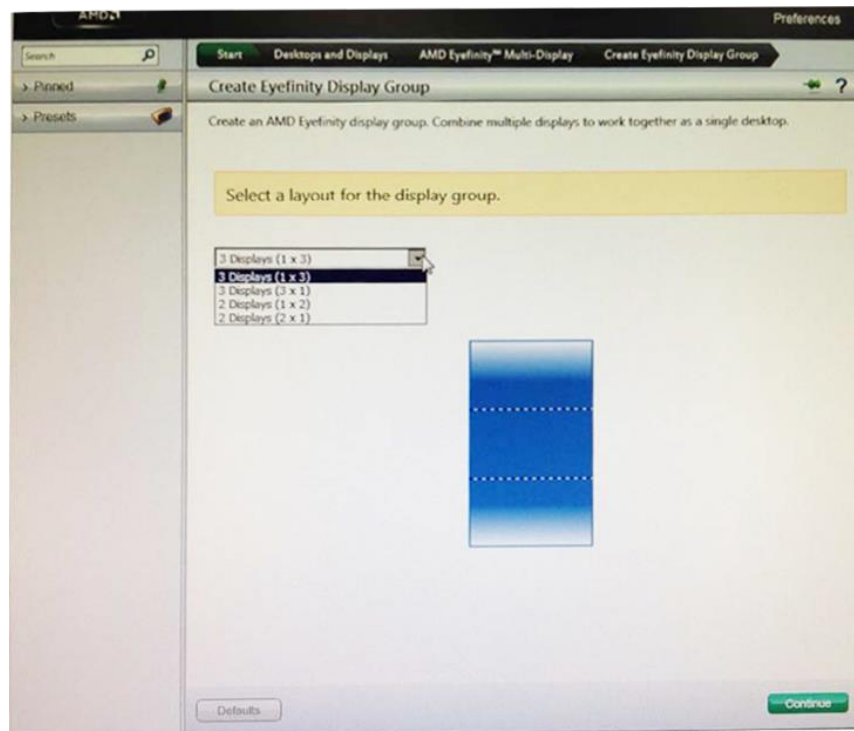


4 displays:

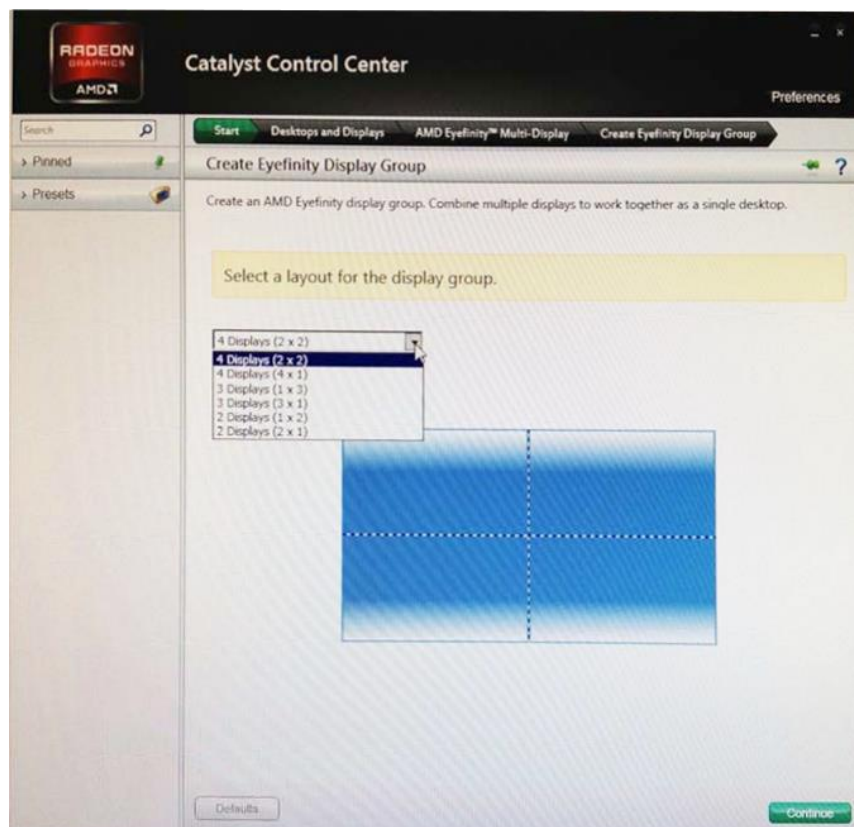

5 displays:

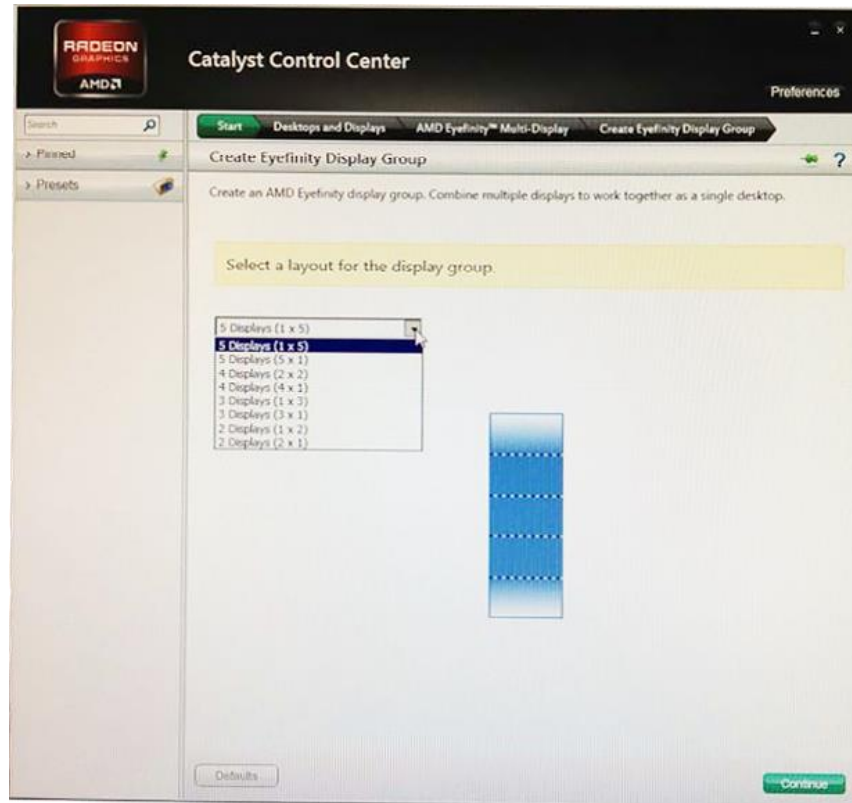

6 displays:

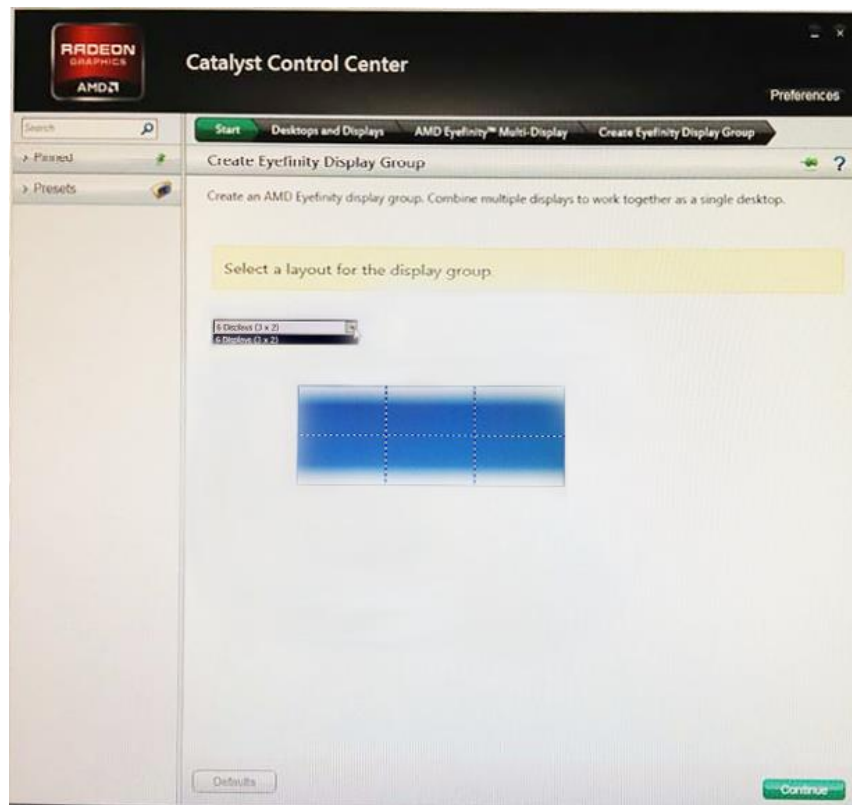

The display layout selected in the wizard reflects the actual physical setup.

For 2 displays output:

- 2 x 1 Landscape Display Group



- 2 x 1 Portrait Display Group



- 1 x 2 Landscape Display Group



- 1 x 2 Portrait Display Group



For 3 displays output:

- 3 x 1 Landscape Display Group



- 3 x 1 Portrait Display Group



- 1 x 3 Landscape Display Group



- 1 x 3 Portrait Display Group



For 4 displays output:

- 4 x 1 Landscape Display Group




- 1 x 4 Portrait Display Group



- 2 x 2 Landscape Display Group



- 2 x 2 Portrait Display Group

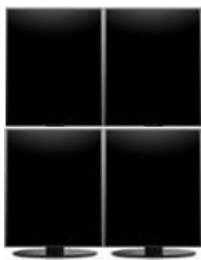

For 5 displays output:


- 5 x 1 Landscape Display Group



- 5 x 1 Portrait Display Group



- 1 x 5 Landscape Display Group

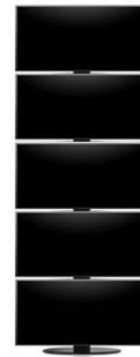

- 1 x 5 Portrait Display Group




For 6 displays output:

- 3 x 2 Landscape Display Group



- 2 x 3 Portrait Display Group

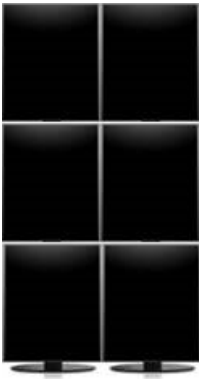

B. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
000h - 01Fh	DMA Controller #1
020h - 03Fh	Interrupt Controller #1
040h - 05Fh	Timer
060h - 064h	Keyboard Controller
070h - 07Fh	Real Time Clock, NMI
080h - 09Fh	DMA Page Register
0A0h - 0BFh	Interrupt Controller #2
0C0h - 0DFh	DMA Controller #2
0F0h	Clear Math Coprocessor Busy Signal
0F1h	Reset Math Coprocessor
E000-E01F	Network Connection
F060-F07F	Network Connection
F080-F0D7	SATA Storage Controller
2F8h - 2FFh	Serial Port #2(COM2)
3B0h- 3BBh	Graphics adapter Controller
3F8h - 3FFh	Serial Port #1(COM1)
3D0h - 3DFh	CGA adapter