

EMX-ASLP

Intel® Processor N97, and Intel® Core™ i3-N305 Processor,
Intel Atom® x7000RE series processors, Thin Mini ITX
Motherboard.

User's Manual

2nd Ed – 15 August 2024

Copyright Notice

Copyright © 2024 Avalue Technology Inc., ALL RIGHTS RESERVED.

Part No: E2047EMAS01R

Document Amendment History

Revision	Date	By	Comment
1 st	April 2024	Avalue	Initial Release
2 nd	August 2024	Avalue	Update System Specifications

Declaration of Conformity



This device complies with part 15 FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class "a" digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE statement

The product(s) described in this manual complies with all application European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

Copyright Notice

© 2024 by Avalue Technology Inc. All rights are reserved. No parts of this manual may be copied, modified, or reproduced in any form or by any means for commercial use without the prior written permission of Avalue Technology Inc. All information and specification provided in this manual are for reference only and remain subject to change without prior notice.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows is registered trademark of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Disclaimer

This manual is intended to be used as a practical and informative guide only and is subject

EMX-ASLP User's Manual

to change without notice. It does not represent a commitment on the part of Avalue. This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support and Assistance

1. Visit the Avalue website at <https://www.avalue.com/> where you can find the latest information about the product.
2. Contact your distributor or our technical support team or sales representative for technical support if you need additional assistance. Please have following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

To receive the latest version of the user's manual; please visit our Web site at:

www.avalue.com

Product Warranty (Returns & Warranties policy)

1. Purpose

Avalue establishes the following maintenance specifications and operation procedures for providing the best quality of service and shortened repair time to our customers.

2. Warranty

2.1 Warranty Period

Avalue endeavors to offer customers the most comprehensive post-sales services and protection; besides offering a 2-year warranty for standard Avalue products, an extended warranty service can also be provided based on additional request from the customer. Within the warranty period, customers are entitled to receive comprehensive and prompt repair and warranty.

Standard products manufactured by Avalue are offered a 2-year warranty, from the date of delivery from Avalue. For ODM/OEM products manufactured by Avalue or PCBA with conformal coating, will follow up the define warranty of the agreement, otherwise will be offered 1-year warranty for ODM/OEM products but non-warranty for PCBA with conformal coating. For outsourcing parts kit by Avalue (ex: Motherboard, LCD touch panel, CPU, RAM, HDD) are offered a 6-month warranty, and Mobile/Tablet PC battery are offered a warranty of the half year, from the date of delivery by Avalue. Products before the mass production stage, i.e. engineering samples are not applied in this warranty or service policy. For extended warranty and cross-territory services, product defects resulting from design, production process or material are covered by the pre-set warranty period after the date of delivery from Avalue. For non-Avalue products, the product warranty and repair time shall be based on the service standards provided by the original manufacturer; in principle Avalue will provide these products a warranty service for no more than one year.

2.2 Maintenance services within the warranty period

In the case of Avalue product DOA (Defect-on-Arrival) when the customer finds any defect within 1 month after the delivery, Avalue will replace it with a new product in a soonest way. Except for custom products, once the customer is approved of a Cross-Shipment Agreement, which allows for delivery a new product to the customer before receiving the defective one, Avalue will immediately proceed with new product replacement for the said DOA case. On validation of the confirmed defect, Avalue is entitled to reserve the right whether to provide a new product for replacement. For the returned defective new product, it is necessary to verify that there shall be no bruise, alteration, scratch or marking to the appearance, and that none of the delivered accessories missing; otherwise, the customer will be requested to pay a processing fee. On the other hand, if the new product defect is resulting from incorrect configuration or erroneous use by the user instead of any problem of the hardware itself, the customer will also be requested to pay for relevant handling fees.

EMX-ASLP User's Manual

As for other conditions, Avalue will handle defects by way of repair. The customer will be requested to send the defective product to an Avalue authorized service center, and Avalue will return the repaired product back to the customer as soon as possible.

2.3 Ruling of an out-of-warranty defect

The following situations are not included in the warranty:

- The warranty period has expired.
- Product has been altered or its label of the serial number has been torn off.
- Product functionality issues resulting from improper use by the user, unauthorized dismantle or alteration, unfit operation environment, improper maintenance, accident or other causes. Avalue reserves the right for the ruling of the aforementioned situations.
- Product damage resulting from lightning, flood, earthquake or other calamities.
- The warranty rules of non-Avalue products and accessories shall be in accordance with standards set up by the original manufacturer. These products and accessories include RAM, HDD, FDD, CD-ROM, CPU, FAN, etc.
- Product upgrade request or test request submitted by the customer after expiration of the warranty.
- PCBA with conformal coating.
- Avalue semi-product and outsourced products without Avalue serial number.
- Products before the mass production stage, i.e. engineering samples.

3. Procedure for sending for repair

3.1 Attain a RMA number

A customer's rejected product returned for repair shall have a RMA (Return Merchandise Authorization) number. Without a RMA number, Avalue will not provide any repair service for the rejected product, and the product will be returned to the customer at customer's cost. Avalue will not issue any notice for the return of the product.

Each returned product for repair shall have a RMA number, which is simply the authorization of the return for repair; it is not a guarantee that the returned goods can be repaired or replaced. For applying for a RMA number, the customer may enter the eRMA webpage of Avalue <https://www.avalue.com/en/member> and log-in with an account number and a password authorized by Avalue. The system will then automatically issue a RMA number.

When applying for the RMA number, it is essential to fill in basic information of the customer and the product, together with detailed description of the problem encountered. If possible, avoid using ambiguous words such as "does not work" or "problematic". Without a substantial description of the problem, it is hard to start the repair and will cause prolonged repair time. Lacking detailed statement of fault steps also makes the problem hard to be identified, sometimes resulting in second-time repairs.

In case the customer can't define the cause of problem, please contact Avalue application engineers. Sometimes when the problem can be resolved even before the customer sends back the product.

On the other hand, if the customer only returns the key parts to Avalue for repair, it is necessary that the serial number of the entire unit is given in the "Problem Description" field, so that warranty period can be ruled accordingly; or Avalue will handle the case as an Out-of- warranty case.

3.2 Return of faulty product for repair

It is recommended that the customer not to return the accessories (manual, connection cables, etc.) with the products for repair, devices such as CPU, DRAM, CF memory card, etc., shall also be removed from the faulty goods before return for repair. If these devices are relevant to described repair problems and necessary to be returned with the goods; please clearly indicate the items included in the eRMA application form. Avalue shall not be responsible for any item that is not itemized. Moreover, make sure the problem(s) are detailed in the "Problem Description" field.

In the list of delivery, the customer may fill-in a value which is lower than the actual value, to prevent customs levying a higher tax over the excessive value of the return goods. The customer shall be held responsible for extra fees caused by this. We strongly recommend that "Invoice for customs purpose only with no commercial value" be indicated on the delivery note. Also for the purpose of expedited handling, please printout the RMA number and put it in the carton, also indicate the number outside of the carton, with the recipient addressing to Avalue RMA Department.

When returning the defective product, please use an anti-static bag or ESD material to pack it properly. In case of improper packing resulting in damages in the transportation process, Avalue reserves the right to reject the un-repaired faulty good at the customer's costs. Furthermore, it is suggested that the faulty goods shall be sent via a door-to-door courier service. The customer shall be held responsible for any customs clearance fee or extra expenses if Air-Cargo is used for the delivery.

In case of a DOA situation of a new product, Avalue will be responsible for the product and the freight. If the faulty goods are within the warranty period, the sender will take responsibility for the freight. For an out-of-warranty case, the customer shall be responsible for the freight of both trips.

3.3 Maintenance Charge

Avalue will charge a moderate repair fee for the following conditions:

- The warranty period has expired.
- Product has been altered or its label of the serial number has been torn off.
- Product functionality issues resulting from improper use by the user, unauthorized dismantle or alteration, unfit operation environment, improper maintenance, accident

EMX-ASLP User's Manual

or other causes. Avalue reserves the right for the ruling of the aforementioned situations.

- Product damage resulting from lightning, flood, earthquake or other calamities.
- The warranty rules for non-Avalue products and accessories shall be in accordance with standards set up by the original supplier. These products and accessories include RAM, HDD, FDD, CD-ROM, CPU, FAN, etc.
- Product upgrade request or test request submitted by the customer after expiry of the warranty.
- PCBA with conformal coating.
- Avalue semi-product and outsourced products without Avalue serial number
- Products before the mass production stage, i.e. engineering samples.
- In case the products received are examined as NPF (No Problem Found) within the warranty period, the customer shall be responsible for the freight of both trips.
- Please contact your local distributor to examine in advance to prevent unnecessary freight cost.

For system failure of out-of-warranty products, Avalue will provide a quotation prior to repair service. When the customer applies for the cost, please refer to the Quotation number. In case the customer does not return the DOA product that has already been replaced by a new one, or the customer does not sign back the quotation of the out-of-warranty maintenance, Avalue reserves the right of whether or not to provide the repair service. In case the customer does not reply in 3 months, Avalue shall directly scrap or return the product back to customer at customer's cost without further notice to the customer.

3.4 Maintenance service of phased-out products

For servicing phased-out products, Avalue provides an extended period, starting the date of phase-out, as a guaranteed maintenance period of such products, for continuance of the maintenance service to meet customer's requirements. In case of unexpected factors causing Avalue to be unable to repair/replace a warranted but phased-out product, Avalue will, depending on the availability, upgrade the product (free of charge with continued warranty period as of the original product), or, give partial refund (based on the length of the remaining warranty period) to solve this kind of problem.

3.5 Maintenance Report

On completion of repair of a defective product, a Maintenance Report indicating the maintenance result and part(s) replaced (if any) will be sent to the customer together with the product. If the customer demands an additional maintenance analysis report, a service fee of various level will be charged depending on the warranty status. In case the analysis result shows that the defect attributes to Avalue's faulty design or process, the analysis fee will be exempted.

4. Service Products

Avalue provides service products to manage with different customer needs. Should you have any need, please consult to Avalue Sales Department.

Defect Analysis Report (DAR)

Avalue provides DAR (Defect Analysis Report) services aiming to elevating customer satisfaction. A DAR includes defect cause identification/verification/suggestion and improvement precautions, with instructions on correct usage for the avoidance of any reoccurrence.

Upgrade Service

Avalue is capable to provide system upgrade service for customization requirements. This upgrade service is applicable for main parts, such as CPU, memory, HDD, SSD, storage devices; also replacements motherboards of systems. Please contact Avalue sales for details to evaluate the possibility of system upgrade service and obtain information of lead time and price.

Safety Instructions

Safety Precautions

Before installing and using this device, please note the following precautions.

1. Read these safety instructions carefully.
2. Keep this User's Manual for future reference.
3. Disconnected this equipment from any AC outlet before cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
8. Use a power cord that has been approved for using with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to

EMX-ASLP User's Manual

avoid damage by transient overvoltage.

12. Never pour any liquid into an opening. This may cause fire or electrical shock.












13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel. If one of the following situations arises, get the equipment checked by service personnel:

- The power cord or plug is damaged.
- Liquid has penetrated into the equipment.
- The equipment has been exposed to moisture.
- The equipment does not work well, or you cannot get it work according to the user's manual.
- The equipment has been dropped and damaged.
- The equipment has obvious signs of breakage.






14. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

15. Equipment intended only for use in a RESTRICTED ACCESS AREA.

Explanation of Graphical Symbols

	Warning	A WARNING statement provides important information about a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	Caution	A CAUTION statement provides important information about a potentially hazardous situation which, if not avoided, may result in minor or moderate injury to the user or patient or in damage to the equipment or other property.
	Note	A NOTE provides additional information intended to avoid inconveniences during operation.
		Direct current.
		Alternating current
		Stand-by, Power on
		FCC Certification
		CE Certification
		Follow the national requirements for disposal of equipment.
		Stacking layer limit
		This side up

EMX-ASLP User's Manual

		Fragile Packaging
		Beware of water damage, moisture-proof
		Carton recyclable
		Handle with care
		Follow operating instructions of consult instructions for use.

Disposing of your old product

WARNING:

There is danger of explosion if the battery is mishandled or incorrectly replaced. Replace only with the same type of battery. Do not disassemble it or attempt to recharge it outside the system. Do not crush, puncture, dispose of in fire, short the external contacts, or expose to water or other liquids. Dispose of the battery in accordance with local regulations and instructions from your service provider.

CAUTION:

- Lithium Battery Caution: Danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type. Dispose batteries according to manufacturer's instructions.
- Disposal of a BATTERY into fire or a hot oven, or mechanically crushing or cutting of a BATTERY, that can result in an EXPLOSION
- Leaving a BATTERY in an extremely high temperature surrounding environment that can result in an EXPLOSION or the leakage of flammable liquid or gas.
- A BATTERY subjected to extremely low air pressure that may result in an EXPLOSION or the leakage of flammable liquid or gas.

Mise en garde!

AVERTISSEMENT : Il existe un risque d'explosion si la batterie est mal manipulée ou remplacée de manière incorrecte. Remplacez uniquement par le même type de batterie. Ne le démontez pas et ne tentez pas de le recharger en dehors du système. Ne pas écraser, percer, jeter au feu, court-circuiter les contacts externes ou exposer à l'eau ou à d'autres liquides. Jetez la batterie conformément aux réglementations locales et aux instructions de votre fournisseur de services.

MISE EN GARDE:

- Pile au lithium Attention : Danger d'explosion si la pile n'est pas remplacée correctement. Remplacer uniquement par un type identique ou équivalent. Jetez les piles conformément aux instructions du fabricant.
- L'élimination d'une BATTERIE dans le feu ou dans un four chaud, ou l'écrasement ou le découpage mécanique d'une BATTERIE, pouvant entraîner une EXPLOSION
- Laisser une BATTERIE dans un environnement à température extrêmement élevée pouvant entraîner une EXPLOSION ou une fuite de liquide ou de gaz inflammable.
- UNE BATTERIE soumise à une pression d'air extrêmement basse pouvant entraîner une EXPLOSION ou une fuite de liquide ou de gaz inflammable.

Content

1. Getting Started	17
1.1 Safety Precautions	17
1.2 Packing List	17
1.3 Manual Objectives	18
1.4 System Specifications	19
1.5 Architecture Overview—Block Diagram	25
2. Hardware Configuration	26
2.1 Product Overview	27
2.2 Jumper and Connector List	28
2.3 Setting Jumpers & Connectors	30
2.3.1 Serial port 1/2 pin9 signal select (JRI1/JRI2)	30
2.3.2 M.2 2230 Key B Slot (JM2BP1)	30
2.3.3 LVDS Back Light power selection (JBLS1)	31
2.3.4 Clear CMOS (CMOS1)	31
2.3.5 AT/ATX Power Mode Select (JAT1)	32
2.3.6 LCD Inverter connector (JBL1)	32
2.3.7 Serial port 1 connector (JCOM1)	33
2.3.8 Serial port 2 connector (JCOM2)	33
2.3.9 Serial Port RS485/422 Mode connector (J485-1)	34
2.3.10 Serial Port RS485/422 Mode connector (J485-2)	34
2.3.11 General purpose I/O connector (JDIO1)	35
2.3.12 SATA Power connector (SPWR1)	35
2.3.13 Power connector (JPWR2)	36
2.3.14 USB2.0 connector (JUSB2)	36
2.3.15 USB2.0 connector (JUSB3)	37
2.3.16 Battery connector (BT1)	37
2.3.17 Front Audio connector (JFAUD1)	38
2.3.18 JESPI connector (JESPI1)	38
2.3.19 Speaker connector (JSPK1)	39
2.3.20 Front Panel connector 1 (JFP1)	39
2.3.21 JLAN_LED connector (JLAN_LED1)	40
2.3.22 CPU fan connector (JFAN1)	40
2.3.23 CPU fan connector (JFAN2)	41
2.3.24 JEC_ROM connector (JEC_ROM1)	41
2.3.25 LVDS connector (JLVDS1)	42
2.3.27 JBIOS connector (JBIOS1)	44

3. Drivers Installation.....	45
3.1 Install Chipset Driver	46
3.2 Install VGA Driver.....	47
3.3 Install LAN Driver	48
3.4 Install Audio Driver	49
3.5 Install ME Driver.....	50
3.6 Install Serial IO Driver	51
3.7 Install iSST Driver	52
3.8 Install RtkUWP Driver	53
4.BIOS Setup	54
4.1 Introduction	55
4.2 Starting Setup	55
4.3 Using Setup	56
4.4 Getting Help	57
4.5 In Case of Problems.....	57
4.6 BIOS setup.....	58
4.6.1 Main Menu.....	58
4.6.1.1 System Language	58
4.6.1.2 System Date.....	59
4.6.1.3 System Time	59
4.6.2 Advanced Menu	59
4.6.2.1 CPU Configuration	60
4.6.2.1.1 Efficient-core Information.....	60
4.6.2.2 Power & Performance	61
4.6.2.2.1 CPU - Power Management Control.....	61
4.6.2.2.1.1 View/Configure Turbo Options	62
4.6.2.2 PCH-FW Configuration	62
4.6.2.2.1 Firmware Update Configuration.....	63
4.6.2.2.2 PTT Configuration.....	63
4.6.2.3 Trusted Computing	64
4.6.2.4 ACPI Settings	64
4.6.2.5 IT5782 Super IO Configuration.....	65
4.6.2.5.1 Serial Port 1 Configuration	66
4.6.2.5.2 Serial Port 2 Configuration	66
4.6.2.5.3 Serial Port 3 Configuration	67
4.6.2.5.4 Serial Port 4 Configuration	68
4.6.2.5.5 Serial Port 5 Configuration	68
4.6.2.5.6 Serial Port 6 Configuration	69
4.6.2.6 EC 5782 H/W monitor.....	70
4.6.2.7 S5 RTC Wake Settings.....	70

EMX-ASLP User's Manual

4.6.1.8	Serial Port Console Redirection	71
4.6.1.9	USB Configuration	71
4.6.1.10	Network Stack Configuration	72
4.6.1.11	NVMe Configuration	73
4.6.2	Chipset	73
4.6.2.1	System Agent (SA) Configuration	74
4.6.2.1.1	Memory Configuration	74
4.6.2.1.2	Graphics Configuration	75
4.6.2.2	PCH-IO Configuration	75
4.6.2.2.1	PCI Express Configuration	76
4.6.2.2.1.1	PCI Express Root Port 4(M.2 KeyE)	76
4.6.2.2.1.2	PCI Express Root Port 7(LAN1-I226)	77
4.6.2.2.1.3	PCI Express Root Port 9(LAN2-I226)	78
4.6.2.2.1.4	PCI Express Root Port 10(PCIEx1)	79
4.6.2.2.1.5	PCI Express Root Port 12(M.2 KeyM)	80
4.6.2.2.2	SATA Configuration	81
4.6.2.2.3	HD Audio Configuration	81
4.6.2.3	Board & Panel Configuration	82
5.	Mechanical Drawing	87

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

Before installation, please ensure all the items listed in the following table are included in the package.

Item	Description	Q'ty
1	EMX-ASLP Mainboard	1
2	SATA Cable	1
3	SATA Power Cable	1
4	I/O Shield	1



If any of the above items is damaged or missing, contact your retailer.

1.3 Manual Objectives

This manual describes in details Avalue Technology EMX-ASLP Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to set up EMX-ASLP or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the CMOS RAM that make booting impossible. If this should happen, clear the CMOS settings, (see the description of the Jumper Settings for details).

If you have any suggestions or find any errors regarding this manual and want to inform us of these, please contact our Customer Service department with the relevant details.

1.4 System Specifications

EMX-ASLP	
Product Features	Intel® Alder Lake N: N & E Series processor Intel® Amston Lake (Alder Lake N Extension) x7 Series Industrial RE Series & Communication C Series processor (TDP 15W, By BOM Option)
	One 262-pin DDR5 4800MHz SO-DIMM socket, supports up to 16GB Max. non ECC only (Only Intel® x7 Series Processors support IBECC)
	2 x Intel® i226V 2.5 Gigabit Ethernet (For Standard Temperature CPU SKUs) 2 x Intel® i226IT 2.5 Gigabit Ethernet (For Extended Temperature CPU SKUs) Realtek ALC888s HD Audio Decoding Controller Realtek ALC105 Stereo Class-D 2W 4Ω x 2
	1 x HDMI 2.0b, 1 x DP++, 1 x DP 1x Dual channel 18/24-bits LVDS (Chrontel CH7513A-BF or BFI, eDP to LVDS) or 1 x eDP 1920 x 1080@60Hz (2 Lanes)
	<ul style="list-style-type: none"> 1 x SATA III, 1 x SATA Power 2 x USB3.2 Gen2x1 at IO 2 x USB3.2 Gen1x1 at IO 1 x USB3.2 Gen1x1 vertical type A 4 x USB 2.0 by pin header 2 x RS-232/RS422/485, 4 x RS232 1 x M.2 Type B slot for 3042/3052/2242 size with USB 3.2 Gen1x1, USB 2.0, SIM Slot for LTE/IO Cards support WWAN+GNSS <ul style="list-style-type: none"> * 3042/2242 bridge bracket to 3052 * Does not support I2S and PCM functions * Only supports one SIM card (co-lay 1 x 10pin FPC connector for uSIM card adapter) 1 x M.2 Key E 2230 (1 x PCIe Gen3 x1 & USB 2.0 Signal) 1 x M.2 Type M 2242/2280 SSD Support PCIe Gen3 x1 or SATA III GPIO 16bit Line out, Mic in Support Line-out & Mic-in & Front audio pin-header NuvoTon NPCT754AADYX support SPI TPM 2.0 (BOM option) DC in +12V ~ +24V (Minimum power input 11.6V)
	1 x PCI-e x 1 slot
System	
CPU	Intel® Processor N97 (up to 3.6 GHz, 6M Cache, 12W)

EMX-ASLP User's Manual

	Intel® Core™ i3-N305 Processor (up to 3.8 GHz, 6M Cache, 15W) Intel® Atom™ x7211RE (up to 3.2 GHz, 6M Cache, 6W) Intel® Atom™ x7213RE (up to 3.4 GHz, 6M Cache, 9W) Intel® Atom™ x7433RE (up to 3.4 GHz, 6M Cache, 9W) Intel® Atom™ x7835RE (up to 3.6 GHz, 6M Cache, 12W)
BIOS	AMI uEFI BIOS, 256Mbit SPI Flash ROM
I/O Chip	EC ITE IT5571
System Memory	One 262-pin DDR5 4800MHz SO-DIMM socket, supports up to 16GB Max. non ECC only (Only Intel® x7 Series Processors support IBECC)
Watchdog Timer	H/W Reset, 1sec. – 65535sec./min. 1sec. or 1min. step
H/W Status Monitor	CPU temperature monitoring Voltages monitoring CPU fan speed control
TPM	NuvoTon_NPCT754AADYX TPM 2.0 (Default is N/A, By BOM option)
Expansion Slot	
M.2	<ul style="list-style-type: none"> 1 x M.2 Type B slot for 3042/3052/2242 size with USB 3.2 Gen1x1, USB 2.0, SIM Slot for LTE/IO Cards support WWAN+GNSS <ul style="list-style-type: none"> * 3042/2242 bridge bracket to 3052 * Does not support I2S and PCM functions * Only supports one SIM card (co-lay 1 x 10pin FPC connector for uSIM card adapter) * 1 x 1 x 3 pin, pitch 2.00mm connector for M.2 module card 3.3V and 3.8V selection (Jumper default: 1-2 for 3.3V) (JM2BP1) 1 x M.2 Key E 2230 (1 PCIe Gen3 x1 & USB 2.0 Signal) <ul style="list-style-type: none"> * Does not support PCM/I2S and UART functions 1 x M.2 Key M 2242/2280 SSD Support PCIe Gen3 x1 or SATA III
PCIe	1 x PCI-e x 1 slot
Storage	
M.2	1 x M.2 Key-M 2242/2280 SSD Support PCIe Gen3 x1 or SATA III
SATA	1 x SATA III, 1 x SATA Power
Edge I/O	
LAN	2 x 100/1000/2.5G Base-Tx GbE compatible <ul style="list-style-type: none"> * 2 x Intel® i226V 2.5 Gigabit Ethernet (for standard temperature CPU SKUs) * 2 x Intel® i226IT 2.5 Gigabit Ethernet (for extended temperature CPU SKUs)
USB	2 x USB3.2 Gen2x1 at I/O Type A +5VSB/1.8A 2 x USB3.2 Gen1x1 at I/O Type A +5VSB/1.8A
DP	1 x DP++, 1 x DP 1.4a
HDMI	1 x HDMI 2.0b

Audio	1 x Mic in 1 x Line out
DC Input	1 x DC Jack lockable connector type
Onboard I/O	
COM	<p>COM 1 & COM2:</p> <p>COM 1 & COM2 support RS232/422/485 connector, with / +5V & +12V Max. 1A, Supported and RS422/485 by BIOS setting</p> <ul style="list-style-type: none"> 2 x 2 x 5 pin, pitch 2.00mm connector support RS-232 connector (JCOM1, JCOM2) 2 x 2 x 3 pin, pitch 2.00mm connector support RS422/485 connector, Pin 5 with / +5V 12V Max. 1A, Supported (J485-1, J485-2) <p>COM3 to 6:</p> <ul style="list-style-type: none"> 1 x 2 x 20 pin, pitch 2.00mm connector for COM3~6: support RS-232 connector (JCOM3_1) <p>Using NuvoTon_NCT5124D for COM3~6</p>
USB	<p>2 x 2 x 5 pin, pitch 2.54mm connector for 4 USB 2.0 +5VSB/0.5A (JUSB3, JUSB4)</p> <p>1 x USB3.2 Gen1x1 vertical type A +5VSB/1.8A</p>
GPIO	1 x 2 x 10 pin, pitch 2.00mm connector for GPIO: 16 bits & +3.3S Level 80mA SMBus, +5V, GND, specify pull high, pull low voltage (JDIO1)
SATA Power	<p>1 x SATA III (JSATA1)</p> <p>1 x 4 pin Wafer (2.0mm) for 5V Power SATA Power, 1A (SPWR1)</p>
CPU/System FAN	<p>1 x 1 x 4 pin, pitch 2.54mm CPU fan connector with smart fan function supported (JFAN1)</p> <p>1 x 1 x 3 pin, pitch 2.54mm fan connector (JFAN2)</p>
Buzzer	Onboard Buzzer (BZ1)
Front Panel	<p>1 x 2 x 5 pin, pitch 2.54mm connector for front panel (JFP1)</p> <p>HDD LED, Power LED, Reset button, Power button</p>
RTC Battery	1 x 2 Pin Pitch 1.25mm SMT type battery connector (By 160mm cable type with CR2032 Battery) (BT1)
AT/ATX Selector	1 x 1 x 3 pin pitch 2.54mm connector for AT/ATX jumper, Default is ATX (JAT1)
Clear CMOS	1 x 1 x 3 pin, pitch 2.00mm connector for CMOS clear (JCMOS1)
LVDS	1 x 2 x 20 pin, pitch 1.25mm connector for LVDS (JLVDS1) or eDP
LCD Backlight Brightness	1 x 1 x 3 pin, pitch 2.00mm connector LCD backlight brightness adjustment (PWM/DC) (Jumper default: 1-2 for PWM) (JBLS1)
LCD Inverter	1 x 1 x 5 pin, pitch 2.00mm Wafer connector for LCD inverter backlight connector (+5V/+12V, 1A) (JBL1)
BIOS SPI	1 x 2 x 4 pin, pitch 2.00mm connector for BIOS SPI (JBIOS1)
EC Debug	1 x 2 x 6 pin, pitch 2.00mm connector for EC SPI (JESPI)

EMX-ASLP User's Manual

Audio	1 x 2 x 5 pin, pitch 2.00mm connector for front Audio (JFAUD1) (For Line out, Mic in)																								
DC-Input	1 x DC Jack lockable connector type (DCIN1) 1 x 2 x 2 pin, pitch 4.20mm connector for power input connector (JPWR2)																								
Amp Connector	1 x 4 pin, pitch wafer 2.00mm connector for 2W 4Ω x 2 Speaker (JSPK1)																								
Other	1 x 1 x 3 pin, pitch 2.00mm connector for EC firmware update (JEC_ROM1) 1 x 2 x 4 pin, pitch 2.00mm connector for LAN Activity Indicator LED (JLAN_LED1)																								
Display																									
Graphic Chipset	Integrated Intel® UHD Graphics																								
Spec. & Resolution	1 x HDMI 2.0b Max Resolution: 4096 x 2160 @ 60Hz 1 x DP++ Max Resolution: 1920 x 1080 @ 60Hz 1 x DP 1.4a Max Resolution: 4096 x 2160 @ 60Hz 1 x eDP or LVDS eDP: 1920 x 1080 @ 60Hz (2 Lanes) LVDS: 1920 x 1080 (Dual Channel, 18/24-bits) (Chrontel CH7513A-BF or BFI, eDP to LVDS Converter)																								
Multiple Display	Triple Display 1 x HDMI 2.0b, DP++, DP , eDP /LVDS																								
Audio																									
Audio Codec	Realtek ALC888s HD Audio Decoding Controller																								
Amplifier	Realtek ALC105 Stereo Class-D 2W 4Ω x 2																								
Ethernet																									
LAN Chipset	2 x Intel® i226V 2.5 Gigabit Ethernet (For Standard Temperature CPU SKUs) 2 x Intel® i226IT 2.5 Gigabit Ethernet (For Extended Temperature CPU SKUs)																								
LAN Spec.	100/1000/2500 Base-Tx GbE compatible Gigabit Ethernet																								
LED Indicator	<table><tr><td colspan="4">Max. 2.5G LAN Port</td></tr><tr><td colspan="2">ACT/LINK</td><td>SPEED</td><td></td></tr><tr><td></td><td>Definition</td><td>LED</td><td>Definition</td></tr><tr><td>Light Off</td><td>No Link</td><td>Solid Orange</td><td>2.5G</td></tr><tr><td>Solid Yellow</td><td>Connection</td><td>Solid Green</td><td>1G/100M</td></tr><tr><td>Yellow Flashing</td><td>Activity</td><td>Light Off</td><td>10M</td></tr></table>	Max. 2.5G LAN Port				ACT/LINK		SPEED			Definition	LED	Definition	Light Off	No Link	Solid Orange	2.5G	Solid Yellow	Connection	Solid Green	1G/100M	Yellow Flashing	Activity	Light Off	10M
Max. 2.5G LAN Port																									
ACT/LINK		SPEED																							
	Definition	LED	Definition																						
Light Off	No Link	Solid Orange	2.5G																						
Solid Yellow	Connection	Solid Green	1G/100M																						
Yellow Flashing	Activity	Light Off	10M																						
Mechanical & Environmental																									
Power Requirement	DC in +12V ~ +24V 10A (Minimum power input 11.6V)																								
ACPI	Single power ATX Support S0, S3, S4, S5																								

	ACPI 5.1 Compliant
Power Mode	HW: ATX (AT / ATX mode Switchable Through Jumper)
Operating Temp.	<p>N97</p> <p>Intel® Standard Temperature CPU SKU support: 0~60°C (32~140°F) with 0.5m/s air flow</p> <p>i3-N305</p> <p>Intel® Standard Temperature CPU SKU support: 0~60°C (32~140°F) with 0.5m/s air flow</p> <p>x7211RE/ x7213RE/ x7433RE</p> <p>Intel® Extended Temperature CPU SKU Support: -20~70°C (-4~158°F) with 0.5m/s air flow</p> <p>X7835RE</p> <p>Intel® Extended Temperature CPU SKU Support: -20~60°C (-4~140°F) with 0.5m/s air flow</p>
Storage Temp.	-40~ +75°C
Operating Humidity	40°C @ 95% Relative Humidity, Non-condensing
Size (L x W) (Please consult product engineers for the production feasibility if the size is larger than 410x360mm or smaller than 80x70mm)	6.7" x 6.7" (170mm x 170mm)
Weight	0.60kg
Vibration Test	<p>Package Vibration Test</p> <p>Reference IEC60068-2-64 Testing procedures</p> <p>Test Fh: Vibration broadband random Test</p> <ul style="list-style-type: none"> • PSD: 0.026G²/Hz, 2.16 Grms • Non-operation mode • Test Frequency: 5-500Hz • Test Axis: X,Y and Z axis • 30 min. per each axis • IEC 60068-2-64 Test:Fh <p>Random Vibration Operation</p> <p>Reference IEC60068-2-64 Testing procedures</p> <p>Test Fh : Vibration broadband random Test</p> <ul style="list-style-type: none"> • PSD: 0.00454G²/Hz, 1.5 Grms

EMX-ASLP User's Manual

	<ul style="list-style-type: none"> • Operation mode • Test Frequency : 5-500Hz • Test Axis : X,Y and Z axis • 30 minutes per each axis • IEC 60068-2-64 Test:Fh <p>Random Vibration Non Operation</p> <p>Reference IEC60068-2-64 Testing procedures</p> <p>Test Fh : Vibration broadband random Test</p> <ul style="list-style-type: none"> • PSD: 0.01818G²/Hz, 3.0 Grms • Non Operation mode • Test Frequency : 5-500Hz • Test Axis : X,Y and Z axis • 30 minutes per each axis <p>IEC 60068-2-64 Test:Fh</p>
Drop Test	<p>Packing Drop</p> <p>Reference ISTA 2A, Method : IEC-60068-2-32 Test: Ed</p> <p>Drop Test</p> <ul style="list-style-type: none"> • One corner , three edges, six faces <p>ISTA 2A, IEC-60068-2-32 Test:Ed</p>
OS Information	<p>BIOS Support:</p> <ul style="list-style-type: none"> • Win11 64bit UEFI <p>Note: Windows 11 is not a LTSC release and will be supported on the Intel CCG Client roadmap.</p> <p>NEX Network & Edge customers may install non-LTSC releases(e.g. Win11) on NEX Network & Edge processors.</p> <ul style="list-style-type: none"> • Win10 64bit UEFI <p>Linux</p>




Note: Specifications are subject to change without notice.

User condition suggestion:

1. DCIN & USB type C power input can only use either one.
2. Due to layout length limitation, EMX-ASLP USB Type-C cannot reach USB 3.2 Gen 2 10G, but only USB 3.2 Gen 1 5G data transmission speed.
3. User should consider overall power consumption including CPU and devices add-on, to choose suitable power adapter.


1.5 Architecture Overview—Block Diagram

The following block diagram shows the architecture and main components of EMX-ASLP.

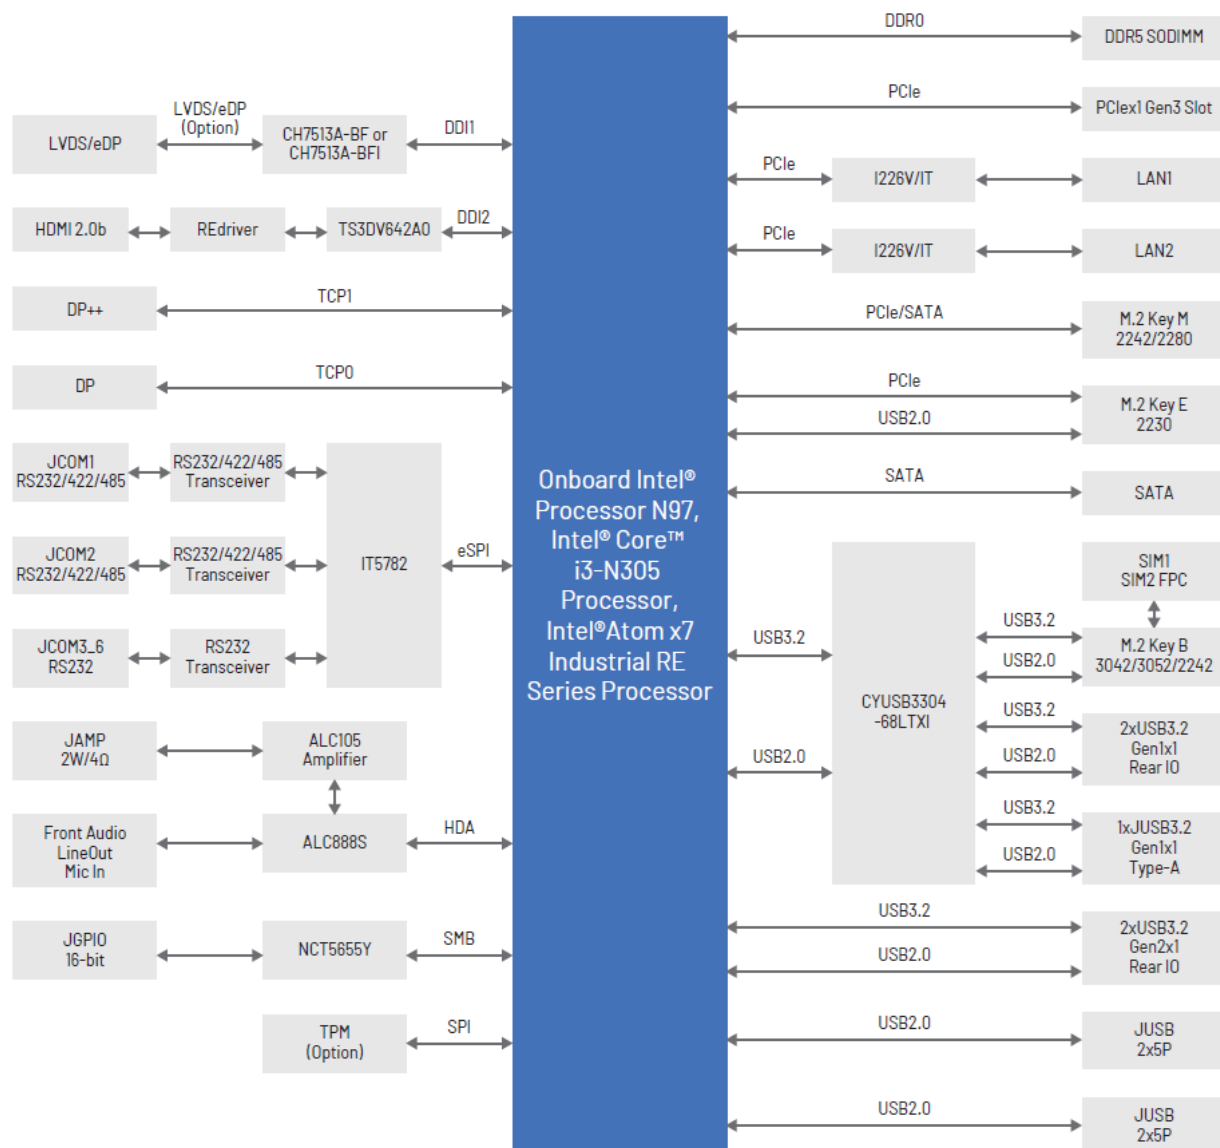

2. Hardware Configuration


2.1 Product Overview

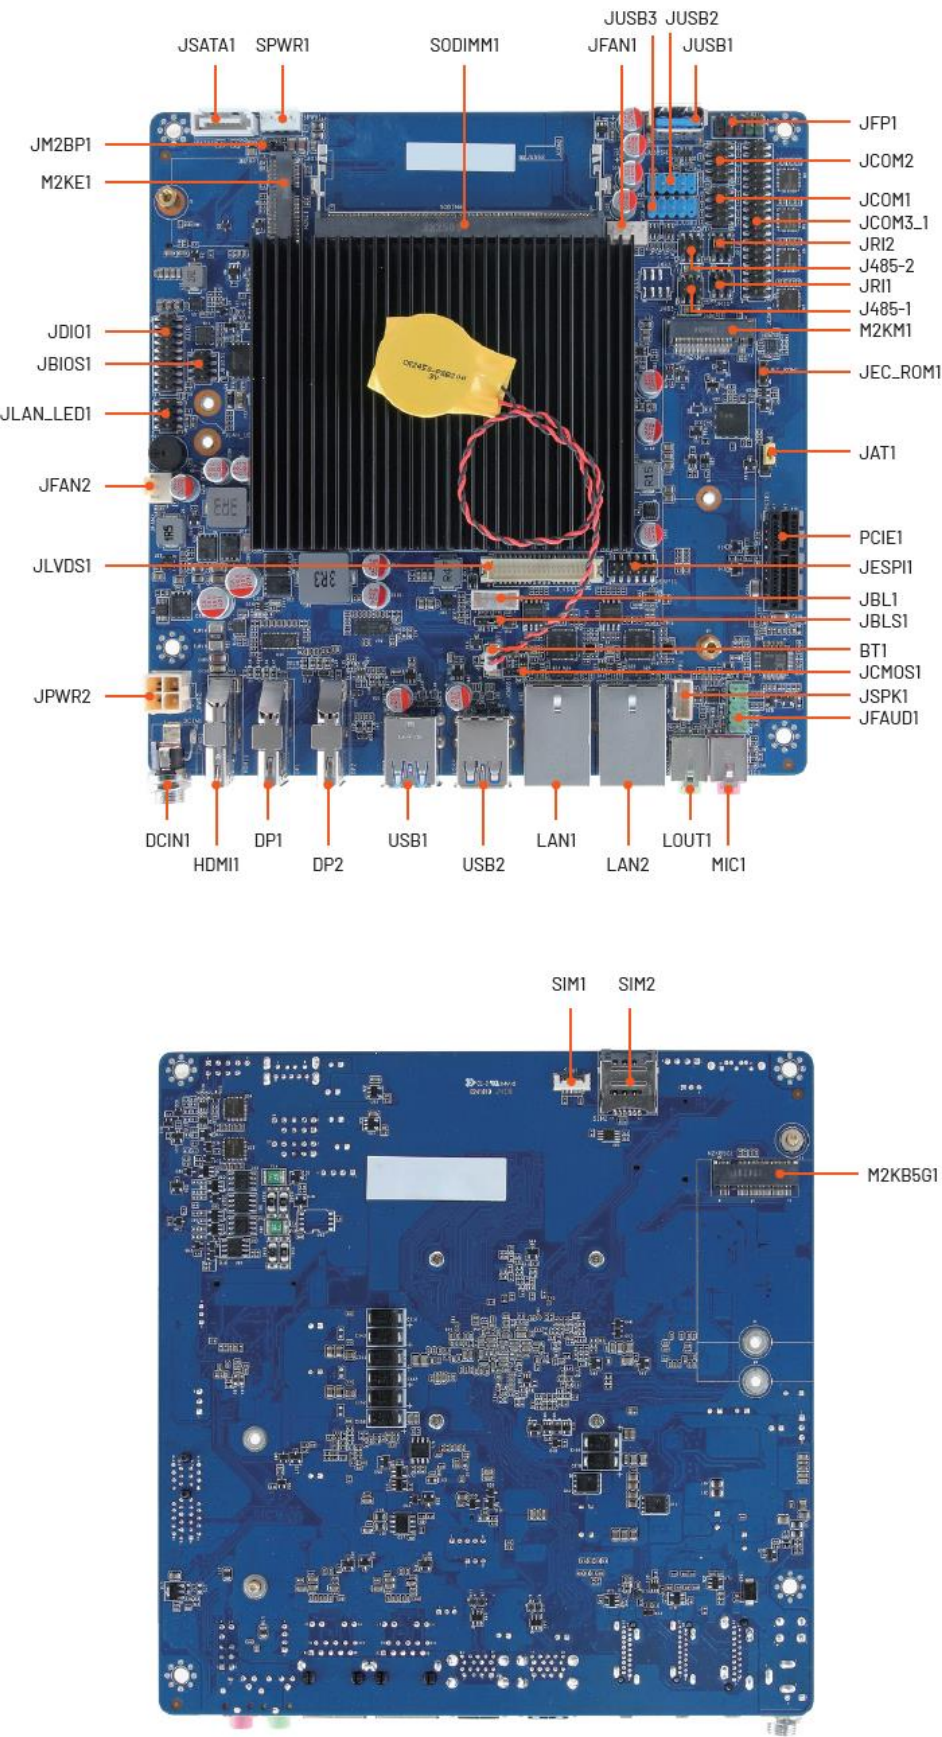

2.2 Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.

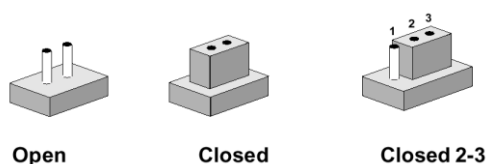

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board's jumpers and connectors.

The following tables list the function of each of the board's jumpers and connectors.

Jumpers

Label	Function	Note
JRI1/2	Serial port 1/2 pin9 signal select	3 x 2 header, pitch 2.00mm
JM2BP1	M.2 2230 Key B Slot	3 x 1 header, pitch 2.00mm
JBLS1	LVDS Back Light power selection	3 x 1 header, pitch 2.00mm
JAT1	AT/ATX Power Mode Select	3 x 1 header, pitch 2.54mm
CMOS1	Clear CMOS	3 x 1 header, pitch 2.00mm


Connectors

Label	Function	Note
JFAN1	CPU fan connector	4 x 1 wafer, pitch 2.54mm
JFAN2	CPU fan connector	3 x 1 wafer, pitch 2.54mm

JFP1	Front Panel connector	5 x 2 header, pitch 2.54mm
SODIMM1	204-pin DDR3L DIMM socket	
JFAUD1	Front Audio connector	5 x 2 header, pitch 2.54mm
JBL1	LCD Inverter connector	5 x 1 wafer, pitch 2.00mm
JESPI1	JESPI connector	6 x 2 header, pitch 2.00mm
JCOM1/2	Serial Port 1 connector	5 x 2 header, pitch 2.00mm
JCOM3_1	Serial Port 3 connector	20 x 2 header, pitch 2.00mm
J485-1/2	Serial Port 1 RS485/422 Mode connector	3 x 2 header, pitch 2.00mm
JDIO1	General purpose I/O connector	10 x 2 header, pitch 2.00mm
JSPK1	Speaker connector	4 x 1 wafer, pitch 2.00mm
JLVDS1	LVDS Connector	20 x 2 wafer, pitch 1.25mm
JBIOS1	JBIOS connector	4 x 2 header, pitch 2.00mm
JUSB2/3	USB 2.0 connector	5 x 2 header, pitch 2.54mm
LAN1/2	RJ-45 Ethernet 1/2	
PCIE1	PCIe connector	
JLAN_LED1	JLAN_LED connector	4 x 2 header, pitch 2.00mm
JUSB1	USB connector	
USB1/2	USB connector 1/2	
DP1/2	DP connector 1/2	
BT1	Battery connector	2 x 1 wafer, pitch 1.25mm
JPWR2	Power connector	2 x 2 wafer, pitch 4.20mm
JSATA1	Serial ATA connector	
SPWR1	SATA Power connector	4 x 1 wafer, pitch 2.54mm
JEC_ROM1	JEC_ROM connector	3 x 1 header, pitch 2.00mm
DCIN1	DC Power-in connector	
HDMI1	HDMI connector	
LOUT1	Line-out audio jack	
MIC1	Mic-in audio jack	
M2KE1	M.2 2230 Type E Slot	
M2KM1	M.2 2242/2280 Key M Slot	
M2KB5G1	M.2 3042/3052/2242 Type B Slot	
SIM1	FPC connector for uSIM card adapter	
SIM2	SIM card slotM2KM1	


2.3 Setting Jumpers & Connectors

2.3.1 Serial port 1/2 pin9 signal select (JRI1/JRI2)

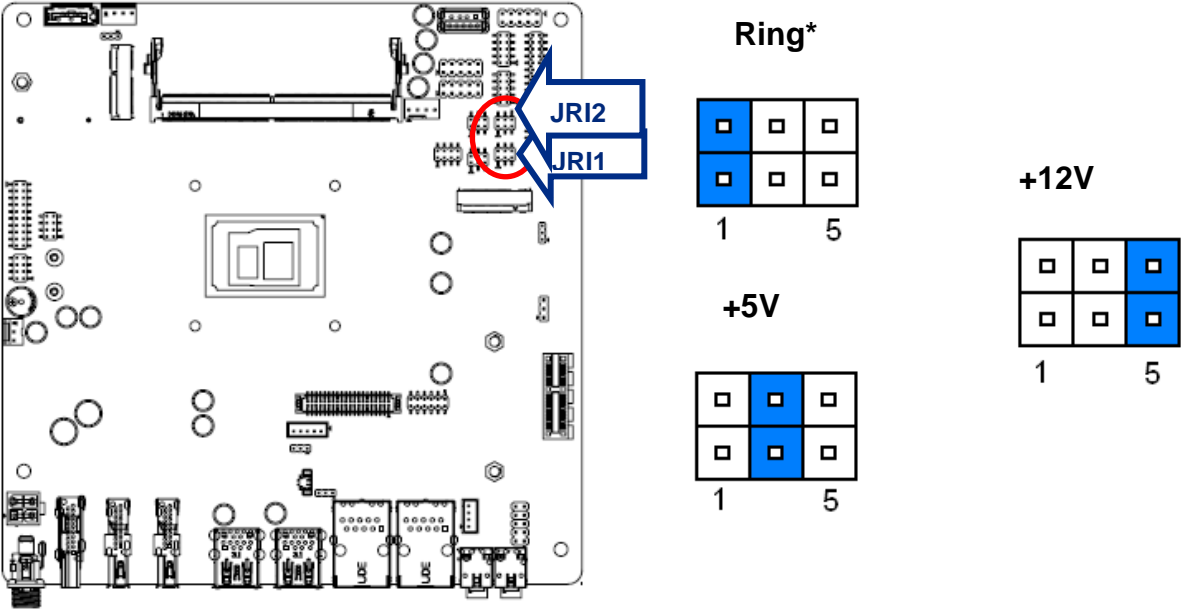


* Default

2.3.2 M.2 2230 Key B Slot (JM2BP1)

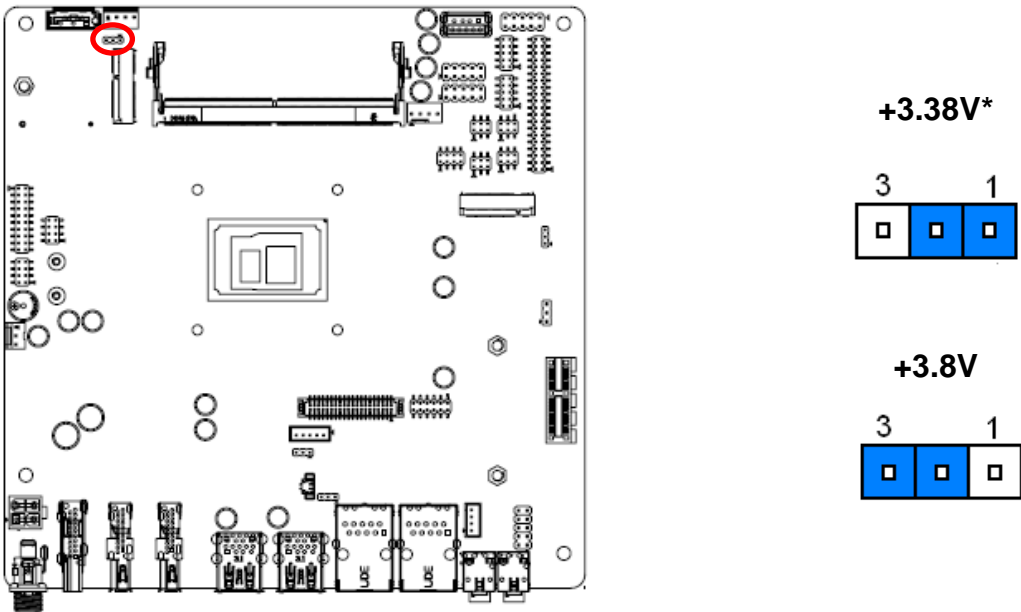


* Default

2.3.3 LVDS Back Light power selection (JBLS1)

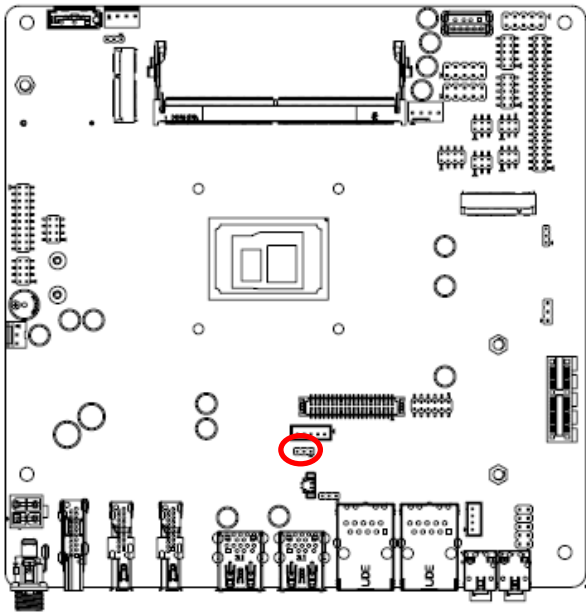

PWM Mode*




DC Mode




* Default


2.3.4 Clear CMOS (CMOS1)

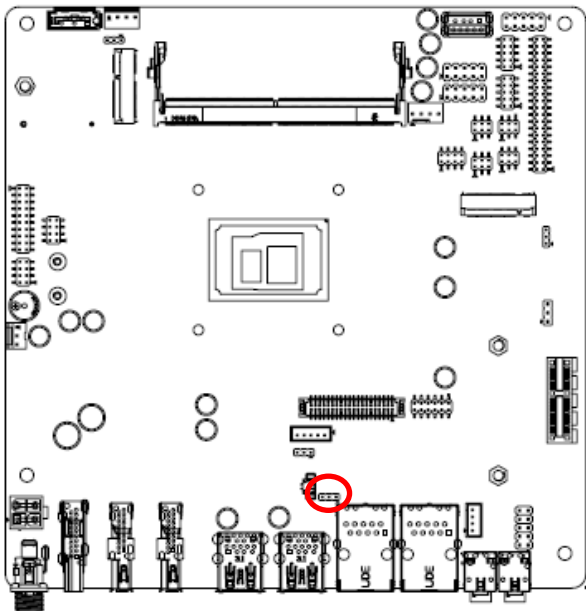

Protect*




Clear CMOS




* Default


2.3.5 AT/ATX Power Mode Select (JAT1)

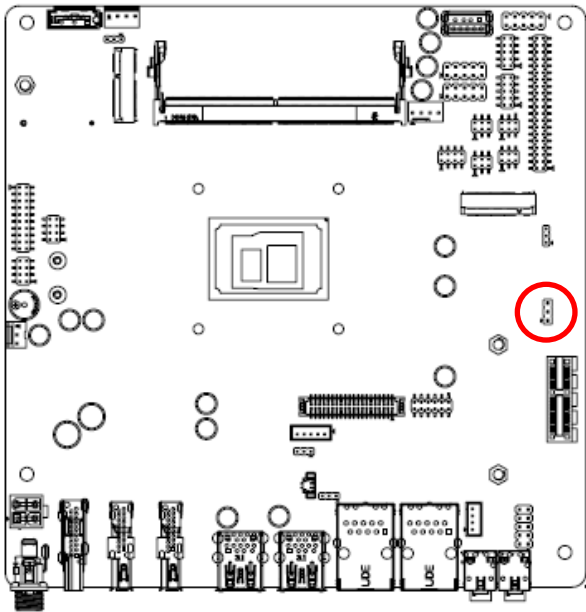

ATX*





AT





* Default

2.3.6 LCD Inverter connector (JBL1)

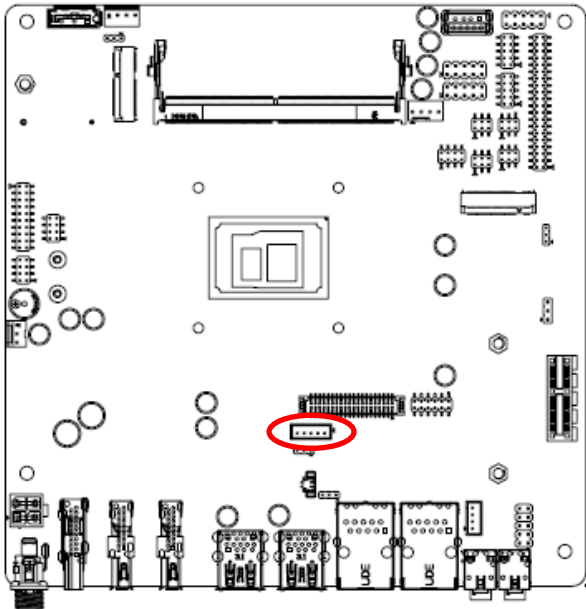



PIN	Signal
1	+12V
2	GND
3	LVDS_BKLTEN
4	LVDS_BKLADJ
5	+5V

2.3.7 Serial port 1 connector (JCOM1)

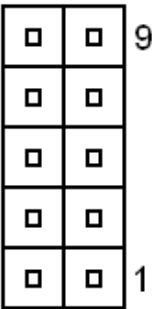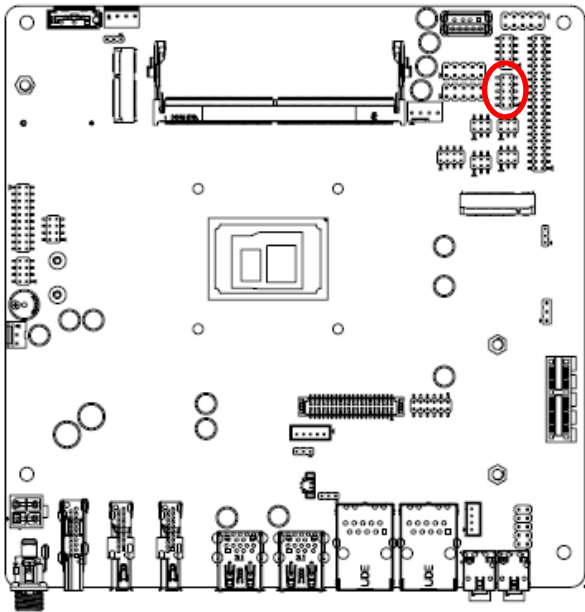



Signal	PIN	PIN	Signal
NC	10	9	NR1A#
NCTSA#	8	7	NRTSA#
NDSRA#	6	5	GND
NDTRA#	4	3	NTXDA
NRXDA	2	1	NDCDA#

2.3.8 Serial port 2 connector (JCOM2)

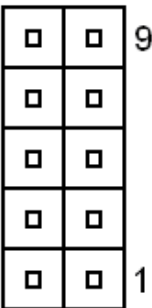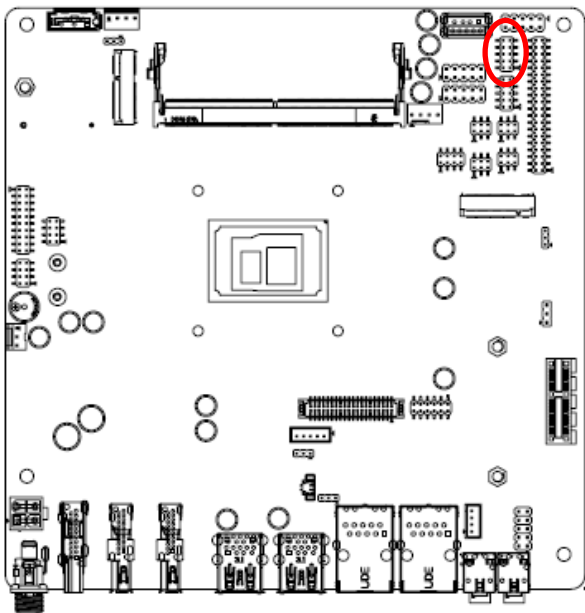



Signal	PIN	PIN	Signal
NC	10	9	NR1B#
NCTSB#	8	7	NRTSB#
NDSRB#	6	5	GND
NDTRB#	4	3	NTXDB
NRXDB	2	1	NDCDB#

2.3.9 Serial Port RS485/422 Mode connector (J485-1)

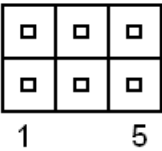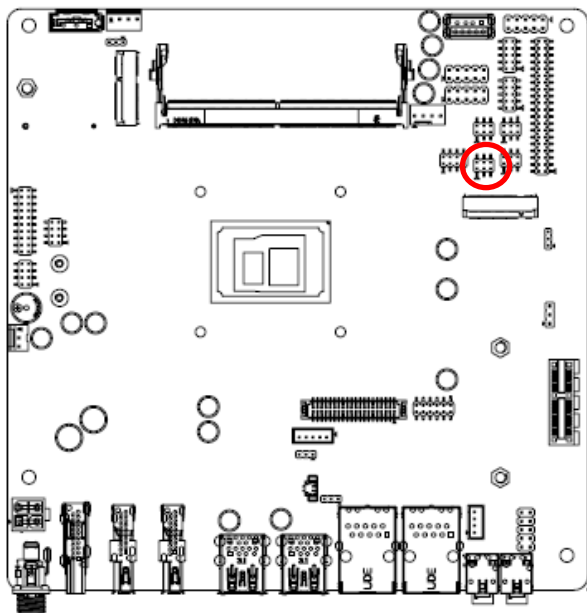


Signal	PIN	PIN	Signal
B485TX-	1	2	B485TX+
B422RX+	3	4	B422RX-
+5V	5	6	GND

2.3.10 Serial Port RS485/422 Mode connector (J485-2)

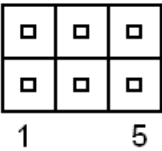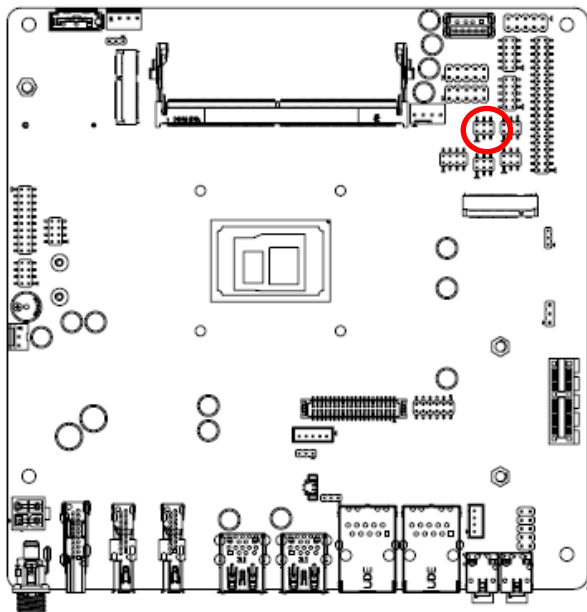



Signal	PIN	PIN	Signal
A485TX-	1	2	A485TX+
A422RX+	3	4	A422RX-
+5V	5	6	GND

2.3.11 General purpose I/O connector (JDIO1)

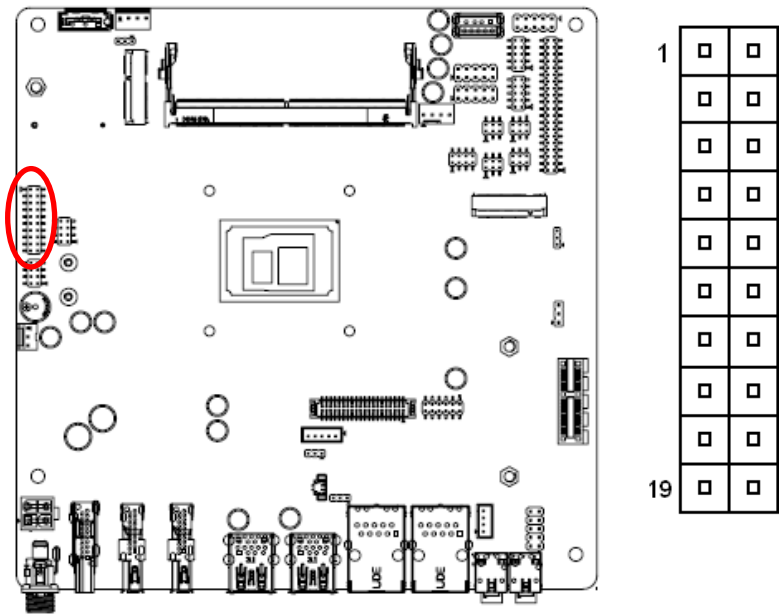



Signal	PIN	PIN	Signal
DI0	1	2	DO0
DI1	3	4	DO1
DI2	5	6	DO2
DI3	7	8	DO3
DI4	9	10	DO4
DI5	11	12	DO5
DI6	13	14	DO6
DI7	15	16	DO7
5V_SMB_CLK	17	18	5V_SMB_DATA
GND	19	20	+5V

2.3.12 SATA Power connector (SPWR1)

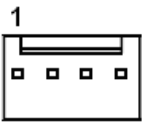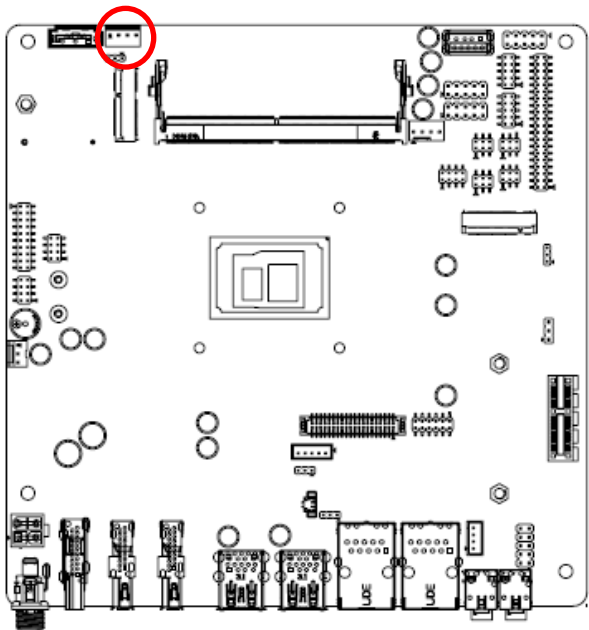



PIN	Signal
1	+5V_SATA
2	GND
3	GND
4	+12V_SATA

2.3.13 Power connector (JPWR2)

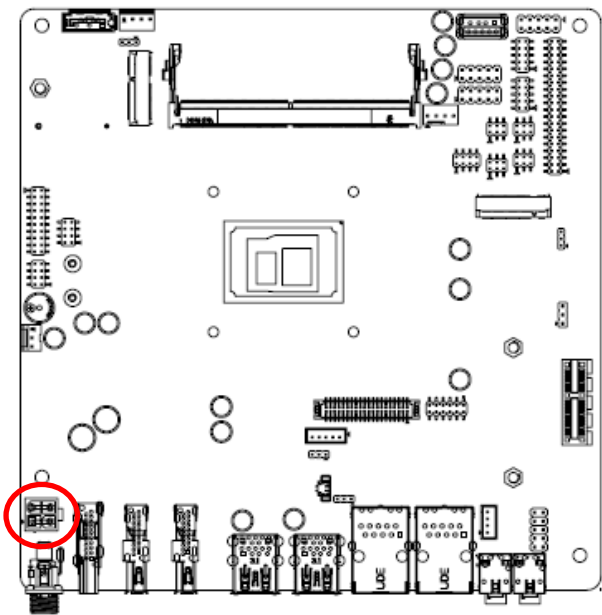



Signal	PIN	PIN	Signal
GND	1	2	GND
+V12-24_DCIN	3	4	+V12-24_DCIN

2.3.14 USB2.0 connector (JUSB2)

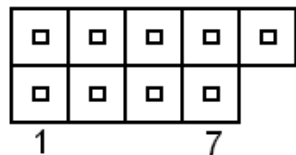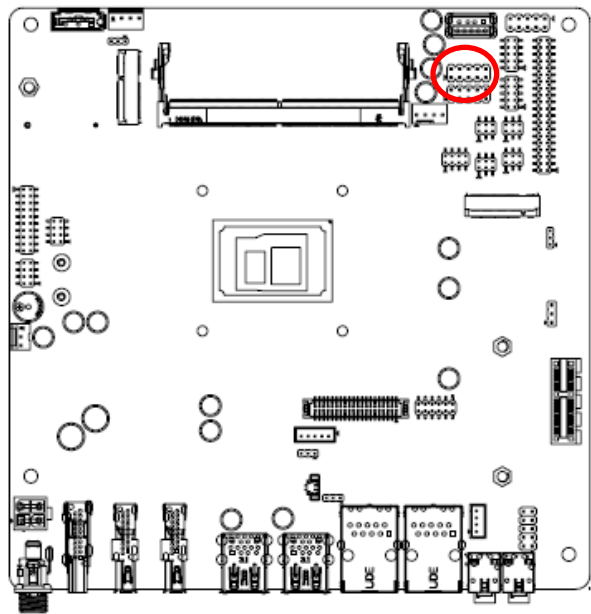



Signal	PIN	PIN	Signal
+5V _USB5-6	1	2	+5V _USB5-6
USB_N5	3	4	USB_N6
USB_P5	5	6	USB_P6
GND	7	8	GND
		10	NC

2.3.15 USB2.0 connector (JUSB3)

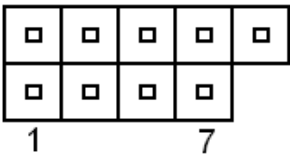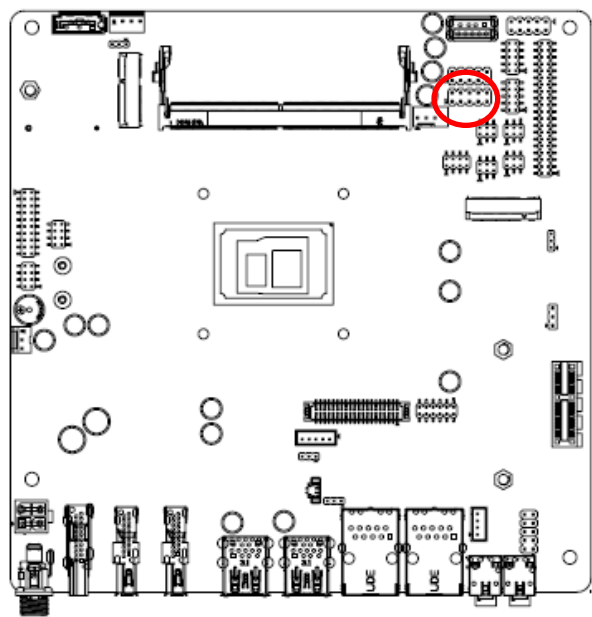



Signal	PIN	PIN	Signal
+5V_USB7-8	1	2	+5V_USB7-8
USB_N7	3	4	USB_N8
USB_P7	5	6	USB_P8
GND	7	8	GND
		10	NC

2.3.16 Battery connector (BT1)

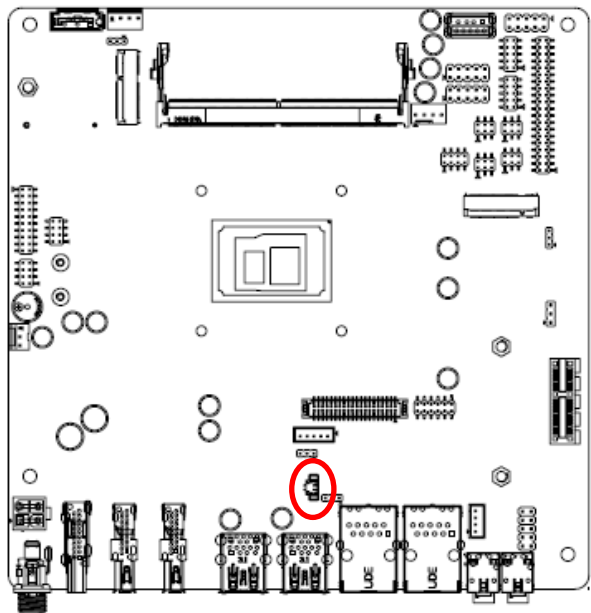



PIN	Signal
1	+3.3VSB
2	GND

2.3.17 Front Audio connector (JFAUD1)

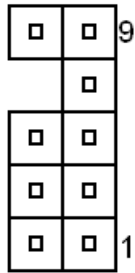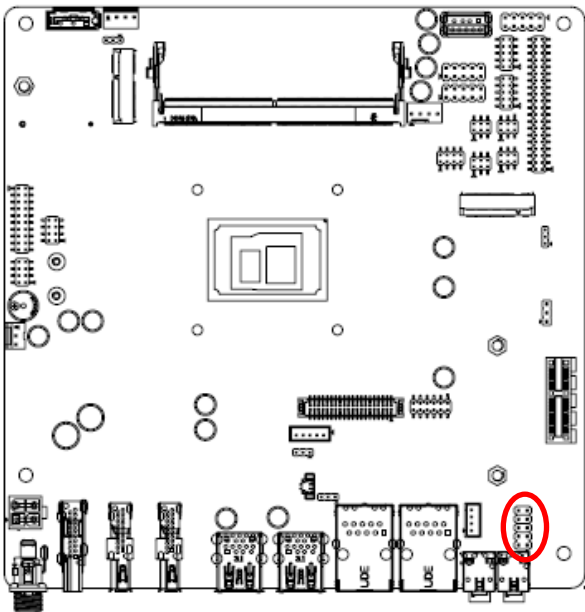


Signal	PIN	PIN	Signal
LINE2_JD	10	9	LINE2_L
		7	SENSE_B_JD3
MIC2_JD	6	5	LINE2_R
+3.3V	4	3	MIC2_R
GND	2	1	MIC2_L

2.3.18 JESPI connector (JESPI1)

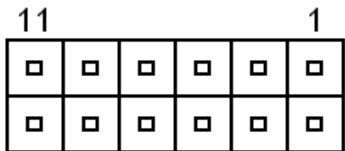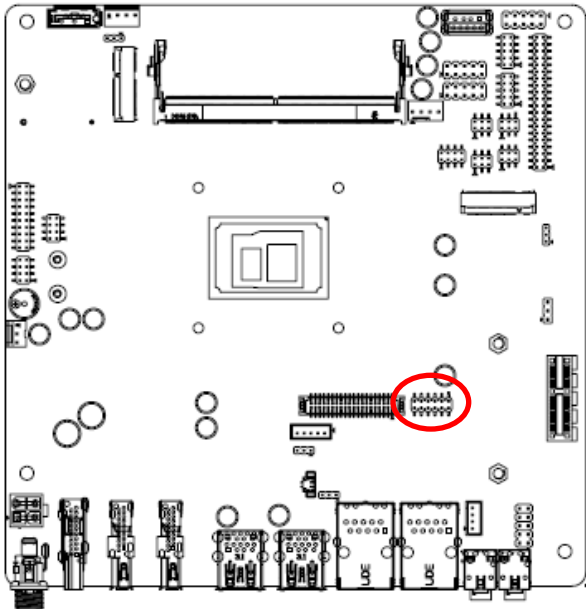



Signal	PIN	PIN	Signal
DIO_ESPI_IO0	1	2	+3.3V
DIO_ESPI_IO1	3	4	PLT_RST#_BUF
DIO_ESPI_IO2	5	6	ESPI_CS#0
DIO_ESPI_IO3	7	8	DIO_ESPI_CLK
ESPI_CS#1	9	10	GND
ESPI_RST#1	11	12	ESPI_ALERT#

2.3.19 Speaker connector (JSPK1)

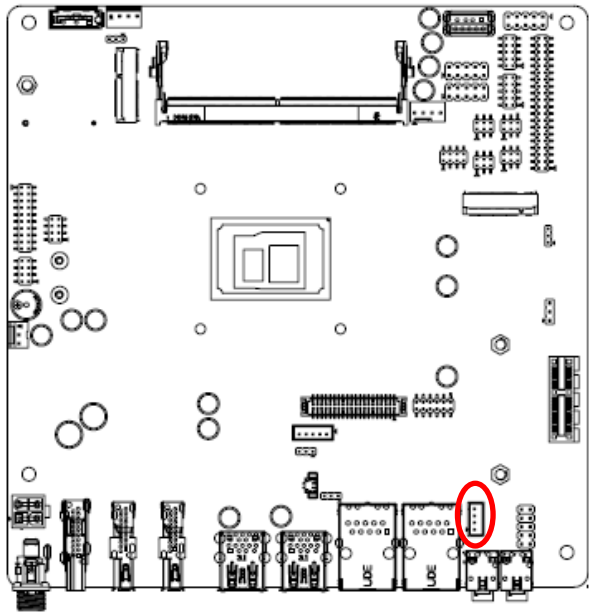



PIN	Signal
4	RSPK-
3	RSPK+
2	LSPK-
1	LSPK+

2.3.20 Front Panel connector 1 (JFP1)

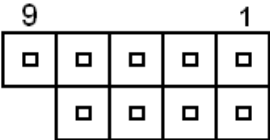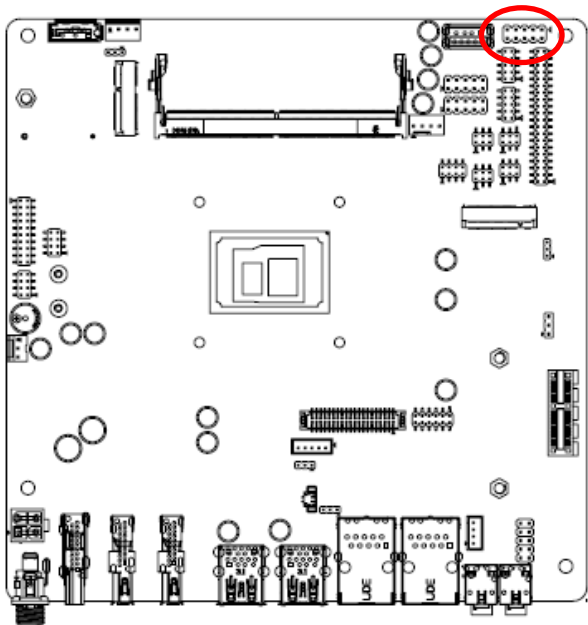



Signal	PIN	PIN	Signal
HDD_LED+	1	2	PWR_LED+
HDD_LED-	3	4	PWE_LED-
SYS_RST#	5	6	PWRBTN#
GND	7	8	GND
NC	9		

2.3.21 JLAN_LED connector (JLAN_LED1)

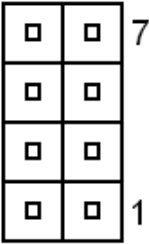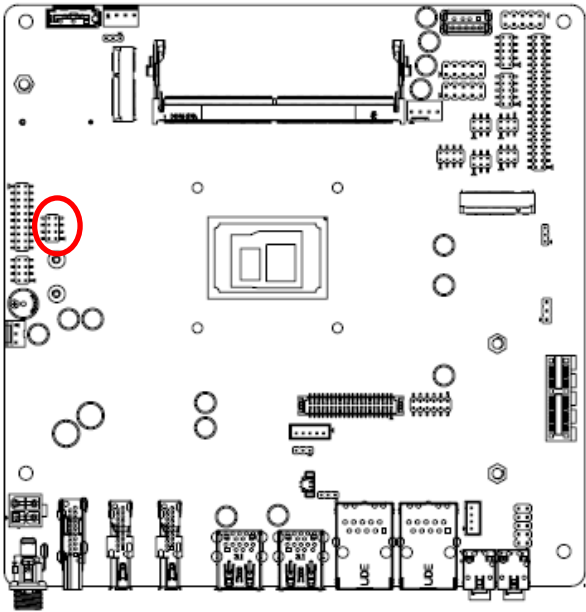



Signal	PIN	PIN	Signal
FRONT_LAN2_LINK2500#	8	7	GND
FRONT_LAN2_LINK100_1000#	6	5	FRONT_LAN2_ART
FRONT_LAN1_LINK2500#	4	3	GND
FRONT_LAN1_LINK100_1000#	2	1	FRONT_LAN1_ART

2.3.22 CPU fan connector (JFAN1)

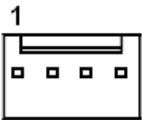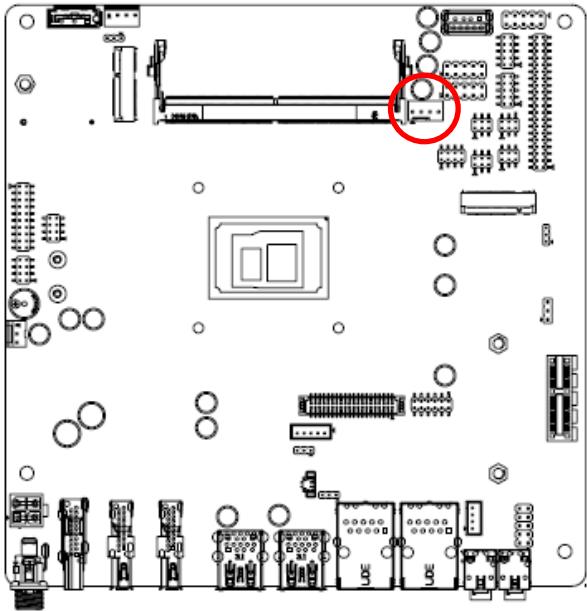



PIN	Signal
1	GND
2	+12V
3	CPU_FININ
4	CPU_FANOUT

2.3.23 CPU fan connector (JFAN2)

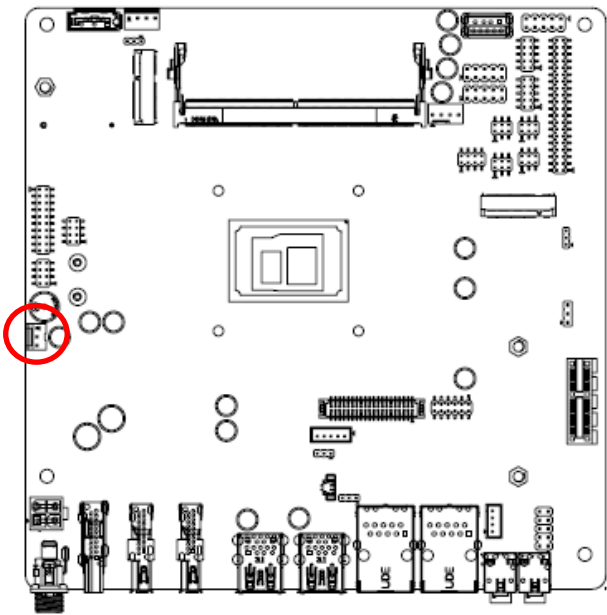


PIN	Signal
1	GND
2	+12V
3	SYS_FANIN

2.3.24 JEC_ROM connector (JEC_ROM1)

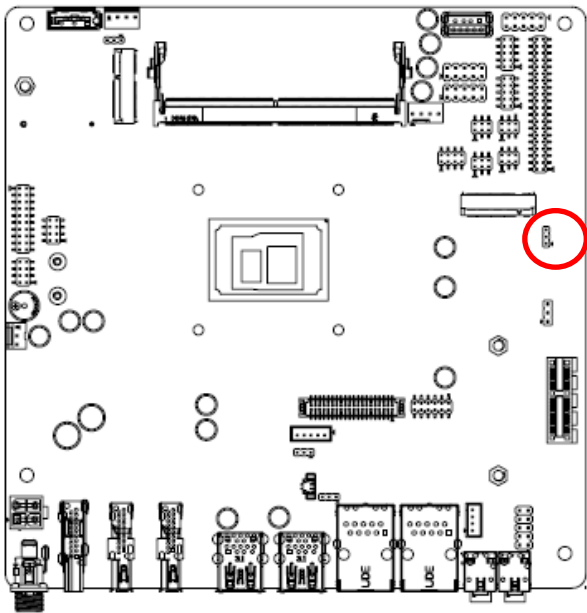



Signal	PIN
GND	3
EC_SMCLK_DBG	2
EC_SMDAT_DBG	1

2.3.25 LVDS connector (JLVDS1)

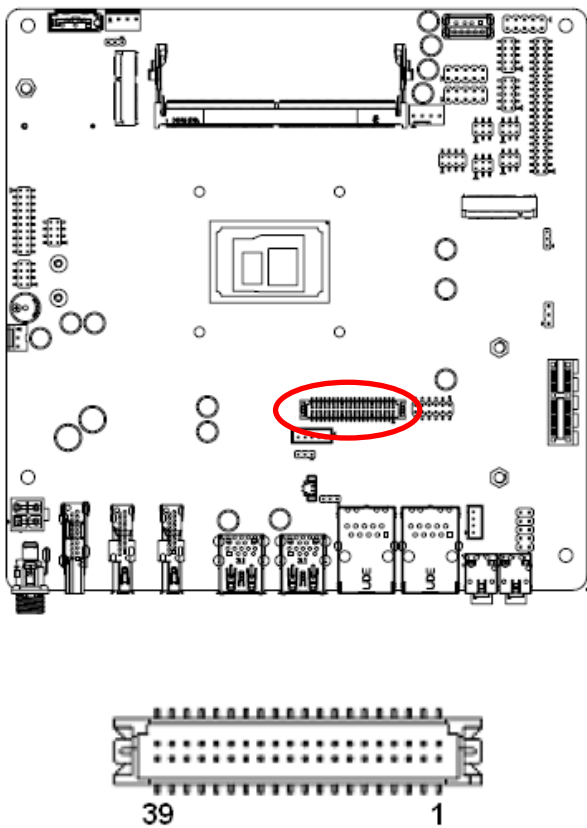



Signal	PIN	PIN	Signal
LVDS_VDD5V	2	1	LVDS_VDD33V
LVDS_VDD5V	4	3	LVDS_VDD33V
LVDS_VDD5V	6	5	LVDS_VDD33V
GND	8	7	GND
LVDS_DATAP0/eDP_HPD	10	9	LVDS_DATAP1/eDPP1
LVDS_DATAN0	12	11	LVDS_DATAP1/eDPN1
GND	14	13	GND
LVDS_DATAP2/eDPP0	16	15	LVDS_DATAP3
LVDS_DATAN2/eDPN0	18	17	LVDS_DATAN3
GND	20	19	GND
LVDS_DATAP4	22	21	LVDS_DATAP5
LVDS_DATAN4	24	23	LVDS_DATAN5
GND	26	25	GND
LVDS_DATAP6	28	27	LVDS_DATAP7
LVDS_DATAN6	30	29	LVDS_DATAN7
GND	32	31	GND
LVDS_CLK1P/eDPAUXP	34	33	LVDS_CLK2P
LVDS_CLK1N/eDPAUXN	36	35	LVDS_CLK2N
GND	38	37	GND
LVDS_VDD12V	40	39	LVDS_VDD12V

2.3.26 Serial port connector (JCOM3_1)

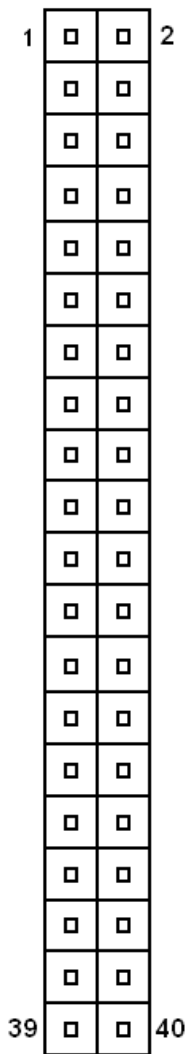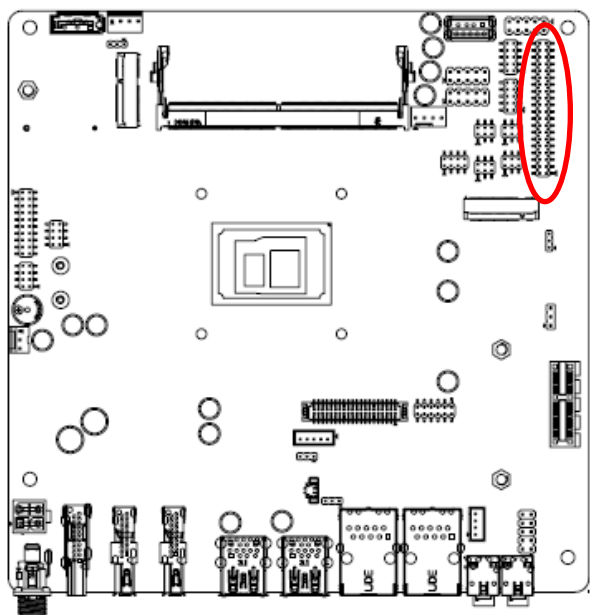

Signal	PIN	PIN	Signal
NC	40	39	NRIF#
NCTSF#	38	37	NRTSF#
NDSRF#	36	35	GND
NDTRF#	34	33	NTXDF
NRXDF	32	31	NDCDF#
NC	30	29	NRIE#
NCTSE#	28	27	NRTSE#
NDSRE#	26	25	GND
NDTRE#	24	23	NTXDE
NRXDE	22	21	NDCDE#
NC	20	19	NRID#
NCTSD#	18	17	NRTSD#
NDSRD#	16	15	GND
NDTRD#	14	13	NTXDD
NRXDD	12	11	NDCDD#
NC	10	9	NRIC#
NCTSC#	8	7	NRTSC#
NDSRC#	6	5	GND
NDTRC#	4	3	NTXDC
NRXDC	2	1	NDCDC#

2.3.27 JBIOS connector (JBIOS1)

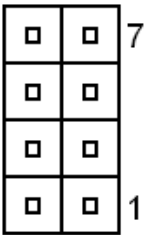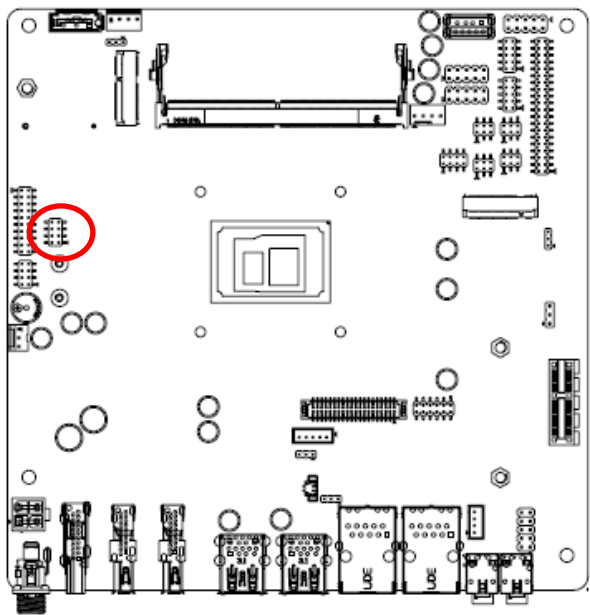

Signal	PIN	PIN	Signal
SPI_WP#	8	7	SPI_HOLD#
SPI_ROM_MOSI	6	5	SPI_ROM_MISO
SPI_ROM_CLK#	4	3	SPI_ROM_CS#
+3.3A_SPI	2	1	+3.3A_SPI


3. Drivers Installation

All the drivers are available on Avalue Downloads Area (<https://www.avaluetech.com/en/support/download>). Type the model name and press Enter to find all the relevant software, utilities, and documentation.

Chipset 1Audio 1Graphics 1LAN 1Other 1


Chipset

Total 1 Files

No.	Release Date	Title	Description	Download
01	2023-09-20	Intel Chipset Driver for Win10 x64	Windows 10 64bit	

Audio

Total 1 Files

No.	Release Date	Title	Description	Download
01	2023-09-20	Realtek Audio Driver for Win10 x64	Windows 10 64bit	



Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.

3.1 Install Chipset Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com>



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.



Step 3. Click Install.



Step1. Click Next.



Step 4. Click Finish to complete setup.



Step 2. Click Accept.


3.2 Install VGA Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com>




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

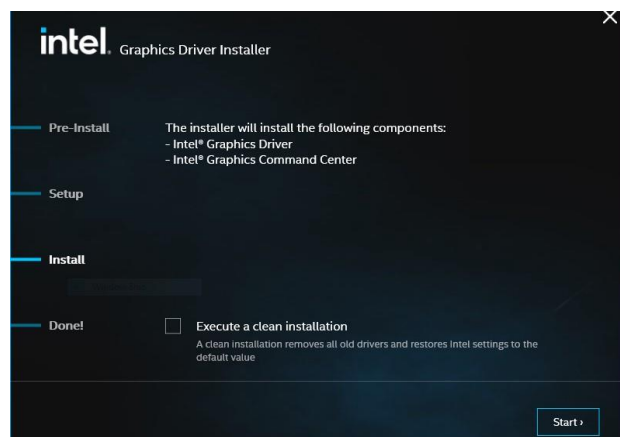


Step 3. Click Next.



Step 1. Click Next to continue installation.

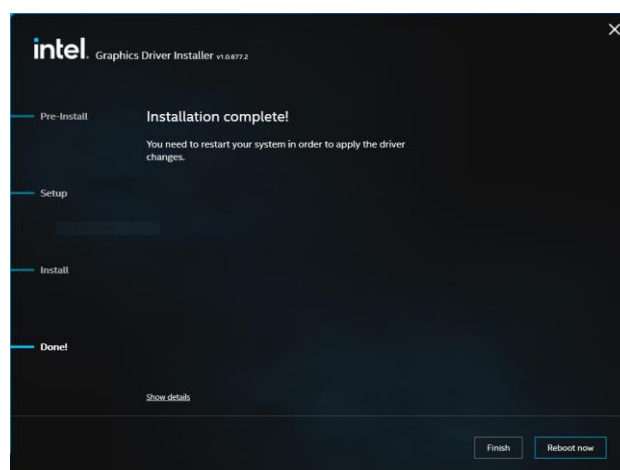

Step 4. Click Finish to complete setup.

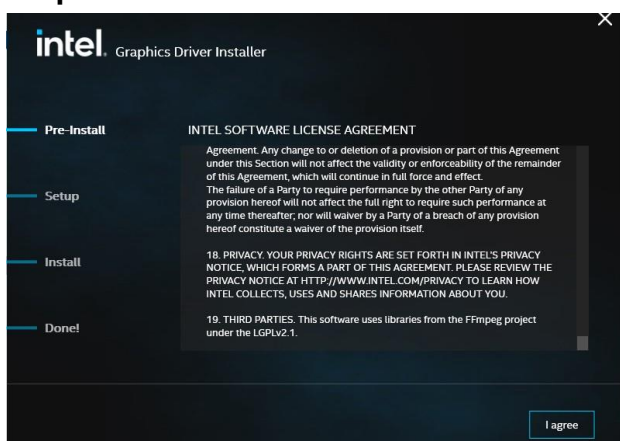

Step 2.

Click **Yes** to accept license agreement.


3.3 Install LAN Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com>



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

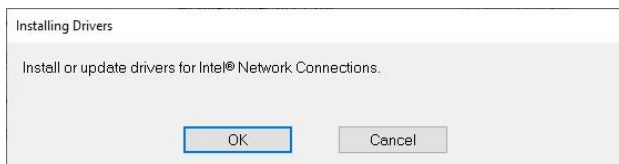

Step 1. Click **OK** to continue setup.

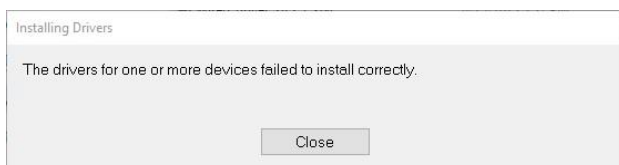

Step 2. Click **Close**.

3.4 Install Audio Driver


All drivers can be found on the Avalue Official Website:

<http://www.avalue.com>




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

Please install the iSST driver before installing the Audio Driver to enable iSST mode.

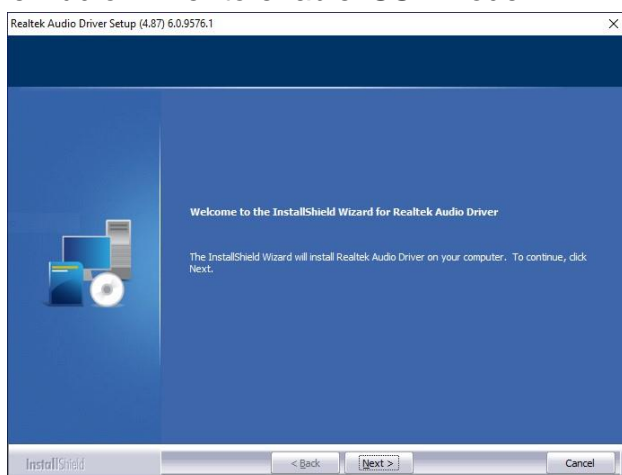

Step 1. Click Next to continue installation.

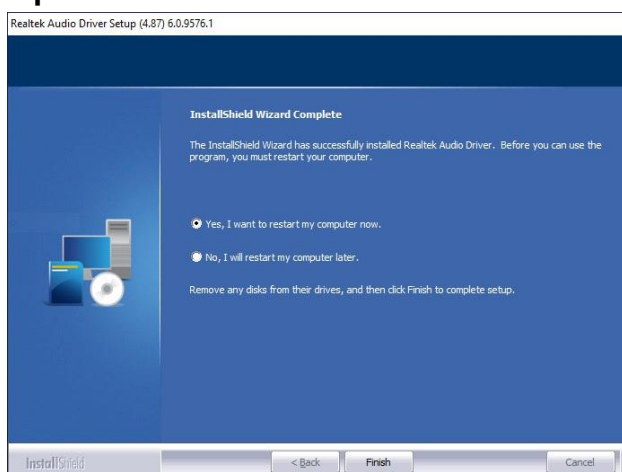

Step 2. Click Finish to complete setup.


3.5 Install ME Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com>



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

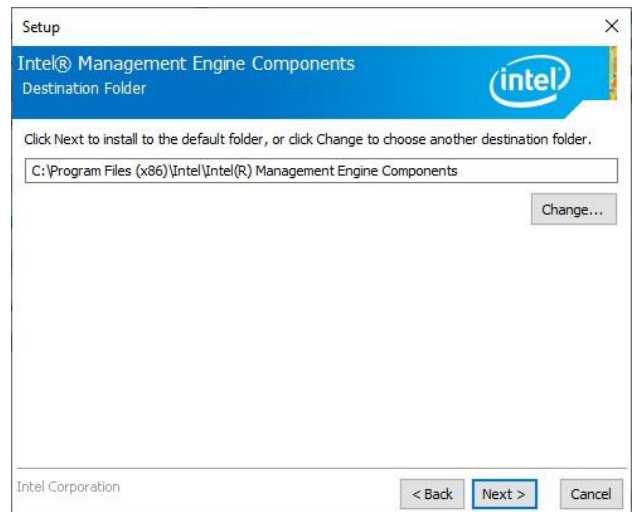

Step 3. Click **Next** to continue installation.

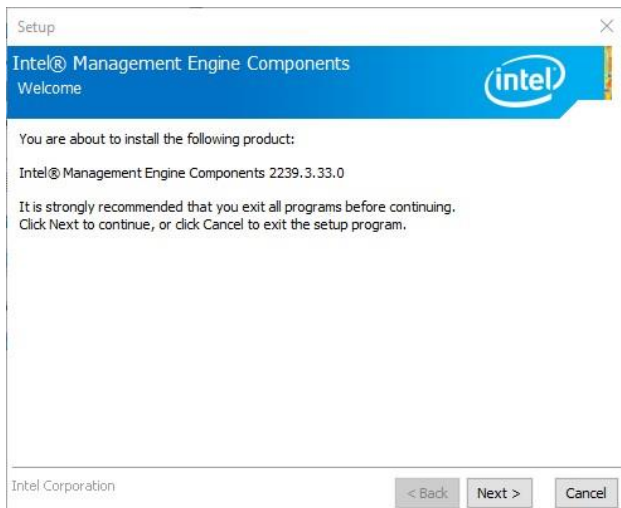

Step 1. Click **Next** to continue installation.



Step 2. Click **Next** to continue installation.


3.6 Install Serial IO Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com>




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

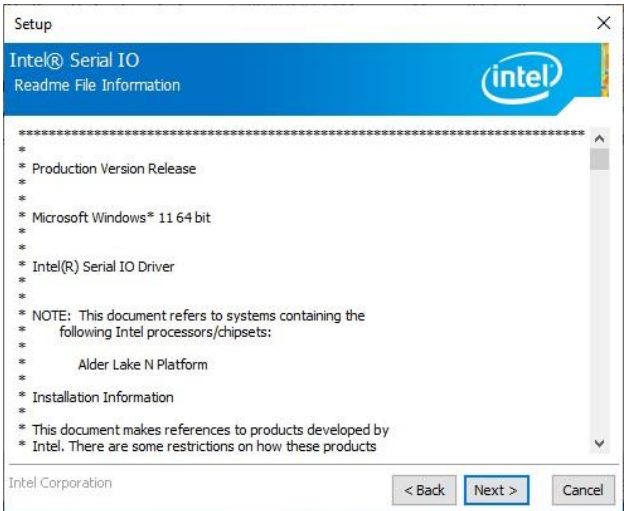

Step 3. Click Next.

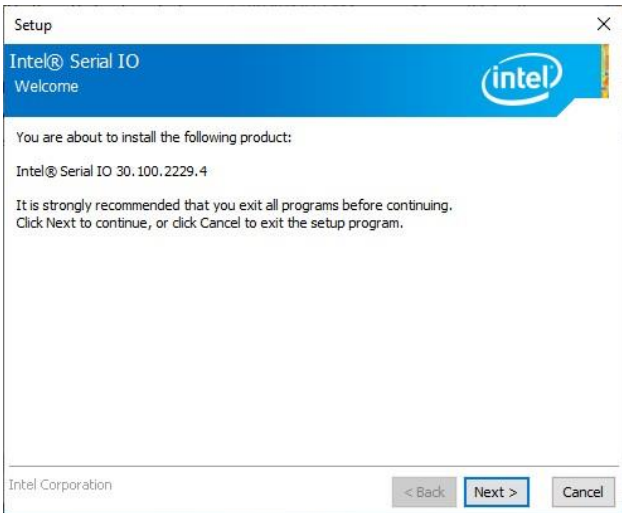


Step 1. Click Next to continue setup.

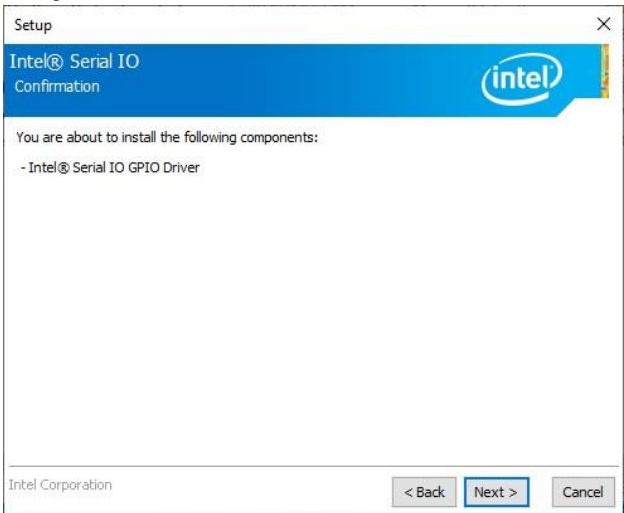

Step 4. Click Next.



Step 2. Click Next.

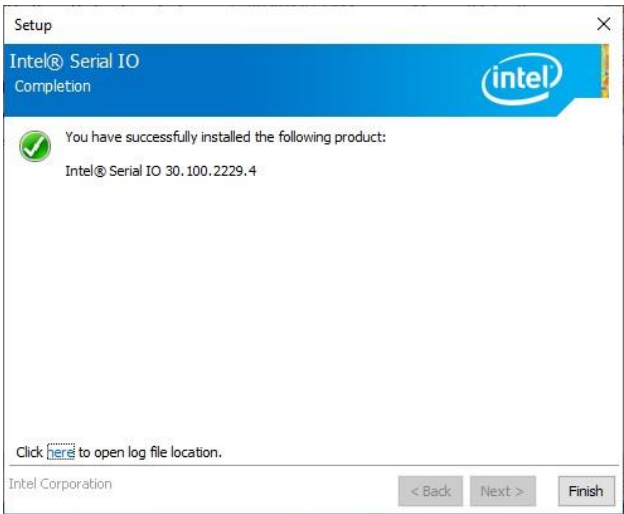


Step 5. Click Finish to complete the setup.

3.7 Install iSST Driver


All drivers can be found on the Avalue Official Website:
<http://www.avalue.com>




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

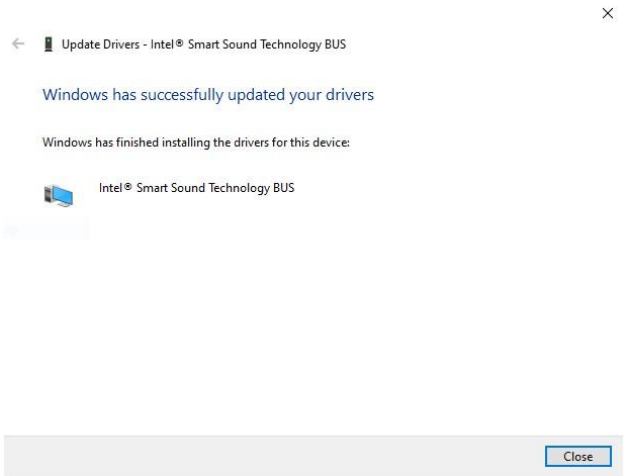

Step 3. Click Close.

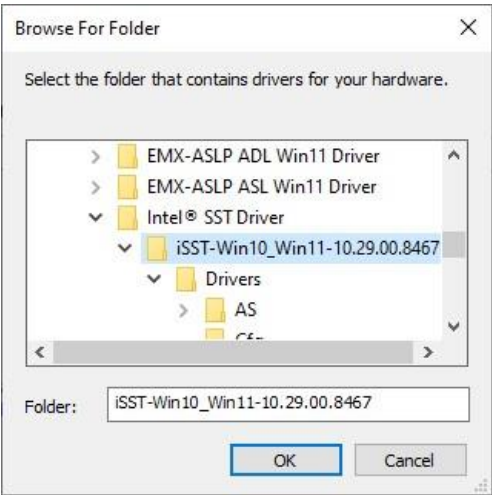

Step 1. Click OK to continue setup.

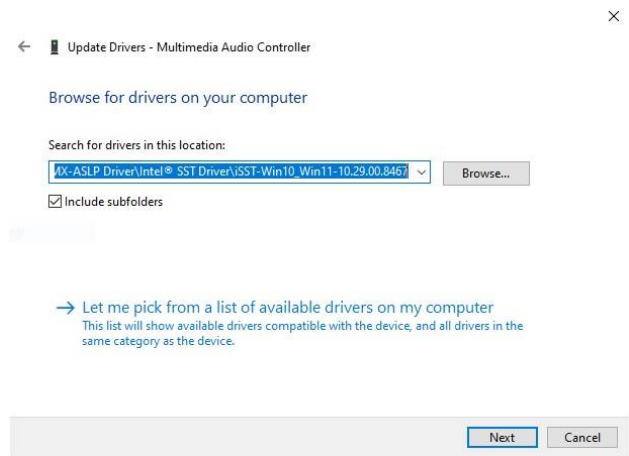

Step 2. Click Next.

3.8 Install RtkUWP Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com>



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

```
Administrator: Command Prompt - DISM_INSTALL_RtkUWP_V3.bat
C:\Windows\system32>cd /
C:\>cd Users
C:\Users>cd win10
C:\Users\win10>cd Desktop
C:\Users\win10\Desktop>cd RtkUWP_1.46.307.0_x64_bundle_ReleaseSign.appxupload_Windows10_PreinstallKit
C:\Users\win10\Desktop\RtkUWP_1.46.307.0_x64_bundle_ReleaseSign.appxupload_Windows10_PreinstallKit>DISM_INSTALL_RtkUWP_V3.bat

Deployment Image Servicing and Management tool
Version: 10.0.19041.844
Image Version: 10.0.19044.1826

The operation completed successfully.
Press any key to continue . . .
```

Step1.

4. BIOS Setup

4.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

4.2 Starting Setup

AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <ESC> or immediately after switching the system on, or

By pressing the <ESC> or key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

Press <ESC> or to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

4.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

4.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the <Enter> key again.

4.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.



The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

4.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

4.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

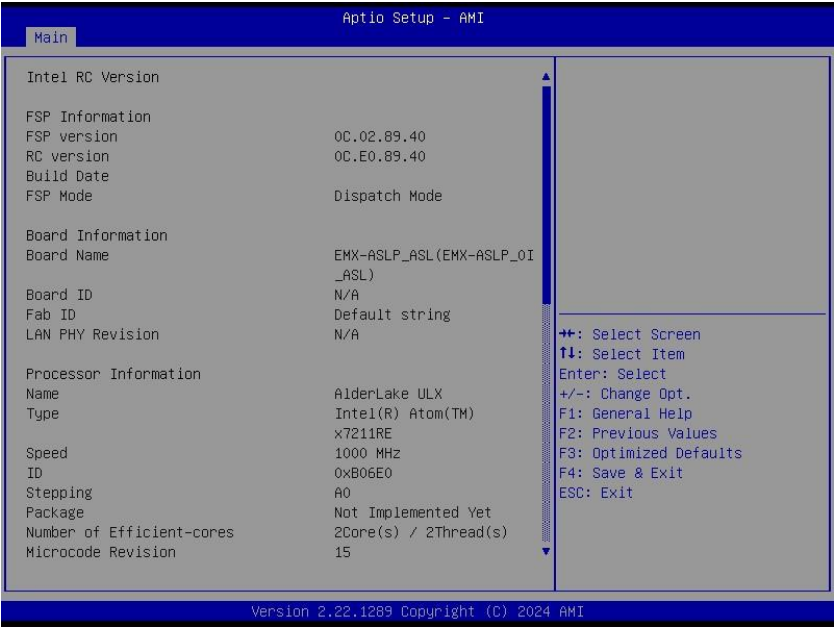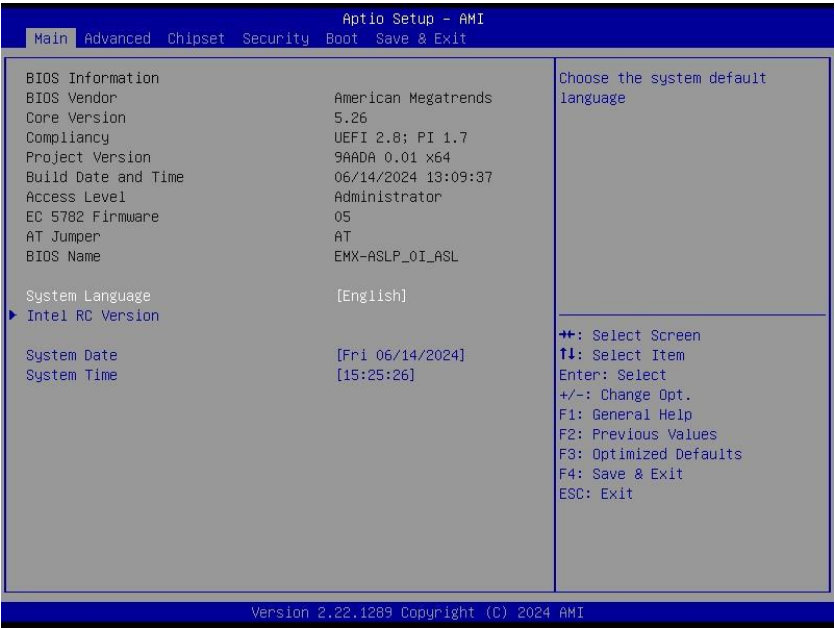

4.6.1.1 System Language

This option allows choosing the system default language.

4.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

4.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.




Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website (www.avalue.com) to download the latest product and BIOS information.


4.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

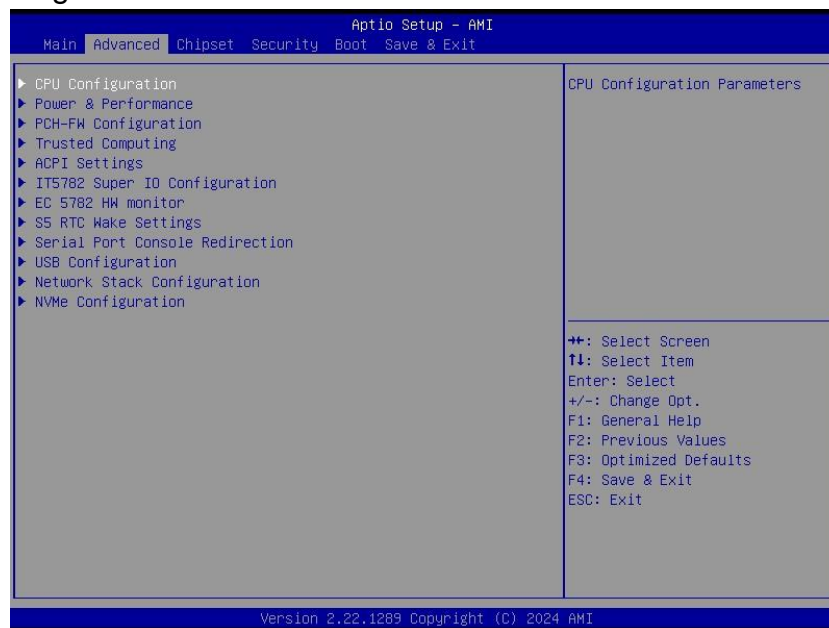


EMX-ASLP User’s Manual

4.6.2.1 CPU Configuration

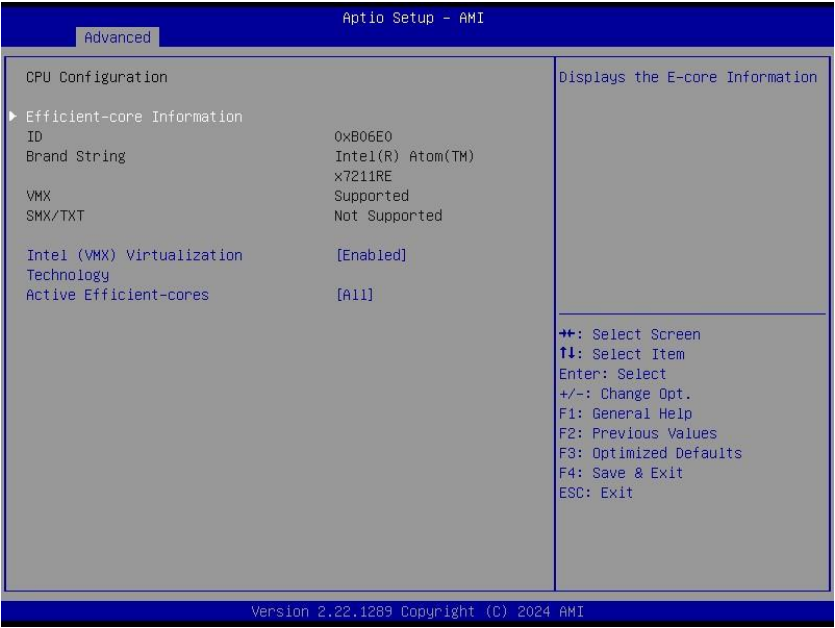


Item	Options	Description
Intel (VMX) Virtualization Technology	Disable, Enable[Default]	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Active Efficient-cores	All[Default] 7 6 5 4 3 2 1	Number of E-cores to enable in each processor package. Note: Number of Cores and E-cores are looked at together. When both are [0,0), Pcode will enable all cores.


4.6.2.1.1 Efficient-core Information

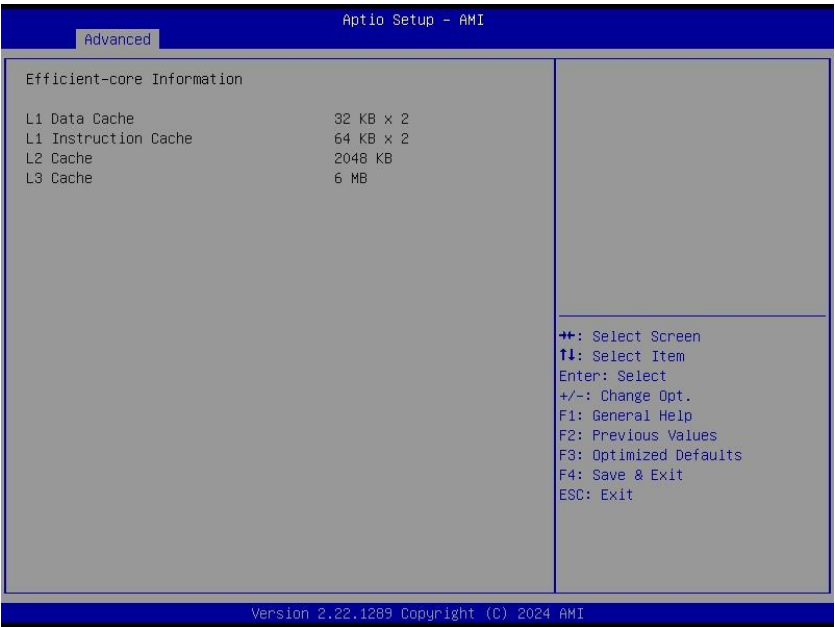

4.6.2.2 Power & Performance

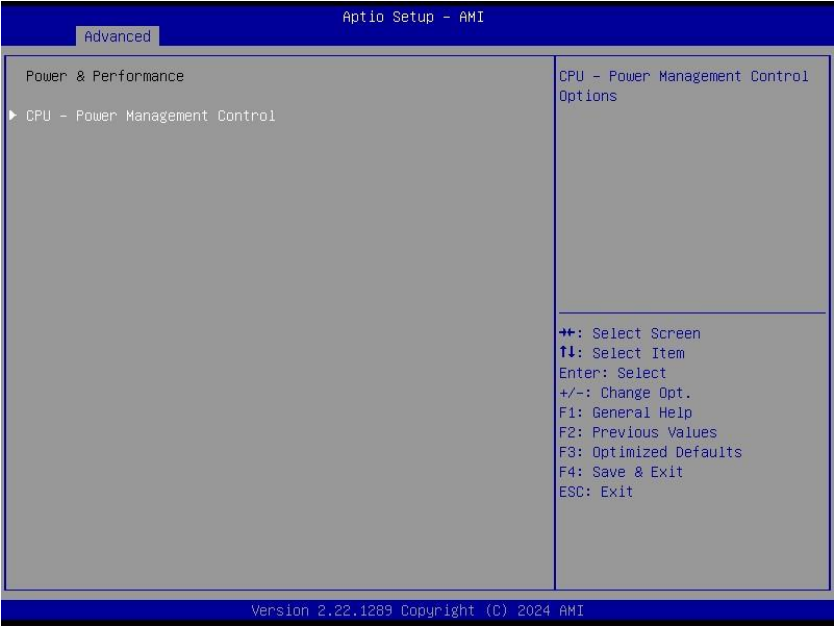


4.6.1.1.1 CPU - Power Management Control

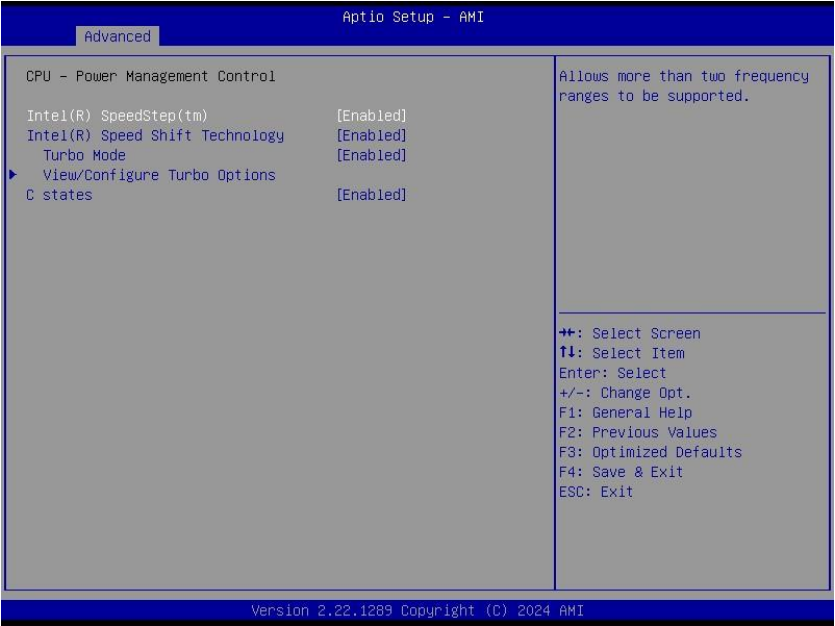


Item	Options	Description
Intel(R) SpeedStep(tm)	Disabled, Enabled [Default]	Allows more than two frequency ranges to be supported.
Intel(R) Speed Shift Technology	Disabled, Enabled [Default]	Enable/Disable Intel® Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.
C states	Disabled, Enabled [Default]	Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.

4.6.1.1.1.1 View/Configure Turbo Options

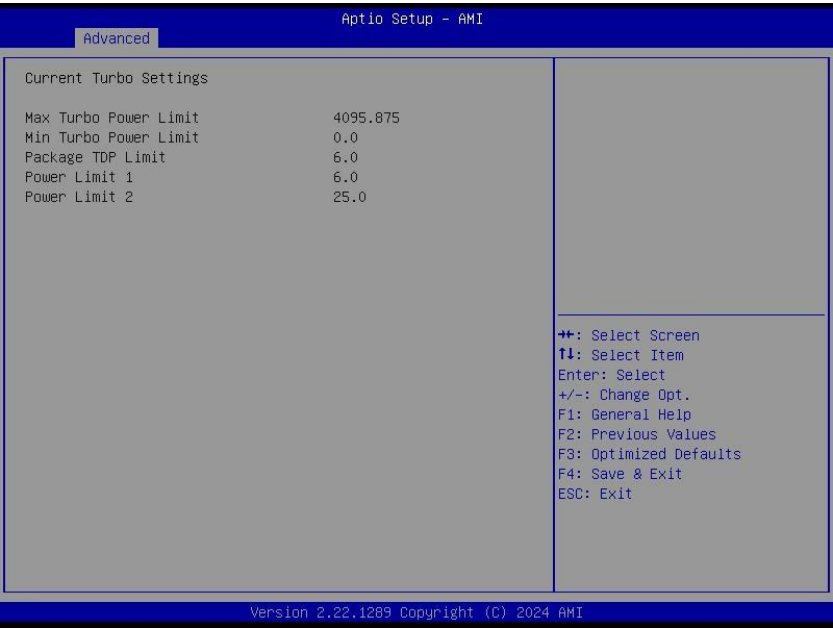

4.6.1.2 PCH-FW Configuration

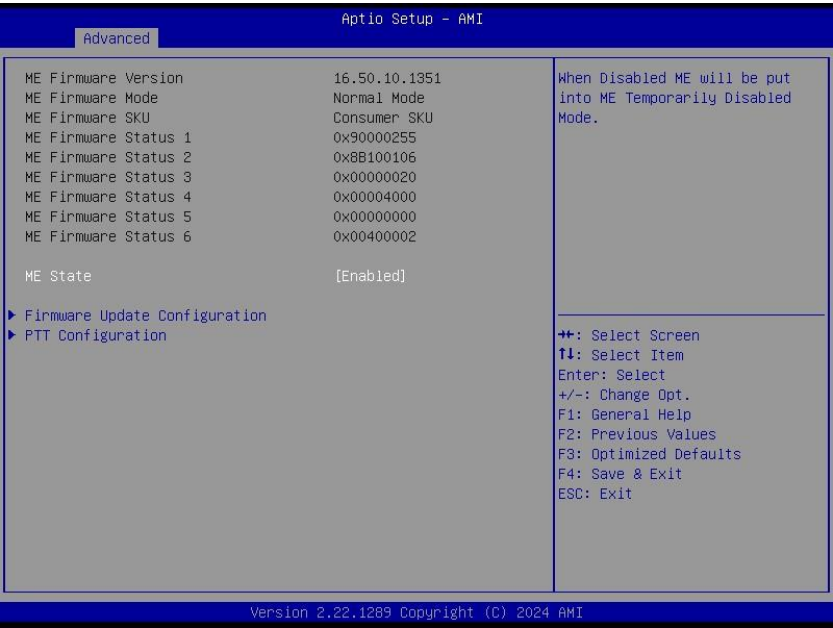

Item	Options	Description
ME State	Disabled, Enabled [Default]	When Disabled ME will be put into ME Temporarily Disabled Mode.

4.6.1.2.1 Firmware Update Configuration



Item	Options	Description
Me FW Image Re-Flash	Disabled, Enabled [Default]	Enable/Disable Me FW Image Re-Flash function.

4.6.1.2.2 PTT Configuration




Item	Options	Description
TPM Device Selection	dTPM, PTT [Default]	Selects TPM device: PTT or dTPM. PTT - Enables PTT in SkuMgr dTPM 1.2 - Disables PTT in SkuMgr Warning ! PTT/dTPM will be disabled and all data saved on it will be lost.

4.6.1.3 Trusted Computing



Item	Options	Description
Security Device Support	Disable, Enable[Default]	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

4.6.1.4 ACPI Settings

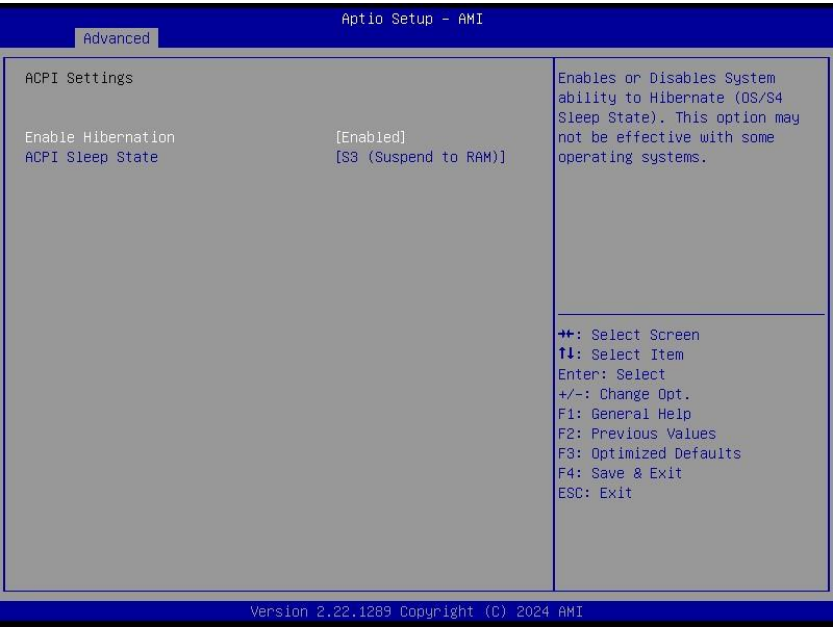


Item	Options	Description
Enable Hibernation	Disabled Enabled[Default],	Enables or Disables System ability to Hibernates (OS/S4 Sleep State). This option may not be effective with some Operating System.

ACPI Sleep State	Suspend Disabled, S3 (Suspend to RAM)[Default]	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.
------------------	---	---

4.6.1.5 IT5782 Super IO Configuration


You can use this item to set up or change the IT5782 Super IO configuration for serial ports. Please refer to 3.6.2.6.1~ 3.6.2.6.6 for more information.

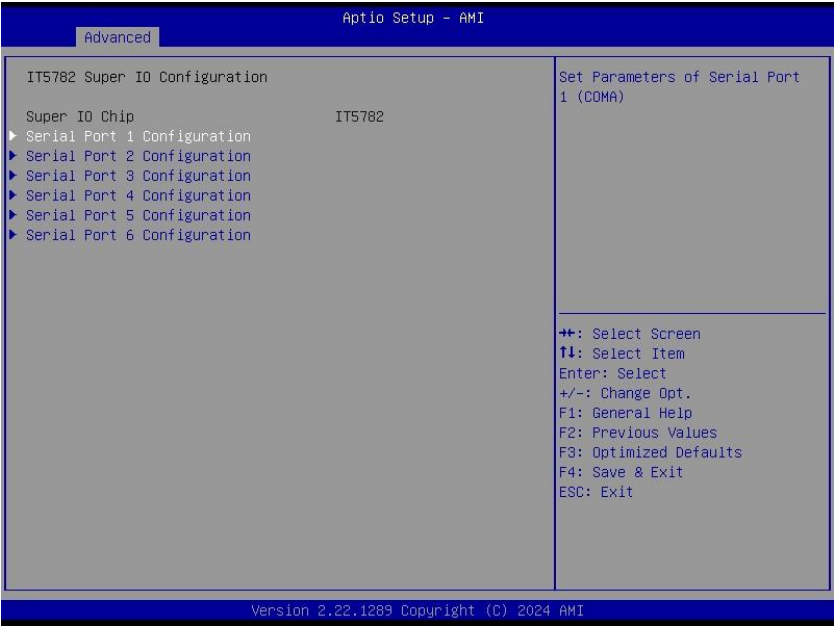

Item	Description
Serial Port 1 Configuration	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Set Parameters of Serial Port 2 (COMB).
Serial Port 3 Configuration	Set Parameters of Serial Port 3 (COMC).
Serial Port 4 Configuration	Set Parameters of Serial Port 4 (COMD).
Serial Port 5 Configuration	Set Parameters of Serial Port 5 (COME).
Serial Port 6 Configuration	Set Parameters of Serial Port 6 (COMF).


EMX-ASLP User’s Manual

4.6.1.5.1 Serial Port 1 Configuration

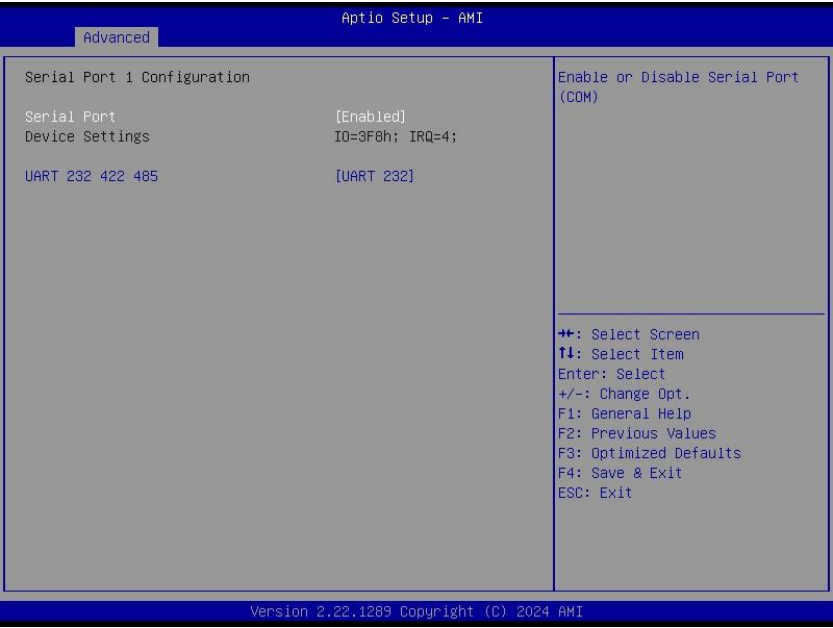

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
UART 232 422 485	UART 232[Default], UART 422, UART 485	Change the Serial Port as RS232/422/485.


4.6.1.5.2 Serial Port 2 Configuration

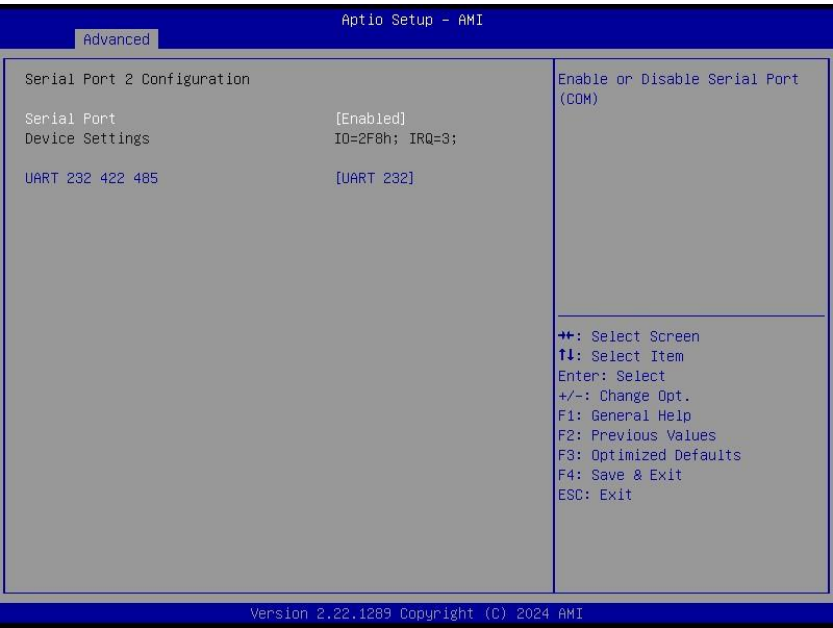

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).


UART 232 422 485	UART 232[Default], UART 422, UART 485	Change the Serial Port as RS232/422/485.
------------------	---	--

4.6.1.5.3 Serial Port 3 Configuration

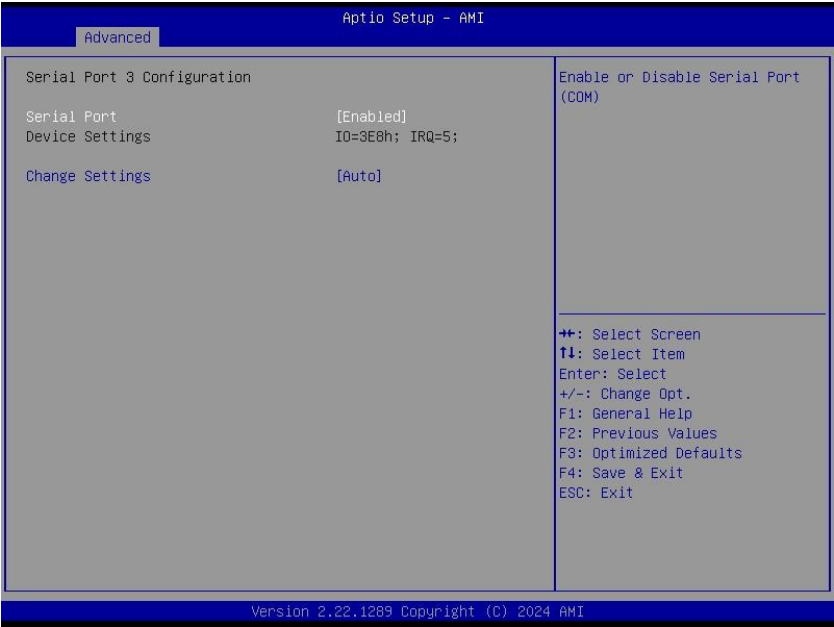


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=3E8h; IRO=7; IO=3E8h; IRO=3,4,5,6,7,9,10,11 IO=2E8h; IRO=3,4,5,6,7,9,10,11 IO=2F0h; IRO=3,4,5,6,7,9,10,11 IO=2E0h; IRO=3,4,5,6,7,9,10,11	Select an optimal settings for Super IO Device

4.6.1.5.4 Serial Port 4 Configuration

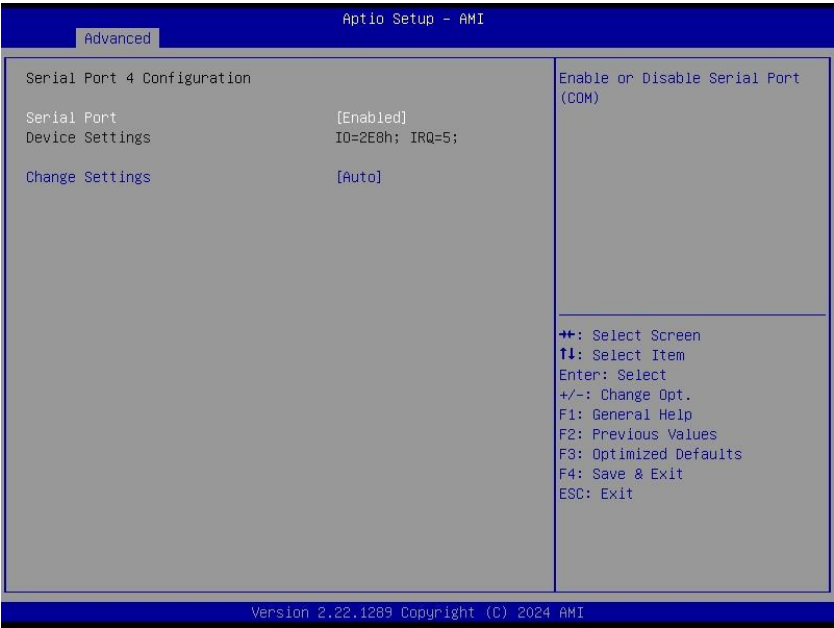

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=2E8h; IRO=7; IO=3E8h; IRO=3,4,5,6,7,9,10,11 IO=2E8h; IRO=3,4,5,6,7,9,10,11 IO=2F0h; IRO=3,4,5,6,7,9,10,11 IO=2E0h; IRO=3,4,5,6,7,9,10,11	Select an optimal settings for Super IO Device

4.6.1.5.5 Serial Port 5 Configuration

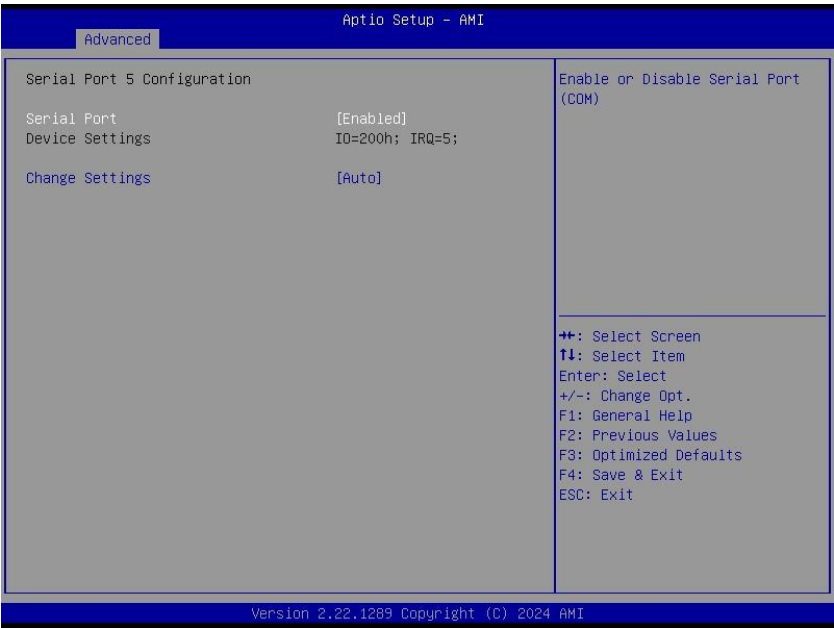


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=2E0h; IRO=7; IO=3E8h; IRO=3,4,5,6,7,9,10,11 IO=2E8h; IRO=3,4,5,6,7,9,10,11 IO=2F0h; IRO=3,4,5,6,7,9,10,11 IO=2E0h; IRO=3,4,5,6,7,9,10,11	Select an optimal settings for Super IO Device

4.6.1.5.6 Serial Port 6 Configuration




Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
Change Settings	Auto[Default], IO=2F0h; IRO=7; IO=3E8h; IRO=3,4,5,6,7,9,10,11 IO=2E8h; IRO=3,4,5,6,7,9,10,11 IO=2F0h; IRO=3,4,5,6,7,9,10,11 IO=2E0h; IRO=3,4,5,6,7,9,10,11	Select an optimal settings for Super IO Device

4.6.1.6 EC 5782 H/W monitor

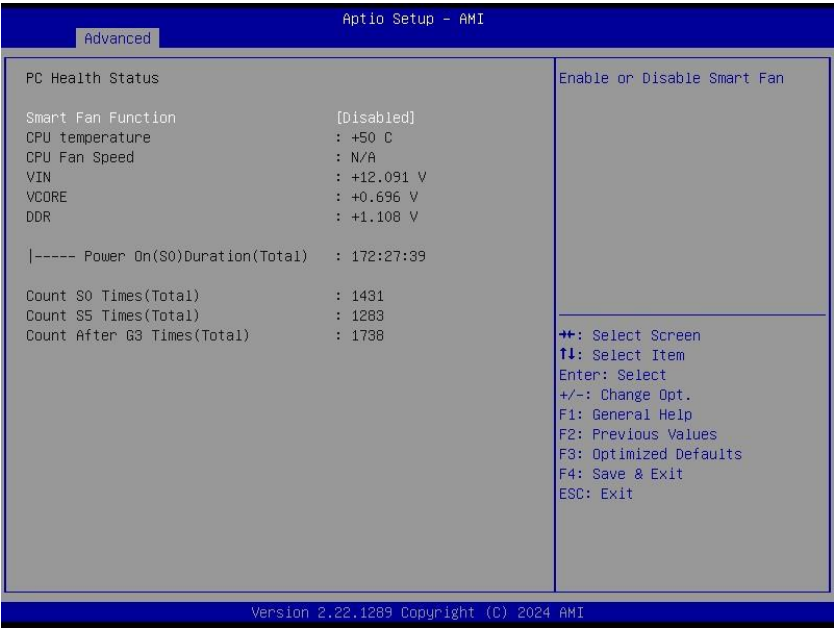


Item	Options	Description
Smart Fan Function	Enabled, Disabled [Default]	Enable or Disable Smart Fan.

4.6.1.7 S5 RTC Wake Settings

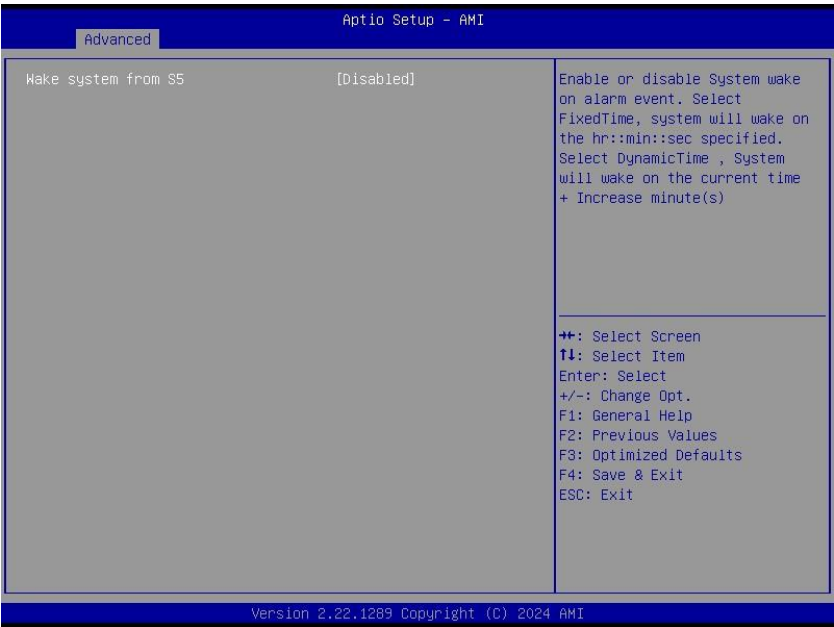

Item	Options	Description
Wake system from S5	Disabled [Default] , Fixed Time Dynamic Time	Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).


4.6.1.8 Serial Port Console Redirection

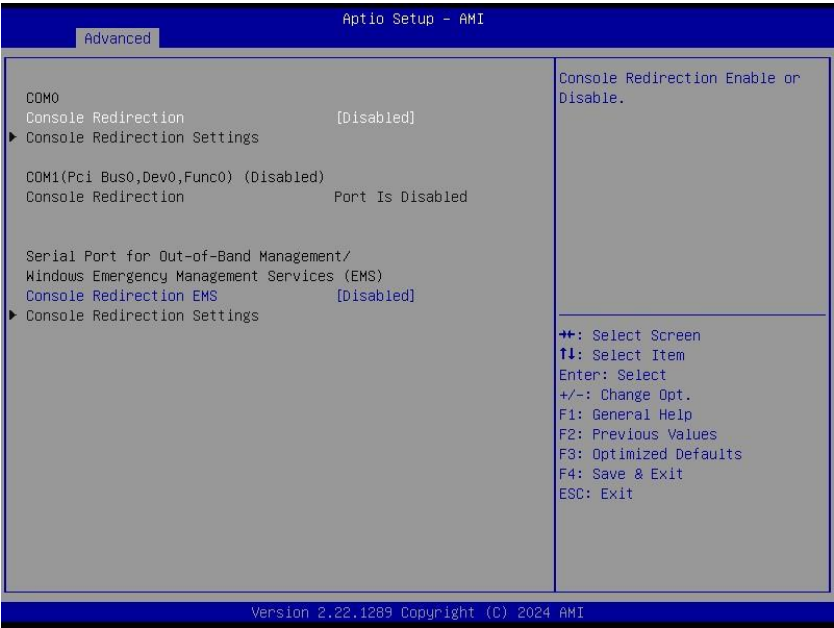

Item	Options	Description
Console Redirection	Disabled[Default], Enabled	Console Redirection Enable or Disable.
Console Redirection EMS	Disabled[Default], Enabled	Console Redirection Enable or Disable.

4.6.1.9 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

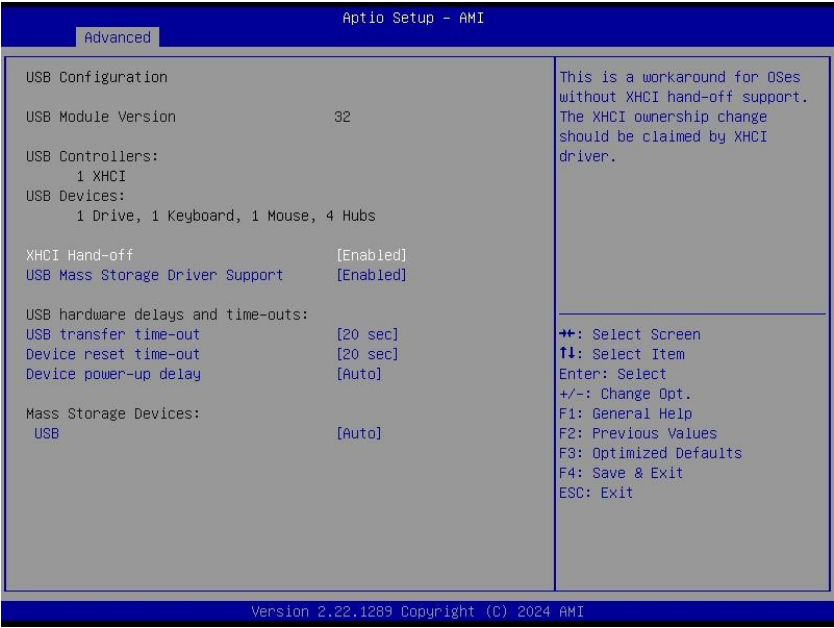

EMX-ASLP User's Manual

Item	Options	Description
XHCI Hand-off	Enabled[Default] Disabled	This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	Disabled Enabled[Default]	Enable/Disable USB Mass Storage Driver Support.
USB transfer time-out	1 sec 5 sec 10 sec 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	10 sec 20 sec[Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
Device power-up delay	Auto[Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100 ms, for a Hub port the delay is taken from Hub descriptor.
USB	Auto[Default] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.

4.6.1.10 Network Stack Configuration




Item	Options	Description
Network Stack	Disabled[Default] Enabled	Enable/Disable UEFI Network Stack.

4.6.1.11 NVMe Configuration



4.6.2 Chipset

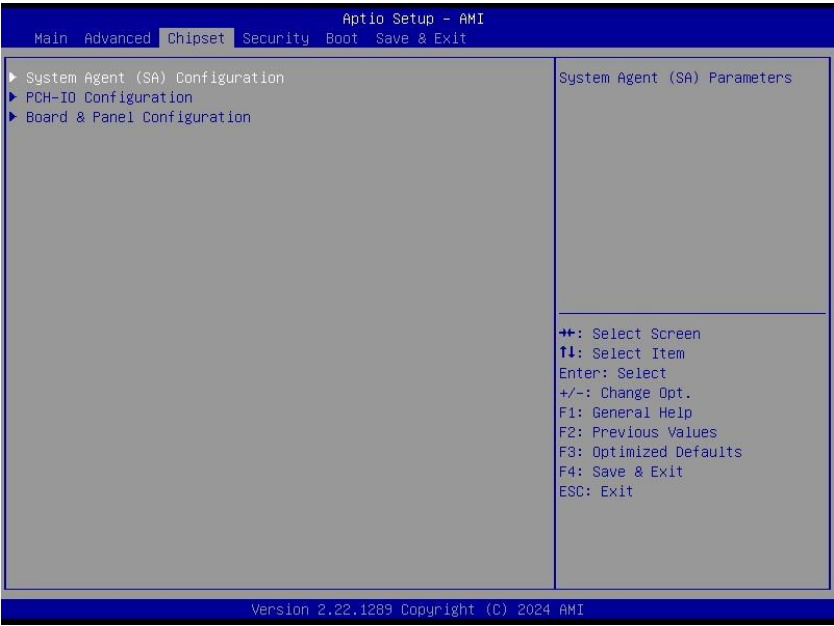


4.6.2.1 System Agent (SA) Configuration




Item	Option	Description
VT-d	Enabled Disabled[Default]	VT-d capability

4.6.2.1.1 Memory Configuration

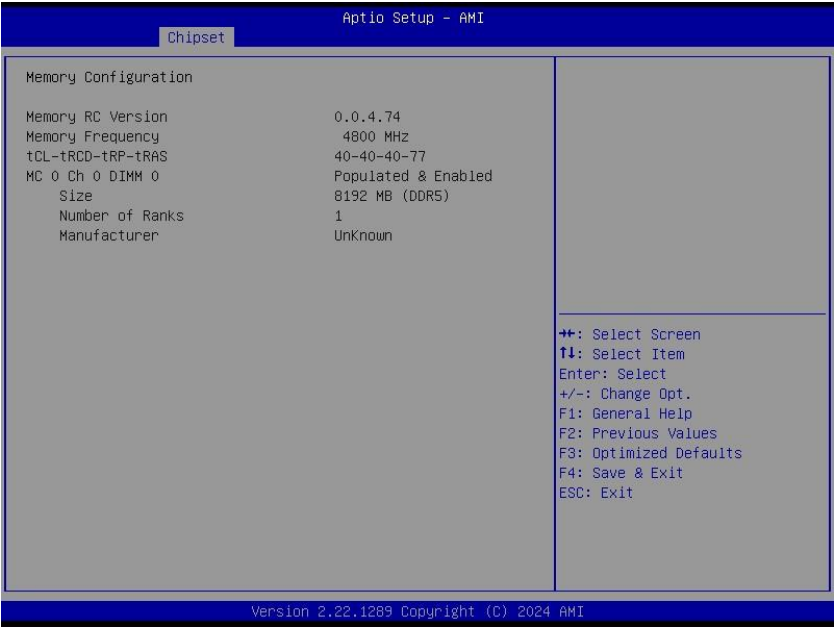


4.6.2.1.2 Graphics Configuration

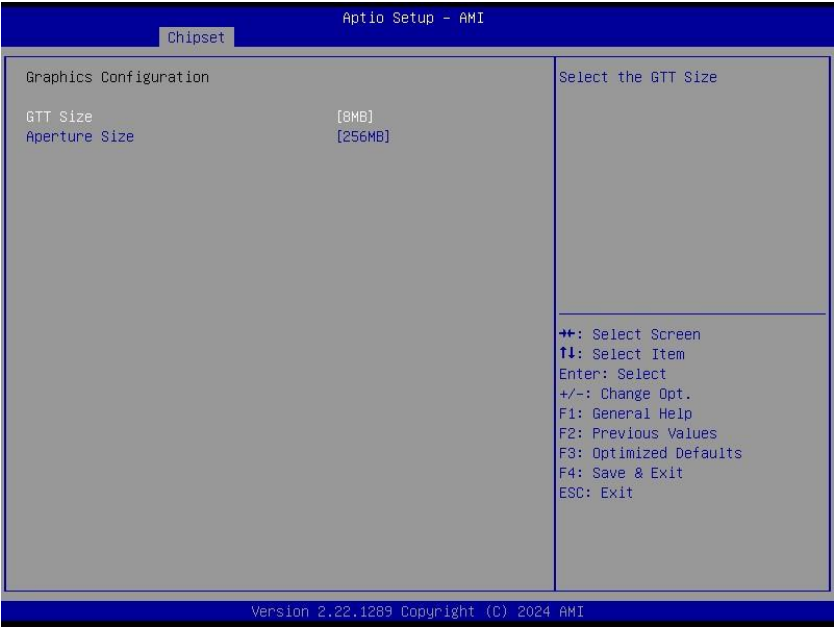


Item	Option	Description
GTT Size	2MB 4MB 8MB[Default]	Select GTT Size
Aperture Size	128MB 256MB[Default] 512MB 1024MB	Select the Aperture Size Note : Above 4GB MMIO BIOS assignment is automatically enabled when selecting > 2048MB aperture. To use this feature, please disable CSM Support


4.6.2.2 PCH-IO Configuration

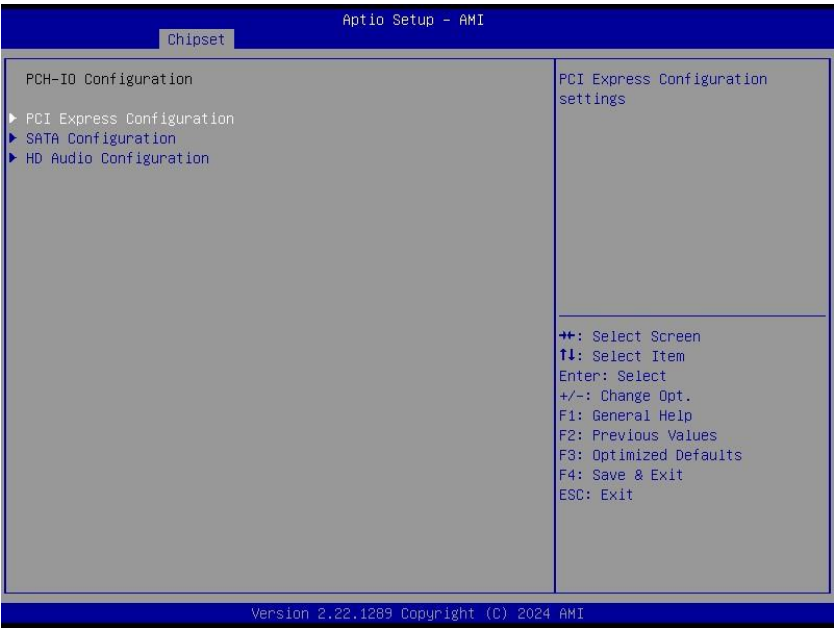

4.6.2.2.1 PCI Express Configuration

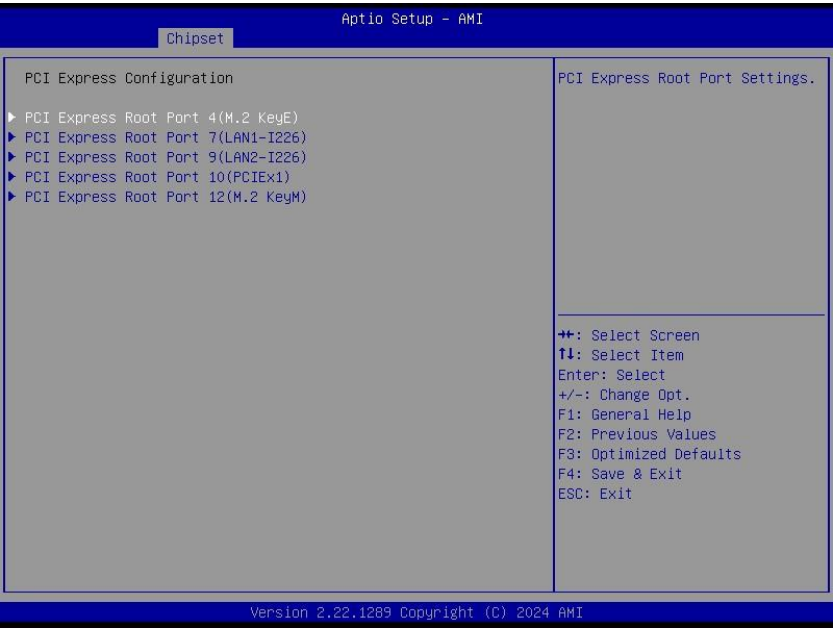

4.6.2.2.1.1 PCI Express Root Port 4(M.2 KeyE)

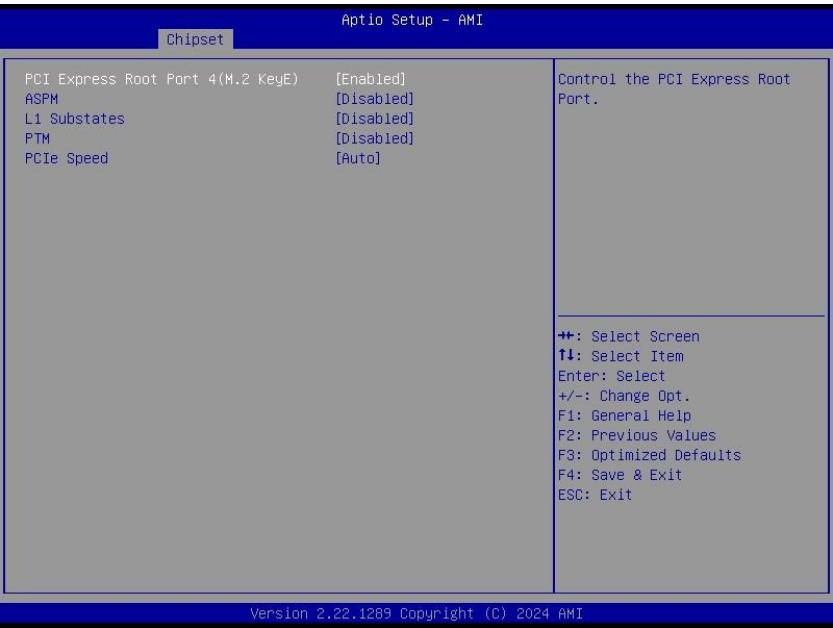

Item	Option	Description
PCI Express Root Port 4(M.2 KeyE)	Disabled Enabled[Default]	Control the PCI Express Root Port
ASPM	Disabled[Default] L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM
L1 Substates	Disabled[Default] L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.


PTM	Disabled [Default] Enabled	Enable/Disable Precision Time Measurement
PCIe Speed	Auto [Default] Gen 1 Gen 2 Gen 3	Configure PCIe Speed.

4.6.2.2.1.2 PCI Express Root Port 7(LAN1-I226)



Item	Option	Description
PCI Express Root Port 7(LAN1-I226)	Disabled Enabled [Default]	Control the PCI Express Root Port
ASPM	Disabled [Default] L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM
L1 Substates	Disabled [Default] L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
PTM	Disabled [Default] Enabled	Enable/Disable Precision Time Measurement
PCIe Speed	Auto [Default] Gen 1 Gen 2 Gen 3	Configure PCIe Speed.

4.6.2.2.1.3 PCI Express Root Port 9(LAN2-I226)

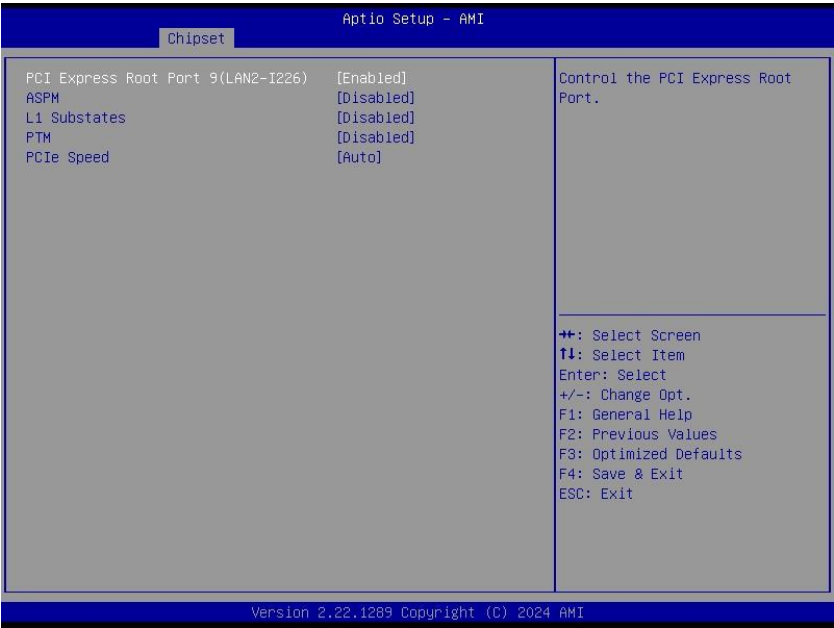


Item	Option	Description
PCI Express Root Port 9(LAN2-I226)	Disabled Enabled [Default]	Control the PCI Express Root Port
ASPM	Disabled [Default] L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM
L1 Substates	Disabled [Default] L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
PTM	Disabled [Default] Enabled	Enable/Disable Precision Time Measurement
PCIe Speed	Auto [Default] Gen 1 Gen 2 Gen 3	Configure PCIe Speed.

4.6.2.2.1.4 PCI Express Root Port 10(PCIEx1)



Item	Option	Description
PCI Express Root Port 10(PCIEx1)	Disabled Enabled[Default]	Control the PCI Express Root Port
ASPM	Disabled[Default] L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM
L1 Substates	Disabled[Default] L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
PTM	Disabled[Default] Enabled	Enable/Disable Precision Time Measurement
PCIe Speed	Auto[Default] Gen 1 Gen 2 Gen 3	Configure PCIe Speed.

4.6.2.2.1.5 PCI Express Root Port 12(M.2 KeyM)

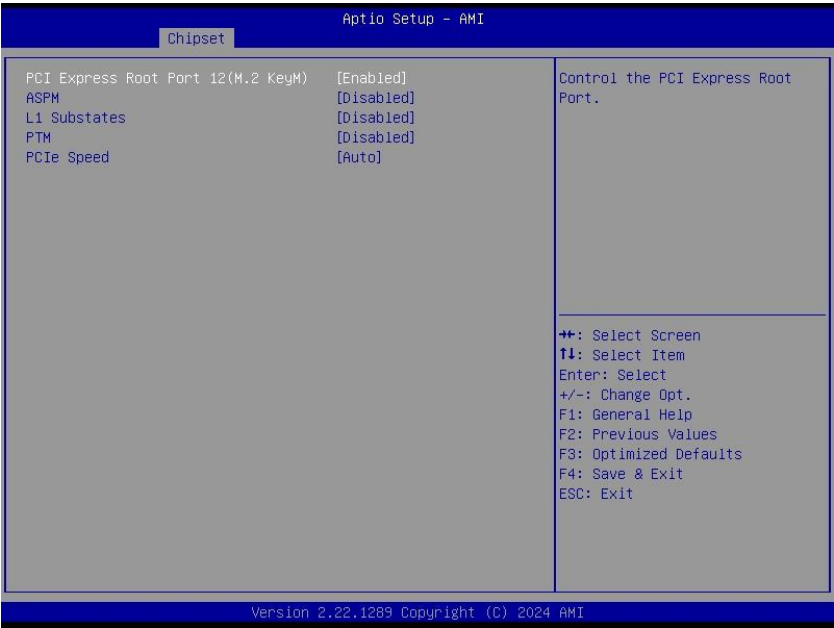

Item	Option	Description
PCI Express Root Port 12(M.2 KeyM)	Disabled Enabled[Default]	Control the PCI Express Root Port
ASPM	Disabled[Default] L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM
L1 Substates	Disabled[Default] L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
PTM	Disabled[Default] Enabled	Enable/Disable Precision Time Measurement
PCIe Speed	Auto[Default] Gen 1 Gen 2 Gen 3	Configure PCIe Speed.

4.6.2.2.2 SATA Configuration




Item	Option	Description
SATA Controller(s)	Enabled[Default] Disabled	Enable/Disable SATA Device.
Port 0/1	Disabled Enabled[Default]	Enable or Disable SATA Port

4.6.2.2.3 HD Audio Configuration



Item	Option	Description
HD Audio	Disabled Enabled[Default],	Control Detection of the HD-Audio device. Disable = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled.


4.6.2.3 Board & Panel Configuration

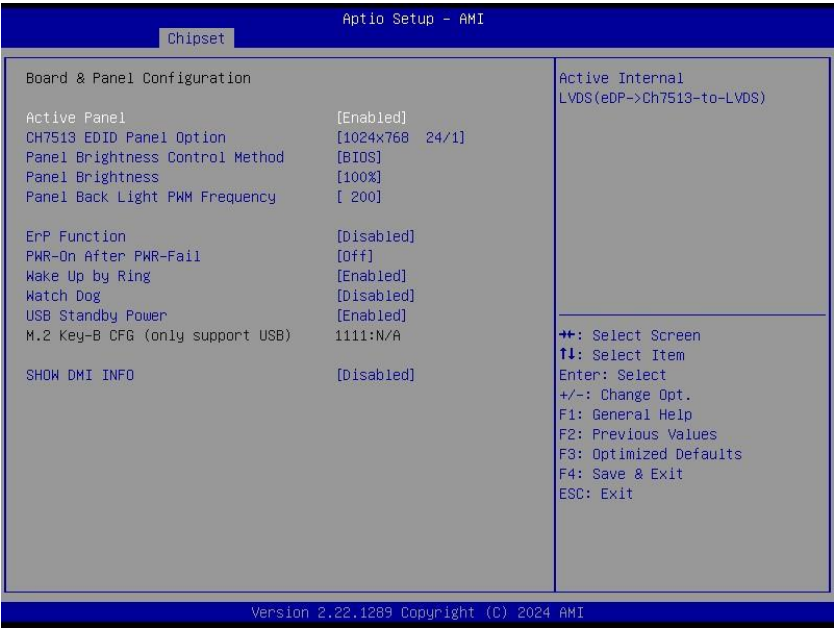

Item	Option	Description
Active Panel	Disabled Enabled[Default]	Active Internal LVDS(eDP->Ch7513-to-LVDS)
CH7513 EDID Panel Option	1024 x 768 24/1[Default] 800 x 600 18/1 1024 x 768 18/1 1366 x 768 18/1 1024 x 600 18/1 1280 x 800 18/1 1920 x 1200 24/2 1920 x 1080 18/2 1280 x 1024 24/2 1440 x 900 18/2 1600 x1200 24/2 1366 x768 24/1 1920 x1080 24/2 7513-eDP	Port1-EDP to LVDS(Chrotel 7513)Panel EDID Option
Panel Brightness Control Method	BIOS[Default] OS Driver	Panel Brightness Control Method. 1.BIOS 2.OS Driver
Panel Brightness	00% 25% 50% 75% 100%[Default]	Select Panel back light PWM duty.

Panel Back Light PWM Frequency	200[Default] 300 400 500 700 1k 2k 3k 5k 10k 20k	Select Panel back light PWM Frequency
ErP Function	Disabled[Default], Enabled	ErP Function (Deep S5).
PWR-On After PWR-Fail	Off[Default], On Last State	AC loss resume.
Wake Up by Ring	Disabled Enabled[Default],	Wake Up by Ring from S3/S4/S5
Watch Dog	Disabled[Default], 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.
USB Standby Power	Disabled Enabled[Default],	Enabled/Disabled USB Standby Power during S3/S4/S5
SHOW DMI INFO	Disabled[Default], Enabled	SHOW DMI INFO

4.6.3 Security

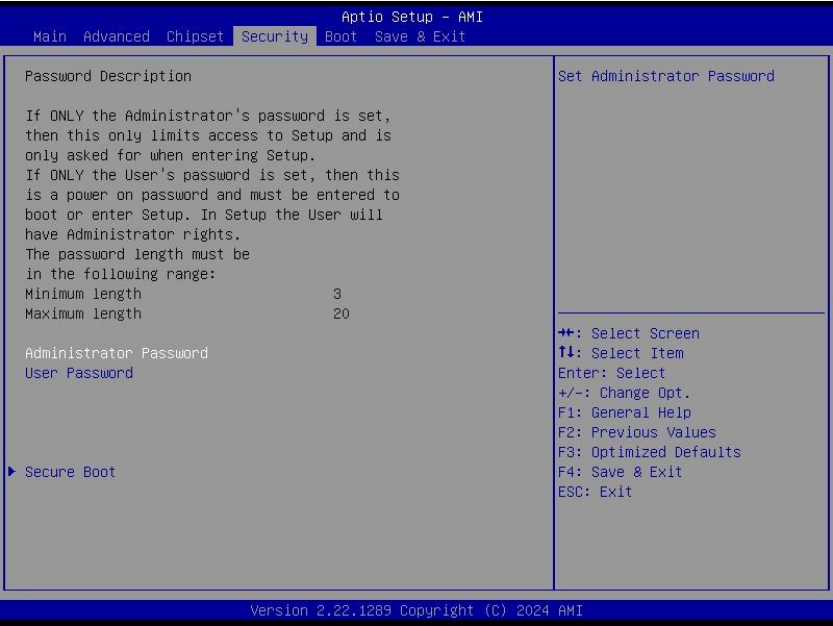

- **Setup Administrator Password**

Set setup Administrator Password


- **User Password**

Set User Password

4.6.3.1 Secure Boot





4.6.4 Boot

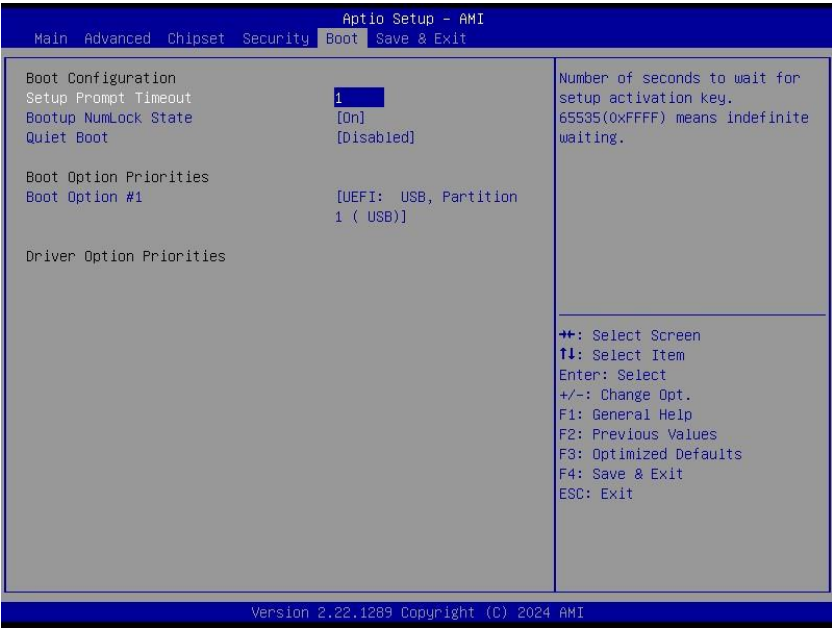

Item	Option	Description
Setup Prompt Timeout	1 ~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default] Off	Select the Keyboard NumLock state
Quiet Boot	Disabled[Default] Enabled	Enables or disables Quiet Boot option
Boot Option #1	Set the system boot order.	

4.6.5 Save and Exit

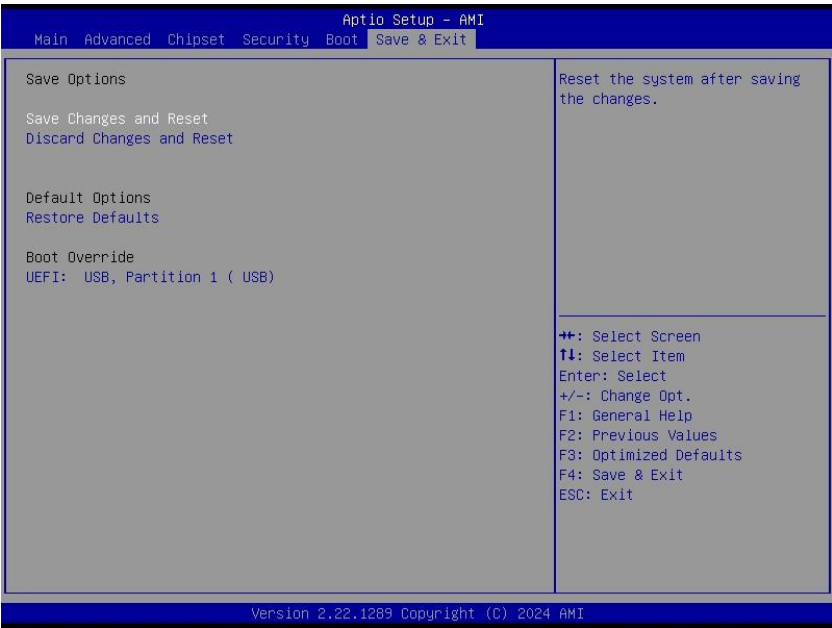

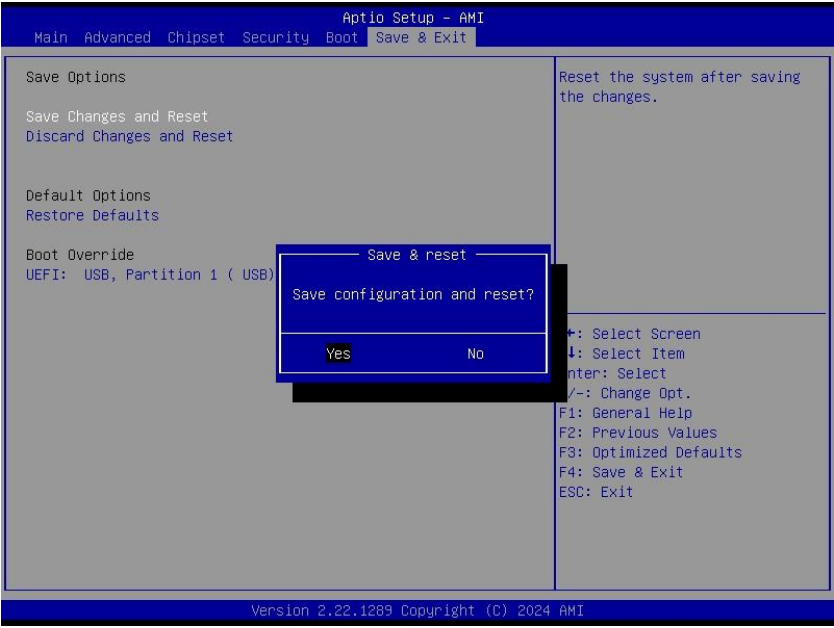

4.6.5.1 Save Changes and Reset

Reset the system after saving the changes.

4.6.5.2 Discard Changes and Reset

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

4.6.5.3 Restore Defaults

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

4.6.5.4 Launch EFI Shell from filesystem device

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

5. Mechanical Drawing

88 EMX-ASLP User's Manual

