

DBC-3400 User's Manual



with Microsoft® Windows® 10
with Microsoft® Windows® 11
with Ubuntu

Table of Contents

Chapter 1. About this Manual	3
1.1 Manual version revision record	3
1.2 Copyright Statement	3
1.3 Disclaimer	3
1.4 Trademark	3
1.5 Warranty terms	3
1.6 Safety guidance for installed and use	4
Chapter 2. Product Overview	6
2.1 Overview of the DBC-3400 function	6
Chapter 3. Product Presentation	8
3.1 Product Appearance	8
3.2 Appearance size diagram	8
3.3 Product specification introduction	9
Chapter 4. IO Panel Description	12
4.1 DBC-3400 panel is shown below	12
4.2 Serial communication port (simply "serial port")	12
4.3 DC port	14
4.4 Display Output (HDMI)	14
4.5 Remote	15
4.6 8 DIO (16 Optional)	15
4.7 Ethernet Interface (LAN)	19
4.8 USB Interface	19
4.9 Audio Interface (Line-out, Mic-in)	19
4.10 Explanation of indicator lights	20
Chapter 5. Directions for Use	22
5.1 OOBA	22
5.2 Note the following points when unpacking the equipment:	22
5.3 Work environment	22
5.4 Preparation Before Installation	22
5.5 Installation Steps	23
5.6 Gigabit Network Card Camera Configuration	23
Chapter 6. Troubleshooting Guide	25
6.1 Boot Abnormal Q&A	25
Chapter 7. After-Sale Service	28

Chapter 1. About this Manual



Chapter 1. About this Manual

1.1 Manual version revision record

Date	Version number	Revise Content	Modified By
2024/07/27	V1.0	Prepare the manual for the first time	LWT
2024/10/09	V1.1	RS232/RS485 signal select humpers	LWT

1.2 Copyright Statement

This manual is the use manual of DBC-3400 series products. The products and their related documents are owned by Darveen Co., Ltd. (hereinafter referred to as "Darveen"), with all of the interpretation rights.

If the manual is different from the latest product, please contact our FAE. Darveen will not be responsible for any direct, indirect, intentional or unintentional damage or hazards caused by improper installation or use.

This manual without the authorization of Darveen shall not, in any way, in any form be copied, translated, or transferred for any commercial purposes, except for the non-commercial purposes or personal use of download or printing (prohibited to modify the manual, and must indicate the ownership of the manual).

1.3 Disclaimer

This manual only describes the use of embedded industrial computers manufactured by Darveen. If you use the product, unless otherwise mandatory by law, Darveen shall not bear any express or implied warranty or guarantee for the product for the use of this manual, including but not limited to the following:

- (1) This product will meet your needs or expectations;
- (2) The information contained in this product is real-time and correct;
- (3) This product does not infringe on the rights of any others

You clearly understand and agree that, in addition to the law, breach, its subsidiaries, agents, partners, relationships, managers, employees and authorized person need not be responsible for you any direct, indirect, special, derivative, incidental, punitive damage (including but not limited to the goodwill, profit, use data damage or other intangible loss).

With an extremely rigorous and scientific attitude, the manual is compiled, but the technology is constantly developing, and the speed of product upgrading is far beyond the speed of the preparation, so we reserve the right to modify it at any time without notification.

1.4 Trademark

The ownership of the trademark involved in this manual, Darveen Co., Ltd. , is owned by the holder of Darveen Co., Ltd. No one shall use it without their permission.

1.5 Warranty terms

The default product warranty period is 1 year. In case of special circumstances, the contract signed by both parties shall prevail

1.6 Safety guidance for installed and use

1. Please read carefully and keep this manual properly before use.
2. Keep the product dry and packed intact before installation, ensuring that the equipment is placed in a stable surface, and an accidental fall or flip may cause equipment failure or damage.
3. In order to avoid unnecessary damage caused by frequent turning to the product, wait at least 30 seconds before shutdown of the machine. If the equipment is not used for a long time, disconnect the power cord to avoid the equipment being damaged by instantaneous voltage.
4. The chassis vents are used for ventilation to avoid overheating of the parts in the chassis. Do not mask or block such openings.
5. Before connecting the product to the power supply, confirm the supply voltage and adjust the voltage to 220V.
6. Protect the power cord from trampling or other accidents that may cause sudden power failure, and do not stack anything on the power cord.
7. Unplug the power cord before unplugging any expansion card or module.
8. Note to all the notes and warnings mentioned in the manual.
9. Do not make any changes or modifications to this product. If there is any abnormal use of the equipment, please find a professional personnel for safety reasons.
10. Please do not place or store the product at an ambient temperature above 60°C (140° F) as it will cause harm to the product.
11. If the battery is not replaced properly, it can cause a danger. Be sure to use the same model or equivalent battery as recommended by the manufacturer.

Chapter 2. Product Overview



Chapter 2. Product Overview

Industrial control machine (also known as an Industrial Personal Computer or IPC) is the industrial control computer, is a use of bus structure, the production process and electromechanical equipment, process equipment for detection and control of the tool general name.

Industrial control machine has important computer attributes and characteristics, such as computer CPU, hard disk, memory, peripherals and interfaces, and operating system, control network and protocols, computing power, friendly man-machine interface.

The industrial control machine often operates in a harsh environment, and the safety requirements for data are higher. Therefore, the industrial control machine is usually reinforced, dust proof, moisture proof, corrosion proof, radiation prevention and other special designs.

2.1 Overview of the DBC-3400 function

DBC-3400 is a DIN-Rail IPC equipped with extensive I/O options, offering great flexibility and effortless Mini PCIe expansion capabilities. It boasts wide-input power ranges, wide temperature tolerances, and enhanced structural durability, making it an excellent choice for industrial applications.

* Table 2.1-1 DBC-3400 Functional Overview table

Product Keywords	DIN-Rail IPC with Intel® Elkhart Lake Celeron®/Core™ i3/i5/i7 Fanless Box Computer
Product Features	<ul style="list-style-type: none">▪ Intel® Elkhart Lake Celeron® J6412 / Core™ i3/i5/i7 processor▪ 5x COM, 2x LAN, 6x USB, 1x HDMI▪ 8x Opto-isolated DIO (expandable to 16x, optional)▪ 1x 2.5" SATA HDD/SSD, 1x M.2 2280 NVME▪ 1x Full length Mini PCIe, 1x M.2 2230 E-Key

Chapter 3. Product Presentation




Chapter 3. Product Presentation

3.1 Product Appearance



* Figure 3.1-1 front view of DBC-3400

3.2 Appearance size diagram

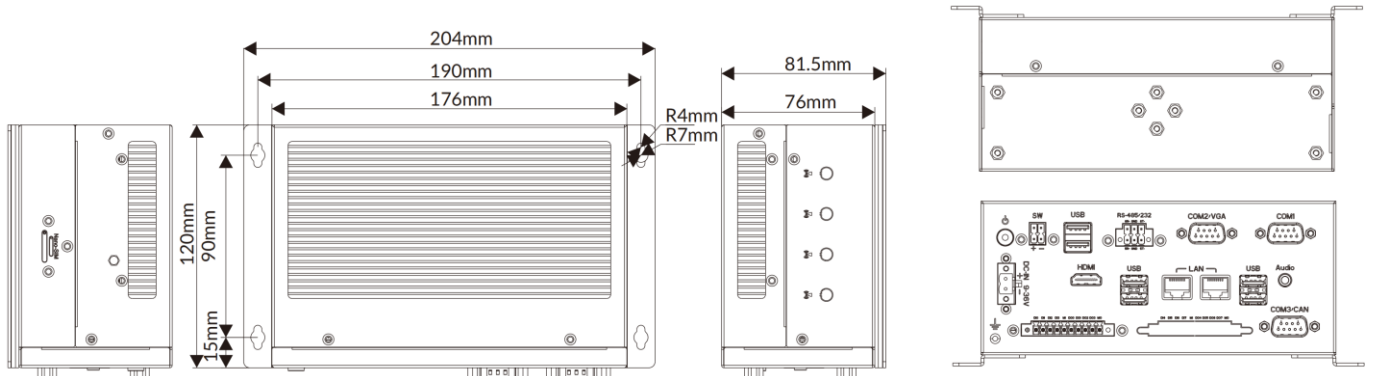

* Figure 3.2-1 DBC-3400 dimensional drawing

3.3 Product specification introduction

* Table 3.3-1 DBC-3400 product specification

Model No.	DBC-3400			
Short Description	DIN-Rail IPC with Intel® Elkhart Lake Celeron®/Core™ i3/i5/i7 Fanless Box Computer			
Features	Intel® Elkhart Lake Celeron® J6412 / Core™ i3/i5/i7 processor			
	5x COM, 2x LAN, 6x USB, 1x HDMI			
	8x Opto-isolated DIO (expandable to 16x, optional)			
	1x 2.5" SATA HDD/SSD, 1x M.2 2280 NVME			
	1x Full length Mini PCIe, 1x M.2 2230 E-Key			
Overview	DBC-3400 is a DIN-Rail IPC equipped with extensive I/O options, offering great flexibility and effortless Mini PCIe expansion capabilities. It boasts wide-input power ranges, wide temperature tolerances, and enhanced structural durability, making it an excellent choice for industrial applications.			
Specifications				
Model No.	DBC-3400-J6412	DBC-3400-10110U	DBC-3400-1115G4/1135G7/1195G7	DBC-3400-1215U/1235U/1255U
System				
CPU	Intel® Celeron® J6412	Intel® Core™ i3-10110U/i5-10310U	Intel® Core™ i3-1115G4/i5-1155G7/i7-1195G7	Intel® Core™ i3-1215U/i5-1235U/i7-1255U
CPU TDP	10W	15W		
Memory	1x DDR4 3200 MHz SO-DIMM up to 32GB	1x DDR4 2666 MHz SO-DIMM up to 32GB	1x DDR4 3200 MHz SO-DIMM up to 32GB	1x DDR4 3200 MHz SO-DIMM up to 32GB
Storage	1x 2.5" SATA HDD 1x M.2 2280 NVME			
BIOS	AMI UEFI			
TPM	BIOS			
Watchdog Timer	Software Programmable. Supports 256 levels system reset			
I/O Ports				
USB	2x USB 2.0, 4x USB 3.0			
Serial	5x COM (5x RS-232 or 3x RS-232, 2x RS-485)			
Ethernet	2x RJ45 GbE Intel® I210AT			
Display	1x HDMI			
SIM Card Slot	1x SIM card slot			
DIO	8x Opto-isolated DIO/16x Opto-isolated DIO (optional)			
CAN Bus	2x CAN 2.0B (optional)			
Antenna	3x SMA antenna holes			
Expansion Slot				
Mini PCIe	1x Full length Mini PCIe			
M.2	1xM.2 2280 NVME	1x M.2 2280 NVME. 1x M.2	1x M.2 2280 NVME	1x M.2 2280 NVME. 1x M.2

		2230 E-Key		2230 E-Key
RF Communication				
Wi-Fi	Mini PCIe	1x M.2 2230 E-Key	Mini PCIe	1x M.2 2230 E-Key
Cellular	Mini PCIe	Mini PCIe	Mini PCIe	Mini PCIe
Bluetooth	Mini PCIe	1x M.2 2230 E-Key	Mini PCIe	1x M.2 2230 E-Key
GNSS	Mini PCIe	Mini PCIe	Mini PCIe	Mini PCIe
Audio				
Audio	Mic in, line out			
Power				
Button	Yes			
Remote Power On/Off	4-Pin Remote SW&Power LED			
DC Input	9-36VDC			
Power Mode	AT/ATX			
Operating System				
Windows	Windows 10/11			
Linux	Ubuntu			
Mechanical				
Dimensions (W x D x H)	176x 120x 76mm (6.93 x 4.72 x 2.36 inches)			
Weight (N.W.)	2kg (4.41lbs)			
Mounting	DIN-Rail/Wall mount(optional)			
Material	Aluminum alloy			
IP rating	IP30			
Environment				
Operating Temperature	-10 to 60℃ (14 to 140°F)			
Storage Temperature	-20 to 60℃ (-4 to 140°F)			
Relative Humidity	10% to 95% @ 40℃ (104°F), non-condensing			
Certification				
EMC	CE, FCC Class A			

Chapter 4. IO Panel Description



Chapter 4. IO Panel Description


4.1 DBC-3400 panel is shown below



* Figure 4.1-1 DBC-3400 panel diagram

4.2 Serial communication port (simply "serial port")

Equipped with 2 DP9 serial ports , COM1/2 can be switched to RS485 or RS232.

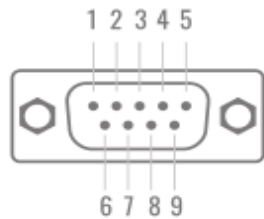



* Figure 4.2-1 serial port diagram of DP 9


* Table 4.2-1 Explanation of serial definition for DP 9

PIN	Signal name	PIN	Signal name
1	DCD/RS485+	2	RXD/RS485-
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	NC

* Table 4.2-2 Explanation of serial definition

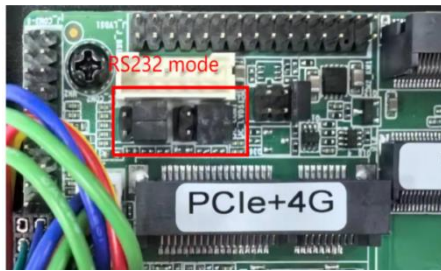Product	Signal select jumpers	RS232 mode	RS485 mode
J6412	COM1/2 only supports RS232, with no other option available		
i3-10110U			
i3-1115G4			
i5-1135G7			
i7-1195G7			
i3-1215U	COM1/2 optional RS485/RS232		
i5-1235U			
i7-1255U			

Equipped with 2x3pin Phoenix Terminal , COM5/6 can be switched to RS485 or RS232.

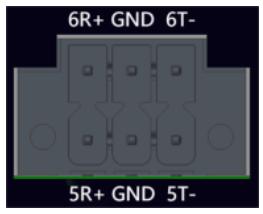



* Figure 4.2-2 2x3pin Phoenix Terminal

* Table 4.2-3 Explanation of serial definition for DP 9

	PIN	Signal name	PIN	Signal name
COM5	1	RXD/RS485+	2	GND
	3	TXD/RS485-		
COM6	1	RXD/RS485+	2	GND
	3	TXD/RS485-		

* Table 4.2-4 Explanation of serial definition

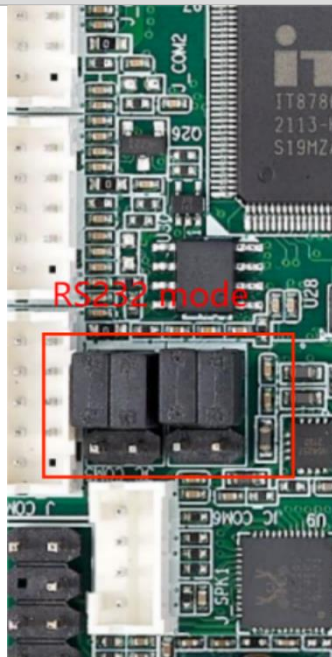Product	Signal select jumpers	RS232 mode	RS485 mode
J6412	COM5/6 optional RS485/RS232		
i3-10110U			
i3-1115G4			
i5-1135G7			
i7-1195G7			
i3-1215U	COM5/6 only supports RS232, with no other option available		
i5-1235U			
i7-1255U			

4.3 DC port

Equipped with Input 9-36V, 1x 2-pin terminal block connector as shown in Fig.




* Figure 4.3-1 DC port diagram

⚠ Note: Use the adapter or switch power supply supporting the equipment. Do not connect more than 36V power supply, otherwise it will cause the motherboard over voltage to burn!!!

4.4 Display Output (HDMI)


Equipped with 1 HDMI display interface.

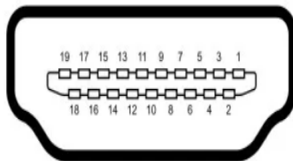

* Figure 4.4-1 HDMI Interface

4.5 Remote

Equipped with 1 set of remote switches, you can achieve power on/off. as shown in the figure.



* Figure 4.5-1 Remote

* Table 4.5-1 Definitions table

Pin		Signal	Description
1	SW	PBTN	Power on or Power off
2		GND	
3	+	LED	Power LED
4	-	GND	

4.6 8 DIO (16 Optional)

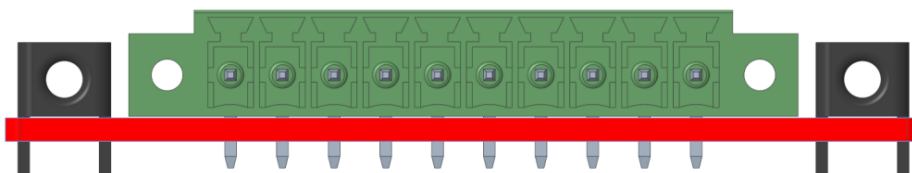


Diagram G01

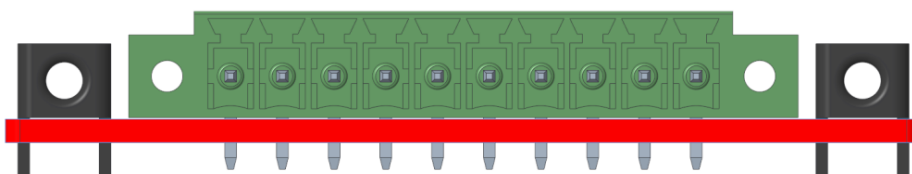



Diagram G02

* Figure 4.6-1 Definition diagram of the GPIO communication interface

4.6.1. DI Specification


Item	Description
8 DI	Type: NPN/PNP Input signal voltage: $DC24V \pm 10\%$ Input ON current: above 4.5mA Input OFF current: below 1.5mA Input response time: 0.1ms (device specification) Input signal form: bidirectional opto-coupler Circuit insulation: opto-electronic coupling insulation Input action display: When inputting ON, the software reads 1

4.6.2. DI design schematic diagram

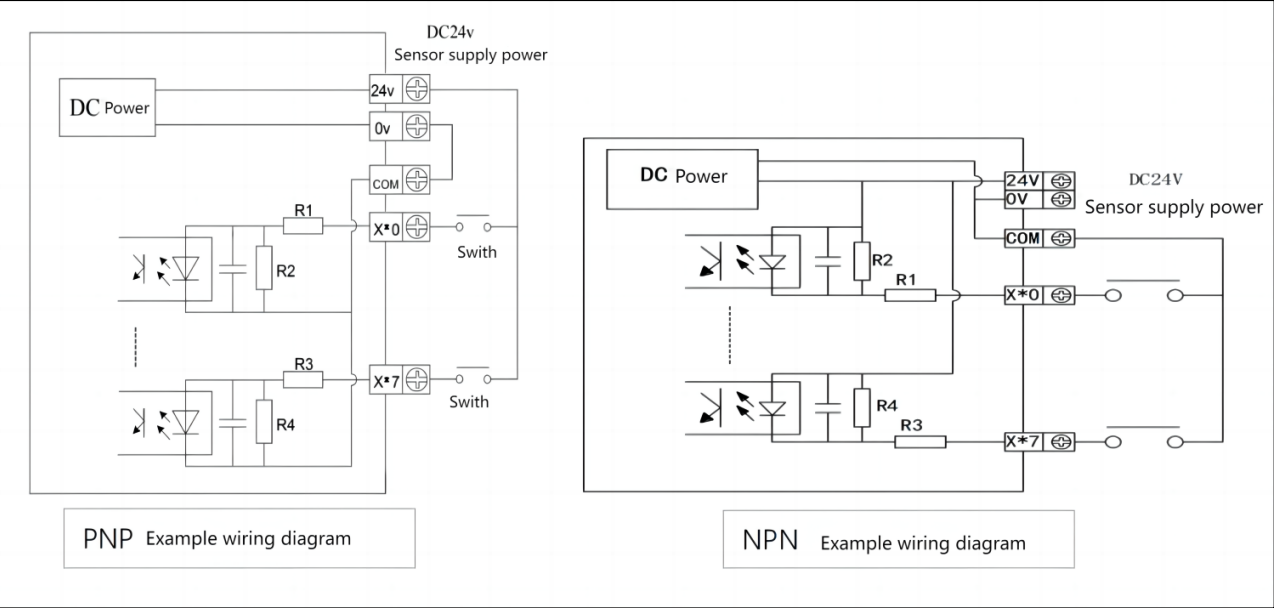

Diagram

4.6.3. DI Example diagram

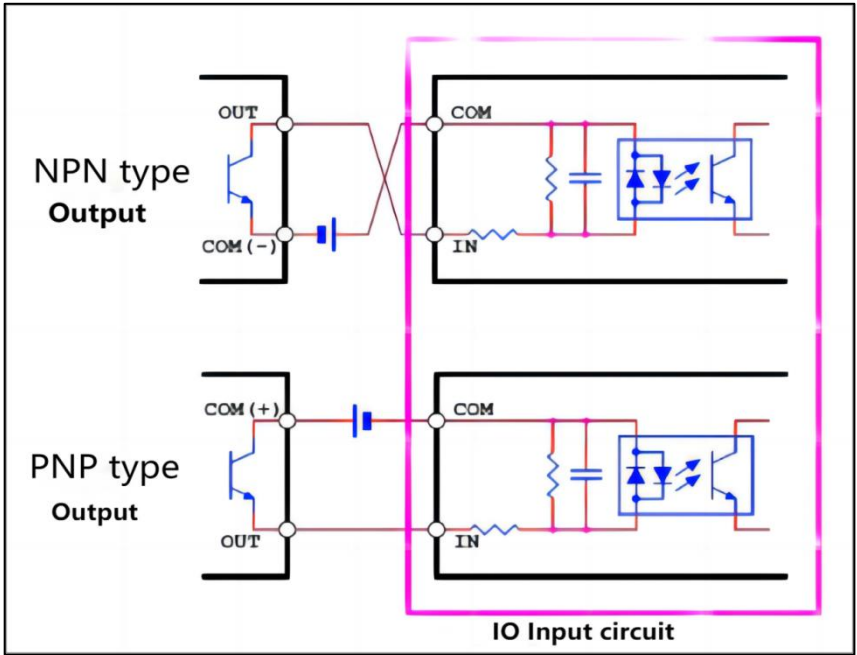


Diagram

4.6.4. DO Specification

Item	Description
------	-------------


8 DO	<p>Type: NPN</p> <p>Output load voltage: DC24V \pm 10%</p> <p>Load current: Max 100mA/DC24V</p> <p>Short circuit protection current: 200mA</p> <p>Output response time: 0.2ms (device specification)</p> <p>Output signal form: NPN open collector electrode</p> <p>Circuit insulation: opto-electronic coupling insulation</p> <p>Output action display: When software is set to 1, conduction occurs</p>
------	---

4.6.5. DO design schematic diagram

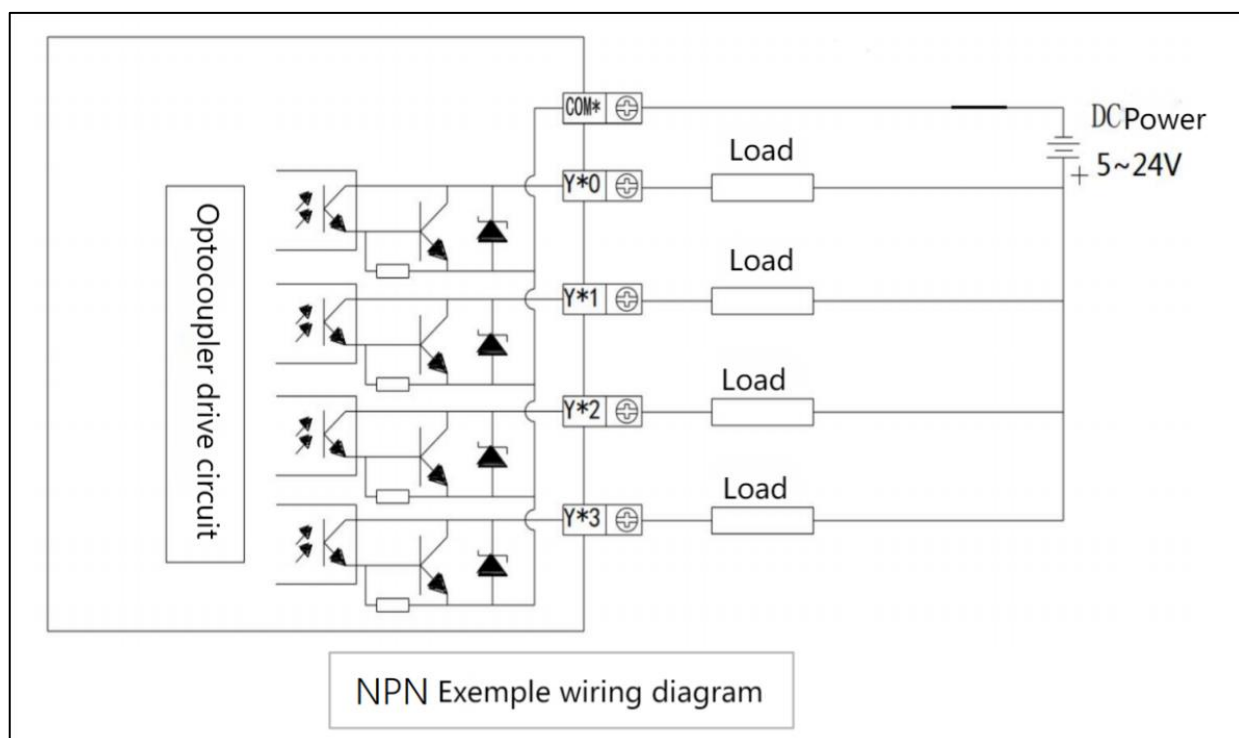

Diagram


4.6.6. DO Example diagram

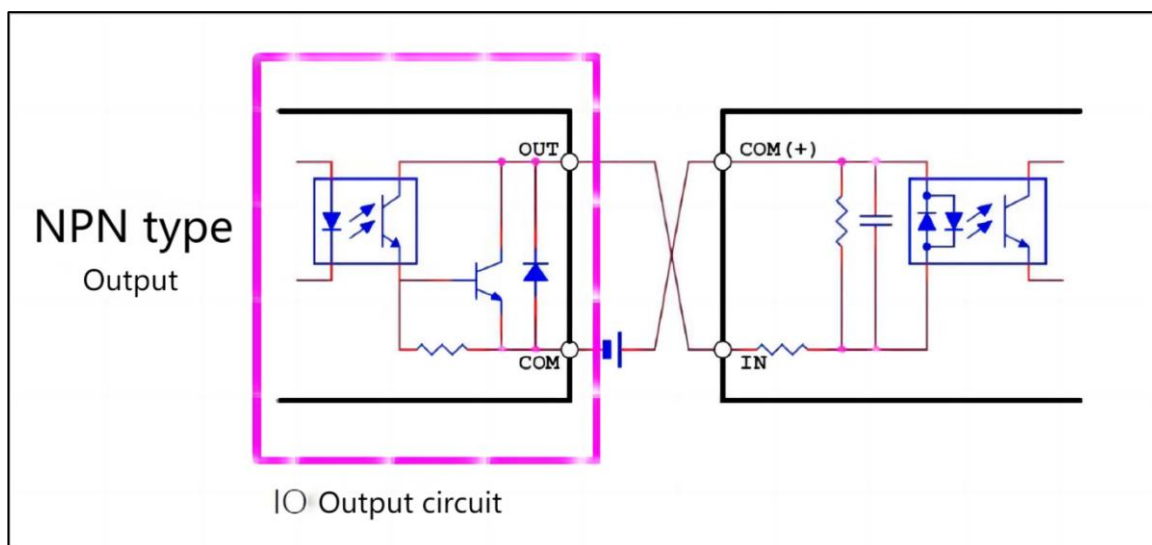

Diagram

4.6.7. Interface definition


G01 Communication interface definition

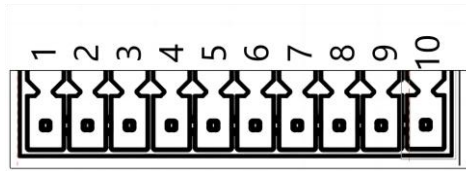

Diagram

Pin	Signal	Description
1	DI0	Isolated Inputs0
2	DI1	Isolated Inputs1
3	DI2	Isolated Inputs2
4	DI3	Isolated Inputs3
5	DI_COM_L0	Input common terminal0
6	DO0	Isolated Outputs0
7	DO1	Isolated Outputs1
8	DO2	Isolated Outputs2
9	DO3	Isolated Outputs3
10	DO_COM_L0	Output common terminal0

G02 Communication interface definition

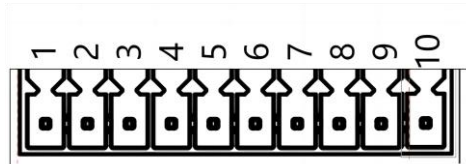

Diagram

Pin	Signal	Description
1	DI4	Isolated Inputs4
2	DI5	Isolated Inputs5
3	DI6	Isolated Inputs6
4	DI7	Isolated Inputs7
5	DI_COM_L1	Input common terminal1
6	DO4	Isolated Outputs4
7	DO5	Isolated Outputs5
8	DO6	Isolated Outputs6
9	DO7	Isolated Outputs7
10	DO_COM_L1	Output common terminal1

4.7 Ethernet Interface (LAN)

With 2 Ethernet interfaces, as shown in the figure, and supports 10 / 100 / 1000Mbps. The port uses the standard RJ-45 jack with LED indicators indicating the connection and transmission status. See the chart below for the indicator light representation and the machine status.



* Figure 4.7-1 Ethernet interface diagram

* Table 4.7-1 LED indicator light definitions table

LED pilot lamp			
Left side LED			offside LED
close	orange	green	green
10Link	100Link	1000Link	transfer

4.8 USB Interface

Equipped with 4 USB3.0 and 2 USB 2.0 interfaces, the USB interface supports the plug and play function, allowing the user to connect or disconnect the device at any time, as shown in the chart.



* Figure 4.8-1 USB interface diagram

* Table 4.8-1 USB interface definition table

Pin	Signal
1	Vbus
2	D-
3	D+
4	GND

4.9 Audio Interface (Line-out, Mic-in)

With 1 * Line-Out/MIC 2in1 Phone Jack. the interface is shown in the chart



* Figure 4.9-1 Audio interface diagram

4.10 Explanation of indicator lights

* Table 4.10-1 Machine indicator table

icon	pigment	State instructions	description
	green	mains switch	DC power supply off: off / DC power supply on: always on

Chapter 5. Directions for Use



Chapter 5. Directions for Use

This section provides a simple operation description for the normal use of DBC-3400 series products, introducing the working environment, installation steps and the basic operation of the system protection functions of industrial computers.

5.1 Ooba

Before opening the package, please check whether the product model indicated on the outer package is consistent with the product model ordered. After opening the package, carefully check whether the accessories are complete according to the packing list or the order contract. If the surface of the industrial computer is damaged, or the product content is not consistent, please do not use it, and contact the dealer immediately.



Note:

In order to prevent electrostatic damage to industrial computers, please touch the effective grounded metal object to release the electrostatic charge carried by the body, and wear anti-static gloves.

5.2 Note the following points when unpacking the equipment:

1. It is recommended that you do not discard the original packaging materials. Please keep the original packaging materials for use when transporting the equipment again.
2. Check the delivered equipment for any obvious damage caused during transit.
3. Please confirm that the received goods include all equipment and accessories as listed in the packing list. If there is any discrepancy or transportation damage, please contact the relevant business or customer service personnel.

Table 5.2-1 Machine packing list table

List of binning		
order number	type	quantity
1	The DBC-3400 series of industrial computer	1 set
2	Adapter, power supply cord	1 set
3	Wall hanging kit	1 set
4	Install wall screw	1 set
5	IO terminal (with antenna rod if configured with antenna)	1 set

5.3 Work environment

1. Industrial computers need to be far away from the high-power and strong electromagnetic interference of electrical appliances and the environment;
2. The working environment temperature should be between 0 degrees and 55 degrees Celsius[JH1];
3. The power supply voltage shall be kept between 200 V and 240 V.

5.4 Preparation Before Installation

Before installation, please prepare the relevant items, such as:

1. DBC-3400 series of industrial computers, and related power supply and cables;
2. Display, and the display cable between the display and the industrial controller;

- 3.USB mouse and keyboard;
4. PLC, camera and corresponding connecting lines;
5. Power supply.

5.5 Installation Steps

Hardware connection:

- 1.Connect the equipped display to the industrial computer display interface;
- 2.Connect keyboard, mouse and other to industrial computer USB interface;
- 3.Connect other hardware, such as PLC and camera, according to the corresponding interface;
- 4.Power adapter access 220V voltage, power on.

5.6 Gigabit Network Card Camera Configuration

1. Confirm that the camera is connected to the power supply and that the camera is connected to the industrial computer.
2. Close the firewall, control panel-> Windows Defender-> Set-> Implement protection-> Remove hook and administrator-> Enable Windows Defender-> Remove hook.

Chapter 6. Troubleshooting Guide



Chapter 6. Troubleshooting Guide

6.1 Boot Abnormal Q&A

Q1: After pressing the power button to start on, the power indicator is not on

1. Answer A: Check whether the industrial computer is connected correctly, and whether the power socket is charged;
2. Answer B: Check the industrial computer power adapter, plug and unplug the power cord, display data cable and keyboard mouse cable, confirm that the display and host connection is correct;
3. Answer C: Check whether the positive and negative electrodes of the power plug are reversed

Q2: The power indicator is on and the display is not displayed

1. Answer A: Check the display power supply and switch;
2. Answer B: Check whether the display data line is in bad contact;
3. Answer C: If using Display Port or VGA converter, replace other brand converters;
4. Answer D: Observe the keyboard and mouse indicator, if the keyboard indicator, mouse indicator is on, replace the monitor screen.

Q3: After the boot of the motherboard can not self-check success

1. Answer: Press [Del], key to reset CMOS, or clear CMOS.

Q4: The mouse and keyboard cannot be used after the boot

1. Answer A: To see whether the keyboard lock is locked, remove the keyboard lock;
2. Answer B: If not, check whether the connection with the main board and the keyboard and mouse are connected correctly;
3. Answer C: Check whether there is a keyboard mouse one two turn joint, if there is the keyboard, mouse reverse use;
4. Answer D: Replace one joint and two joints;
5. Answer E. Replace the mouse and keyboard.

Q5: Unable cannot boot the system from the hard drive after boot

1. Answer A: Press the "Del" key to enter the CMOS hard disk parameter setting and boot order are correct;
2. Answer B: After using the optical drive or floppy drive boot, check whether the hard disk has a boot system or the hard disk is normal partition and has activated the boot partition;
3. Answer C: Press F8 at startup and select the last correct configuration to start the operating system;
4. Answer D: Replace the new hard drive and reinstall the system.

Q6: The system dies or has a blue screen during operation

1. Answer A: Check whether the industrial computer temperature is too high;
2. Answer B: Check whether the incorrect or expired drivers are installed;
3. Answer C: Check whether the system is infected with the virus;
4. Answer D: Whether the system file or application and disk are damaged.

Q7: Unable to install the device driver correctly

1. Answer A: Check whether the driver is correct and the latest;
2. Answer B: Whether the driver needs the patch support of the operating system;
3. Answer C: Whether the resources occupied by other equipment are in conflict with the resources occupied by the equipment that need to be driven;

4. Answer D: If the peripheral equipment, change a slot and reinstall the drive;
5. Answer E: Replace the equipment and reinstall the driver program.

Q8: BIOS Upgrade method

1. Prepare a UEFI start U disk, if not, you need to make one;
2. Please copy the required refresh BIOS file and batch to the U disk root directory;
3. Press F7, select the made UEFI U disk, return, and enter the Shell;
4. Enter FS0: return (if no other storage devices, fs0:);
5. Run the flash. The nsh, brush BIOS, the middle of no power off;
6. After brushing the BIOS, power off, then power on, restart the industrial computer, enter the BIOS setting, F3 load the BIOS optimization value (Load optimized defaults return car selection Y).

Q9: Precautions The following conditions may lead to a refresh failure and no boot up.

1. Power interruption during the refresh process;
2. Virus exists in the U disk;
3. BIOS files;
4. Non-UEFI system.

If it cannot be started after refresh, you can empty the BIOS and try it. If the situation is still the same, please return to the factory for repair.

Chapter 7. After-Sale Service



Chapter 7. After-Sale Service

Please visit the official website of Darveen (<https://www.darveen.com/>), Get the latest information on the product.

If users need technical support, please contact the local distributor, seller or the customer service department. Before the technical consultation, please collect the following information:

1. Product model and production serial number (normally, bar code on the body)
2. Software used (operating system, version, application software, etc.)
3. Additional equipment situation of product docking (such as power supply situation, resistance and other basic information)
4. Complete description of the problem (video and photo)
5. Full content of each error message (video recording and photo taking)

