

# **ASB200-962U**

## **Fanless System with IBASE IB962 3.5" Disk-Size SBC**

### **User's Manual**

Version 1.0  
(August 2025)



## **Copyright**

© 2025 IBASE Technology, Inc. All rights reserved.

No part of this publication may be reproduced, copied, stored in a retrieval system, translated into any language or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without the prior written consent of IBASE Technology, Inc. (hereinafter referred to as “IBASE”).

## **Disclaimer**

IBASE reserves the right to make changes and improvements to the products described in this document without prior notice. Every effort has been made to ensure the information in the document is correct; however, IBASE does not guarantee this document is error-free. IBASE assumes no liability for incidental or consequential damages arising from misapplication or inability to use the product or the information contained herein, nor for any infringements of rights of third parties, which may result from its use.

## **Trademarks**

All the trademarks, registrations and brands mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

## Compliance

### CE

This product has passed CE tests for environmental specifications and limits. This product is in accordance with the directives of the European Union (EU). If users modify and/or install other devices in this equipment, the CE conformity declaration may no longer apply.

### FCC

This product has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications.

### WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive of for waste electrical and electronic equipment (WEEE - 2012/19/EU). Instead, it should be disposed of by returning it to a municipal recycling collection point. Check local regulations for disposal of electronic products.

### Green IBASE



This product complies with RoHS 2 restrictions, which prohibit the use of certain hazardous substances in electrical and electronic equipment. The following substances must not exceed the specified concentrations:

- Hexavalent chromium: 1,000 ppm
- Poly-brominated biphenyls (PBBs): 1,000 ppm
- Poly-brominated diphenyl ethers (PBDEs): 1,000 ppm
- Cadmium: 100 ppm
- Mercury: 1,000 ppm
- Lead: 1,000 ppm
- Bis(2-ethylhexyl) phthalate (DEHP): 1,000 ppm
- Butyl benzyl phthalate (BBP): 1,000 ppm
- Dibutyl phthalate (DBP): 1,000 ppm
- Diisobutyl phthalate (DIBP): 1,000 ppm

## Important Safety Information

Carefully read the precautions before using the device.

### Environmental conditions:

- Lay the device horizontally on a stable and solid surface in case the device may fall, causing serious damage.
- Leave plenty of space around the device and do not block the openings for ventilation. NEVER DROP OR INSERT ANY OBJECTS OF ANY KIND INTO THE VENTILATION OPENINGS.
- Slots and openings on the chassis are for ventilation. Do not block or cover these openings. Make sure you leave plenty of space around the device for ventilation. NEVER INSERT OBJECTS OF ANY KIND INTO THE VENTILATION OPENINGS.
- DO NOT LEAVE THIS DEVICE IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20°C OR ABOVE 80°C. This could damage the device. The device must be used in a controlled environment.

### Care for your IBASE products:

- Before cleaning the device, turn it off and unplug all cables such as power in case a small amount of electrical current may still flow.
- Use neutral cleaning agents or diluted alcohol to clean the device chassis with a cloth. Then wipe the chassis with a dry cloth.
- Vacuum the dust with a computer vacuum cleaner to prevent the air vent or slots from being clogged.



## WARNING

### Attention during use:

- Do not place heavy objects on the top of the device.
- Operate this device from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your distributor or your local power company.
- Do not walk on the power cord or allow anything to rest on it.
- If you use an extension cord, make sure that the total ampere rating of the product plugged into the extension cord does not exceed its limits.

### Avoid Disassembly

Do not disassemble, repair or make any modification to the device. Disassembly, modification, or any attempt at repair could generate hazards and cause damage to the device, even bodily injury or property damage, and will void any warranty.



## CAUTION

Danger of explosion if internal lithium-ion battery is replaced by an incorrect type. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

## Warranty Policy

- **IBASE standard products:**

IBASE offers a 24-month (2-year) warranty from the date of shipment. If the date of shipment cannot be ascertained, the product serial numbers can be used to determine the approximate shipping date.

- **3<sup>rd</sup>-party parts:**

12-month (1-year) warranty from delivery for the 3<sup>rd</sup>-party parts that are not manufactured by IBASE, such as CPU, memory, HDD, power adapter, panel and touchscreen.

\* PRODUCTS, HOWEVER, THAT FAIL DUE TO MISUSE, ACCIDENT, IMPROPER INSTALLATION OR UNAUTHORIZED REPAIR SHALL BE TREATED AS OUT OF WARRANTY AND CUSTOMERS SHALL BE BILLED FOR REPAIR AND SHIPPING CHARGES.

## Technical Support & Services

1. Visit the IBASE website at [www.ibase.com.tw](http://www.ibase.com.tw) to find the latest information about the product.
2. If you need any further assistance from your distributor or sales representative, prepare the following information of your product and elaborate upon the problem.
  - Product model name
  - Product serial number
  - Detailed description of the problem
  - The error messages in text or in screenshots if there is any
  - The arrangement of the peripherals
  - Software in use (such as OS and application software, including the version numbers)
3. If repair service is required, please log in to the RMA system of the website or and contact your distributor or sales representative for assistance.

# Table of Contents

---

|                  |   |          |
|------------------|---|----------|
| <b>Chapter 1</b> | <b>General Information .....</b>                                | <b>1</b> |
| 1.1              | Introduction .....  | 2        |
| 1.2              | Features.....   | 3        |
| 1.3              | Packing List .....  | 3        |
| 1.4              | Optional Accessories .....                                      | 3        |
| 1.5              | Specifications.....   | 4        |
| 1.6              | Product View.....   | 6        |
| 1.7              | Dimensions .....  | 8        |
| <b>Chapter 2</b> | <b>Hardware Configuration .....</b>                             | <b>9</b> |
| 2.1              | Installations .....   | 10       |
| 2.1.1            | SSD Storage Installation.....                                   | 10       |
| 2.1.2            | M.2 Card and SIM card Modules Installation .....                | 11       |
| 2.1.3            | Memory Installation .....                                       | 12       |
| 2.1.4            | Additional Information:.....                                    | 13       |
| 2.1.5            | WiFi / 4G / 5G Antenna Installation.....                        | 14       |
| 2.1.6            | Side Bracket Installation .....                                 | 14       |
| 2.1.7            | Pinout for COM Ports, DC Power & Digital I/O Connectors.....    | 15       |
| 2.2              | Setting the Jumpers .....                                       | 17       |
| 2.3              | Jumper & Connector Locations on IB962U .....                    | 18       |
| 2.4              | Jumpers Quick Reference.....                                    | 19       |
| 2.4.1            | J1: Clear RTC.....  | 19       |
| 2.4.2            | JP1: LVDS Brightness Power Selection.....                       | 20       |
| 2.4.3            | JP2: eDP Power Selection.....                                   | 20       |
| 2.4.4            | JP3: LVDS Power Selection .....                                 | 21       |
| 2.4.5            | JP4: Sierra EM9 series 5G card USB/PCIe Select.....             | 21       |
| 2.4.6            | JP5: AT/ATX Select.....   | 22       |
| 2.4.7            | J5: Flash Descriptor Security Override (Factory use only) ..... | 22       |
| 2.4.8            | J6: Clear CMOS .....  | 22       |
| 2.5              | Connectors Quick Reference .....                                | 23       |
| 2.5.1            | CN1: eDP Connector .....  | 24       |
| 2.5.2            | CN2, CN3: SATA #0 / SATA #1 .....                               | 25       |
| 2.5.3            | CN4: 2.5G LAN i226LM/i226V .....                                | 26       |
| 2.5.4            | CN5: USB3 #2 / USB2 #2 .....                                    | 26       |
| 2.5.5            | CN6: DP++ / HDMI .....  | 27       |
| 2.5.6            | CN7: USB3 TCP#2 #3 .....  | 27       |
| 2.5.7            | CN8: COM1 Port .....  | 28       |

|                  |  |           |
|------------------|--|-----------|
| 2.5.8            | CN9: SIM Card Socket .....                       | 29        |
| 2.5.9            | J2: LVDS Backlight Connector.....                | 29        |
| 2.5.10           | J3: Audio Connector .....                        | 30        |
| 2.5.11           | J4: COM2 Port.....                               | 31        |
| 2.5.12           | J7: DDR5 SO-DIMM CHA.....                        | 32        |
| 2.5.13           | J8: Battery Connector .....                      | 32        |
| 2.5.14           | J9, J13: LVDS CH-B / CH-A .....                  | 33        |
| 2.5.15           | J10: Digital I/O (4in, 4out) .....               | 34        |
| 2.5.16           | J11: eSPI Debug (Factory Use Only).....          | 34        |
| 2.5.17           | J12: DDR5 SO-DIMM CHB.....                       | 34        |
| 2.5.18           | J14: M.2 B-Key 3052 .....                        | 35        |
| 2.5.19           | J15: SPI Flash Connector (Factory use only)..... | 35        |
| 2.5.20           | J16: USB2 #5/#6 .....                            | 35        |
| 2.5.21           | J17: DC-In Connector (12V-24V).....              | 36        |
| 2.5.22           | J18: M.2 M-Key 2280.....                         | 36        |
| 2.5.23           | J19: SATA Power Connector .....                  | 37        |
| 2.5.24           | J20: Front Panel Connector .....                 | 38        |
| 2.5.25           | J21: PWM programming (Factory use only).....     | 39        |
| 2.5.26           | J22: M.2 E-Key 2230 W/CNVI .....                 | 39        |
| 2.5.27           | CPU_FAN1: CPU Fan Power Connector .....          | 40        |
| <b>Chapter 3</b> | <b>Driver Installation .....</b>                 | <b>41</b> |
| <b>Chapter 4</b> | <b>BIOS Setup .....</b>                          | <b>53</b> |
| <b>Appendix</b>  | <b>.....</b>                                     | <b>74</b> |
| A.               | I/O Port Address Map.....                        | 75        |
| B.               | Interrupt Request Lines (IRQ) .....              | 77        |
| C.               | Watchdog Timer Configuration.....                | 78        |





# Chapter 1

## General Information

The information provided in this chapter includes:

- Features
- Packing List
- Optional Accessories
- Specifications
- Product View
- Dimensions

## 1.1 Introduction

The ASB200-962U is a slim and high-performance box PC built with IBASE's IB962 3.5-inch SBC, powered by Intel® Core™ Ultra 100U Series mobile processors with a 15W TDP. Designed for industrial automation and embedded applications, it delivers efficient computing power in a compact, fan-cooled chassis. The system supports up to 96GB of DDR5-5600 memory via dual SO-DIMM slots and offers multiple M.2 sockets (B-Key, E-Key, and M-Key) for flexible expansion. Rich I/O connectivity includes dual 2.5G LAN, three USB 3.2, three USB 2.0, one COM port, as well as HDMI and DisplayPort for dual display support. Additional features include support for 2.5" SSD and M.2 NVMe storage, external GPIO, TPM 2.0, and an optional VESA mount bracket. With an operating temperature range of -10°C to 55°C, the ASB200-962U is ideal for deployment in industrial environments, smart automation, factory control, and AI-driven applications.



**ASB200-962U**

## 1.2 Features

- Onboard Intel® Core™ Ultra 100U Series mobile Processors (TDP@15W)
- Multiple M.2 sockets (B-key/ E-key and M-key)
- 2x DDR5-5600 SO-DIMM, Max. 96GB
- Dual 2.5G LAN, 3x USB 3.2, 3x USB 2.0, 1x COM
- Supports 2.5" SSD & M.2 NVMe storage devices
- Supports HDMI & DP, External GPIO, TPM (2.0)
- Optional VESA mount bracket
- Supports operating temperature from -10°C to 55°C

## 1.3 Packing List

Your product package should include the items listed below. If any of the items below is missing, contact the distributor or the dealer from whom you purchased the product.

- |  |     |
|--|-----|
| • ASB200-962U                                | x 1 |
| • 3-pin Terminal Block (for power)           | x 1 |
| • 10-pin Terminal Block (for GPIO connector) | x 1 |
| • Side Brackets                              | x 1 |
| • Screws for Side Brackets                   | x 4 |

## 1.4 Optional Accessories

- 90W (24V@3.75A) power adaptor, bare wire-type compatible with IEC62368-1/EN62368-1 [PN: A005PS090W0100710P]
- VESA mount kit [PN: SC2ASB2----0A1200R]
- WiFi antenna kit [PN: A024MDWIFI0042400P (Intel® 9260) + SC2WIFI----A10M00R (WiFi Kit)]

## 1.5 Specifications

| Model                 | Description   |
|-----------------------|---|
| <b>ASB200-962U-7M</b> | Fanless chassis with IB962AF-165U, Intel® Core™ Ultra7 CPU(TDP@15W), w/ 1x COM, 2x DDR5 memory slot, desktop stand & mounting bracket, w/o memory/ 90W power adaptor and VESA mount bracket |
| <b>ASB200-962U-5M</b> | Fanless chassis with IB962AF-135U, Intel® Core™ Ultra5 CPU(TDP@15W), w/ 1x COM, 2x DDR5 memory slot, desktop stand & mounting bracket, w/o memory/ 90W power adaptor and VESA mount bracket |

| System                          |   |
|---------------------------------|---|
| <b>Mainboard</b>                | IB962AF-165U / IB962AF-135U   |
| <b>CPU</b>                      | Intel® Core™ Ultra 100U Series Mobile Processors  |
| <b>System Speed</b>             | Up to 4.9GHz  |
| <b>Memory</b>                   | 2x DDR5-5600 SO-DIMM, Max. 96GB   |
| <b>Front Panel External I/O</b> | <ul style="list-style-type: none"> <li>• 3x USB 3.2</li> <li>• 1x USB 2.0</li> <li>• 1x DisplayPort</li> <li>• 1x HDMI</li> <li>• 1x DB9 for COM#1 (RS232/422/485)</li> <li>• 2x 2.5G LAN</li> <li>• 2x Antenna holes</li> </ul>                    |
| <b>Rear Panel External I/O</b>  | <ul style="list-style-type: none"> <li>• 1x Power button</li> <li>• 1x Digital I/O (4-in/4-out)</li> <li>• 2x Antenna holes</li> <li>• 1x HDD LED</li> <li>• 1x Power LED</li> <li>• 1x 3-pin DC-in terminal block for 24V power adaptor</li> </ul> |
| <b>Expansion</b>                | • 3x M.2 sockets (B-Key/ E-Key and M-Key)   |
| <b>Storage</b>                  | Watchdog Timer 256 segments, 0, 1, 2...255 sec/min  |
| <b>Construction</b>             | • Aluminum & steel  |
| <b>Chassis Color</b>            | Black   |
| <b>Mounting Type</b>            | <ul style="list-style-type: none"> <li>• Desktop &amp; wall mount bracket</li> <li>• Optional VESA mounting kit</li> </ul>  |
| <b>Dimensions</b>               | 180mm (W) x 150mm (D) x 72mm (H)<br>7.08" (W) x 5.9" (D) x 2.83" (H)  |
| <b>Weight</b>                   | 1.5 kg  |
| <b>Certification</b>            | CE/LVD/FCC Class B  |

| Environment          |   |
|----------------------|---|
| Temperature          | <ul style="list-style-type: none"> <li>• <b>Operating:</b> -10°C ~ 55°C (14°F ~ 131°F)* with airflow 0.9m/s</li> <li>• <b>Storage:</b> -20°C ~ 80°C (-4°F ~ 176°F)</li> </ul> |
| Relative Humidity    | 5% ~ 90% at 45 °C (non-condensing)  |
| Vibration Protection | <ul style="list-style-type: none"> <li>• <b>Operating:</b> 1 Grms / 3 ~ 500 Hz</li> </ul>   |
| Shock Protection     | <ul style="list-style-type: none"> <li>• <b>Operating:</b> 20 g / 11 ms</li> <li>• <b>Non-operating:</b> 40 g / 11 ms</li> </ul>  |

All specifications are subject to change without prior notice.

| Recommended Processor List              |  |                      |
|---|--|----------------------|
| Processor Number                        | Intel® Core™ Ultra 100 Series Processors – Intel® MTL U/H Platform |                      |
|   | Intel® Core™ Ultra 7   | Intel® Core™ Ultra 5 |
|   | 165U   | 135U                 |
| Base Freq (GHz)                         | 1.7  | 1.6                  |
| Intel® Turbo Boost Technology 2.0 (GHz) | 4.9  | 4.4                  |
| Last Level Cache                        | 12MB   | 12MB                 |
| Cores/Threads                           | 12/14  | 12/14                |
| Memory Speed (DDR5)                     | 5600   | 5600                 |
| TDP                                     | 15W  | 15W                  |

## 1.6 Product View


### Front View



**ASB200-962U**

| No. | Name          | No. | Name                         |
|-----|---------------|-----|------------------------------|
| 1   | Antenna Holes | 4   | Power Switch                 |
| 2   | HDD LED       | 5   | Digital I/O (4-In / 4-Out)   |
| 3   | Power Status  | 6   | DC +12V~ +24V<br>Power Input |

## Rear View

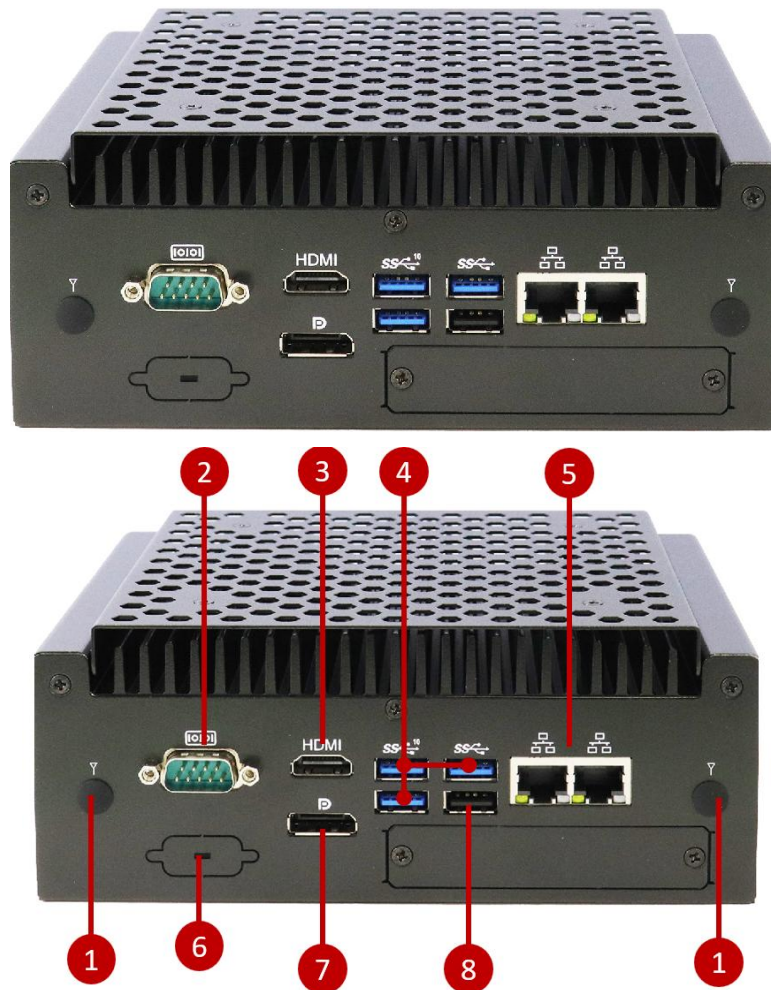


| No. | Name          | No. | Name           |
|-----|---------------|-----|----------------|
| 1   | Antenna Holes | 5   | LAN Ports      |
| 2   | COM Port      | 6   | Reserved (COM) |
| 3   | HDMI Port     | 7   | Display Port   |
| 4   | USB 3.1 Ports | 8   | USB 2.0 Port   |

Remarks: The reserved expansion cover on the lower right is for the optional dual USB 2.0 ports module.



## 1.7 Dimensions

Unit: mm

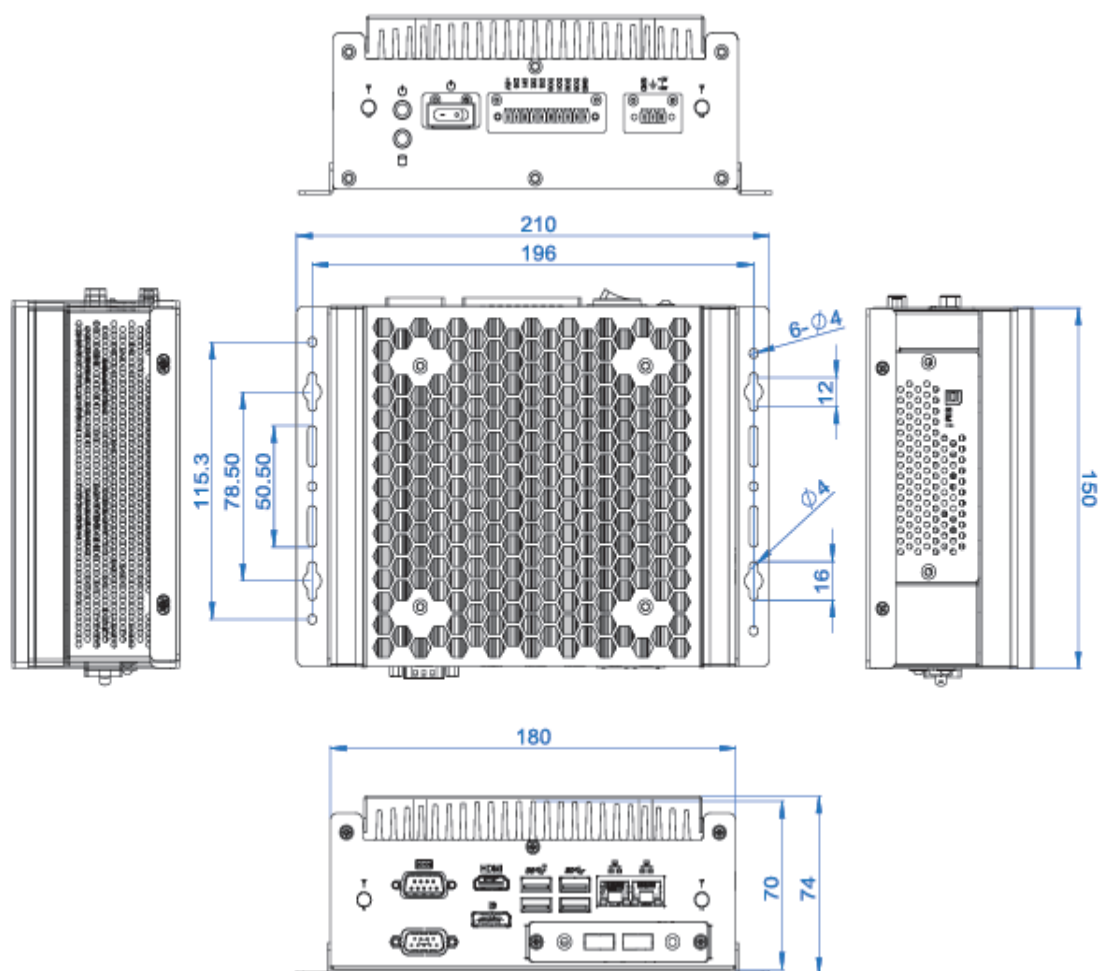

**ASB200-962U**



## Chapter 2

# Hardware Configuration

The information provided in this chapter includes:

- Installations
- Descriptions and locations of connectors

## 2.1 Installations

### 2.1.1 SSD Storage Installation

If you need to install or replace an SSD card, follow these steps:

1. Remove the two screws shown below, then slide off the cover.
2. To install or remove the SSD/HDD, use the four screws indicated (circled in the image).



Remarks: To be able to slide out the SSD attachment cover, the side bracket attached to that side as shown below, must be detached by removing the two screws..




### 2.1.2 M.2 Card and SIM card Modules Installation


1. To remove the cover, there are three screws on each side that must be removed as shown below.



2. When the cover is removed, the locations of the M.2 sockets (J14: B-key, J18: M-key) and the two DDR5 sockets can be seen, as shown below. The locations of the three M.2 sockets are clearly indicated in the top and bottom board pictures on page 12.

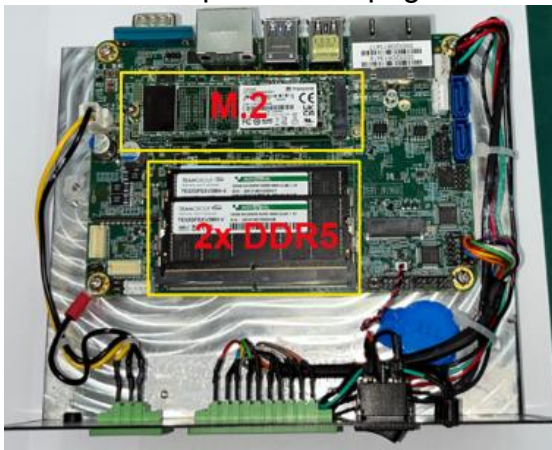

3. To install the M.2 card, align the key of the card with the M.2 interface. Insert the card at a slight angle, push it down, and secure it with a screw.

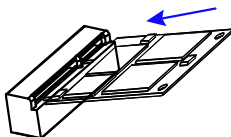

4. Locating the SIM card socket:

- After removing the two screws as mentioned in 2.1.1 and taking off the cover holding the SSD drive, the SIM card socket will be exposed (as seen in the image below).




### 2.1.3 Memory Installation


1. To remove the cover, there are three screws on each side that must be removed as shown below.



2. When the cover is removed, the locations of the two DDR5 sockets can be seen, as shown below.

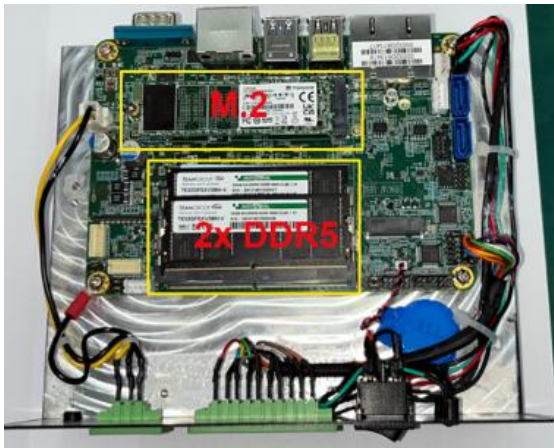

3. To install the memory module, align the key with the notch in the memory slot. Insert the module at a slight angle.

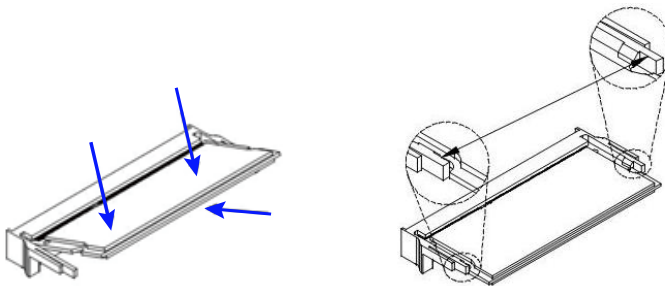

4. Secure the Memory Module. Gently push the module downward into an upright position until it clicks into place. The clips on both sides should automatically lock the module when fully inserted.
5. To remove the module, press the clips outward with both hands. The module will pop up, allowing you to carefully pull it out.




### 2.1.4 Additional Information:



This is a picture of the board without the memory modules installed. As can be seen, there is a thermal pad on the board for a memory module.




This is the cover plate with heat dissipation pads for the M.2 card and the top DDR5 memory module. The cover is to be installed after the installation of the M.2 card and the memory module(s). As seen below, the metal cover uses two screws on the left and right side and two more screws adjacent to the Digital I/O connector that are to be secured.

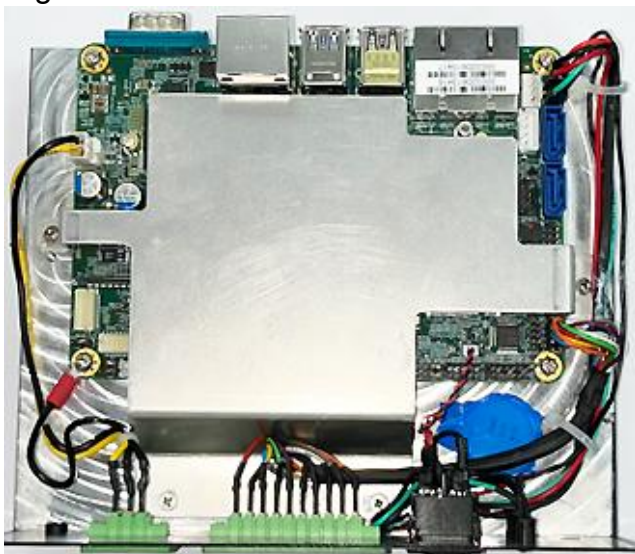

### 2.1.5 WiFi / 4G / 5G Antenna Installation

This step follows the installation of the WiFi / 4G / 5G module where the antenna cables are to be connected.

- Once the antenna(s) is connected, locate the target antenna hole.
- Thread the WiFi / 4G / 5G antenna cable through an antenna hole.
- Fasten the antenna as shown below.

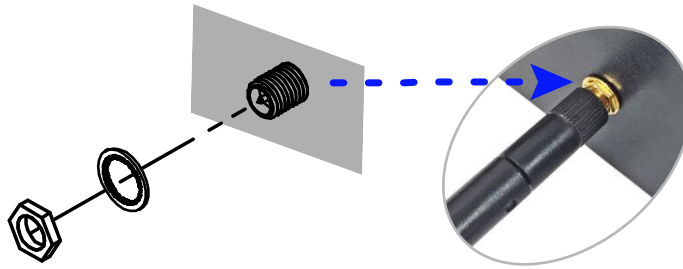

---

**Info:** The diameter of the nut is around 6.35 mm (0.25"-36UNC).

---

### 2.1.6 Side Bracket Installation

The picture below shows the system with the side brackets installed on the both sides. The lower picture shows the two screws (in yellow circles) that are used to fasten the side brackets.



### 2.1.7 Pinout for COM Ports, DC Power & Digital I/O Connectors

- COM1 RS232/422/485 Port



| Pin | Assignment               | Pin | Assignment           |
|-----|--------------------------|-----|----------------------|
| 1   | DCD, Data carrier detect | 6   | DSR, Data set ready  |
| 2   | RXD, Receive data        | 7   | RTS, Request to send |
| 3   | TXD, Transmit data       | 8   | CTS, Clear to send   |
| 4   | DTR, Data terminal ready | 9   | RI, Ring indicator   |
| 5   | Ground                   |     |                      |

| Pin | Assignment |        |        |
|-----|------------|--------|--------|
|     | RS-232     | RS-422 | RS-485 |
| 1   | DCD        | TX-    | DATA-  |
| 2   | RX         | TX+    | DATA+  |
| 3   | TX         | RX+    | NC     |
| 4   | DTR        | RX-    | NC     |
| 5   | Ground     | Ground | Ground |
| 6   | DSR        | NC     | NC     |
| 7   | RTS        | NC     | NC     |
| 8   | CTS        | NC     | NC     |
| 9   | RI         | NC     | NC     |

• DC Power Input Connector (terminal block)



| Pin | Assignment     | Pin | Assignment  |
|-----|----------------|-----|-------------|
| 1   | Ground         | 3   | +12V ~ +24V |
| 2   | Chassis Ground |     |             |

• Digital I/O Connector (terminal block)



CX


| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | Ground     | 6   | DI3        |
| 2   | DO3        | 7   | DI2        |
| 3   | DO2        | 8   | DI1        |
| 4   | DO1        | 9   | DI0        |
| 5   | DO0        | 10  | +5V        |



2.2 Setting the Jumpers

Set up and configure your product by using jumpers for various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your use.

Jumpers are short-length conductors consisting of several metal pins with a non-conductive base mounted on the circuit board. Jumper caps are used to have the functions and features enabled or disabled. If a jumper has 3 pins, you can connect either PIN1 to PIN2 or PIN2 to PIN3 by shorting.

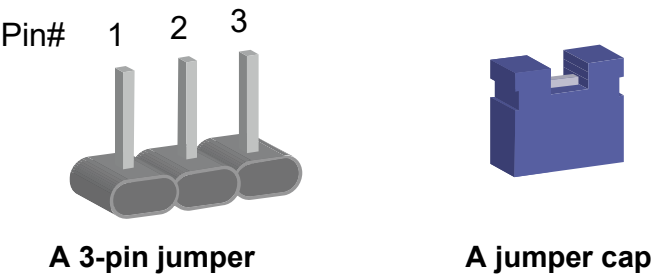


Refer to the illustration below to set jumpers.

| Pin closed | Oblique view | illustration |
|------------|--------------|--------------|
| Open       |              |              |
| 1-2        |              |              |
| 2-3        |              |              |

When two pins of a jumper are encased in a jumper cap, this jumper is **closed**, i.e. turned **On**.

When a jumper cap is removed from two jumper pins, this jumper is **open**, i.e. turned **Off**.


## 2.3 Jumper & Connector Locations on IB962U

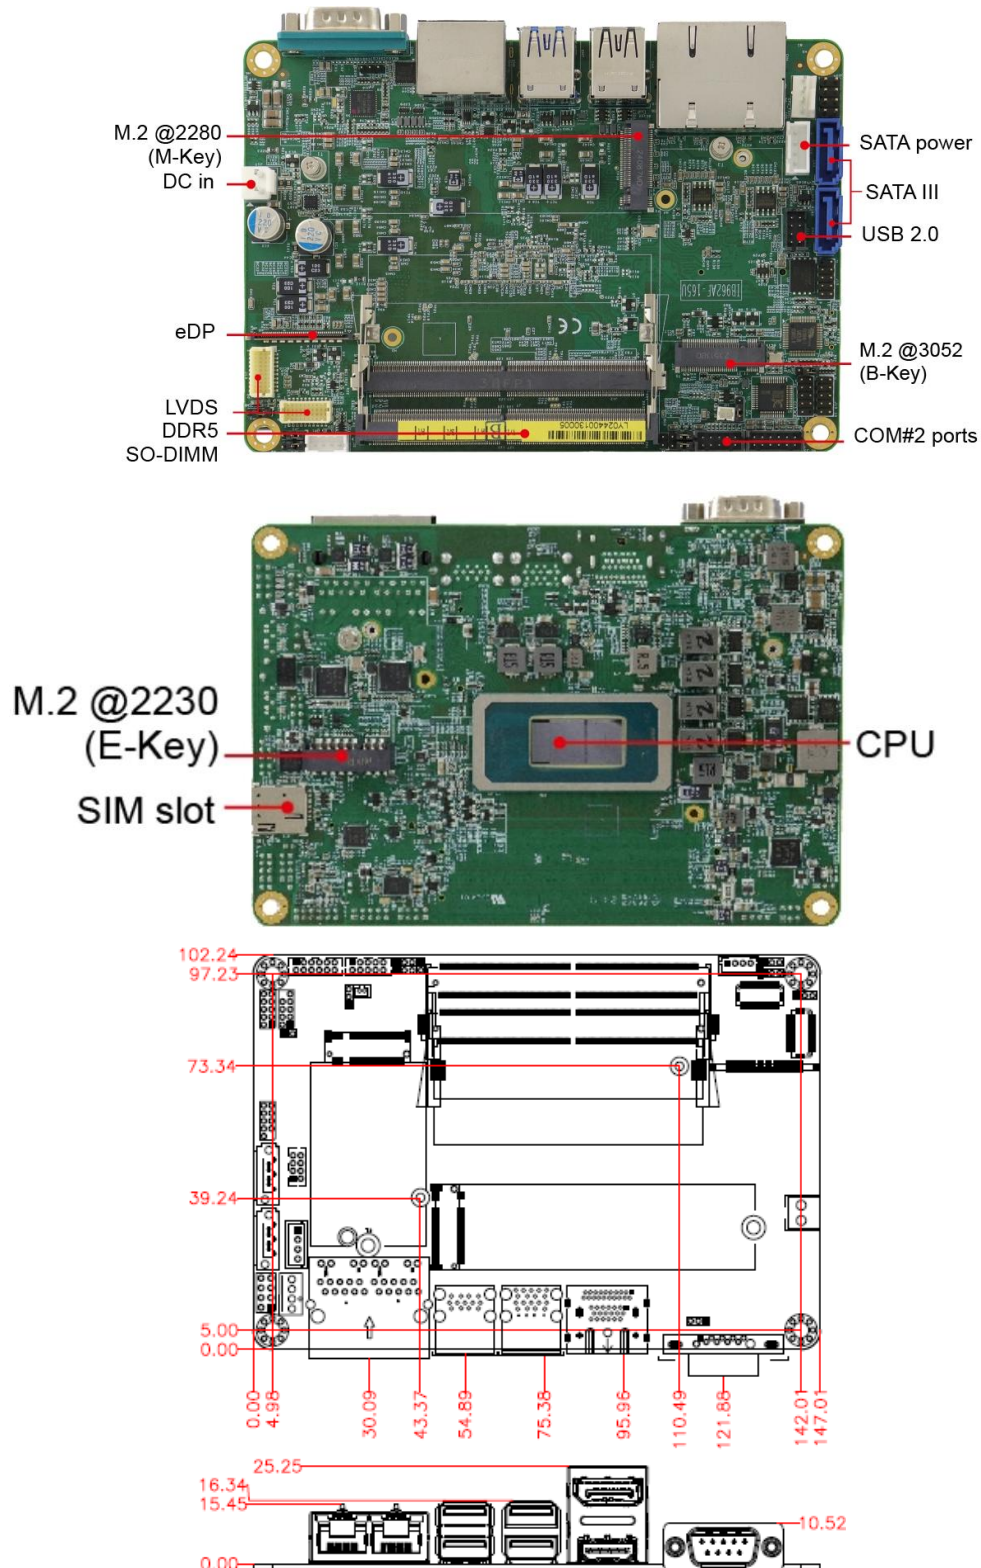

2.4 Jumpers Quick Reference


| Jumper | Function                                  |
|--------|---|
| J1     | Clear RTC                                 |
| JP1    | LVDS Brightness Power Selection           |
| JP2    | eDP Power Selection                       |
| JP3    | LVDS Power Selection                      |
| JP4    | Sierra EM9 series 5G card USB/PCIe Select |
| JP5    | AT/ATX Selection                          |
| J5     | Flash Descriptor Security Override        |
| J6     | Clear CMOS Data                           |

2.4.1 J1: Clear RTC

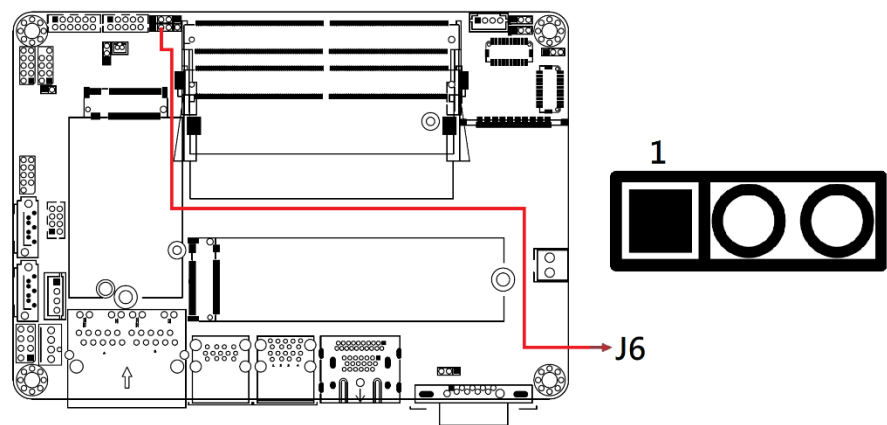


| Function            | Pin closed | Setting |
|---------------------|------------|---------|
| Normal<br>(default) | 1-2        | 1       |
| Clear RTC           | 2-3        | 1       |

2.4.2 JP1: LVDS Brightness Power Selection

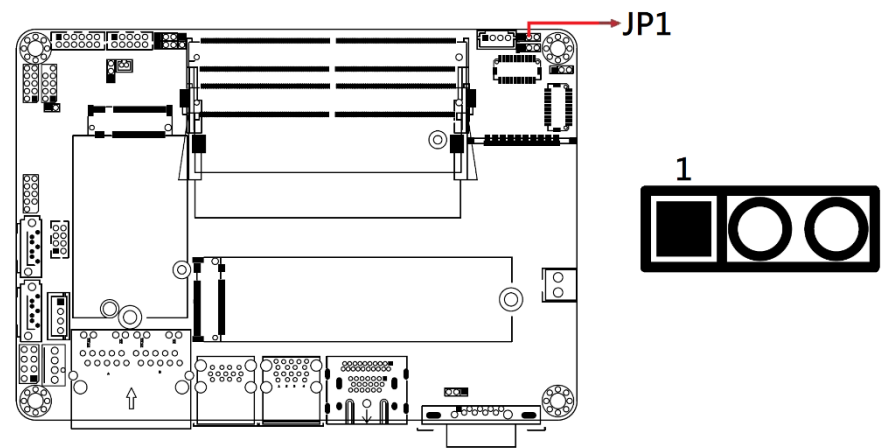


| Function       | Pin closed | Setting |
|----------------|------------|---------|
| 3.3V (default) | 1-2        | 1       |
| 5V             | 2-3        | 1       |

2.4.3 JP2: eDP Power Selection

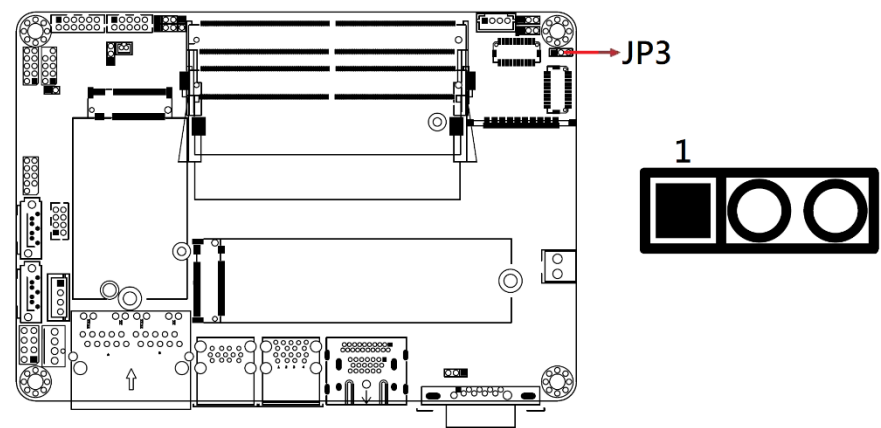


| Function       | Pin closed | Setting |
|----------------|------------|---------|
| 3.3V (default) | 1-2        | 1       |
| 5V             | 2-3        | 1       |

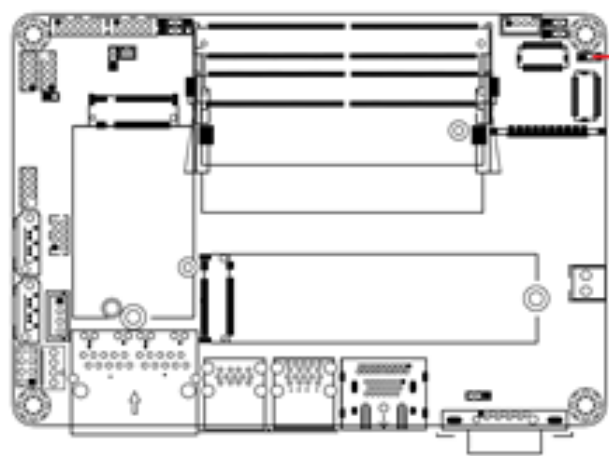

2.4.4 JP3: LVDS Power Selection




JP3

1




| Function       | Pin closed | Setting   |
|----------------|------------|---|
| 3.3V (default) | 1-2        | 1  |
| 5V             | 2-3        | 1  |

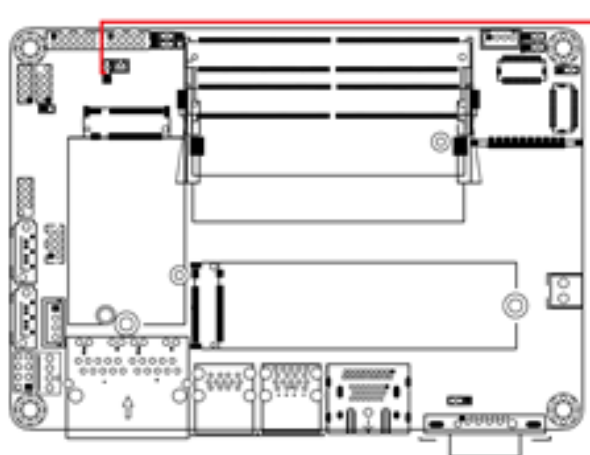

2.4.5 JP4: Sierra EM9 series 5G card USB/PCIe Select




JP4

1



| Function      | Pin closed | Setting   |
|---------------|------------|---|
| USB (default) | 1-2        | 1  |
| PCIe          | 2-3        | 1  |


2.4.6 JP5: AT/ATX Select

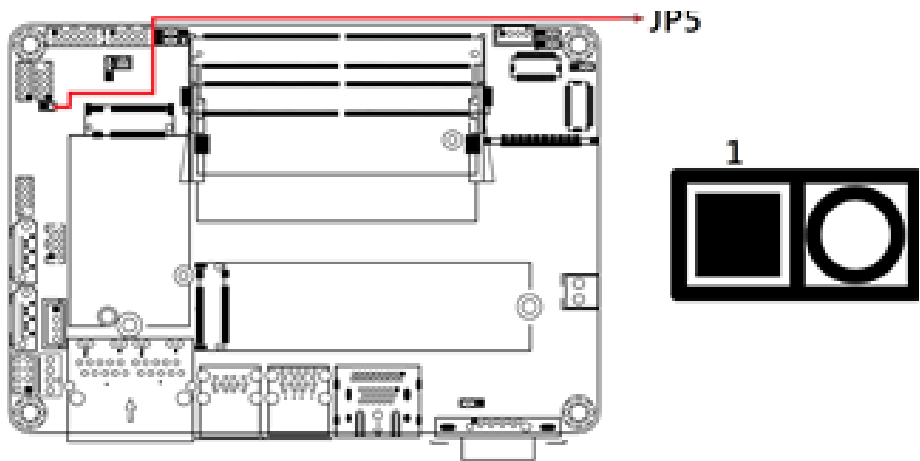

| Function | Pin closed     | Setting |
|----------|----------------|---------|
| ATX      | Open (default) |         |
| AT       | Close          |         |

2.4.7 J5: Flash Descriptor Security Override (Factory use only)

2.4.8 J6: Clear CMOS

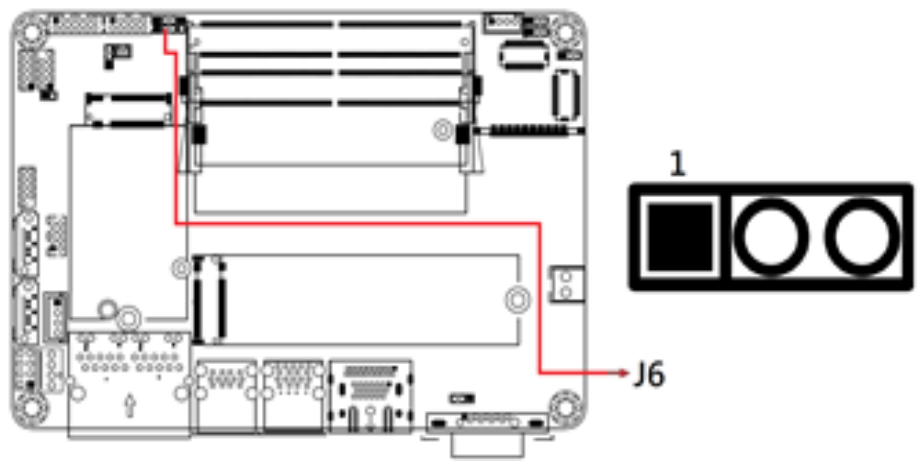


| Function   | Pin closed | Setting |
|------------|------------|---------|
| Normal     | 1-2        | 1       |
| Clear CMOS | 2-3        | 1       |

## 2.5 Connectors Quick Reference

| Connectors | Function                               |
|------------|--|
| CN1        | eDP Connector                          |
| CN2, CN3   | SATA #0 / #1 Ports                     |
| CN4        | 2.5G LAN i226LM/i226V Ports            |
| CN5        | USB3 #2 / USB2 #2 Ports                |
| CN6        | DP++ /HDMI                             |
| CN7        | USB3 TCP#2 #3                          |
| CN8        | COM1 Port                              |
| CN9        | SIM Card Socket                        |
| J1         | Clear RTC                              |
| J2         | LVDS Backligh Connector                |
| J3         | Audio Connector                        |
| J4         | COM2 Port                              |
| J7         | DDR5 SO-DIMM CHA                       |
| J8         | Battery Connector                      |
| J9         | LVDS CH-B                              |
| J10        | Digital I/O (4in, 4out)                |
| J11        | eSPI DEBUG (Factory use only)          |
| J12        | DDR SO-DIMM CHB                        |
| J13        | LVDS CH-A                              |
| J14        | M.2 B-Key 3052                         |
| J15        | SPI Flash Connector (Factory use only) |
| J16        | USB2 #5/#6                             |
| J17        | DC-In Connector (12V-24V)              |
| J18        | M.2 M-key 2280                         |
| J19        | SATA Power Connector                   |
| J20        | Front Panel Connector                  |
| J21        | PWM Programming (Factory use only)     |
| J22        | M.2 E-Key 2230 W/CNVl                  |
| CPU_FAN1   | CPU Fan Power Connector                |

### 2.5.1 CN1: eDP Connector

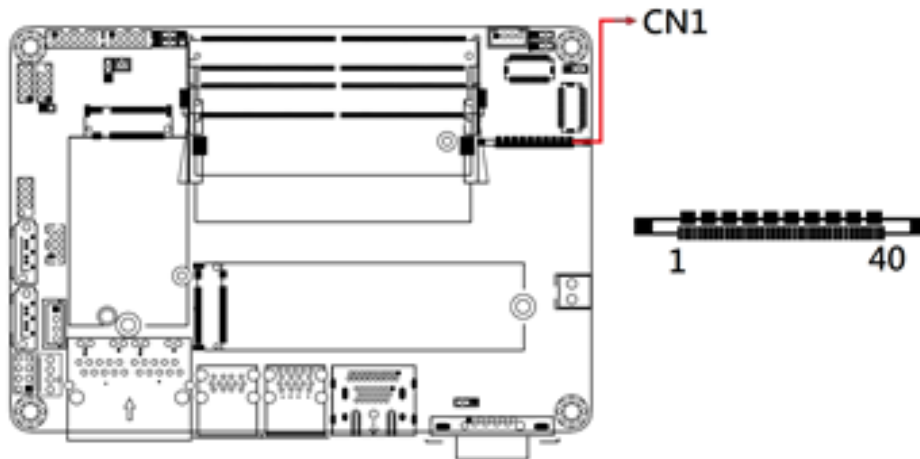


| Pin | Assignment      | Pin | Assignment         |
|-----|-----------------|-----|--------------------|
| 1   | eDP Vcc         | 21  | TXN0               |
| 2   | eDP Vcc         | 22  | TXP1               |
| 3   | eDP Vcc         | 23  | Ground             |
| 4   | eDP Vcc         | 24  | AUXP               |
| 5   | eDP Vcc         | 25  | AUXN               |
| 6   | Ground          | 26  | NC                 |
| 7   | Ground          | 27  | +3.3V              |
| 8   | Ground          | 28  | EDP BKLT (+12V)    |
| 9   | Ground          | 29  | NC                 |
| 10  | Hot Plug detect | 30  | Ground             |
| 11  | Ground          | 31  | +5V                |
| 12  | TXN3            | 32  | NC                 |
| 13  | TXP3            | 33  | Back Light Control |
| 14  | Ground          | 34  | Back Light Enable  |
| 15  | TXN2            | 35  | EDP BKLT (+12V)    |
| 16  | TXP2            | 36  | +3.3V              |
| 17  | Ground          | 37  | Ground             |
| 18  | TXN1            | 38  | NC                 |
| 19  | TXP1            | 39  | NC                 |
| 20  | Ground          | 40  | NC                 |



\* KEL\_SSL00-40S




### 2.5.2 CN2, CN3: SATA #0 / SATA #1

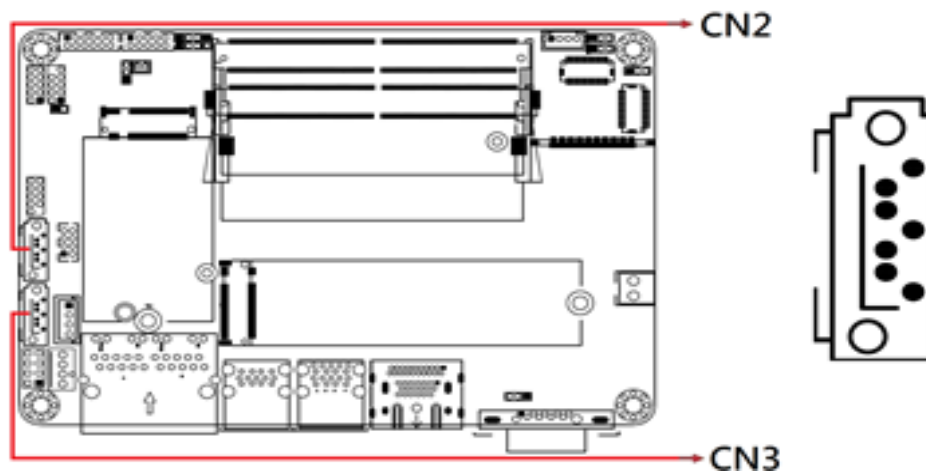


| Pin | Assignment |
|-----|------------|
| 1   | Ground     |
| 2   | TX+        |
| 3   | TX-        |
| 4   | Ground     |
| 5   | RX-        |
| 6   | RX+        |
| 7   | Ground     |

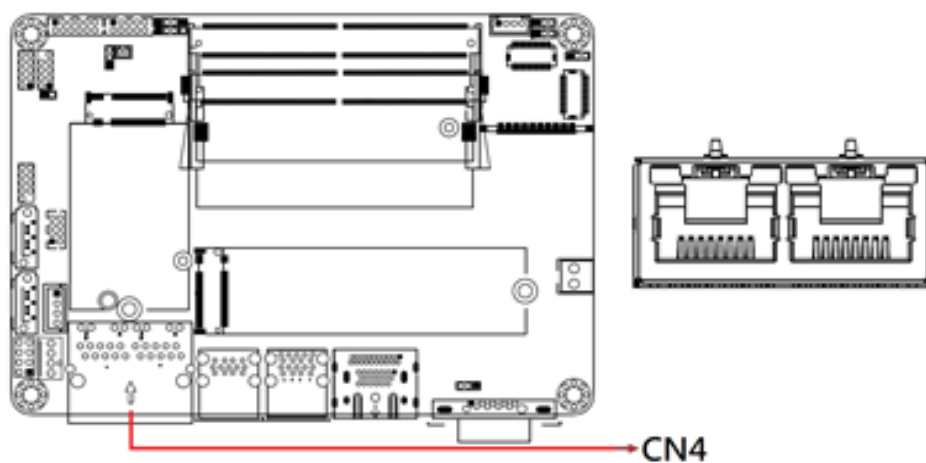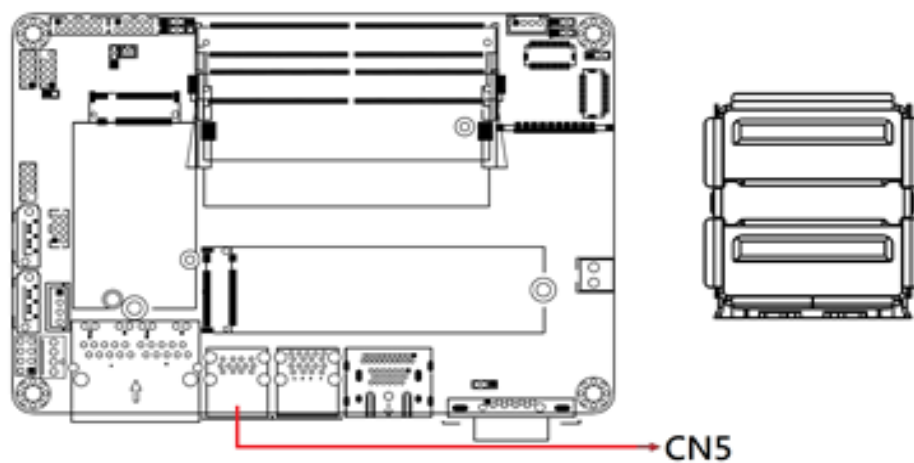**2.5.3 CN4: 2.5G LAN i226LM/i226V****2.5.4 CN5: USB3 #2 / USB2 #2**


### 2.5.5 CN6: DP++ / HDMI

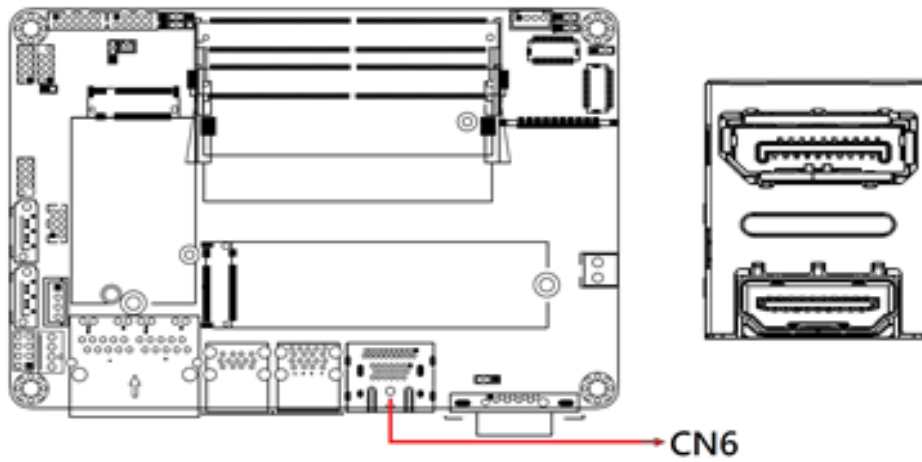

### 2.5.6 CN7: USB3 TCP#2 #3

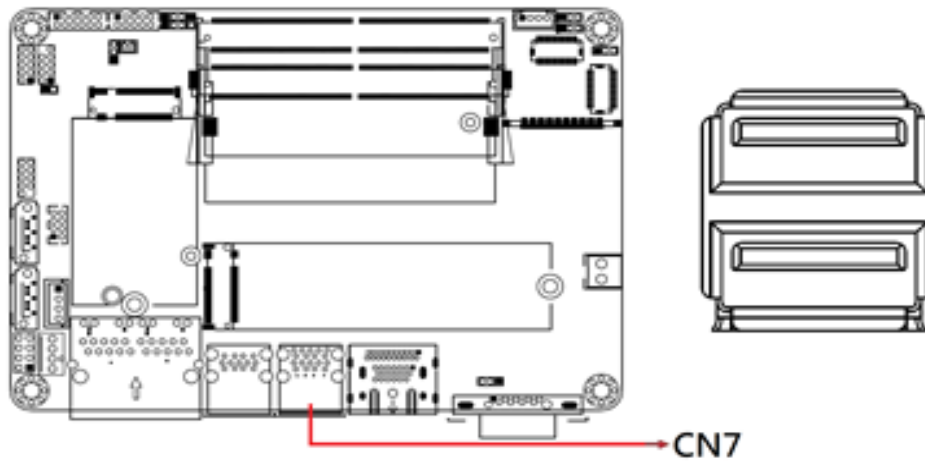


## 2.5.7 CN8: COM1 Port

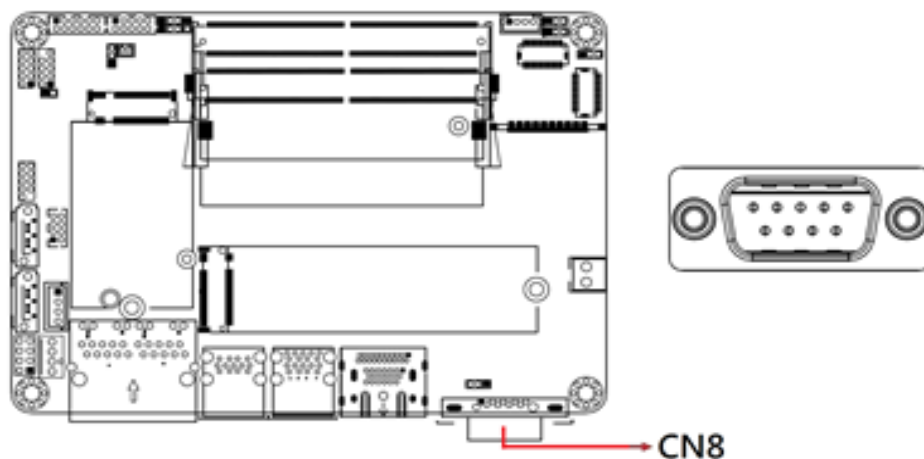


| Pin | Assignment |        |        |
|-----|------------|--------|--------|
|     | RS-232     | RS-422 | RS-485 |
| 1   | DCD        | TX-    | DATA-  |
| 2   | RX         | TX+    | DATA+  |
| 3   | TX         | RX+    | NC     |
| 4   | DTR        | RX-    | NC     |
| 5   | Ground     | Ground | Ground |
| 6   | DSR        | NC     | NC     |
| 7   | RTS        | NC     | NC     |
| 8   | CTS        | NC     | NC     |
| 9   | RI         | NC     | NC     |
| 10  | NC         | NC     | NC     |

### 2.5.8 CN9: SIM Card Socket

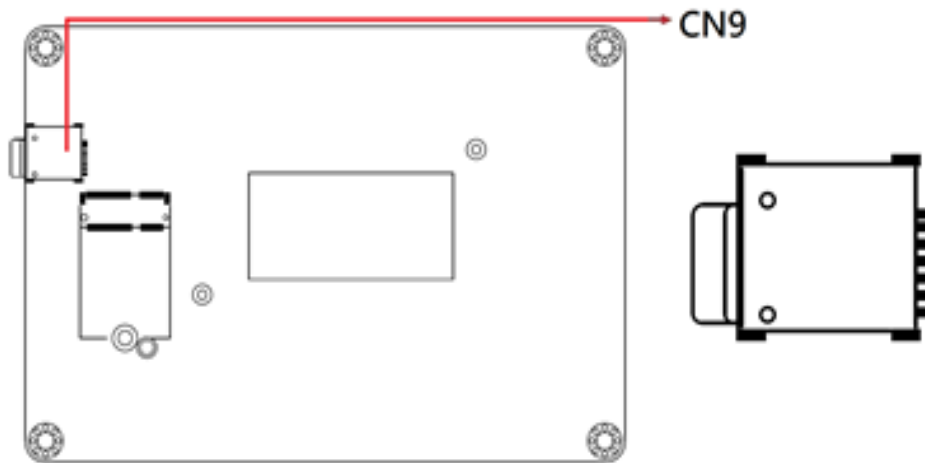

*\*The SIM card slot can be immediately accessed after removing the cover that is holding the SSD drive.*


### 2.5.9 J2: LVDS Backlight Connector

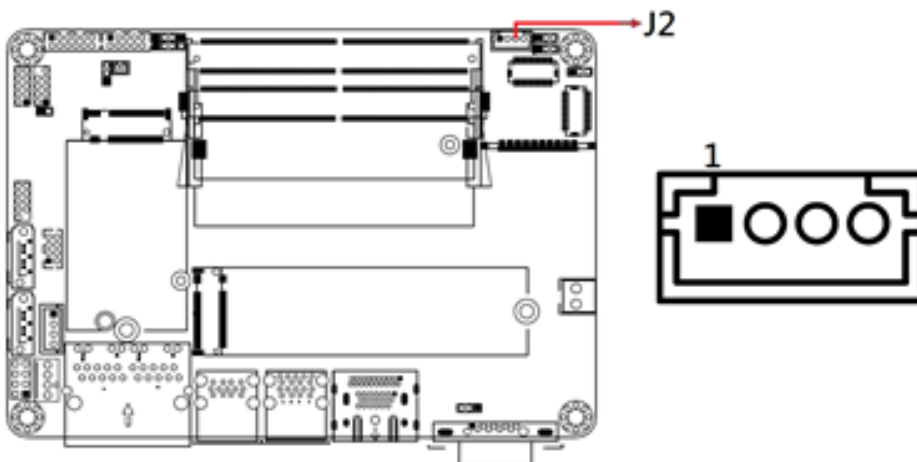

\* E-Call\_0110-161-040

| Pin | Assignment         |
|-----|--------------------|
| 1   | +12V               |
| 2   | Backlight Enable   |
| 3   | Brightness Control |
| 4   | GND                |


### 2.5.10 J3: Audio Connector

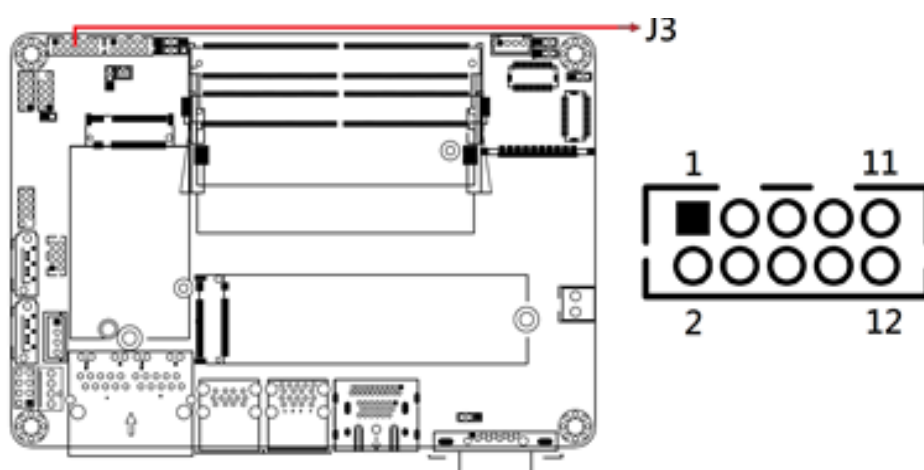

\* HK\_DF11-12S-PA66H


| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | LINE OUT_L | 2   | LINE OUT_R |
| 3   | FRONT_JD   | 4   | GND        |
| 5   | LINE IN_L  | 6   | LINE IN_R  |
| 7   | LINE_JD    | 8   | GND        |
| 9   | MIC_L      | 10  | MIC_R      |
| 11  | MIC_JD     | 12  | GND        |

2.5.11 J4: COM2 Port

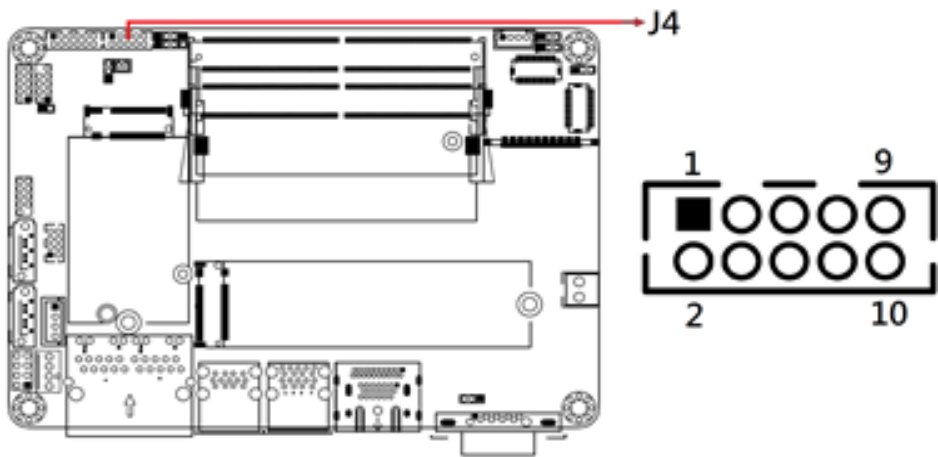


| Pin | Assignment |        |        |
|-----|------------|--------|--------|
|     | RS-232     | RS-422 | RS-485 |
| 1   | DCD        | TX-    | DATA-  |
| 2   | RX         | TX+    | DATA+  |
| 3   | TX         | RX+    | NC     |
| 4   | DTR        | RX-    | NC     |
| 5   | Ground     | Ground | Ground |
| 6   | DSR        | NC     | NC     |
| 7   | RTS        | NC     | NC     |
| 8   | CTS        | NC     | NC     |
| 9   | RI         | NC     | NC     |
| 10  | NC         | NC     | NC     |

### 2.5.12 J7: DDR5 SO-DIMM CHA

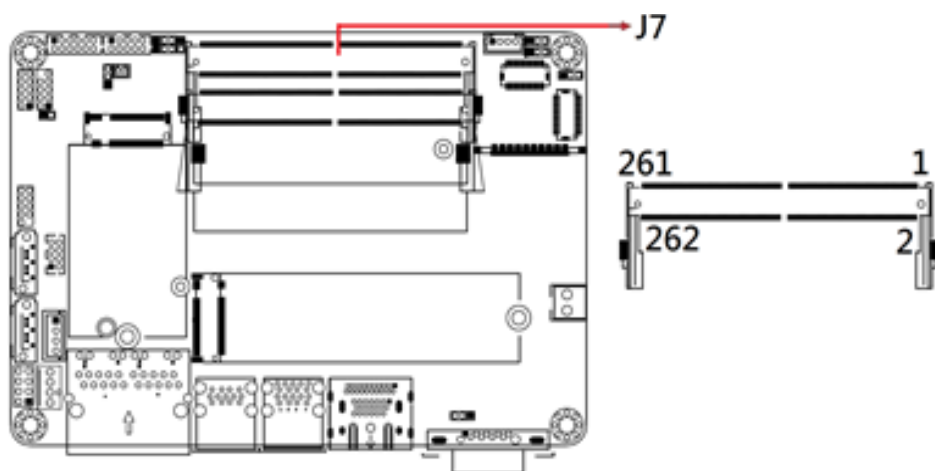


### 2.5.13 J8: Battery Connector

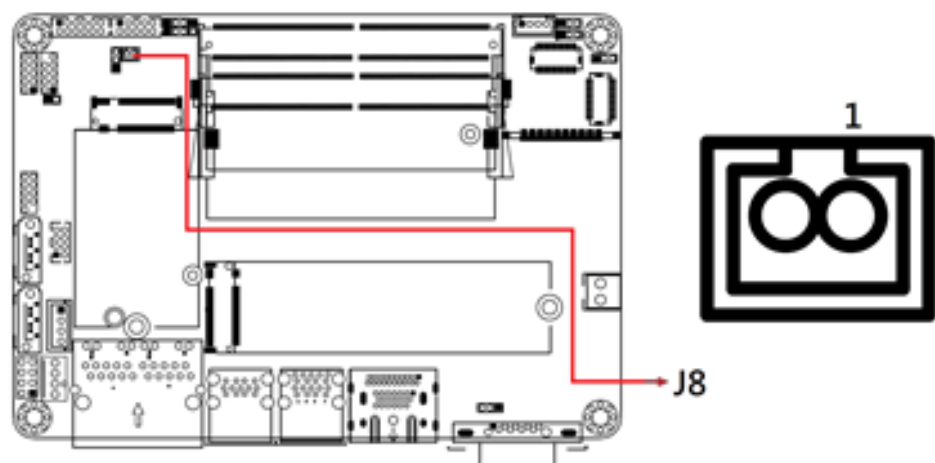



### 2.5.14 J9, J13: LVDS CH-B / CH-A

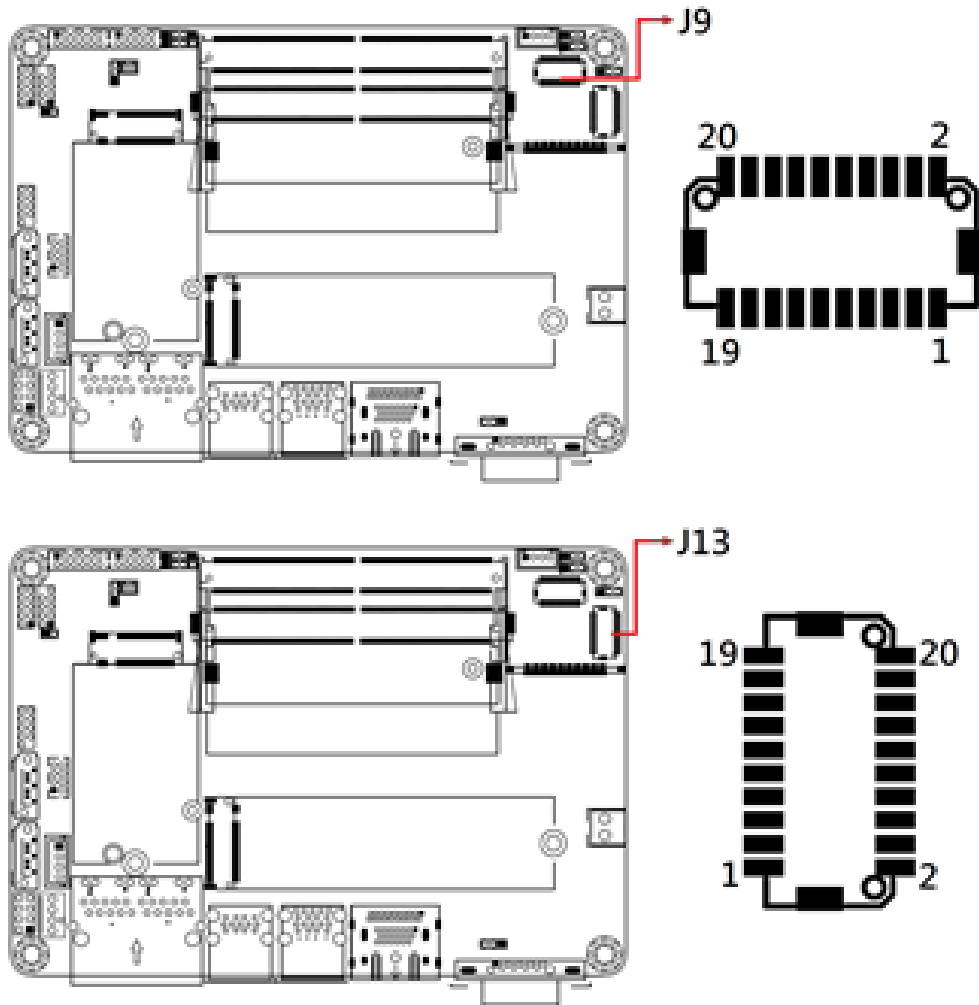


Hirose\_DF20G-20DP-1V(56)

| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | TX0P       | 2   | TX0N       |
| 3   | GND        | 4   | GND        |
| 5   | TX1P       | 6   | TX1N       |
| 7   | GND        | 8   | GND        |
| 9   | TX2P       | 10  | TX2N       |
| 11  | GND        | 12  | GND        |
| 13  | CLKP       | 14  | CLKN       |
| 15  | GND        | 16  | GND        |
| 17  | TX3P       | 18  | TX3N       |
| 19  | +3.3V      | 20  | +3.3V      |

\*

### 2.5.15 J10: Digital I/O (4in, 4out)

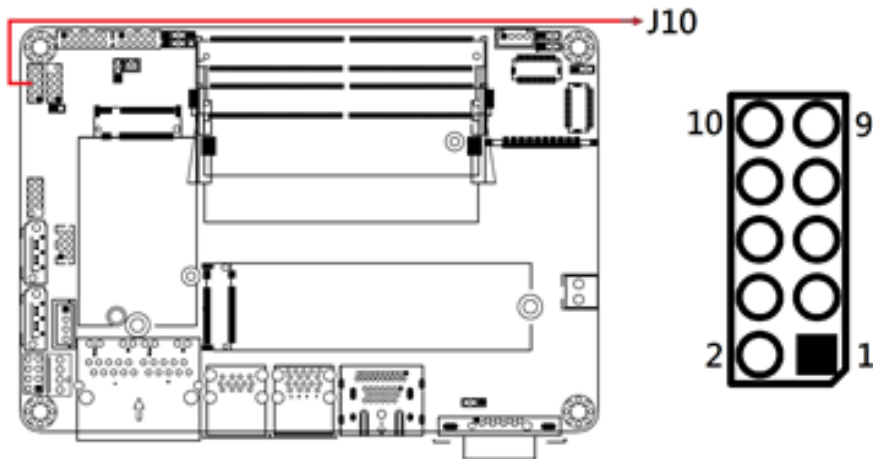


\* E-Call\_0196-01-200-100


| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | Ground     | 2   | +5V        |
| 3   | Out3       | 4   | Out1       |
| 5   | Out2       | 6   | Out0       |
| 7   | IN3        | 8   | IN1        |
| 9   | IN2        | 10  | IN0        |

### 2.5.16 J11: eSPI Debug (Factory Use Only)

### 2.5.17 J12: DDR5 SO-DIMM CHB

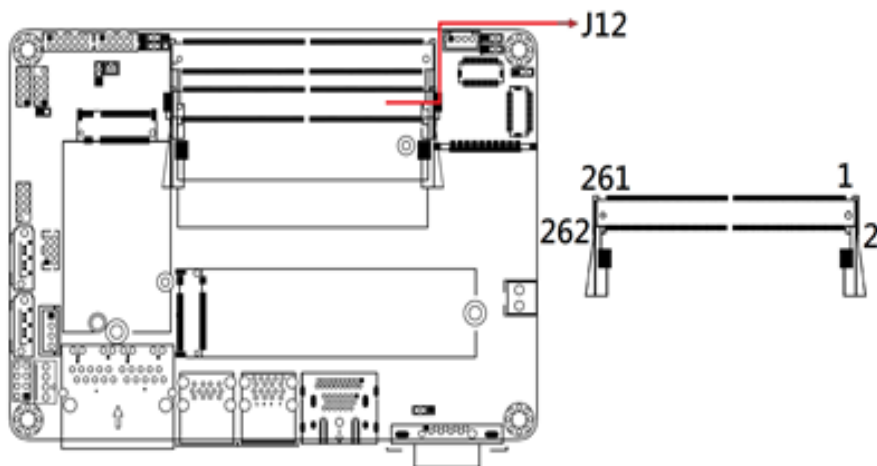


### 2.5.18 J14: M.2 B-Key 3052

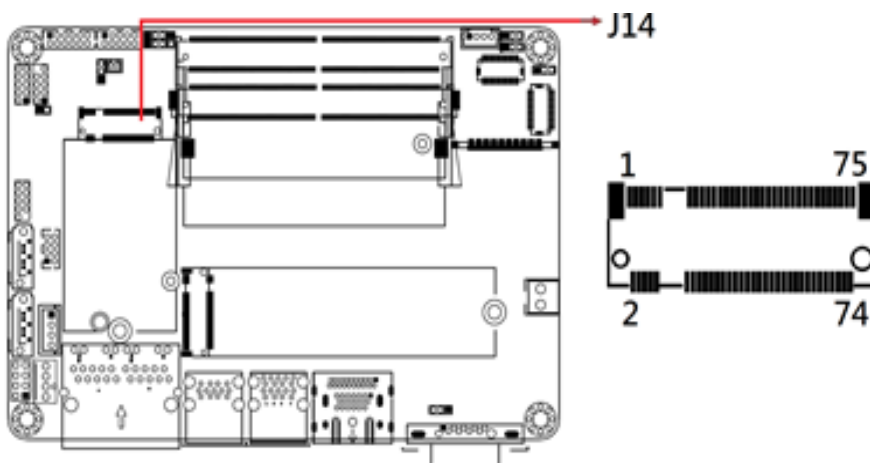

### 2.5.19 J15: SPI Flash Connector (Factory use only)


### 2.5.20 J16: USB2 #5/#6

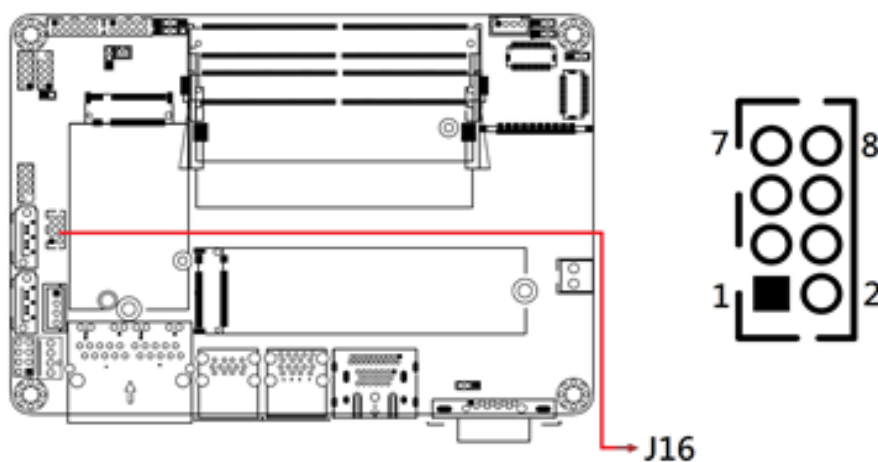

\* HK\_DF11-8S-PA66H

| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | +5V        | 2   | GND        |
| 3   | USB_PN     | 4   | USB_PP     |
| 5   | USB_PP     | 6   | USB_PN     |
| 7   | GND        | 8   | +5V        |


### 2.5.21 J17: DC-In Connector (12V-24V)

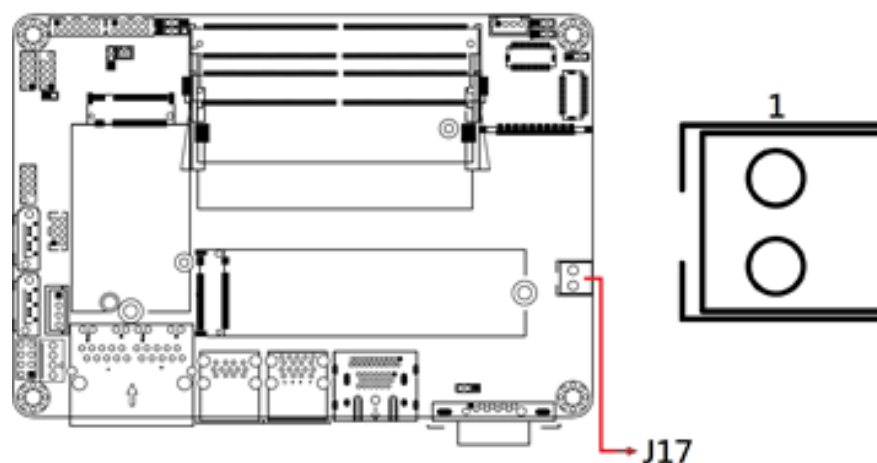


\* HK\_WAFER396-2S-WV

| Pin | Assignment |
|-----|------------|
| 1   | DC_IN      |
| 2   | GND        |

### 2.5.22 J18: M.2 M-Key 2280

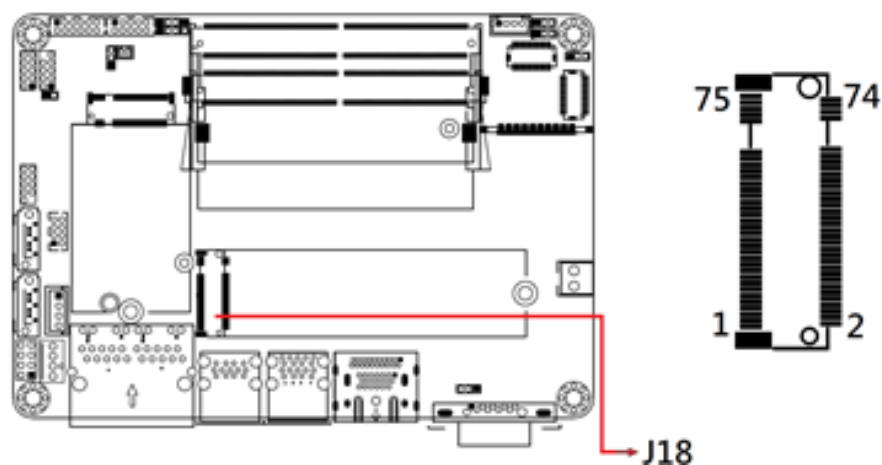


### 2.5.23 J19: SATA Power Connector

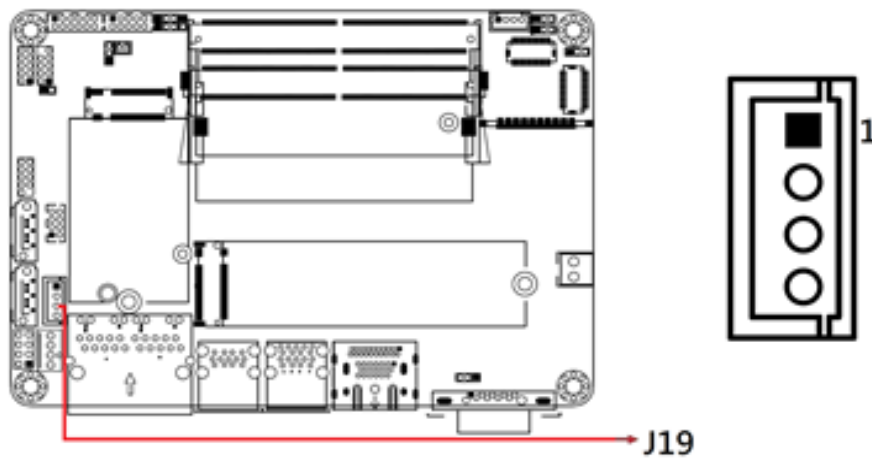

\* E-Call\_0110-071-040

| Pin | Assignment |
|-----|------------|
| 1   | +5V        |
| 2   | GND        |
| 3   | GND        |
| 4   | NC         |

## 2.5.24 J20: Front Panel Connector

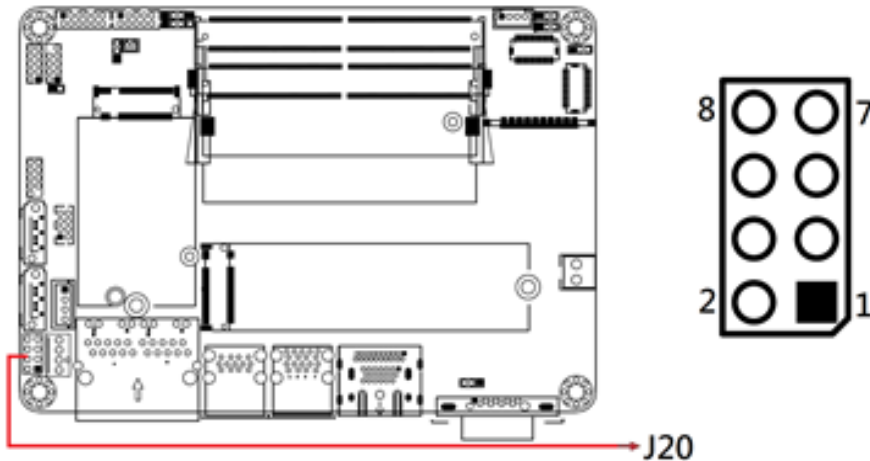

\* E-Call\_0126-01-203-080


| Pin | Assignment | Pin | Assignment |
|-----|------------|-----|------------|
| 1   | Power BTN  | 2   | Power BTN  |
| 3   | HDD LED+   | 4   | HDD LED-   |
| 5   | Reset BTN  | 6   | Reset BTN  |
| 7   | Power LED+ | 8   | Power LED- |

This connector provides interfaces for the following functions.


- ATX Power ON Switch (Pins 1 and 2)**  
 The 2 pins make an "ATX Power Supply On/Off Switch" for the system that connects to the power switch on the case. When pressed, the power switch will force the system to power on. When pressed again, it will power off the system.
- Hard Disk Drive LED Connector (Pins 3 and 4)**  
 This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.
- Reset Switch (Pins 5 and 6)**  
 The reset switch allows you to reset the system without turning the main power switch off and then on again. Orientation is not required when making a connection to this header.
- Power LED: Pins 7 and 8**  
 This connector connects to the system power LED on control panel. This LED will light when the system turns on.




### 2.5.25 J21: PWM programming (Factory use only)

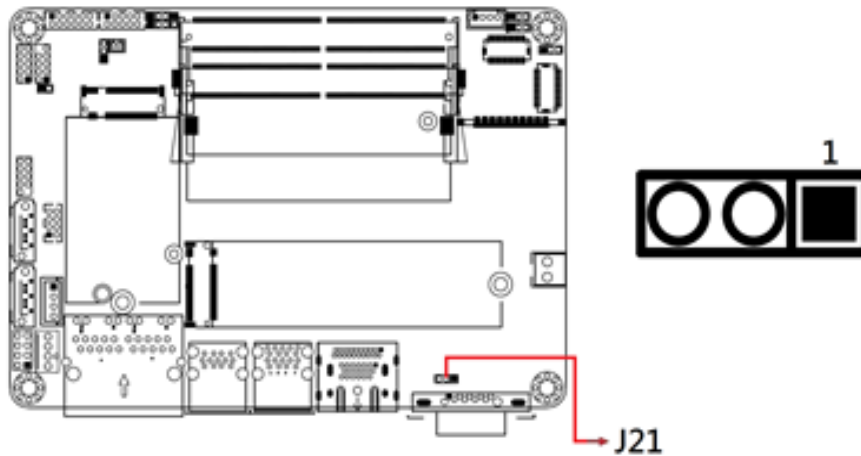

### 2.5.26 J22: M.2 E-Key 2230 W/CNVI

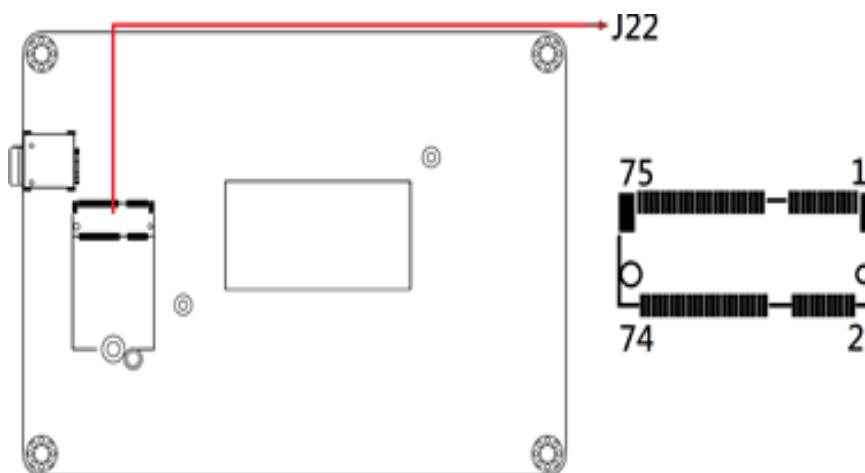

### 2.5.27 CPU\_FAN1: CPU Fan Power Connector

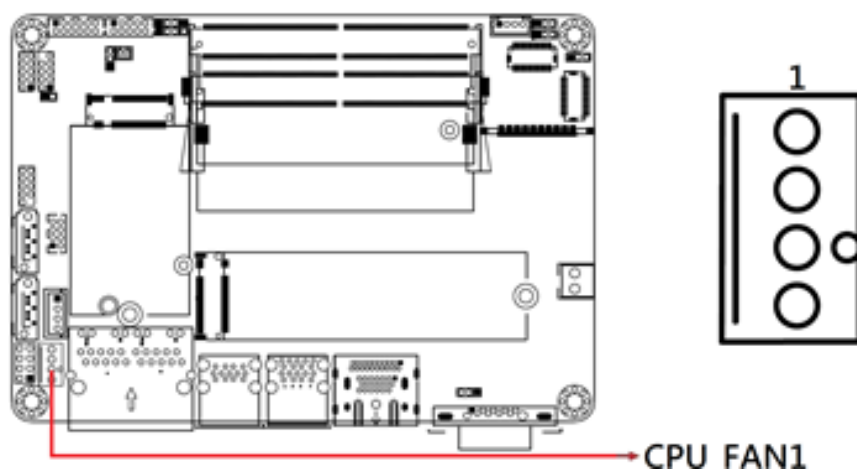

\* PWM Only

| Pin | Assignment         |
|-----|--------------------|
| 1   | Ground             |
| 2   | +12V               |
| 3   | Rotation detection |
| 4   | Control            |



## Chapter 3

# Driver Installation

The information provided in this chapter includes:

- Intel® Chipset Software Installation Utility
- HDD Graphics Drivers
- Smartsound Drivers
- HD Audio Drivers
- LAN Drivers
- Intel® ME Drivers
- Intel® Serial I/O Drivers
- Intel® PMT Drivers
- Intel® NPU IO Drivers

### 3.1 Introduction

This section describes the installation procedures for software and drivers. Go to the download page of the product. Copy the compressed drivers file to your computer. Double click the file to decompress it. Run “CDGuide” to go to the main drivers page as shown.

---

**Note:** After installing your Windows operating system, you must install the Intel® Chipset Software Installation Utility first before proceeding with the drivers installation.

---

### 3.2 Intel® Chipset Software Installation Utility

The Intel® Chipset drivers should be installed first before the software drivers to install INF files for Plug & Play function for Intel chipset components. Follow the instructions below to complete the installation.


1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) Chipset Software Installation Utility**.



3. When the *Welcome* screen to the Intel® Chipset Device Software appears, click **Next** to continue.
4. Accept the terms in the software license agreement.
5. On the *Readme File Information* screen, click **Install**.

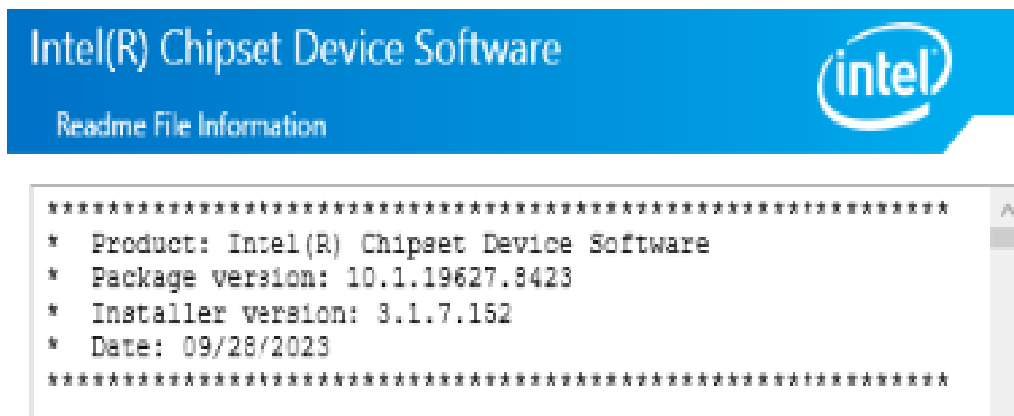

6. After completing the installation, click **Finish** to complete the setup process.

### 3.3 VGA Driver Installation

1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane.




2. Click **Intel(R) HD Graphics Driver**.




3. Click **Begin installation**.



- Click **I agree** in the INTEL SOFTWARE LICENSE AGREEMENT screen.

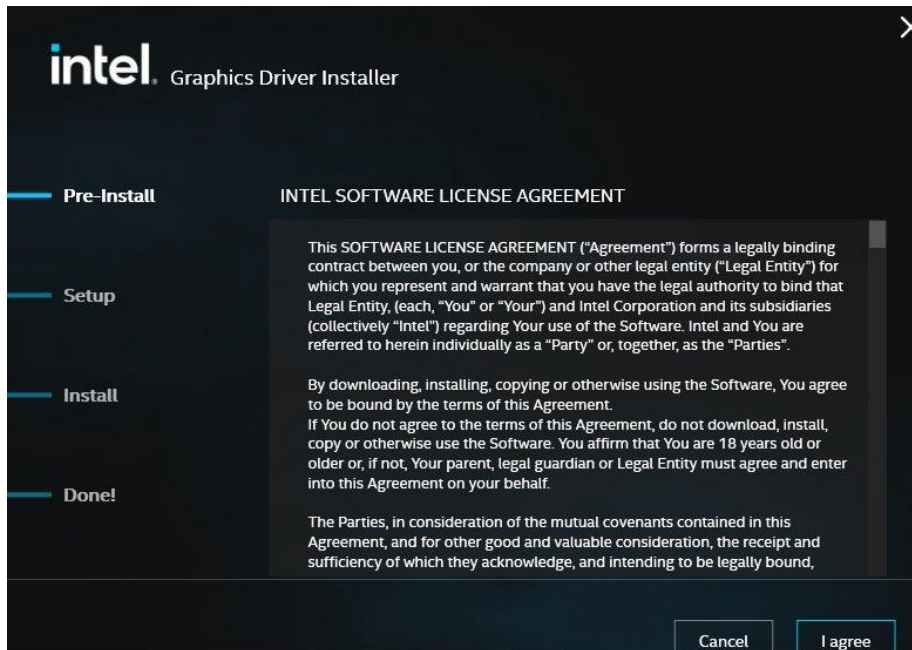

- Click **Start** for the installer to install the following components:
  - Intel Graphics Driver
  - Intel Graphics Command Center
- When installation has been completed, click **Finish**.

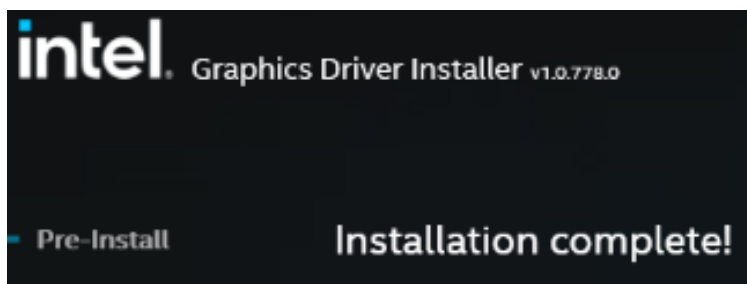

### 3.4 Intel(R) Smartsound Drivers Installation

1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane. Click **Intel(R) Smartsound Drivers** on the right page.



2. Run the file in the path shown below for the InstallShield Wizard to start and complete the installation of the Intel Smartsound drivers. When installation has been completed, press any key to continue.





### 3.5 HD Audio Driver Installation


1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane. Click **Realtek Audio Drivers**.



2. Click **Realtek Audio DCH Drivers**.



3. Click **Next** when the Welcome to the InstallShield Wizard for Realtek Audio Driver screen appears. After the Installshield Wizard has completed the installation, restart the computer.

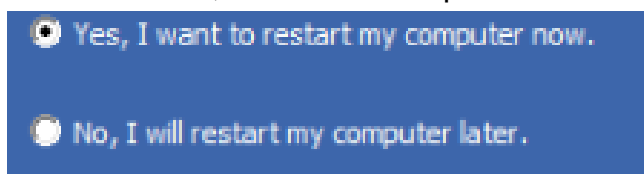

### 3.6 LAN Driver Installation


1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) PRO LAN Network Drivers**.



3. On the *Intel® Network Connections* screen, click **Install Drivers and Software**.
4. When the Welcome to the install wizard for Intel(R) Network Connections screen appears, click **Next**.
5. Accept the terms in the software license agreement and click **Next**.
6. On the *Setup Options* screen, click the checkbox to select the desired driver(s) for installation. Then click **Next** to continue.

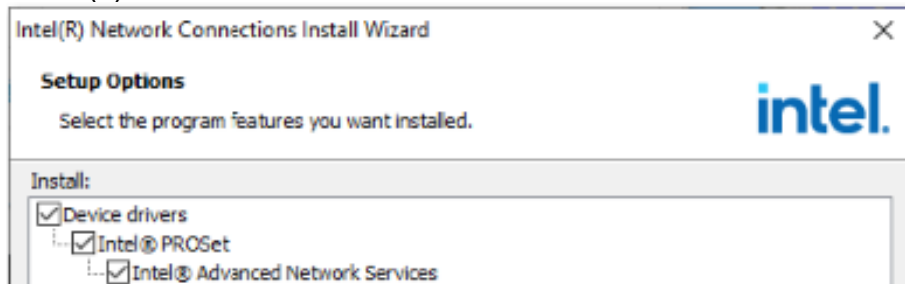

7. On the *Ready to Install the Program* screen, click **Install** to begin the installation. When the Install wizard has completed the installation, click **Finish**.
8. On the *Ready to Install the Program* screen, click **Install** to begin the installation. When the Install wizard has completed, click **Finish**.



### 3.7 Intel® Management Engine Drivers Installation

1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) ME Drivers**.



3. When the Welcome screen appears, click **Next**.
4. Accept the terms in the license agreement and click **Next**.
5. In the Destination Folder screen, click **Next** to install to the default folder, or click Change to choose another destination folder.
6. After Intel Management Engine Components have been successfully installed, click **Finish**.

You have successfully installed the following components:

- Intel® Management Engine Interface
- Serial Over LAN
- Intel® Wireless Manageability Driver
- Local Management Service
- Intel® Trusted Connect Service

### 3.8 Intel® Serial IO Drivers Installation


1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) Serial IO Drivers**.



3. When the Welcome screen appears, click **Next**.
4. Accept the terms in the license agreement and click **Next**.
5. In both the Readme File Information and Confirmation screens, click **Next**. When you successfully finished the installation, click **Finish**.

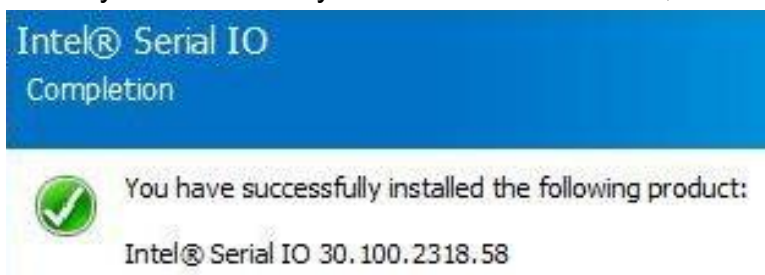

### 3.9 Intel® PMT Drivers Installation

1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) PMT Drivers**.



3. Run the file in the path shown below for the InstallShield Wizard to start and complete the installation of the Intel PMT drivers. When installation has been completed, press any key to continue.



### 3.10 Intel® NPU IO Drivers Installation

1. Click **Intel** on the left pane and then **Intel(R) Meteor Lake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) NPU IO Drivers**.



3. Run the file in the path shown below for the InstallShield Wizard to start and complete the installation of the drivers. When installation has been completed, press any key to continue.



## Chapter 4

# BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

- Main Settings
- Advanced Settings
- Security Settings
- Boot Settings
- Save & Exit



## 4.1 Introduction

The BIOS (Basic Input/Output System) installed in the ROM of your computer system supports Intel® processors. The BIOS provides critical low-level support for standard devices such as disk drives, serial ports and parallel ports. It also provides password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

## 4.2 BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Press the <Del> key immediately allows you to enter the Setup utility. If you are a little bit late pressing the <Del> key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup.

If you still need to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again.

The following message will appear on the screen:

```
Press <DEL> to Enter Setup
```

In general, press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help, and <Esc> to quit.

When you enter the BIOS Setup utility, the *Main Menu* screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

---

**Warning:** It is strongly recommended that you avoid making any changes to the chipset defaults.

These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could make the system unstable and crash in some cases.

---

### 4.3 Main Settings



| BIOS Setting | Description   |
|--------------|---|
| System Date  | Sets the date. Use the <Tab> key to switch between the Date elements. |
| System Time  | Set the time. Use the <Tab> key to switch between the Time elements.  |


## 4.4 Advanced Settings

This section allows you to configure system features according to your preference.





4.4.1 Connectivity Configuration

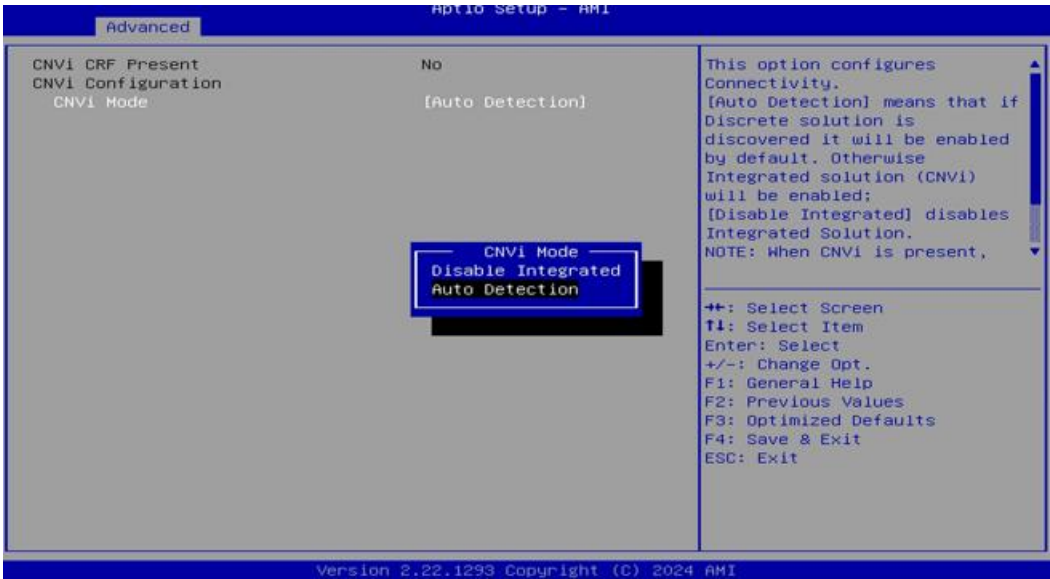

| BIOS Setting | Description  |
|--------------|--|
| CNVi Mode    | <p>This option configures Connectivity.</p> <p><b>Auto Detection</b> – means that if Discrete solution is discovered it will be enabled by default. Otherwise Integrated solution (CNVi) will be enabled;</p> <p><b>Disable Integrated</b> – disables Integrated Solution.</p> |

#### 4.4.2 CPU Configuration




| BIOS Setting                          | Description  |
|---------------------------------------|--|
| Intel (VMX) Virtualization Technology | When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.  |
| Active Performance Cores              | Number of P-cores to enable in each processor package. Note: Number of cores and E-cores are looked at together. When both are (0,0), Pcode will enable all cores. |
| Active Efficient Cores                | Number of E-cores to enable in each processor package. Note: Number of cores and E-cores are looked at together. When both are (0,0), Pcode will enable all cores. |
| Active SOC-North Efficient-cores      | Number of SOC-North Efficient-cores to enable in SOC North   |
| Hyper-Threading                       | Options; Enabled or Disabled   |

### 4.4.3 Power & Performance



| BIOS Setting                 | Description  |
|------------------------------|--|
| Intel Speedstep              | Allows more than two frequency ranges to be supported  |
| Intel Speed Shift Technology | Enable/Disable Intel Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states. |
| Turbo Mode                   | Enable/disable processor turbo mode.   |

4.4.4 System Agent (SA) Configuration

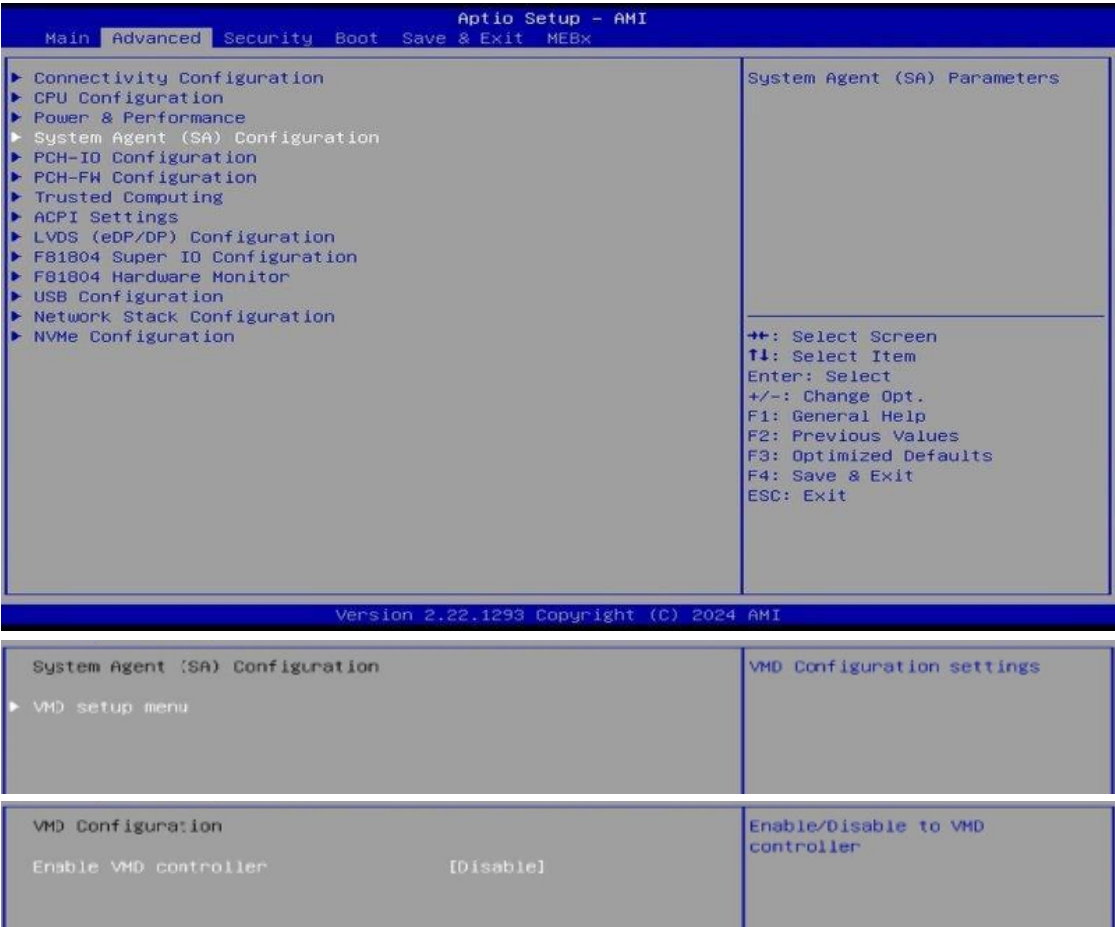

### 4.4.5 PCH-IO Configuration

Advanced

Aptio Setup - AMI

PCH-IO Configuration

SATA Configuration

USB Configuration

Power Failure [Always Off]

SATA Device Options Settings

Advanced

Aptio Setup - AMI

SATA Configuration

SATA Controller(s) [Enabled]

SATA Mode Selection [AHCI]

Serial ATA Port 0 Empty

Software Preserve Unknown

Port 0 [Enabled]

Hot Plug [Disable]

Configured as eSATA Hot Plug supported

Serial ATA Port 1 Empty

Software Preserve Unknown

Port 1 [Enabled]

Hot Plug [Disable]

Configured as eSATA Hot Plug supported

Enable/Disable SATA Device.

→: Select Screen

Advanced

Aptio Setup - AMI

USB Configuration

M.2 B-Key USB3.2 Control [Disable]

M.2 B-Key USB2.0 Control [Disable]

Enable/Disable this USB Physical Connector (physical port). Once disabled, any USB devices plug into the connector will not be detected by BIOS or OS.

Advanced

Aptio Setup - AMI

PCH-IO Configuration

SATA Configuration

USB Configuration


Power Failure [Always Off]

Power Failure


Always On

Always Off

#### 4.4.6 PCH-FW Configuration

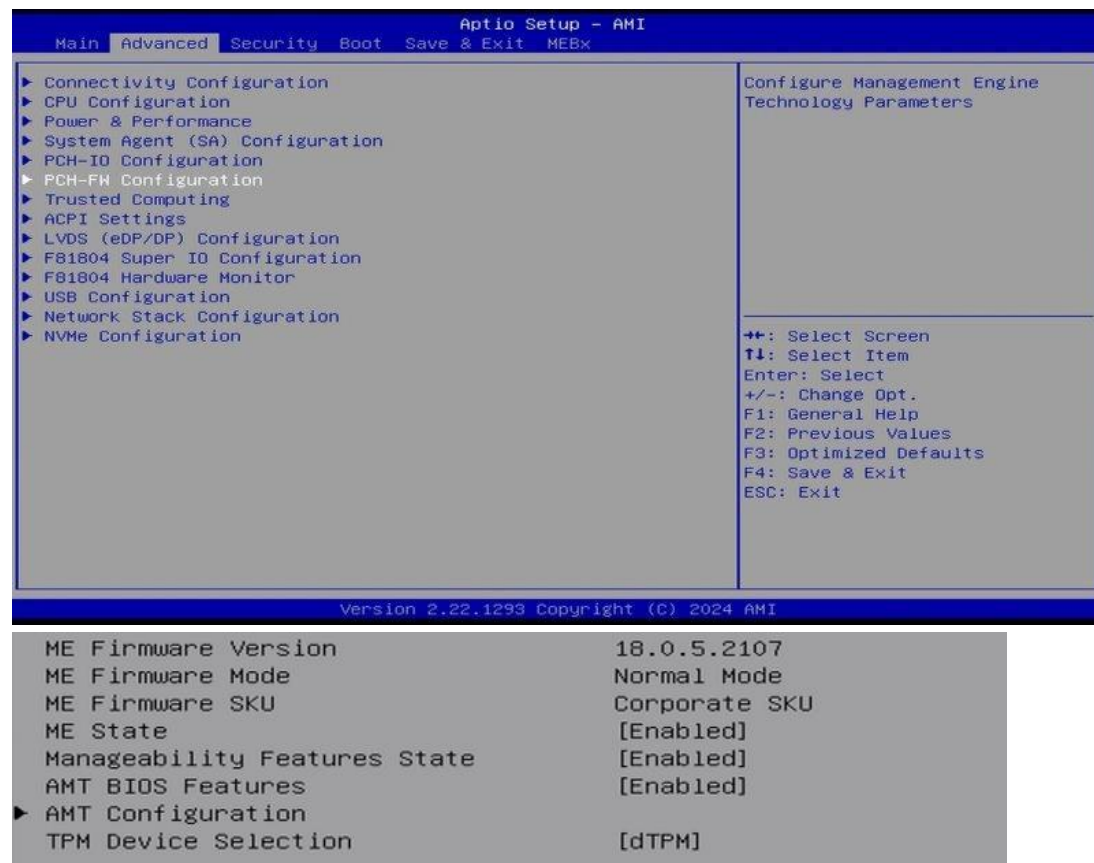

### 4.4.7 Trusted Computing

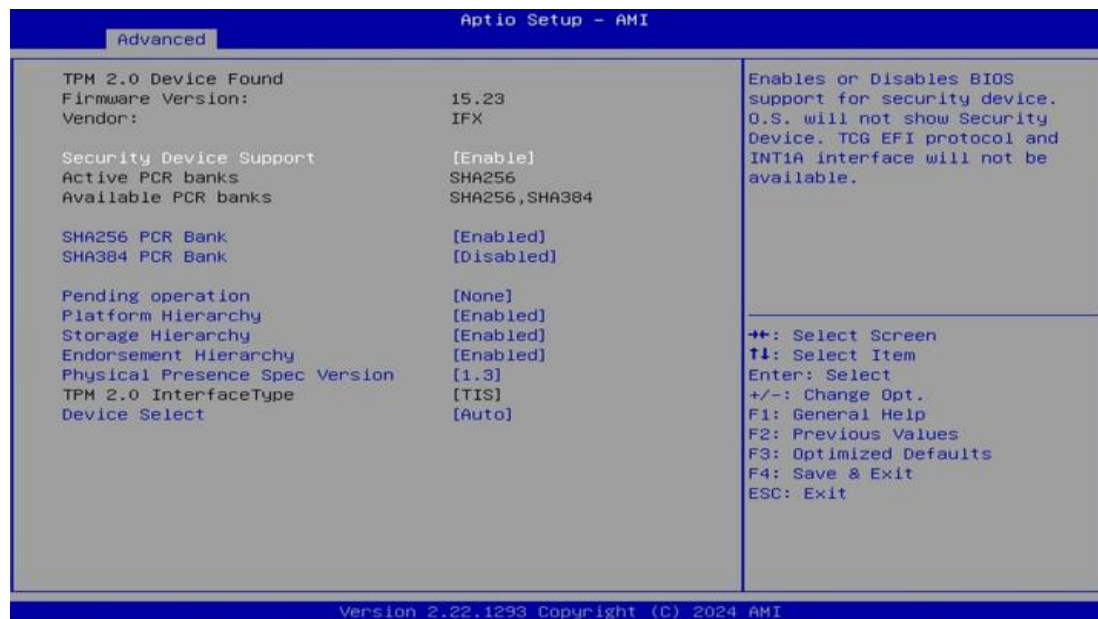

| BIOS Setting                   | Description  |
|--------------------------------|--|
| Security Device Support        | Enables / Disables BIOS support for security device. OS will not show security device. TCG EFI protocol and INT1A interface will not be available.   |
| SHA256/384 PCR Bank            | Enables / Disables PCR Bank.   |
| Pending operation              | Schedule an operation for the security device. Note: Your computer will reboot during restart in order to change state of security device.   |
| Platform Hierarchy             | Enables / Disables platform hierarchy.   |
| Storage Hierarchy              | Enables / Disables storage hierarchy.  |
| Endorsement Hierarchy          | Enables / Disables endorsement hierarchy.  |
| Physical Presence Spec Version | Select to tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3.   |
| Device Select                  | TPM 1.2 will restrict support to TPM 1.2 devices. TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated. |


#### 4.4.8 ACPI Settings



| BIOS Setting                   | Description   |
|--------------------------------|---|
| Enable ACPI Auto Configuration | Enables or disables system ability to hibernate (OS/S4 sleep state). This option may not be effective with some operating systems |
| Enable Hibernation             | Enables / Disables the system ability to hibernate (OS/S4 Sleep State). This option may be not effective with some OS.            |



#### 4.4.9 LVDS Configuration

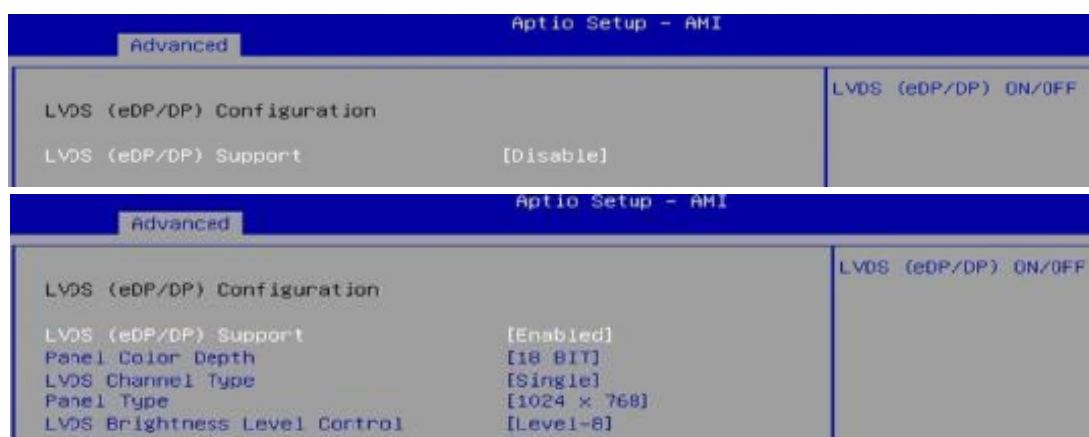

| BIOS Setting                  | Description  |
|-------------------------------|--|
| LVDS (eDP/DP) Support         | LVDS (eDP/DP) ON/OFF   |
| Panel Color Depth             | Selects the panel color depth.<br>Options: 18 bit, 24bit (VESA/JEIDA)  |
| LVDS Channel Type             | Chooses the LVDS as single or dual channel.  |
| Panel Type                    | Panel Type (Resolution) Options: 800 x 480, 800 x 600, 1024 x 768, 1280 x 768, 1280 x 800, 1280 x 960, 1280 x 1024, 1366 x 768, 1440 x 900, 1600 x 900, 1600 x 1200, 1680 x 1050, 1920 x 1080, 1920 x 1200 |
| LVDS Brightness Level Control | Options: Level-1 to Level-8  |

4.4.10 F81804 Super IO Configuration

| BIOS Setting               |   |
|----------------------------|---|
| Description                |   |
| Serial Ports Configuration | Sets parameters of serial ports.<br>Enables / Disables the serial port and select an optimal setting for the Super IO device. |


Serial Port 1 Configuration



Serial Port 2 Configuration




#### 4.4.11 F81804 Hardware Monitor

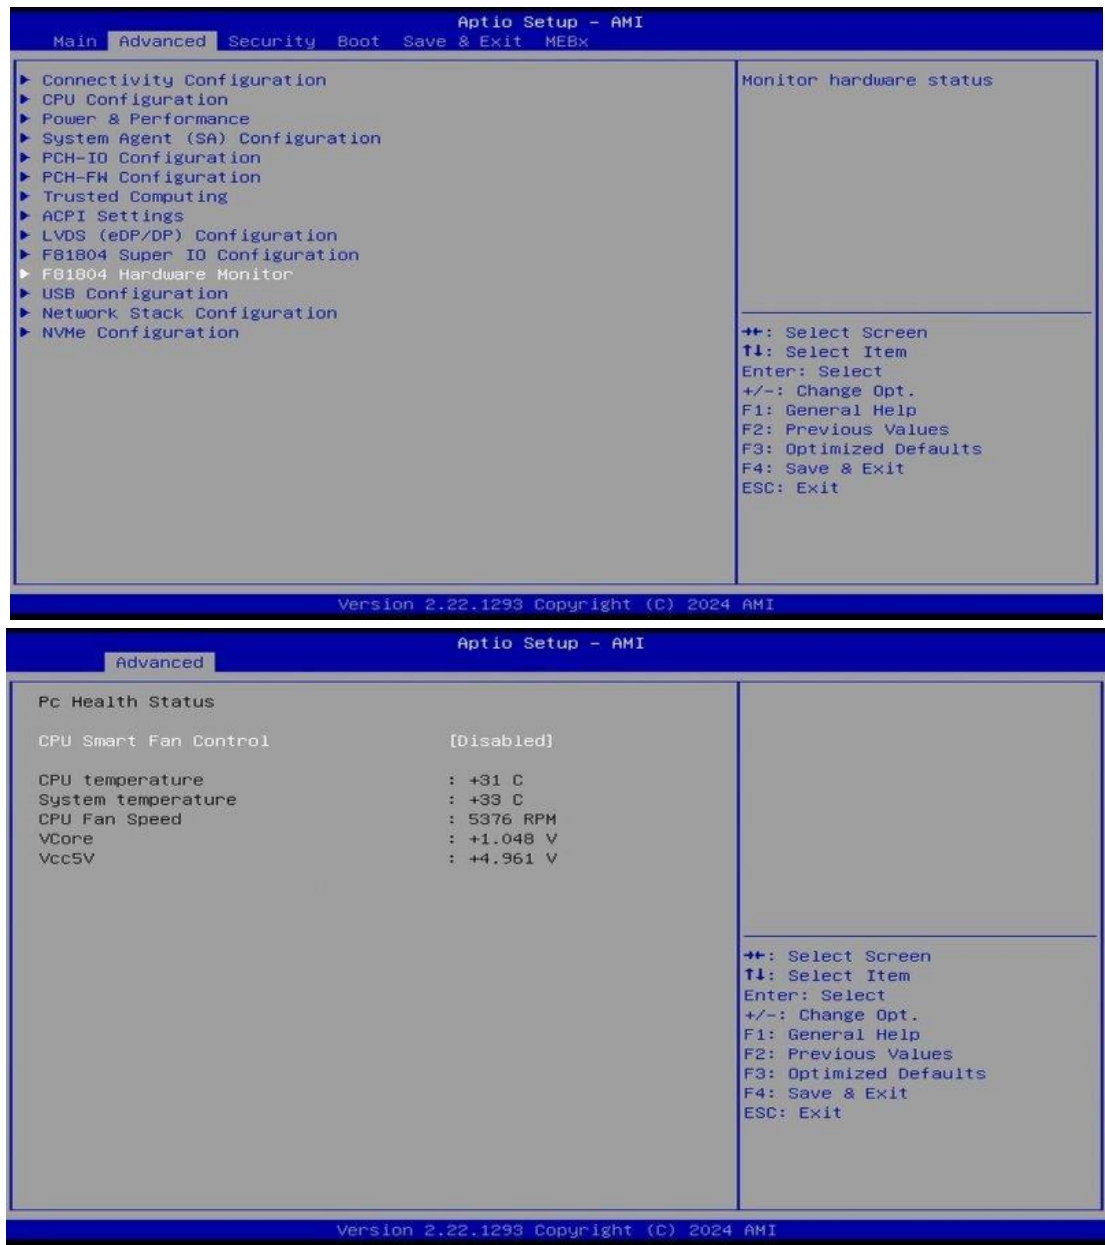

| BIOS Setting            | Description   |
|-------------------------|---|
| CPU Smart Fan Control   | Options include Disabled, 50°C, 60°C, 70°C and 80°C.  |
| Temperatures / Voltages | These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status. |

## 4.4.12 USB Configuration

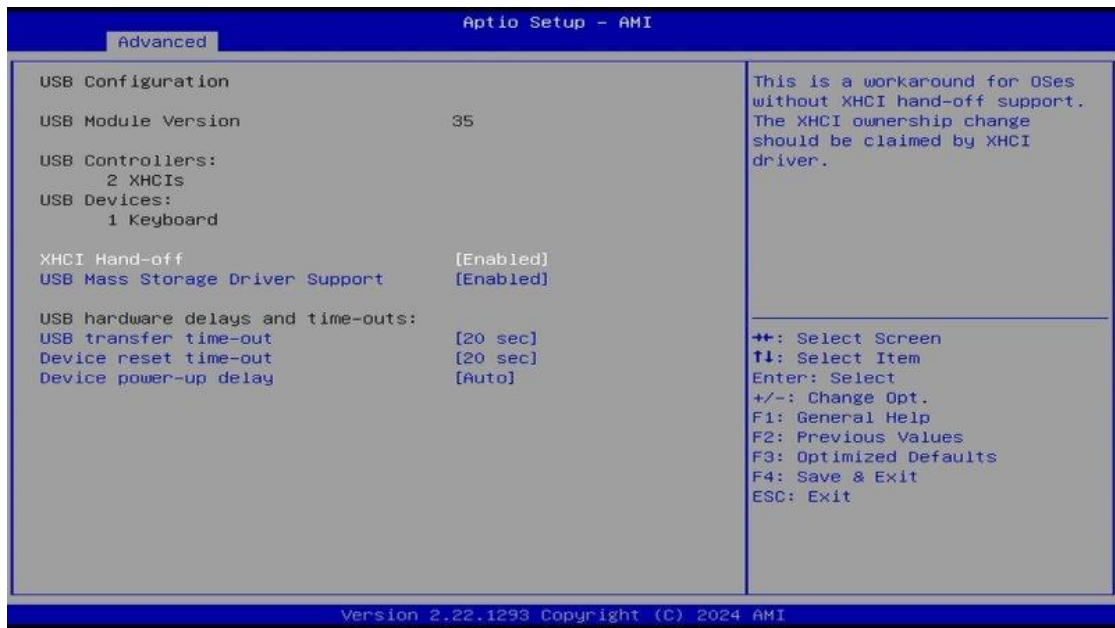

| BIOS Setting                    | Description   |
|---------------------------------|---|
| XHCI Hand-off                   | This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.  |
| USB Mass Storage Driver Support | Enables / Disables the support for USB mass storage driver.   |
| USB Transfer time-out           | The time-out value (1 / 5 10 / 20 secs) for Control, Bulk, and Interrupt transfers.   |
| Device reset time-out           | Gives seconds (10 / 20 / 30 / 40 secs) to delay execution of Start Unit command to USB mass storage device.   |
| Device power-up delay           | Max.time the device will take before it properly reports itself to the Host Controller. ' <b>Auto</b> ' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor. |

#### 4.4.13 Network Stack Configuration





| BIOS Setting       |              | Description  |
|--------------------|--------------|--|
| Network Stack      |              | Enable/Disable UEFI Network Stack  |
| IPv4               | PXE Support  | If disabled, IPv4 PXE boot support will not be available.  |
| IPv4               | HTTP Support | If disabled, IPv4 HTTP boot support will not be available.   |
| IPv6               | PXE Support  | If disabled, IPv6 PXE boot support will not be available.  |
| IPv6               | HTTP Support | If disabled, IPv6 HTTP boot support will not be available.   |
| PXE boot wait time |              | Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value |
| Media detect count |              | Number of times the presence of media will be checked. Use either +/- numeric keys to set the value.         |

#### 4.4.14 NVMe Configuration




## 4.5 Security Settings

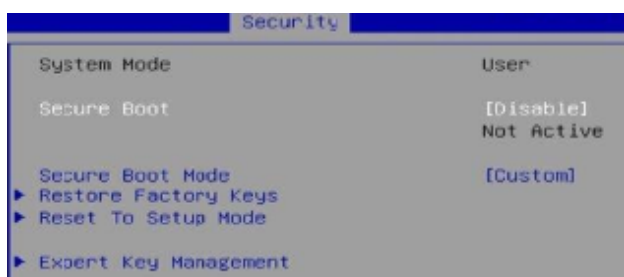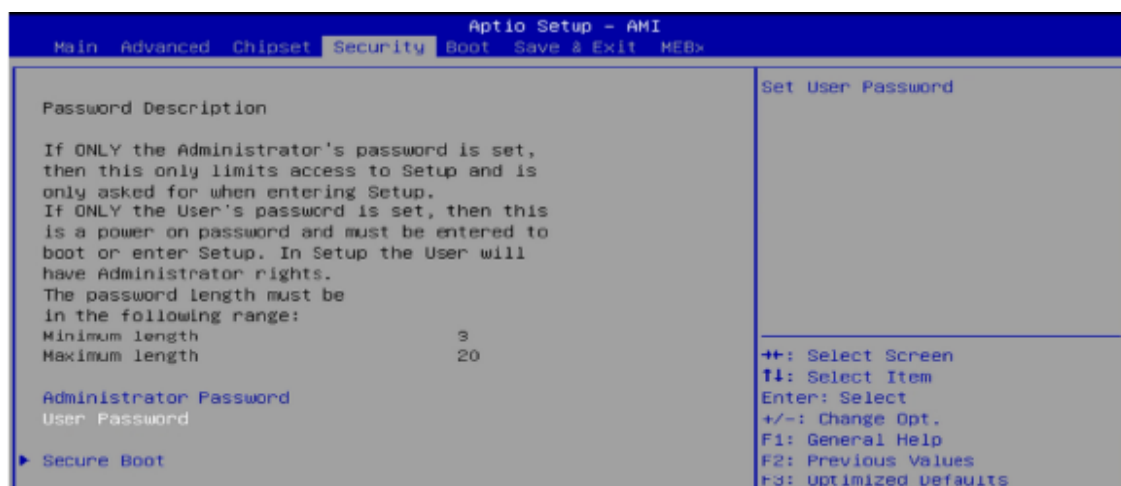

| BIOS Setting                 | Description  |
|------------------------------|--|
| Setup Administrator Password | Sets an administrator password for the setup utility.  |
| User Password                | Sets a user password.  |
| Secure Boot                  | Secure Boot feature is Active if Secure Boot is enabled. Platform Key(PK) is enrolled and the system is in user mode. The mode change requires platform reset.               |
| Secure Boot Mode             | Secure Boot mode options:<br>Standard or Custom.<br>In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication. |
| Restore Factory Keys         | Forces system to user mode. Install factory default Secure Boot key databases.   |
| Reset to Setup Mode          | Delete all Secure Boot key databases from NVRAM  |
| Expert Key Management        | Enables expert users to modify Secure Boot Policy variables without variable authentication.   |


## 4.6 Boot Settings

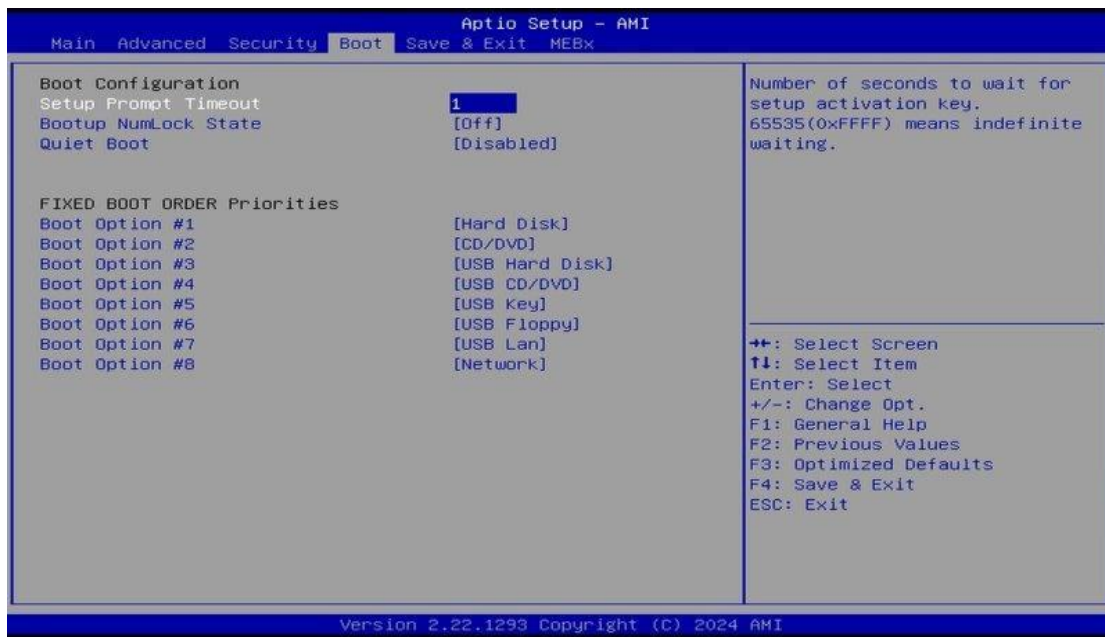

| BIOS Setting                | Description  |
|-----------------------------|--|
| Setup Prompt Timeout        | Number of seconds to wait for setup activation key. 65535 (0xFFFF) means indefinite waiting. |
| Bootup NumLock State        | Selects the keyboard NumLock state.  |
| Quiet Boot                  | Enables / Disables Quiet Boot option.  |
| FIXED BOOT ORDER Priorities | Sets the system boot order.  |



## 4.7 Save & Exit Settings

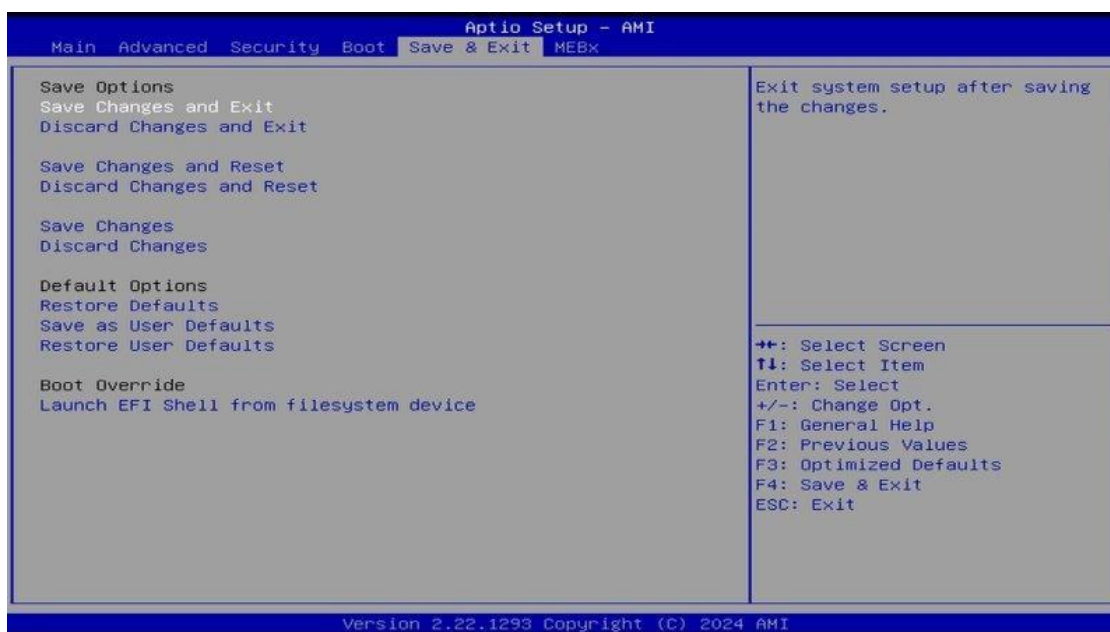

| BIOS Setting                            | Description  |
|---|--|
| Save Changes and Exit                   | Exits system setup after saving the changes.   |
| Discard Changes and Exit                | Exits system setup without saving any changes.   |
| Save Changes and Reset                  | Resets the system after saving the changes.  |
| Discard Changes and Reset               | Resets system setup without saving any changes.  |
| Save Changes                            | Saves changes done so far to any of the setup options.   |
| Discard Changes                         | Discards changes done so far to any of the setup options.  |
| Restore Defaults                        | Restores / Loads defaults values for all the setup options.  |
| Save as User Defaults                   | Saves the changes done so far as User Defaults.  |
| Restore User Defaults                   | Restores the user defaults to all the setup options.   |
| Launch EFI Shell from filesystem device | Attempts to launch EFI shell application (Shell.efi) from one of the available filesystem devices. |

## Appendix

This section provides the mapping addresses of peripheral devices and the sample code of watchdog timer configuration.

## A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

| Address               | Device Description                |
|-----------------------|-----------------------------------|
| 0x0000EFA0-0x0000EFBF | SM Bus Controller                 |
| 0x00000A00-0x00000A0F | Motherboard resources             |
| 0x00000A10-0x00000A1F | Motherboard resources             |
| 0x00000290-0x0000029F | Motherboard resources             |
| 0x0000002E-0x0000002F | Motherboard resources             |
| 0x0000004E-0x0000004F | Motherboard resources             |
| 0x00000061-0x00000061 | Motherboard resources             |
| 0x00000063-0x00000063 | Motherboard resources             |
| 0x00000065-0x00000065 | Motherboard resources             |
| 0x00000067-0x00000067 | Motherboard resources             |
| 0x00000070-0x00000070 | Motherboard resources             |
| 0x00000080-0x00000080 | Motherboard resources             |
| 0x00000092-0x00000092 | Motherboard resources             |
| 0x000000B2-0x000000B3 | Motherboard resources             |
| 0x00000680-0x0000069F | Motherboard resources             |
| 0x0000164E-0x0000164F | Motherboard resources             |
| 0x00000020-0x00000021 | Programmable interrupt controller |
| 0x00000024-0x00000025 | Programmable interrupt controller |
| 0x00000028-0x00000029 | Programmable interrupt controller |
| 0x0000002C-0x0000002D | Programmable interrupt controller |
| 0x00000030-0x00000031 | Programmable interrupt controller |
| 0x00000034-0x00000035 | Programmable interrupt controller |
| 0x00000038-0x00000039 | Programmable interrupt controller |
| 0x0000003C-0x0000003D | Programmable interrupt controller |
| 0x000000A0-0x000000A1 | Programmable interrupt controller |
| 0x000000A4-0x000000A5 | Programmable interrupt controller |
| 0x000000A8-0x000000A9 | Programmable interrupt controller |
| 0x000000AC-0x000000AD | Programmable interrupt controller |
| 0x000000B0-0x000000B1 | Programmable interrupt controller |
| 0x000000B4-0x000000B5 | Programmable interrupt controller |
| 0x000000B8-0x000000B9 | Programmable interrupt controller |
| 0x000000BC-0x000000BD | Programmable interrupt controller |
| 0x000004D0-0x000004D1 | Programmable interrupt controller |
| 0x00003050-0x00003057 | Standard SATA AHCI Controller     |
| 0x00003040-0x00003043 | Standard SATA AHCI Controller     |
| 0x00003020-0x0000303F | Standard SATA AHCI Controller     |

| Address               | Device Description                                  |
|-----------------------|---|
| 0x000003F8-0x000003FF | Communications Port (COM1)                          |
| 0x000002F8-0x000002FF | Communications Port (COM2)                          |
| 0x00000000-0x00000CF7 | PCI Express Root Complex                            |
| 0x00000D00-0x0000FFFF | PCI Express Root Complex                            |
| 0x00000040-0x00000043 | System timer  |
| 0x00000050-0x00000053 | System timer  |
| 0x0000FFF8-0x0000FFFF | Intel(R) Active Management Technology - SOL (COM11) |
| 0x00002000-0x000020FE | Motherboard resources                               |
| 0x00001854-0x00001857 | Motherboard resources                               |

## B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

| Level             | Function  |
|-------------------|---|
| IRQ 4294967289~77 | Intel(R) Ethernet Controller I226-LM #2                         |
| IRQ 4             | Communications Port (COM1)                                      |
| IRQ 3             | Communications Port (COM2)                                      |
| IRQ 4294967291    | Intel(R) USB 3.20 eXtensible Host Controller - 1.20 (Microsoft) |
| IRQ 4294967293    | PCI Express Root Port   |
| IRQ 55-204        | Microsoft ACPI-Compliant System                                 |
| IRQ 256-511       | Microsoft ACPI-Compliant System                                 |
| IRQ 19            | Intel(R) Active Management Technology - SOL (COM11)             |
| IRQ 4294967290    | Intel(R) USB 3.20 eXtensible Host Controller - 1.20 (Microsoft) |
| IRQ 4294967263    | Intel(R) Management Engine Interface #1                         |
| IRQ 16            | High Definition Audio Controller                                |
| IRQ 4294967294    | PCI Express Root Port   |
| IRQ 4294967276    | Intel(R) Ethernet Controller I226-V #2                          |

## C. Watchdog Timer Configuration

The Watchdog Timer (WDT) is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven.

Under normal circumstance, you will need to restart the WDT at regular intervals before the timer counts to zero.

### Sample Code:

```
//-----  
//  
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY  
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE  
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A  
// PARTICULAR  
// PURPOSE.  
//  
//-----  
#include <dos.h>  
#include <conio.h>  
#include <stdio.h>  
#include <stdlib.h>  
#include "F81804.H"  
//-----  
int main (int argc, char *argv[]);  
void EnableWDT(int);  
void DisableWDT(void);  
//-----  
int main (int argc, char *argv[])  
{  
    unsigned char bBuf;  
    unsigned char bTime;  
    char **endptr;  
  
    char SIO;  
  
    printf("Fintek 81866 watch dog program\n");  
    SIO = Init_ F81804();  
    if (SIO == 0)  
    {  
        printf("Can not detect Fintek 81866, program abort.\n");  
        return(1);  
    }  
    if (SIO == 0)  
  
    if (argc != 2)  
    {  
        printf(" Parameter incorrect!!\n");  
        return (1);  
    }  
}
```

```

    }

    bTime = strtol (argv[1], endptr, 10);
    printf("System will reset after %d seconds\n", bTime);

    if (bTime)
    { EnableWDT(bTime); }
    else
    { DisableWDT(); }
    return 0;
}
//-----
void EnableWDT(int interval)
{
    unsigned char bBuf;

    bBuf = Get_F81804_Reg(0x2B);
    bBuf &= (~0x20);
    Set_F81804_Reg(0x2B, bBuf); //Enable WDTO

    Set_F81804_LD(0x07);          //switch to logic device 7
    Set_F81804_Reg(0x30, 0x01); //enable timer

    bBuf = Get_F81804_Reg(0xF5);
    bBuf &= (~0x0F);
    bBuf |= 0x52;
    Set_F81804_Reg(0xF5, bBuf); //count mode is second

    Set_F81804_Reg(0xF6, interval); //set timer

    bBuf = Get_F81804_Reg(0xFA);
    bBuf |= 0x01;
    Set_F81804_Reg(0xFA, bBuf); //enable WDTO output

    bBuf = Get_F81804_Reg(0xF5);
    bBuf |= 0x20;
    Set_F81804_Reg(0xF5, bBuf); //start counting
}
//-----
void DisableWDT(void)
{
    unsigned char bBuf;

    Set_F81804_LD(0x07);          //switch to logic device 7

    bBuf = Get_F81804_Reg(0xFA);
    bBuf &= ~0x01;
    Set_F81804_Reg(0xFA, bBuf); //disable WDTO output

    bBuf = Get_F81804_Reg(0xF5);
    bBuf &= ~0x20;
    bBuf |= 0x40;
    Set_F81804_Reg(0xF5, bBuf); //disable WDT
}

```

```
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A
// PARTICULAR
// PURPOSE.
//
//-----
#include "F81804.H"
#include <dos.h>
//-----
unsigned int F81804_BASE;
void Unlock_ F81804 (void);
void Lock_ F81804 (void);
//-----
unsigned int Init_ F81804(void)
{
    unsigned int result;
    unsigned char ucDid;

    F81804_BASE = 0x4E;
    result = F81804_BASE;

    ucDid = Get_ F81804_Reg(0x20);
    if (ucDid == 0x07) //Fintek 81866
    { goto Init_Finish; }

    F81804_BASE = 0x2E;
    result = F81804_BASE;

    ucDid = Get_ F81804_Reg(0x20);
    if (ucDid == 0x07) //Fintek 81866
    { goto Init_Finish; }

    F81804_BASE = 0x00;
    result = F81804_BASE;

Init_Finish:
    return (result);
}
//-----
void Unlock_ F81804 (void)
{
    outportb( F81804_INDEX_PORT, F81804_UNLOCK);
    outportb( F81804_INDEX_PORT, F81804_UNLOCK);
}
//-----
void Lock_ F81804 (void)
{
    outportb( F81804_INDEX_PORT, F81804_LOCK);
}
```



```

}
//-----
void Set_ F81804_LD( unsigned char LD)
{
    Unlock_ F81804();
    outportb( F81804_INDEX_PORT,  F81804_REG_LD);
    outportb( F81804_DATA_PORT, LD);
    Lock_ F81804();
}
//-----
void Set_ F81804_Reg( unsigned char REG, unsigned char DATA)
{
    Unlock_ F81804();
    outportb( F81804_INDEX_PORT, REG);
    outportb( F81804_DATA_PORT, DATA);
    Lock_ F81804();
}
//-----
unsigned char Get_ F81804_Reg(unsigned char REG)
{
    unsigned char Result;
    Unlock_ F81804();
    outportb( F81804_INDEX_PORT, REG);
    Result = inportb( F81804_DATA_PORT);
    Lock_ F81804();
    return Result;
}
//-----

```

```
//-----  
//  
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY  
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE  
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A  
// PARTICULAR  
// PURPOSE.  
//  
//-----  
#ifndef    F81804_H  
#define    F81804_H        1  
//-----  
#define    F81804_INDEX_PORT  ( F81804_BASE)  
#define    F81804_DATA_PORT  ( F81804_BASE+1)  
//-----  
#define    F81804_REG_LD    0x07  
//-----  
#define    F81804_UNLOCK    0x87  
#define    F81804_LOCK0xAA  
//-----  
unsigned int Init_ F81804(void);  
void Set_ F81804_LD( unsigned char);  
void Set_ F81804_Reg( unsigned char,  
unsigned char); unsigned char  
Get_ F81804_Reg( unsigned char);  
//-----  
#endif //    F81804_H
```